 


正面


Wearable Wireless Speaker

Sechoer 389

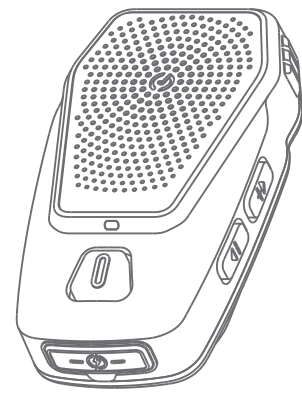

USER MANUAL

 Product Diagram

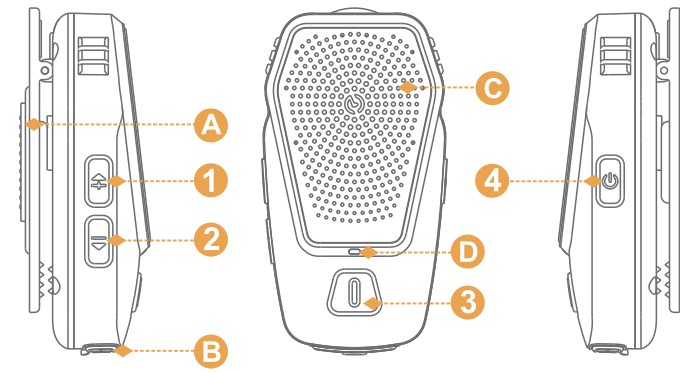

- 1 Volume up
- 2 Volume down
- 3 M key Play/pause button
- 4 Power button
- A Back clip and magnet attraction
- B Charging sealing rubber
- C Speaker mesh
- D Indicator light

Button Control

Button	Operation	Function
--------	-----------	----------

Music/Phone Call		
Power key	Press and hold for 1s	On/Off
	TAP 1X	Play/Pause
M key	TAP 1X	Answer/Hung up the call
	Press and hold for 1s	Reject call
+	TAP 1X	Volume up
	Press and hold for 1s	Next track
-	TAP 1X	Volume down
	Press and hold for 1s	Previous track

Bluetooth		
M KEY	Press and hold for 5s	Clear last paired device

TWS mode		
Power key	TAP 2X	TWS on/off

Product Parameters

Model	Sechoer 38g
Bluetooth Version	5.4
Bluetooth Range	40m
Frequency Response	60Hz-20KHz
SNR	70dB
Power Input	DC5V=0.5A
Play Time (100%/70%Volume)	>12H(100% Volume)
	>30H(70% Volume)
Charging Time	1.5H
Battery capacity	660mAh
Product Weight	38g

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation, in conjunction with any other antenna or transmitter.


Service
Any questions welcome to contact us:
service@sechoer.com

Manufacturer
Shenzhen sechoer Technology Co., Ltd
3F, A1, Zedali Industrial Zone, No. 26 Jianan Road,
Fuhai Street, Baoan District, Shenzhen, Guangdong,
China, 518000

反面


便携式蓝牙音箱

 Sechoer 389

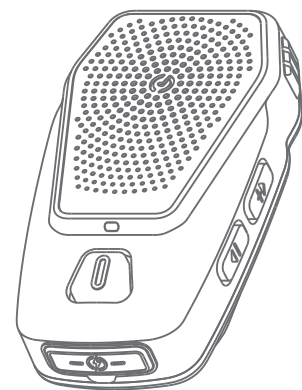

用户手册

 产品说明

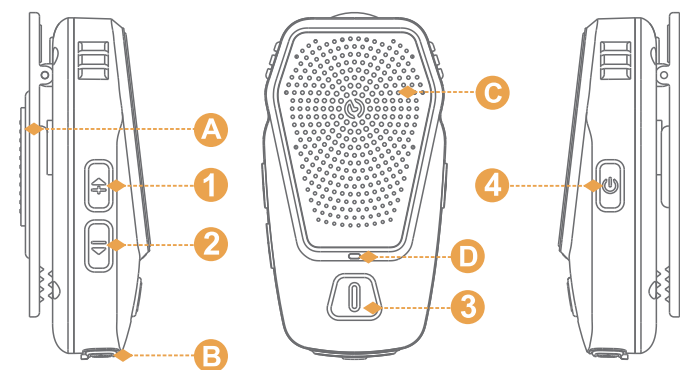

- 1 音量加
- 2 音量减
- 3 多功能键：暂停/播放
- 4 电源键
- A 磁吸背夹
- B 充电
- C 喇叭
- D 指示灯

操作说明

按键	操作	功能
----	----	----

音乐/电话操作		
开关机键	长按一秒	开机/关机
	轻击一次	播放/暂停
多功能键	轻击一次	接挂电话
	长按一秒	拒接电话
+	轻击一次	音量加
	长按一秒	下一曲
-	轻击一次	音量减
	长按一秒	上一曲

蓝牙配对		
多功能键	长按5秒	清除配对

TWS模式		
电源键	双击	TWS 打开/关闭

产品参数

型号	Sechoer 38g
蓝牙版本	5.4
距离	40m
频响	60Hz-20KHz
信噪比	70dB
输入电压电流	DC5V=0.5A
工作时长	>12H(100% 音量)
	>30H(70% 音量)
充电时间	1.5H
电池容量	660mAh
重量	38g

服务事项
如有任何问题，欢迎联系我们：service@sechoer.com

制造商
深圳市高麦喜科技有限公司
中国广东省深圳市宝安区福海街道建安路26号
泽达利工业区A1栋3楼，
邮编518000