



USER GUIDE

BEFORE PURCHASING

- Please double confirm the specific model of your camera or battery before purchase. Wrong purchase will result in unavailable usage.
- If you are not sure about battery or battery charger compatibility, please contact us for more information.

WHEN USING

- Please keep the battery out of reach of children. If accidentally swallow, please go to the hospital for treatment ASAP.
- Long-term storage and transportation may cause the battery to self-discharge. Please fully charge the battery before using it for the first time.
- When charging, please make sure the battery and the charger are securely connected with correct polarity.
- Please keep the charging contact points of battery/charger clean and wipe the points with a dry cloth if necessary.
- To avoid explosion or corrosion hazard, please **DO NOT** disassemble, modify, incinerate or expose the battery/charger to high temperature or wet.
- Please take the battery out of appliances and store it in a cool and dry environment if do not use for a long time.
- The battery should be charged in time and avoid being used completely. Please ensure the battery is charged at least once a month.
- Please keep the battery/charger in original package until ready to use and dispose of used battery promptly.

GUARANTEE & SERVICES

- ❖ 30 Days Free Refund & 1 Year Free Replacement
- ❖ Lifetime Service & 24H Promptly and Friendly Response (Weekdays)

ANY QUESTION OR ADVICE PLEASE CONTACT US VIA

Amazon: <https://amzn.to/2TVxiAC>

E-Mail : lpdirect@163.com

Web : www.lp-technology.net