

Portable Washing Machine

Instruction Manual

AS-XYJ1508-3D5



 EST 9:00AM--17:00PM

 HJ-Customer-Service@outlook.com

 6269443420 | 6267435564

IMPORTANT SAFETY INSTRUCTIONS

WARNING – To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- 1) Read all instructions before using the appliance.
- 2) Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapours that could ignite or explode.
- 3) Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- 4) Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE**. If the hot-water system has not been used for such a period, before using a washing machine, turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- 5) Risk of Suffocation and Injury from Entrapment: Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- 6) Before the appliance is removed from service or discarded, remove the door.
- 7) Do not reach into the appliance if the tub or agitator is moving.
- 8) Do not install or store this appliance where it will be exposed to the weather.
- 9) Do not tamper with controls.
- 10) Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- 11) Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded.

Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

WARNING: Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel – Do not contact the following parts while the appliance is energized:

control board.solenoid valve.safety switch.magnetic sensitive switch.
stop switch.water level traction.supply cord.power plug.internal wires.
motor.motor capacitor.drain retractor.

AVERTISSEMENT: Certaines pièces internes ne sont pas mises à la terre intentionnellement et peuvent présenter un risque de choc électrique pendant l'entretien seulement. Personnel d'entretien: Ne pas toucher les pièces suivantes lorsque l'appareil est sous tension:

commande board.solenoid valve.safety switch.
magnetic commutateur sensible.arrêter les fils de traction.
supply de niveau switch.water.power plug.internal.moteur.
moteur capacitor.drain rétracteur.

WARNING: To reduce the risk of electric shock, disconnect this appliance from the power supply before attempting any user maintenance. Turning the controls to the OFF position does not disconnect this appliance from the power supply.

AVERTISSEMENT: Pour réduire les risques de choc électrique, déconnecter cet appareil de l'alimentation avant de procéder à l'entretien. Placer les commandes à la position ARRÊT ne coupe pas l'alimentation.

Connect To Individual Branch-Circuit
Connecter à une dérivation individuelle

Table of Contents


Technical Specifications	1
Product Overview	2
Safety Instructions	3
Installation and Setup	5
Using the Drain Hose	6
Water Inlet Installation	7
Preparation Before Use	8
Loading the Laundry	9
Use of Detergent	10
Control Panel Overview	12
Operating Steps	12
Cleaning and Maintenance	13
Troubleshooting	14
Error Codes and Protective Functions	15
Warranty Information	17

Before operating the appliance, please read this user manual carefully and keep it for future reference. If the appliance is given to another person, it must be accompanied by this user manual.





Technical Specifications

Model	AS-XYJ1508-3D5WT-HD / AS-XYJ1508-3D5GY-HD
Rated Voltage / Frequency	120V~60Hz
Rated Capacity (Wash / Spin)	7.7 lbs (dry laundry weight)
Water Level / Water Volume (approx.)	1: 16 L 2: 23 L 3: 30 L
Inlet Water Pressure	0.03 MPa – 0.85 MPa
Rated Input Power	Wash: 240 W Spin: 200 W
Net Weight	Approx: 35.2 lbs
Dimensions (W × D × H)	16.9 × 17.1 × 29.1 in

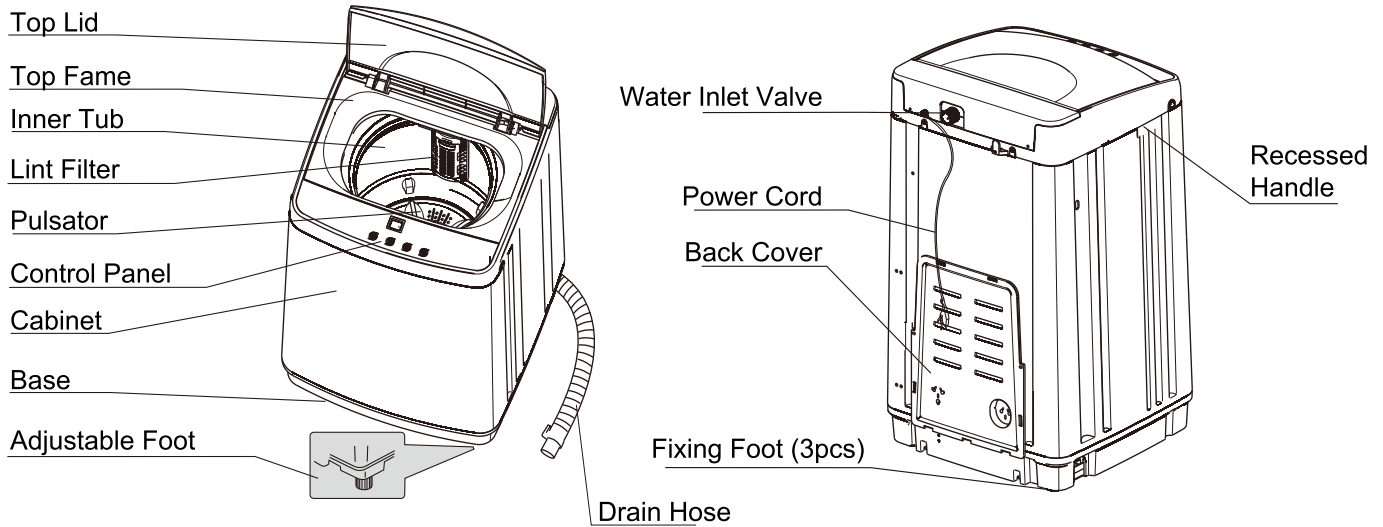Product Overview

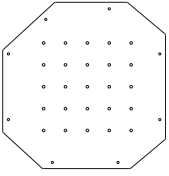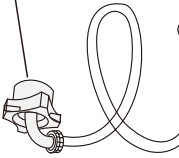

Accessories

	<p>The end connecting to the appliance</p>  <p>The end connecting to quick adapter</p>	<p>G 1/2" (4-pin interface)</p> 	
<p>Bottom Cover (1pc)</p>	<p>Water Inlet Hose (1 pc)</p>	<p>Quick Adapter(1pc)</p>	<p>Tapping Screws ST4x14 (8 pcs)</p>

Safety Symbols



Warning Symbol

Pay special attention to this symbol. Failure to follow the instructions marked with this symbol may result in serious personal injury or damage to the washing machine.




Prohibition Symbol


This symbol indicates actions that must not be performed. Ignoring it may cause damage to the appliance or result in personal injury.

Safety Instructions


Plug the appliance into a properly grounded 120V AC outlet.

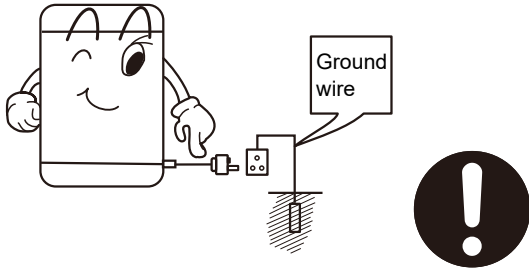


1) Do not plug in or unplug the power cord with wet hands.
2) Always unplug the appliance and turn off the water supply before moving, cleaning, or when it is not in use.

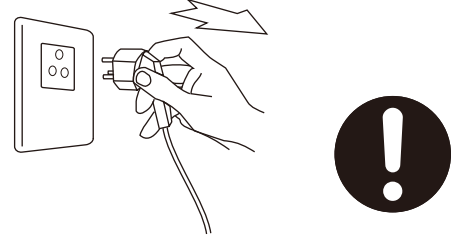

1) Do not bend, stretch, twist, or press the power cord.
2) If the power cord or plug is damaged, or if the outlet becomes loose, stop using the appliance immediately and have it replaced or repaired by a qualified technician.
3) Keep the plug pins clean and dry. If they become dirty, wipe them carefully with a dry cloth.

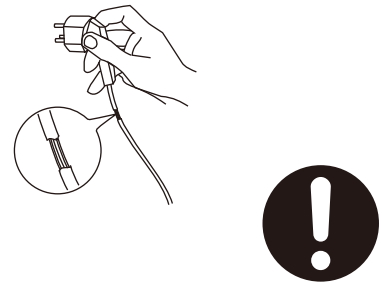


1) Don't install the washing machine in bathrooms or damp locations.
2) Do not wash the appliance with water, and do not place wet clothes on the control panel.

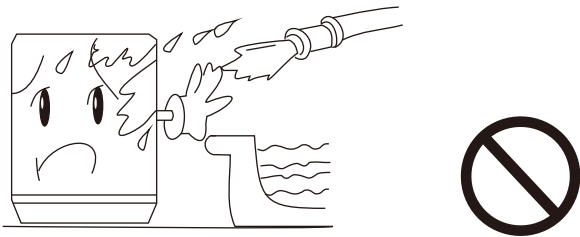

Do not use water hotter than 122 °F (50 °C) for washing.




If the appliance is placed on a carpeted floor, adjust the feet to ensure proper air circulation.

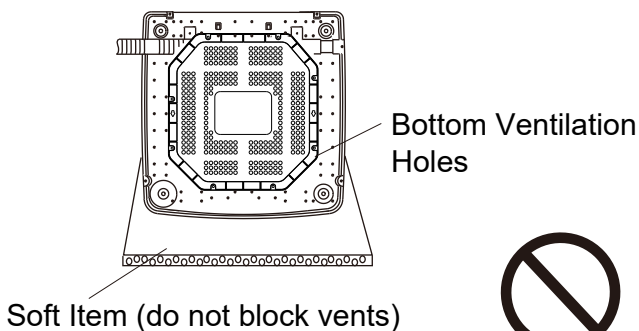

Do not wash raincoats, bike covers, feathered garments, or other waterproof items, as they may cause abnormal vibrations during spinning.




- 1) Do not plug other appliances into the same outlet.
- 2) Do not use a damaged plug or a loose outlet.

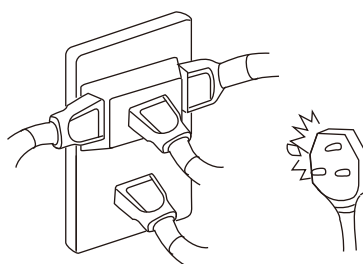


- 1) Do not put your hands into the appliance while it is running. Even at low spin speeds, this is very dangerous.
- 2) Keep children away from the appliance. Do not allow them to climb on it.




Do not alter or modify the appliance in any way!

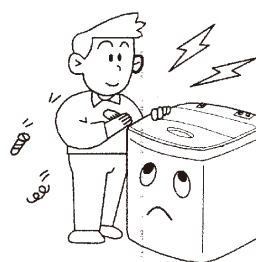


Do not overload the appliance or place hot items (such as a kettle with hot water) on top of the appliance.

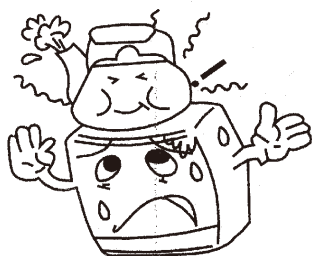


Do not machine wash clothing that has been in contact with flammable or volatile petroleum products (e.g., gasoline, kerosene).

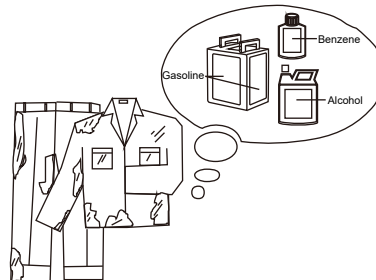


- 1) This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental abilities, or lack of experience, unless they are supervised or instructed by a responsible person.
- 2) Children should be supervised to prevent them from playing with the appliance.

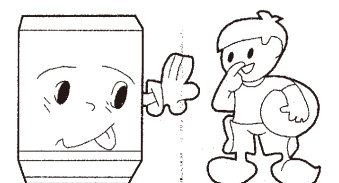


Keep the appliance away from direct sunlight and other heat sources, such as heaters.

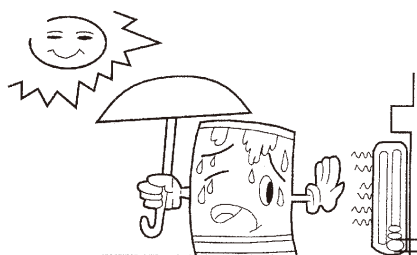

To prevent lint from blocking the drain outlet during washing, keep the lint filter in good condition, install it in the proper position, and clean it regularly.

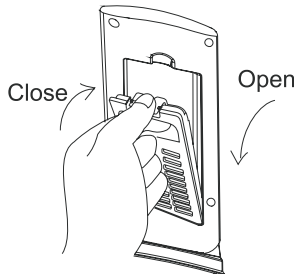

Do not place any objects such as coins, safety pins, nails, screws, stones, or other hard, sharp materials into the appliance, as they may cause serious damage.

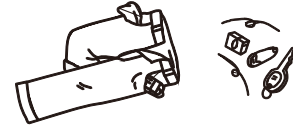

- 1) Before washing, make sure the water tap is open and the inlet hose is connected properly.
- 2) Use low-foaming detergent.

Installation and Setup


Install and adjust the appliance according to this manual. This is important for your safety and proper operation.

Unpacking

1. Unpack the carton and remove the bottom panel.
2. Open the top lid of the appliance and take out all accessories.
3. Remove all packaging materials, including the polystyrene base.
4. Keep all packaging materials in case the appliance needs to be moved again.


Installing the Bottom Cover

- 1) As shown in the right figure, lay the appliance carefully on its side and place it on a soft surface to avoid scratching.
- 2) Make sure the marked side of the bottom cover faces outward, and ensure the arrow on the cover points toward the front of the appliance.
- 3) Align the screw holes on the bottom of the appliance with those on the bottom cover.
- 4) Use the supplied screws to fasten the bottom cover securely.

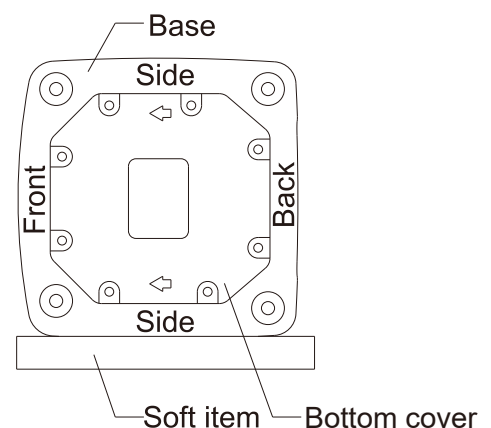

Positioning and Leveling

- 1) The distance between the appliance and the wall should be at least 1.97 in.
- 2) The maximum allowable tilt of the appliance base is 1°.
- 3) An uneven or slanted surface may cause the appliance to stop operating or become unstable.
- 4) Adjust it using the following methods:

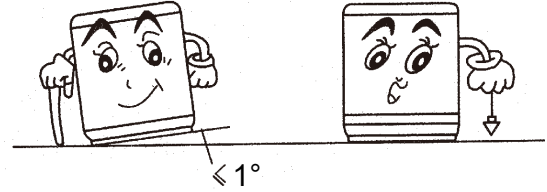


① Make the Appliance Level

Use a plumb line or spirit level to check if the appliance is level.

② Adjusting the Adjustable Foot



- 1) Lift the adjustable foot slightly and rotate it to adjust the height.
- 2) Adjust the feet to the appropriate height to ensure the appliance is stable and level.

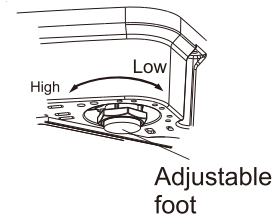

Using the Drain Hose

How to Change the Direction of the Drain Hose


1. Lay the washing machine gently on a soft surface with the front side facing down. Remove the screws on the back cover and take off the back cover.
2. Press the drain hose lightly and remove the hose clamp to release the hose. (Sectional view inside the washing machine)
3. Remove the drain hose port stopper on the other side of the base. The stopper is secured with two clips. Check the fixing position through the opening at the back. (Sectional view of the left side of the washing machine)
4. Pull the inner drain hose to the other side, taking care not to twist or bend it. Reattach the hose using the hose clamp, insert the drain hose port stopper into the previous side, then place the machine upright and secure the back cover with screws.

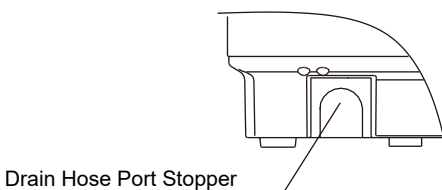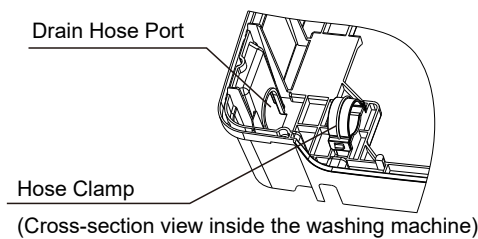


(Cross-sectional view of the left side of the washing machine)

Water Drainage


1. Ensure the drain hose allows water to flow smoothly. The height of the drain outlet should be less than 3.94 in. Otherwise, drainage may be slow, and the machine could stop during operation.
2. Do not step on or press the drain hose.

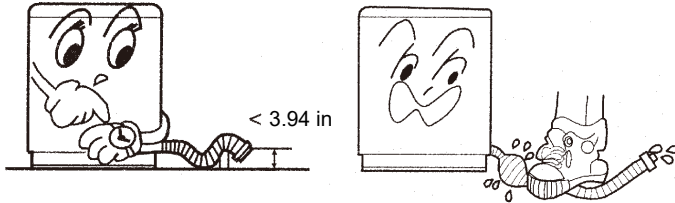


3. If the drain hose is too long, cut the front end diagonally to ensure smooth water flow.

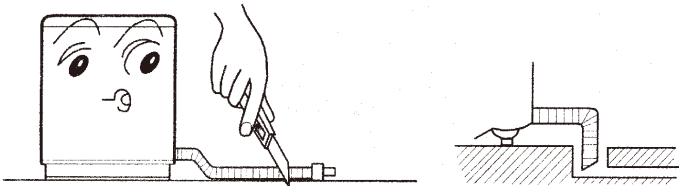

4. If an additional hose is required, purchase one with an inner diameter of at least 1.18 in and a length not exceeding 59.06 in.

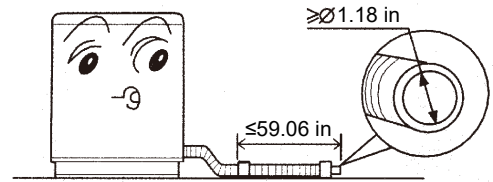


5. If the additional drain hose is too long, cut it at point A or B as shown.

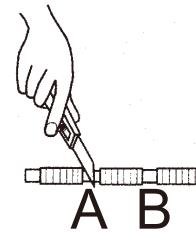

Water Inlet Installation

Suitable tap (in kitchen or bathroom)

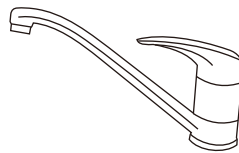


The quick adapter is designed for easy connection to a standard tap, such as those typically found in kitchens or bathrooms.

1. Connect one end of the inlet hose to the water inlet valve on the washing machine.
2. If the tap has internal threads, remove the aerator (if any) from the spout. Place the black rubber washer on top of the adapter, then screw the adapter into the tap securely.
3. If the tap has external threads, remove the black washer from the top of the adapter, then screw the adapter onto the external threads of the tap.
4. Pull back the white ring on the adapter to connect both parts together until they lock firmly.


Connect the Inlet Hose to the Washing Machine

1. Do not remove the filter cushion inside the inlet valve connector. Before each use, check whether the filter cushion is in place or damaged.
2. Place the inlet hose connector onto the inlet valve connector.
3. Tighten the inlet hose connector, then gently swing the hose to make sure it is securely connected.

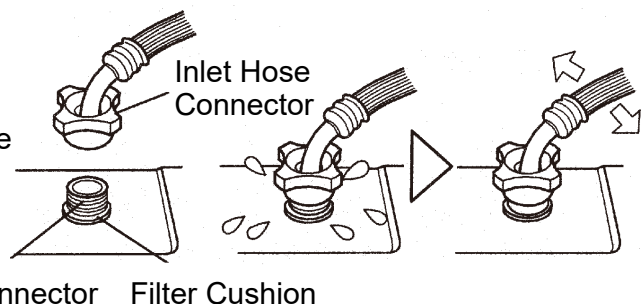


Connect the Inlet Hose with the Quick Adapter

1. As shown, pull down the locking sleeve and insert the quick adapter into the inlet hose.
2. Hook the locking lever onto the quick adapter, then release the sleeve until a clicking sound is heard.

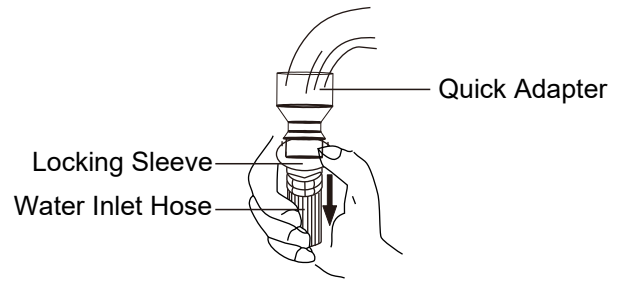

Check All Water Inlet Connections


1. Gently swing the inlet hose to make sure all connections are securely fastened.
2. After installation, open the tap and check for any leaks.
3. Do not bend or stretch the inlet hose excessively.
4. Before each use, inspect all connection points to ensure they are properly installed and firmly fitted to prevent any loosening or leakage.

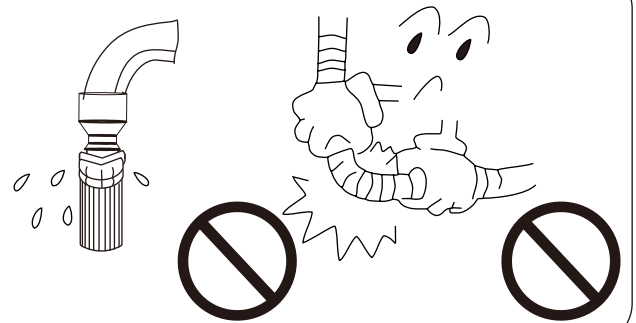

Disconnect the Inlet Hose


1. Close the tap.
2. Press the locking lever, push down the sleeve, and pull off the water inlet hose.

Note: If the machine is used frequently, the quick adapter may be left attached to the tap to prevent damage to the fixing screw.

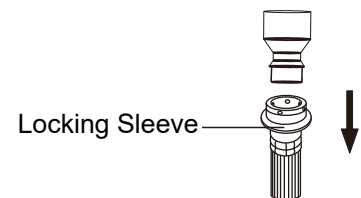




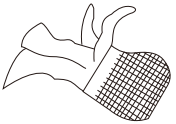
Preparation Before Use

1. This appliance must be properly grounded. Ensure the power outlet is grounded before plugging in the appliance. Do not connect the grounding terminal to a gas pipe, water pipe, or telephone line.
2. Connect the water inlet hose and turn on the water tap.
3. Place the drain hose securely into the sink or designated drainage area.

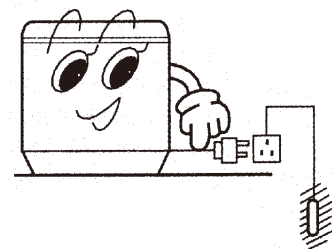

WARNING: Water temperature should be less than 122°F (50°C).

Before Washing
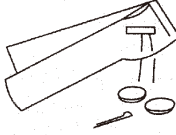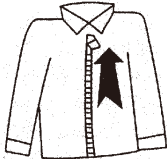
<p>Check if any items have special washing requirements.</p>	<p>Before washing, empty all pockets of small objects that may have been left inside (coins, keys, screws, and so on), as these could damage the drain pump.</p>	<p>Fasten all buttons, tie long straps, and close all zippers.</p>	<p>Do not overload the machine. Load the laundry loosely, alternating large and small items.</p>	<p>Sort the laundry by fabric type, colorfastness, and level of dirtiness. Place delicate items, woolens, and items prone to wear and tear into a washing bag.</p>
				

Important Notes Before Washing:


- A. Check that all items are machine washable.
- B. Wash new colored items separately the first time. Do not wash white items with colored items.
- C. Please soak non-absorbent items by hand.
- D. Some stains, such as fruit, wine, grass, and rust, are difficult to remove and should be treated before washing with suitable stain removers, which can be found in most stores. In some cases, soaking the stained item with a pre-soak product or enzyme-based detergent before washing may help.
- E. Turn nap fabrics and items with long fibers inside out before putting them into the machine.
- F. Do not put items contaminated with chemicals directly into the machine.
- G. Very small items (handkerchiefs, ribbons, socks, and similar items) should be washed in a laundry bag or pillowcase.

Loading the Laundry




1. Do not exceed the rated load capacity. The washing and spinning capacities of the machine refer to the maximum weight of standard laundry in a dry condition.
2. The actual load capacity may vary depending on the thickness, size, and type of the laundry. Ensure the laundry can move freely during washing.
3. Do not select a high water level when the load is less than 2.20 lbs to prevent water from splashing.

Reference Weight of Laundry Items

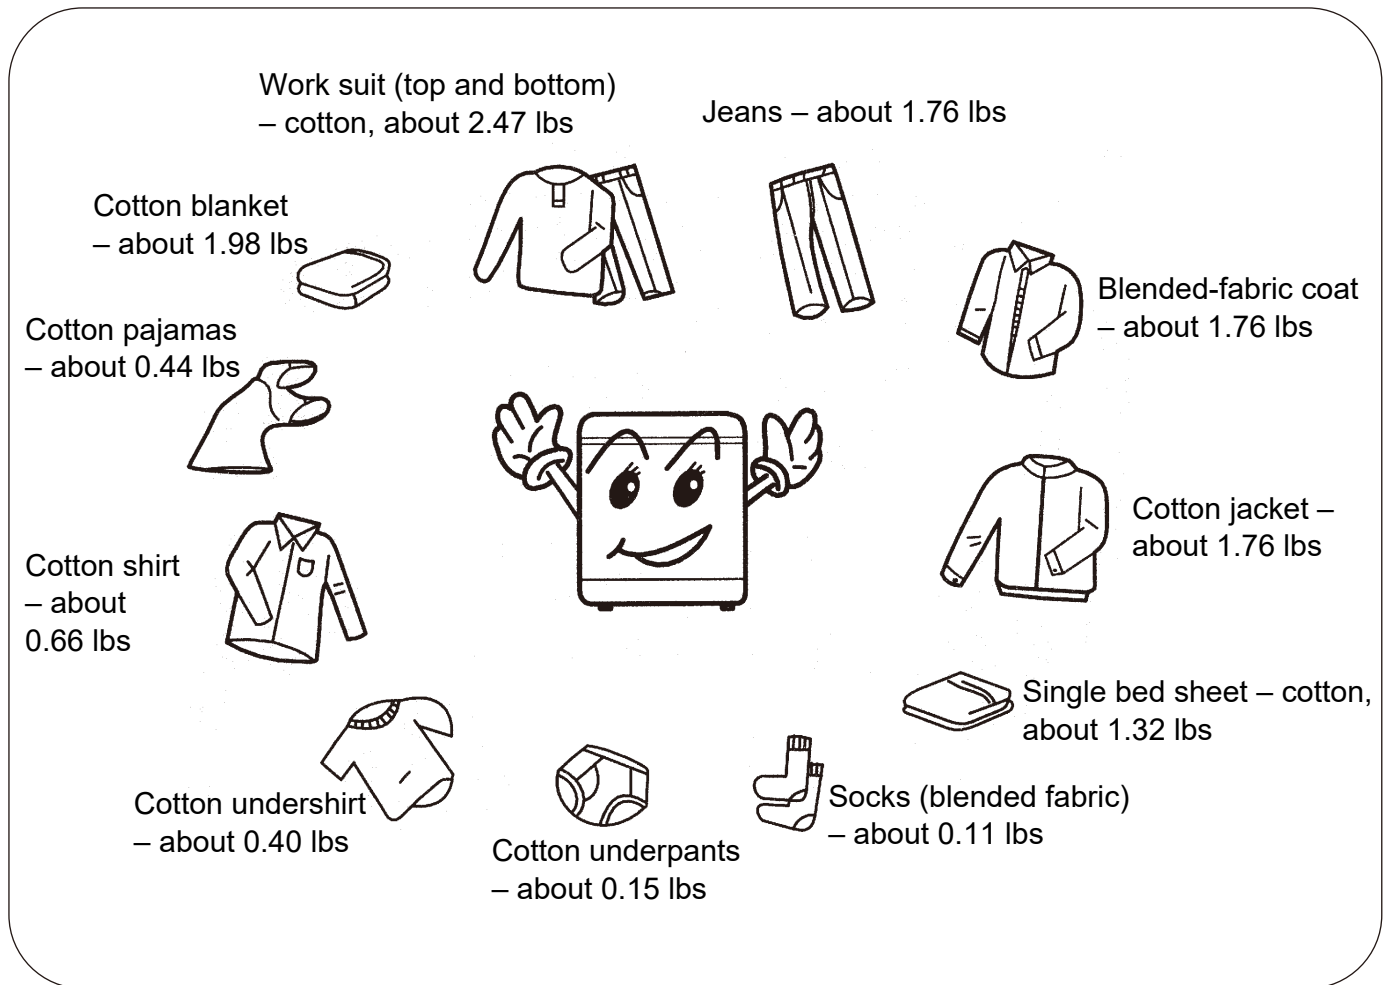

Use of Detergent

1. Put the detergent powder into the tub as shown in the right figure.
2. Then close the lid.
3. We recommend using a low-sudsing detergent.

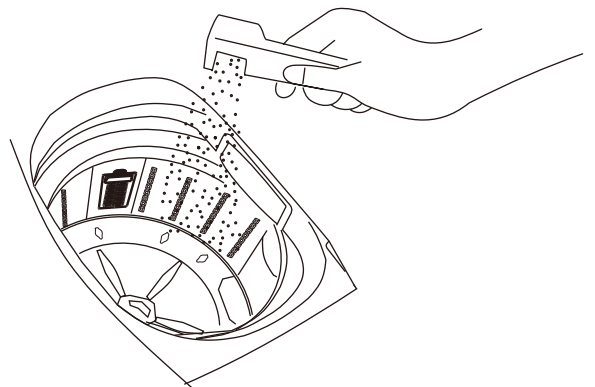

Using Washing Powder

Method 1: Dissolving Directly in the Machine

1. Set the water level to Low.
2. Add the washing powder and run for about 30 seconds to dissolve it completely.
3. Put the laundry into the tub and select a suitable water level.

Method 2: Dissolving in Advance

1. Prepare warm water (about 86°F) in a container.
2. Pour the washing powder into the water while stirring until it is fully dissolved.

Notes:

1. Washing powder may leave residues on clothes if used excessively. Use only the proper amount.
2. If low-quality or expired washing powder is used by mistake, it may cause residue buildup inside the tub. Please clean the tub regularly.

How to Use Bleach

1. Fill the tub to the selected water level, dilute the bleach in a container, and pour it slowly into the tub.
2. Do not use bleach on colored or patterned laundry, as it may cause discoloration.
3. Do not pour bleach directly onto the laundry.
4. Refer to the product label for the correct usage and quantity.
5. Dissolve powdered bleach completely before use.

Notes:

1. For the proper amount of concentrated washing powder, follow the instructions on its package.
2. To avoid splashing and detergent waste, use a lower water level when washing a small load of laundry.

Control Panel Overview

1. To activate: While the machine is running, press and hold the "Water Level/Rinse Times" and "Program/Delay Start" buttons simultaneously for more than 3 seconds.

2. To deactivate: Press and hold the same buttons simultaneously for more than 3 seconds again.

1. When the delay start function is activated, the display shows the preset start time (in hours) before washing begins.

2. During washing, the display shows the remaining time in minutes.

3. If a fault occurs, the display shows an error code.

1) After selecting the program and water level, press this button to start the cycle.

2) Press the button during operation to pause. Press it again to resume.

1. Select Water Level:
At the start of a wash cycle, press the "Water Level/Rinse Times" button to select the appropriate water level based on the amount of laundry.
1 = Low, 2 = Medium, 3 = High.

2. Add Water During Wash:
1) During washing or rinsing, press and hold the "Water Level/Rinse Times" button to add water. Release the button to stop adding.
2) Alternatively, pause the machine, press the button to select a higher water level, then press "Start/Pause". The machine will automatically add water to the selected level and resume operation.
3) If a lower water level is selected than the current level, the new level will take effect in the next water inlet.

3. Select Number of Rinses:
1) In the initial or paused state, press and hold the "Water Level/Rinse Times" button for more than 3 seconds to activate the rinse selection function.
2) Press the button to choose the number of rinses, and each press switches between 1, 2, or 3 rinses.
Note: The rinse times function cannot be used in the "Normal," "Quick," "Wash," "Spin," or "Air Dry" programs.

1. Select Program:
1) After powering on the machine, press the "Program/Delay Start" button to select one of the following 10 programs:
2) Normal, Standard, Heavy, Quick, Soak+Wash → LED displays 01–05
3) Wash, Wash+Rinse, Rinse+Spin, Spin, Air Dry → LED displays 06–10

2. Delay Start:
1) In the initial power-on state, press and hold the "Program/Delay Start" button for more than 3 seconds to set a 2–24 hour delay start.
2) Press the button again to increase the delay by 1 hour, up to a maximum of 24 hours.
3) To cancel the delay start, press the Power button to return to standby.

Press this button to turn the washing machine on or off, or to switch between standby and operating modes.

Operating Steps

1. Press the Power button to turn on the machine. The machine will enter the initial standby state.
2. Press the Program/Delay Start button to select the desired program.
3. Select the appropriate water level based on the amount of laundry.
4. In the initial power-on state, press and hold the Program/Delay Start button for more than 3 seconds to set the delay start time. Each press increases the delay by 1 hour, up to a maximum of 24 hours. The displayed number indicates the remaining time before the program starts. To cancel the delay start, press the Power button to return to standby.
5. After closing the top lid, press the Start/Pause button to start the machine. To activate the child lock, press and hold both the Water Level/Rinse Times and Program/Delay Start buttons for more than 3 seconds. Press and hold them again for more than 3 seconds to deactivate the child lock. When the child lock is active, opening the lid will stop operation and trigger an error alarm.
6. To select the Air Dry function, press the Program/Delay Start button to choose "Air Dry." When the Air Dry function is completed, the machine will enter standby mode.
7. Close the top lid and press the Start/Pause button. The washing machine will begin operation.
8. When the washing cycle is finished, a buzzer will sound and the power supply will turn off automatically.


Cleaning and Maintenance

After the Program Ends

1. When the program ends, the machine will stop automatically, and the buzzer will remind you to remove the laundry or start another cycle.
2. After use, unplug the machine and turn off the water taps to prevent possible water leakage or fire hazards.

External Cleaning


Wipe the exterior of the appliance with a soft cloth. Do not use abrasive cleaners or volatile chemicals, as they may damage the plastic parts and surface finish.

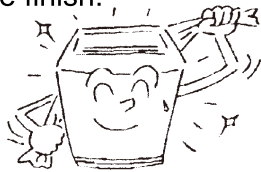

Cleaning the Water Inlet Filter

The water inlet filter may become clogged with dust or debris. Clean it as follows:

1. Turn off the water tap.
2. Run the machine for about 5 seconds to release any remaining water in the inlet hose, then turn off the power.
3. Disconnect the inlet hose, remove and clean the filter screen, then reinstall it securely.

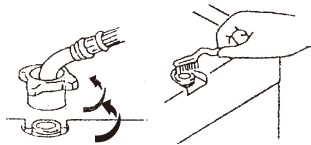

Cleaning the Lint Filter

Always use the lint filter during washing. After each wash, clean the lint filter promptly as follows:

1. Pull out the lint filter. (See Figure 1)
2. Open the filter and rinse it thoroughly. (See Figure 2)
3. Close the filter and reinstall it in the correct position.

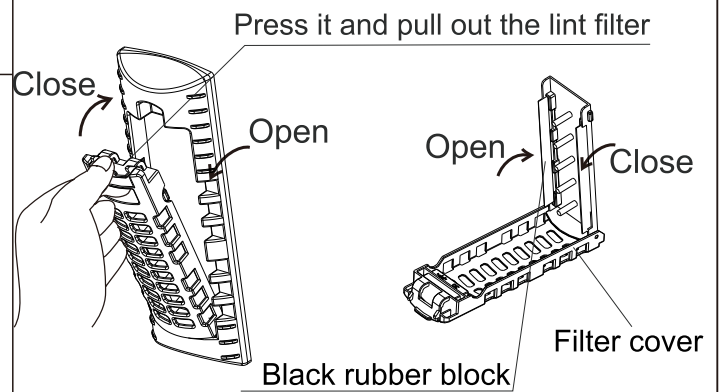


Figure 1

Figure 2

After Use

1. After using the machine, it is recommended to turn off the water taps. (If necessary, disconnect the inlet hose.)
2. Do not leave water in the tub for a long time. Drain it immediately after the wash cycle is completed.
3. Unplug the power cord after each use.
4. Arrange the power cord and drain hose properly.
5. Wipe off any water from the surface and the inner tub with a soft cloth. Leave the top lid open for a while to allow moisture to evaporate. This helps prevent mold and unpleasant odors inside the appliance.

When There Is a Risk of Freezing

1. In winter, if there is a risk of freezing, remove the water inlet hose and drain out any remaining water from the hose and inner tub.
2. If the water inside has already frozen, do not operate the washing machine. Pour hot water (about 104°F / 40°C) into the tub until the pulsator is submerged. Wait a few minutes, then gently rotate the pulsator by hand. Once the ice has melted completely, the machine can be used again.

Troubleshooting

Problem	Possible Cause	Solution
No display on the control panel	<ul style="list-style-type: none"> - Power plug is not fully inserted. - No power in the outlet. - Power switch is not turned on. - Power supply has been cut off. 	<ul style="list-style-type: none"> - Insert the plug securely. - Check the power outlet or try another one. - Press the power switch. - Check the household power supply.
Water inlet hose leaks	<ul style="list-style-type: none"> - Hose connector at the tap is not tightened properly. - Hose connection to the washing machine is loose. 	<ul style="list-style-type: none"> - Reinstall the inlet hose. - Tighten both connections securely.
Does not drain	<ul style="list-style-type: none"> - Drain hose is not placed properly. - Drain hose is bent or blocked. 	<ul style="list-style-type: none"> - Place the drain hose lower to the ground. - Straighten or clean the drain hose.
Does not fill with water	<ul style="list-style-type: none"> - Water supply is cut off. - Tap is closed. - Inlet filter is blocked. 	<ul style="list-style-type: none"> - Resume the water supply. - Open the water tap. - Clean the inlet filter (see “Cleaning and Maintenance”).
Spin stops and water fills again during spin cycle	<ul style="list-style-type: none"> - The laundry load is unbalanced or too small/too large. - The machine is not placed on a stable surface. 	<ul style="list-style-type: none"> - Redistribute the laundry evenly and restart the spin cycle. - Make sure the machine is placed on a level surface.
“Spin” program selected, but the tub does not spin	<ul style="list-style-type: none"> - The lid is not closed properly. - The lid was opened during draining. 	<ul style="list-style-type: none"> - Close the lid securely before spinning. - Keep the lid closed during operation.
Spin is intermittent when starting	The machine is automatically balancing the laundry load.	Normal operation. No action required.
Some water flows from the drain hose before first use	The remaining water is from factory testing.	Normal condition. No action required.

Note:

If the problem persists after performing the above checks, unplug the appliance and contact our after-sales service immediately. Do not attempt to repair this product yourself, as it may cause electric shock or other hazards.

Error Codes and Protective Functions

1. Error Codes

Code	Description	Solution
E0	The top lid is open when the preset program starts.	Close the top lid and reset the alarm.
E1	After draining for 5 minutes, the water level has not decreased properly.	Open the lid and check according to the "Troubleshooting" section. Then close the lid and reset the alarm.
E2	The top lid is open during the spin cycle.	Close the top lid and reset the alarm.
E3	The laundry load is unbalanced during spinning.	Open the lid, redistribute the laundry evenly, then close the lid and reset the alarm.
E4	After 50 minutes of water filling, the required water level is still not reached.	Open the lid and check according to the "Troubleshooting" section. Then close the lid and reset the alarm.
E5	The top lid is opened after the child lock is activated.	Close the top lid and reset the alarm.
E6	The water level exceeds the overflow level.	Drain the excess water until the normal level is reached.
E7	Memory input/output error detected.	Close the top lid and reset the alarm. If the issue persists, contact our after-sales service.
F1	Water level sensor malfunction.	Unplug the power cord and contact a qualified technician.

2. Imbalance Adjustment

- 1) During the spin cycle, if the laundry is unevenly distributed in the tub, it may cause excessive vibration.
- 2) This washing machine is equipped with an automatic imbalance adjustment system. The built-in vibration detection system continuously monitors the spin condition. When the vibration exceeds a certain level, the system automatically redistributes the load to balance the drum.

3. Automatic Power Cut-off


- 1) If the Start/Pause button is not pressed within 10 minutes after pressing the Power button, the power supply will turn off automatically.
- 2) The power supply will also turn off automatically after the washing cycle is completed.

4. Child Lock

- 1) While the machine is running, press and hold the “Water Level/Rinse Times” and “Program/Delay Start” buttons simultaneously for 3 seconds to activate the Child Lock function.
- 2) The LED display will show “CL”.
- 3) To deactivate the Child Lock, press and hold the same two buttons again for more than 3 seconds. The display will then return to show the remaining time.
- 4) Once the Child Lock is activated, all buttons—including the Power button—are disabled.
- 5) If the top lid is opened while the machine is operating, the machine will pause and the “E5” error code will appear on the display.
- 6) If the lid is closed within 5 seconds, the alarm will stop and the washing process will resume.
- 7) If the lid remains open for more than 5 seconds, the machine will automatically drain the water to a safe level.
- 8) During this process, an alarm will sound for 10 seconds every 10 minutes to indicate a fault condition.
- 9) If the lid remains open, the machine cannot resume operation.

Warranty Information

1. This product is covered by a **one (1) -year** limited warranty against defects in materials and workmanship, valid only for the original purchaser. The warranty period begins on the date of retail purchase and is non-transferable.
2. This warranty does not cover normal wear and tear, or any damage resulting from misuse, negligent use, use with improper voltage or current, failure to follow the operating instructions, or any disassembly, repair, or modification not authorized by our after-sales service.
3. Additionally, this warranty does not cover damages caused by Acts of God (such as fire, flood, hurricanes, or tornadoes) or force majeure events (such as arson, power outages, riots, or vandalism).
4. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state (or province to province). Some states (or provinces) do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

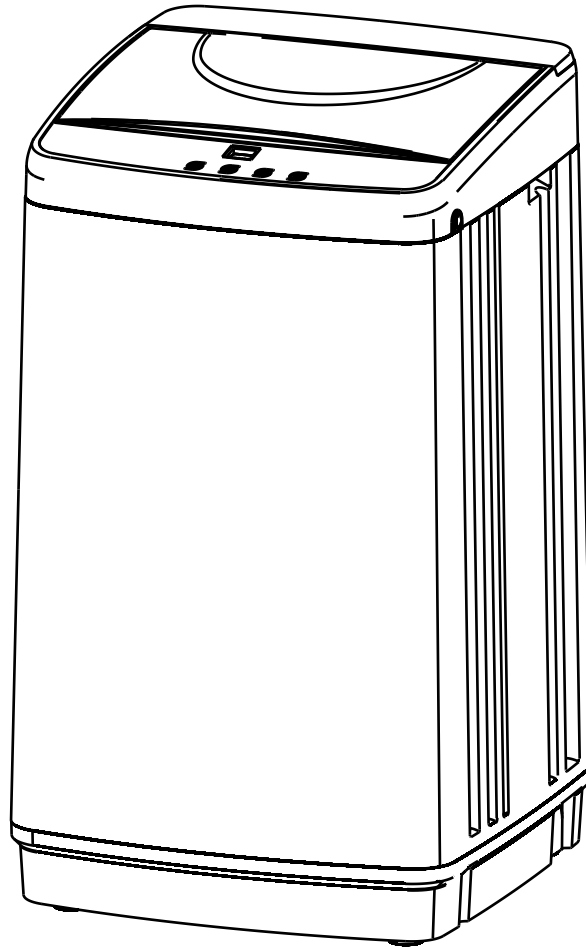

Technical Support

6269443420 | 6267435564

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.

