

说明书盒尺寸: 170x116x17mm

TRAVOR

Portable Speaker



User Manual

EN

Outdoor-Grade Protection · All-Day Playtime
Bring your music to life anytime, anywhere

Rugged Protection · Dustproof & Waterproof
Aluminum alloy body with an IP68 dustproof and waterproof rating, resistant to drops and impacts. Safe, durable, and reliable — even around water

Powerful Sound · Stable Connection
Equipped with a high-performance acoustic system and Bluetooth 5.4, delivering low latency, strong connectivity, and rich, immersive sound

Portable Design · Travel with Ease
Magnetic mounting, an adjustable shoulder strap, and a durable aluminum alloy handle make it easy to carry and ready for any adventure

Smart Experience · Thoughtful Interaction

- Illuminated buttons for easy operation at night
- Lighting Mode provides stable and bright illumination
- Party Mode lets you switch between various LED colors
- Sleep Sounds helps you relax and drift into sleep
- Adaptive power-saving technology intelligently manages energy consumption for extended playtime

More Surprises

- Supports TWS and Auracast wireless pairing
- USB-C reverse charging keeps both your music and your devices powered on the go


GETTING STARTED

- Fully charge the speaker before first use
- Long press the Power button to turn the speaker on or off
- A sound prompt and a flashing blue light indicate that the speaker is ready to connect

Note: For safety information, please refer to the Safety section at the end of this manual

EN

WHAT'S IN THE BOX

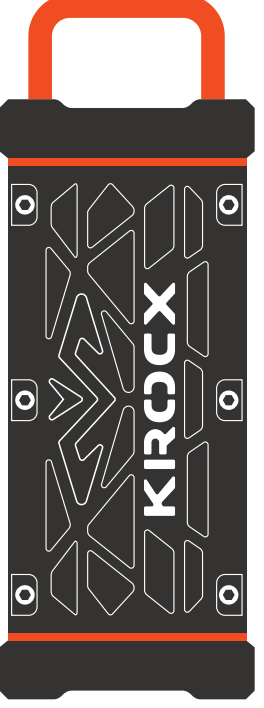

Portable Speaker

Power Adapter


USB-C Cable

User Manual

EN

BASIC CONTROLS


Each button supports multiple actions depending on press duration

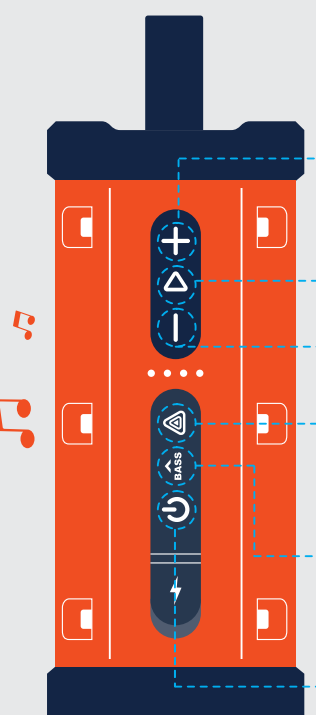

- Volume Control:**
 - Short press: Increase volume
 - Long press: Next track
- Play/Pause:**
 - Short press: Play or pause music
 - Long press: Disconnect current bluetooth connection
- Volume Control:**
 - Short press: Decrease volume
 - Long press: Previous track
- TWS & AURACAST:**
 - Long press: Activate True Wireless Stereo (TWS) mode (green indicator)
 - Short press: Activate Auracast mode (white indicator)
- BASS:** Bass Adjustment
 - Short press: Switch between Outdoor Mode and Indoor Mode.
- Indicator Status:**
 - White indicator solid on: Outdoor Mode
 - Indicator off: Indoor Mode(Default on first power-on)
- Power Button:**
 - Long press: Turn the speaker on or off
 - Short press: Check battery level

EN

 BLUETOOTH PAIRING

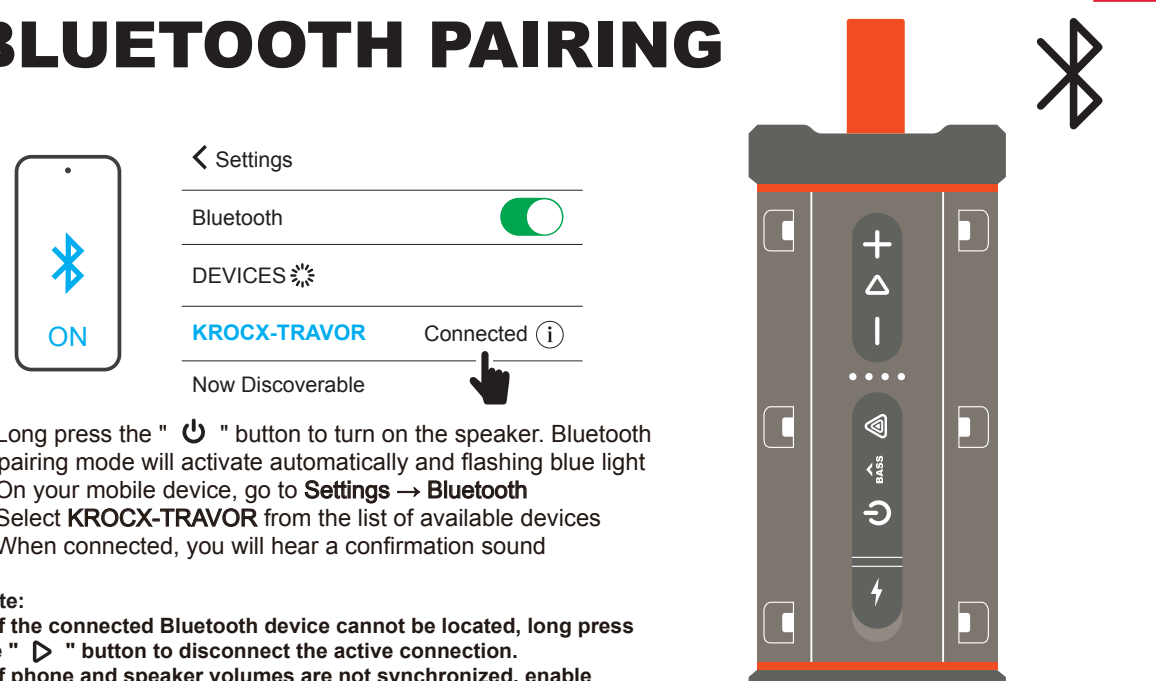


- Long press the "Power" button to turn on the speaker. Bluetooth pairing mode will activate automatically and flashing blue light
- On your mobile device, go to **Settings** → **Bluetooth**
- Select **KROCCX-TRAVOR** from the list of available devices
- When connected, you will hear a confirmation sound

Note:

- If the connected Bluetooth device cannot be located, long press the "Play/Pause" button to disconnect the active connection.
- If phone and speaker volumes are not synchronized, enable "Device Volume Sync" in the Bluetooth device settings. (Tap the icon next to the speaker name "KROCCX-TRAVOR" to find it.)

EN

 BATTERY & CHARGING

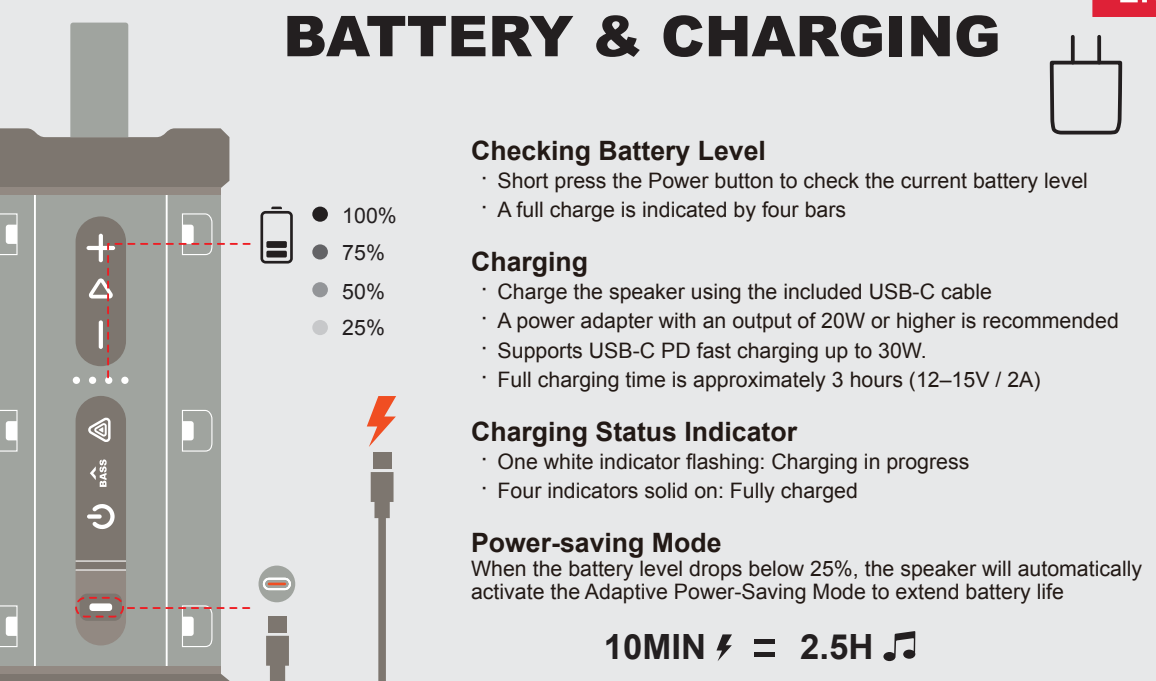

- Checking Battery Level**
 - Short press the Power button to check the current battery level
 - A full charge is indicated by four bars
- Charging**
 - Charge the speaker using the included USB-C cable
 - A power adapter with an output of 20W or higher is recommended
 - Supports USB-C PD fast charging up to 30W.
 - Full charging time is approximately 3 hours (12-15V / 2A)
- Charging Status Indicator**
 - One white indicator flashing: Charging in progress
 - Four indicators solid on: Fully charged
- Power-saving Mode**
 - When the battery level drops below 25%, the speaker will automatically activate the Adaptive Power-Saving Mode to extend battery life


10MIN ⚡ = 2.5H

2.5H

EN

POWER BANK FUNCTION

PD 30W OUT

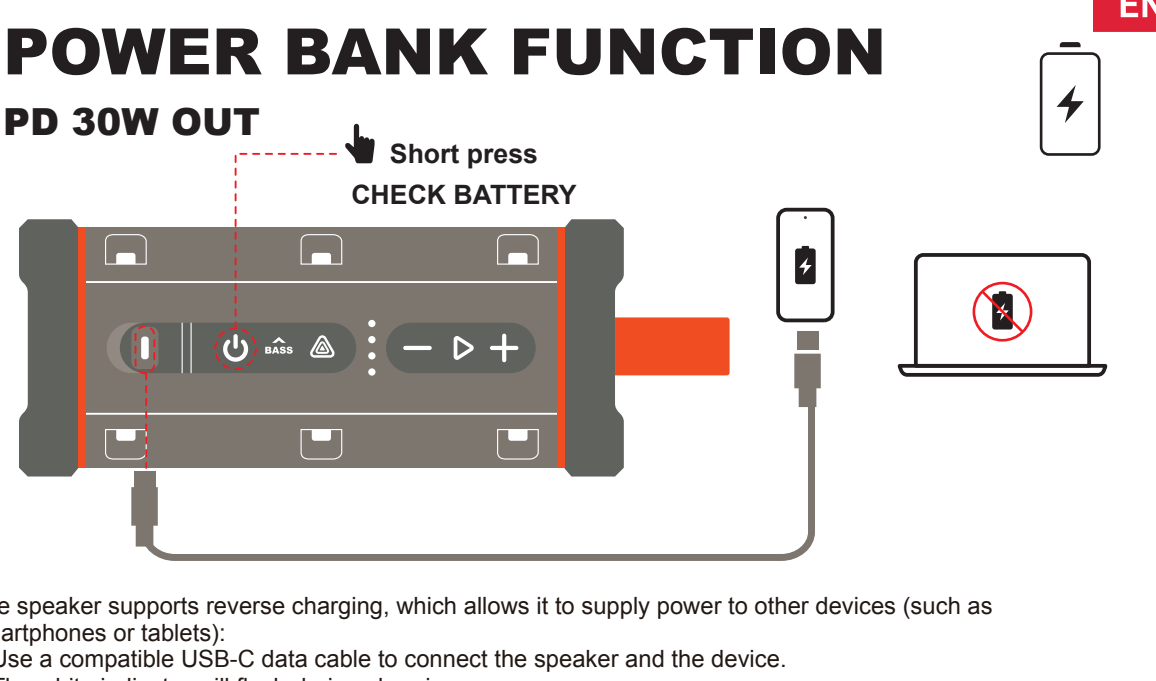

- Short press CHECK BATTERY

The speaker supports reverse charging, which allows it to supply power to other devices (such as smartphones or tablets):

- Use a compatible USB-C data cable to connect the speaker and the device.
- The white indicator will flash during charging

Ensure the speaker's battery level is at least 20% to maintain reverse charging efficiency

Note: Please don't supply power to large electronic devices (such as computers).

EN

WATERPROOF
DUSTPROOF IP68




1.5M 30 MINS

Important:

- Ensure the charging port is fully closed before exposure to water
- Do not charge the speaker while it is wet or submerged
- Waterproof performance may decrease over time due to wear and tear

EN


Magnetic Mount
Ready When You Are

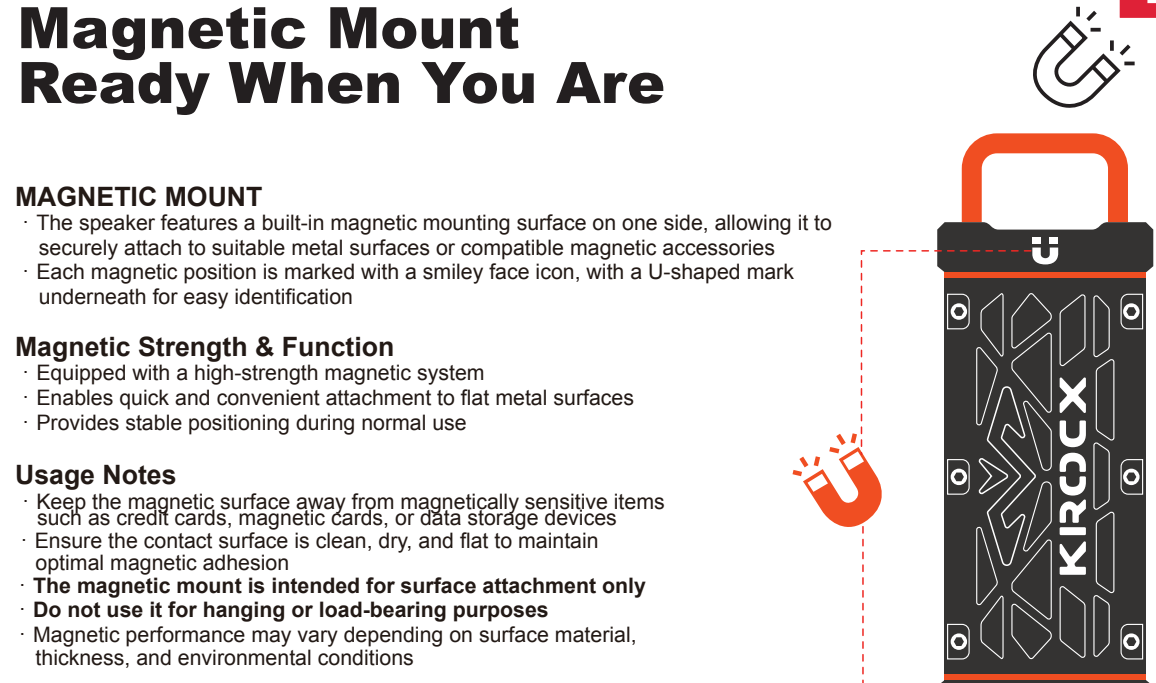

- MAGNETIC MOUNT**
 - The speaker features a built-in magnetic mounting surface on one side, allowing it to securely attach to suitable metal surfaces or compatible magnetic accessories
 - Each magnetic position is marked with a smiley face icon, with a U-shaped mark underneath for easy identification
- Magnetic Strength & Function**
 - Equipped with a high-strength magnetic system
 - Enables quick and convenient attachment to flat metal surfaces
 - Provides stable positioning during normal use
- Usage Notes**
 - Keep the magnetic surface away from magnetically sensitive items such as credit cards, magnetic cards, or data storage devices
 - Ensure the contact surface is clean, dry, and flat to maintain optimal magnetic adhesion
 - The magnetic mount is intended for surface attachment only**
 - Do not use it for hanging or load-bearing purposes**
 - Magnetic performance may vary depending on surface material, thickness, and environmental conditions

EN

 LED

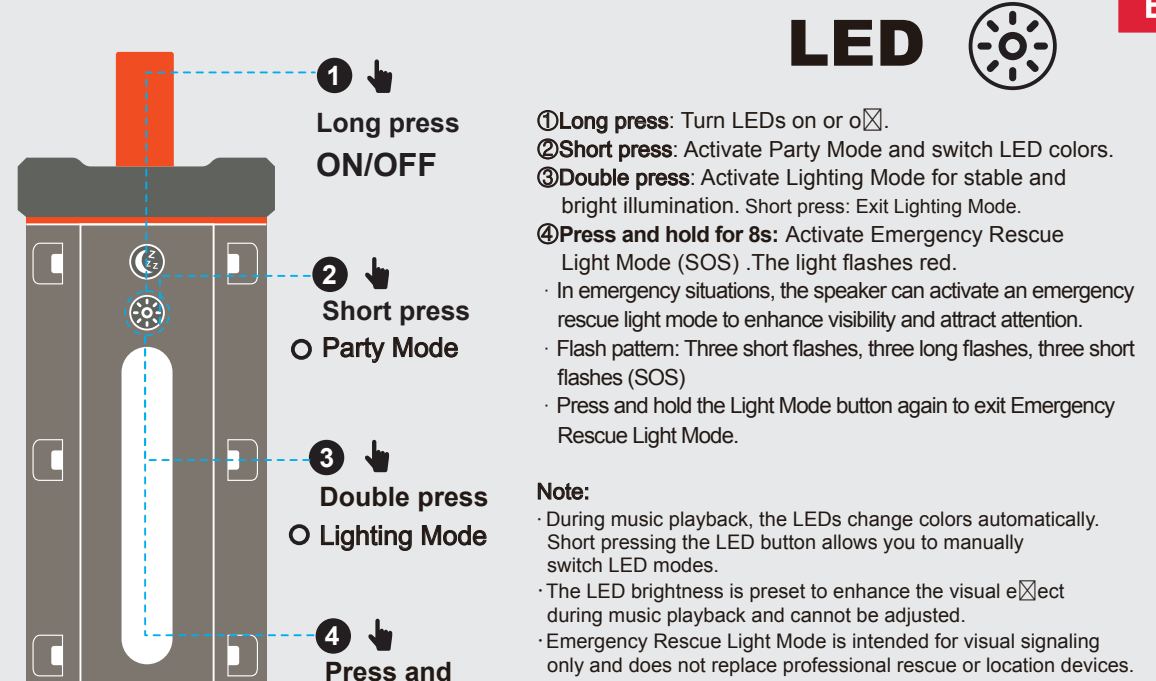

- Long press ON/OFF**
- Short press Party Mode**
- Double press Lighting Mode**
- Press and hold for 8s (SOS)**


- Long press:** Turn LEDs on or off.
- Short press:** Activate Party Mode and switch LED colors.
- Double press:** Activate Lighting Mode for stable and bright illumination. Short press: Exit Lighting Mode.
- Press and hold for 8s:** Activate Emergency Rescue Light Mode (SOS). The light flashes red.
 - In emergency situations, the speaker can activate an emergency rescue light mode to enhance visibility and attract attention.
 - Flash pattern: Three short flashes, three long flashes, three short flashes (SOS)
 - Press and hold the Light Mode button again to exit Emergency Rescue Light Mode.

Note:

- During music playback, the LEDs change colors automatically. Short pressing the LED button allows you to manually switch LED modes.
- The LED brightness is preset to enhance the visual effect during music playback and cannot be adjusted.
- Emergency Rescue Light Mode is intended for visual signaling only and does not replace professional rescue or location devices.

EN

Sleep

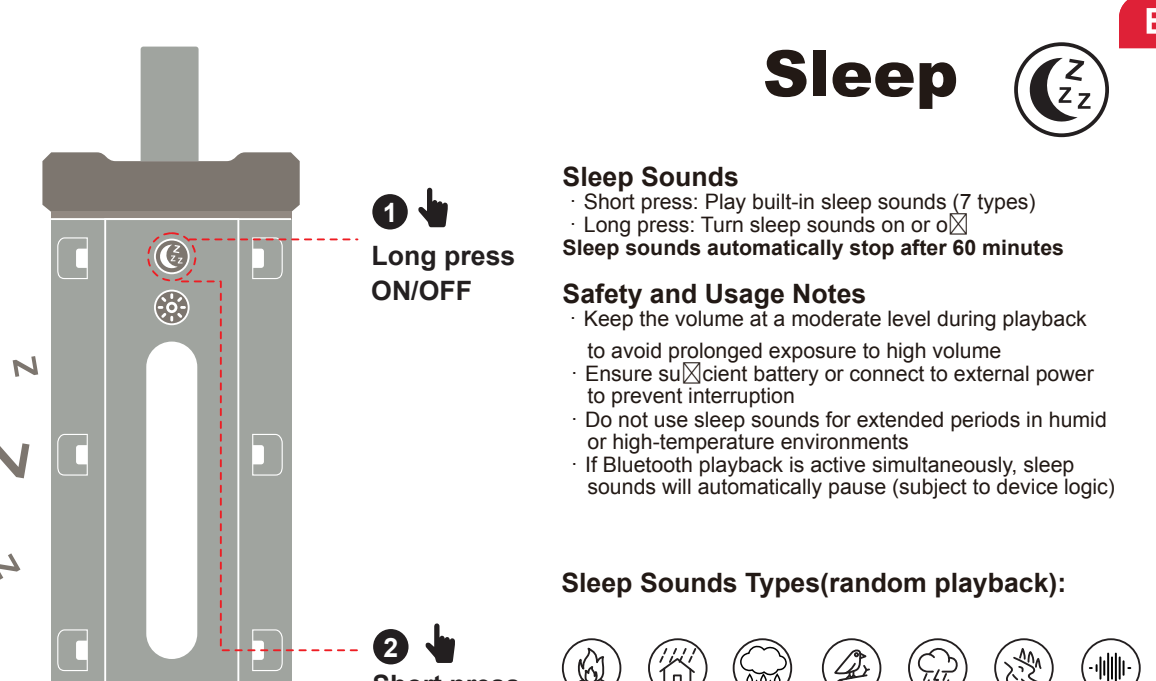


- Long press ON/OFF**
- Short press Change Sounds**

- Sleep Sounds**
 - Short press: Play built-in sleep sounds (7 types)
 - Long press: Turn sleep sounds on or off
 - Sleep sounds automatically stop after 60 minutes
- Safety and Usage Notes**
 - Keep the volume at a moderate level during playback to avoid prolonged exposure to high volume
 - Ensure sufficient battery or connect to external power to prevent interruption
 - Do not use sleep sounds for extended periods in humid or high-temperature environments
 - If Bluetooth playback is active simultaneously, sleep sounds will automatically pause (subject to device logic)
- Sleep Sounds Types(random playback):**
 - Flame
 - Rain
 - Raindrops
 - Birdsong
 - Thunder
 - Stream
 - White noise

EN

 TRUE WIRELESS STEREO(TWS)

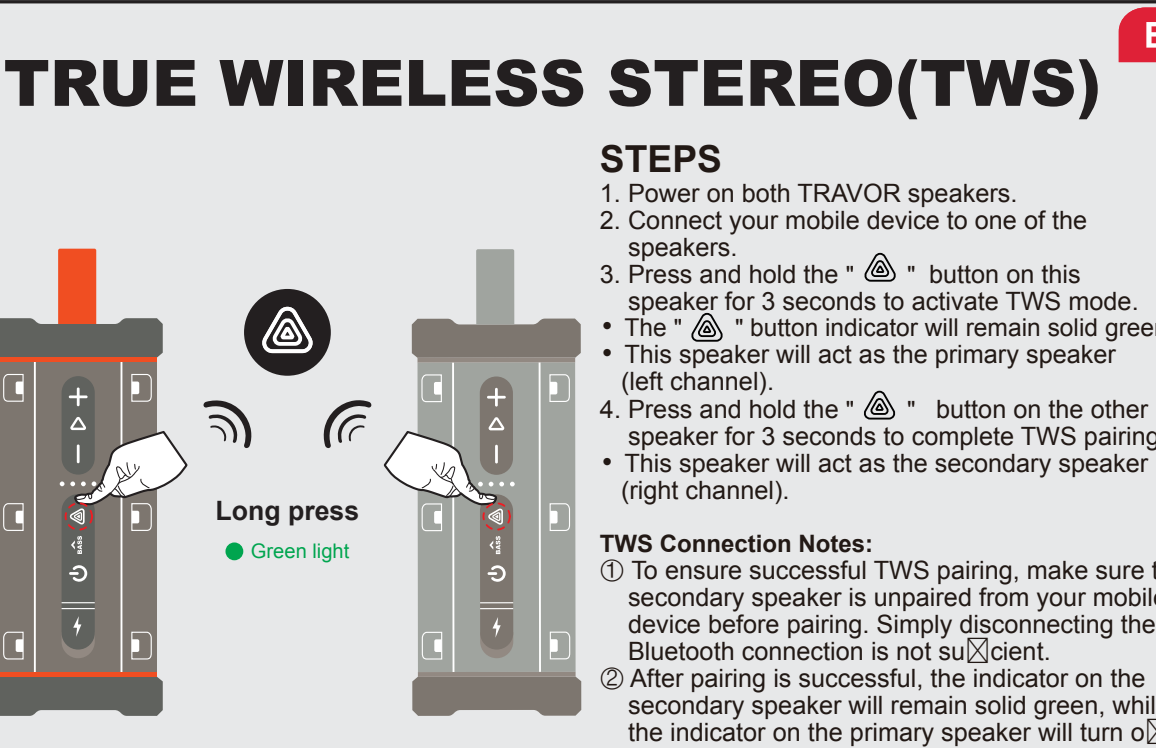


- Long press** Green light

- STEPS**
 - Power on both TRAVOR speakers.
 - Connect your mobile device to one of the speakers.
 - Press and hold the "TWS" button on this speaker for 3 seconds to activate TWS mode.
 - The "TWS" button indicator will remain solid green.
 - This speaker will act as the primary speaker (left channel).
 - Press and hold the "TWS" button on the other speaker for 3 seconds to complete TWS pairing.
 - This speaker will act as the secondary speaker (right channel).
- TWS Connection Notes:**
 - To ensure successful TWS pairing, make sure the secondary speaker is unpaired from your mobile device before pairing. Simply disconnecting the Bluetooth connection is not sufficient.
 - After pairing is successful, the indicator on the secondary speaker will remain solid green, while the indicator on the primary speaker will turn off.
 - Place the left and right speakers in their corresponding positions to enjoy true stereo sound.

EN

 MULTI-SPEAKER CONNECTION

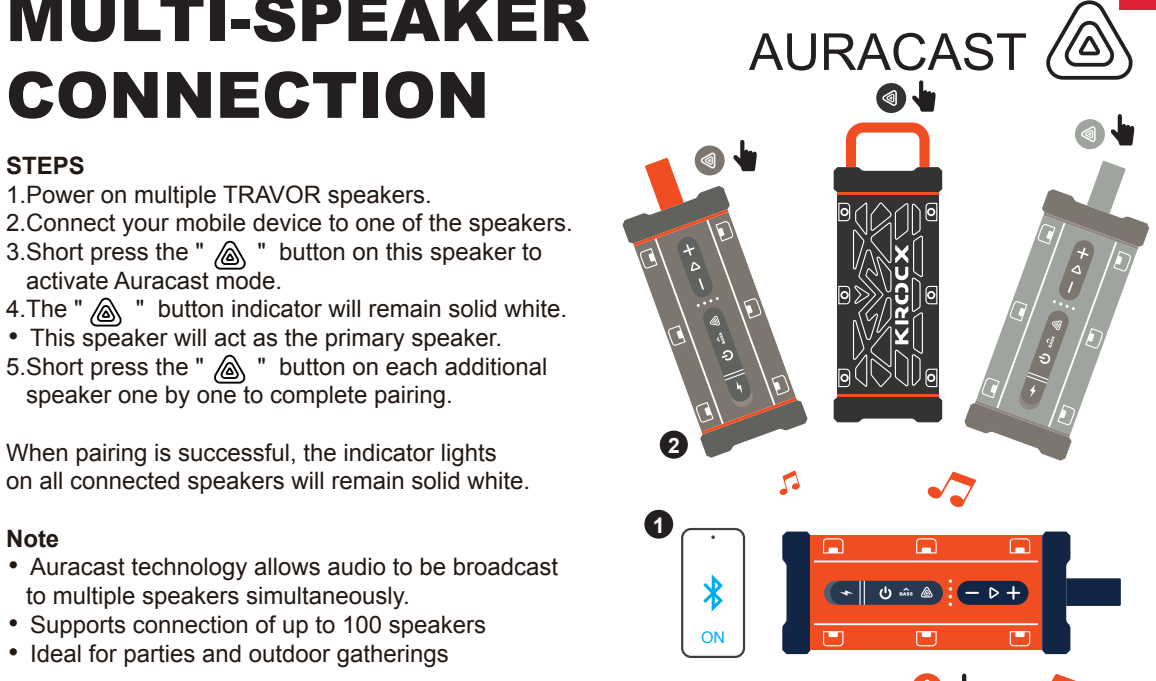

- STEPS**
 - Power on multiple TRAVOR speakers.
 - Connect your mobile device to one of the speakers.
 - Short press the "Auracast" button on this speaker to activate Auracast mode.
 - The "Auracast" button indicator will remain solid white.
 - This speaker will act as the primary speaker.
 - Short press the "Auracast" button on each additional speaker one by one to complete pairing.
- When pairing is successful, the indicator lights on all connected speakers will remain solid white.
- Note**
 - Auracast technology allows audio to be broadcast to multiple speakers simultaneously.
 - Supports connection of up to 100 speakers
 - Ideal for parties and outdoor gatherings

EN

IMPORTANT SAFETY NOTICE

- To maintain optimal battery performance, fully charge the speaker at least once every three months when not in regular use.
- Battery life may vary depending on usage patterns and environmental conditions.
- Do not expose the speaker to liquids while the charging port is open or while charging.
- Charging in wet conditions may result in permanent damage to the speaker.
- Salt water, chlorinated pool water, and other chemicals may damage waterproof seals or internal components.
- After exposure to such substances, rinse the speaker with clean water, dry it thoroughly, and ensure the charging port is completely dry before charging.
- Do not charge the speaker until it is completely dry and clean.
- Charging while moisture is present may cause damage to the speaker or battery.
- When using an external power adapter, ensure it complies with USB-C PD standards.
- Use of non-certified or incompatible chargers may result in damage.
- Children & Storage Safety**
 - Keep the product and accessories out of reach of children and pets.
 - Small parts may pose a choking hazard.
 - Store the product in a dry, well-ventilated place when not in use.
 - Ensure the product is completely dry and powered off before storage.
- Warm Tips**
 - If you encounter any issues during use, please prioritize contacting our customer support email at support@kroccx.com, and we will provide you with a satisfactory solution.

EN

SPECIFICATIONS

Audio	
Output Power:	30W RMS for woofer, 10W RMS for tweeter
Output Power(Max):	45W(Max)
Frequency Response:	60 Hz – 20 kHz
Signal-to-Noise Ratio:	> 80 dB
Speaker Units	
2 × 3.66-inch Woofer (53 × 93 mm)	0.78-inch Tweeter (Ø20 mm)
2 × 5.9-inch Passive Radiator (53 × 150 mm)	
Battery & Power	
Battery:	Li-Ion Polymer 32.4 Wh (7.2 V / 4500 mAh)
Music Play Time:	Up to 25 hours (depending on volume and content)
Charging Time:	Approx. 2.5 hours
Power Input:	30W (MAX) PD Voltage: 5-12V(5V,9V,12V)
Power Bank:	30W (MAX) PD Voltage: 5-12V(5V,9V,12V)

EN

Connectivity

Bluetooth Version:	5.4
Bluetooth Profiles:	A2DP 1.4, AVRCP 1.6
Bluetooth Frequency Range:	2402 – 2480 MHz

Dimensions & Weight

Product Size:	254 × 92 × 92 mm (10 × 3.6 × 3.6 inch)
Packaging Size:	292 × 126 × 131 mm (11.5 × 4.96 × 5.16 inch)
Net Weight:	1.4 kg (3.09 lbs, with handle)

CE/REP	GAVMOSA CONSULTORIA, SOCIEDAD LIMITADA Address: CASTELLANA 9141, 28046 Madrid E-mail: compliance.gavmosa@outlook.com	UK/REP	Sea&Mew Accounting Ltd Address: Electric Avenue Vision 25, London, Enfield, EN3 7DB E-mail: info@seamew.net
---------------	--	---------------	--

Model: TRAVOR Portable Speaker	FCC ID: 2BCYG-TRAVOR MADE IN CHINA	UK CE FCC RoHS	Contact us support@kroccx.com www.kroccx.com
--	--	-----------------------	---

Manufacturer: Dongguan Chenxing Design Technology Co., Ltd Address: Room 305, No. 5 Lucheng West Road, Qingxi Town, Dongguan City, Guangdong Province	UK CE FCC RoHS	UK CE FCC RoHS
--	-----------------------	-----------------------

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device , pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.