

HC-1810D

Cordless Vacuum Cleaner

User Manual

Thank you for purchasing our products. This manual addresses the safety guidelines, warranty, and operating instructions. Please review this manual thoroughly before operating your device.

All pictures in this manual are for illustration purpose only. Actual product may vary due to product upgrade.

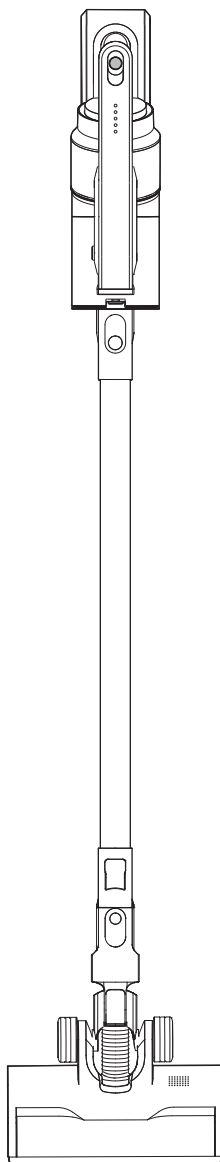


Table of Contents

01 | Important Safety Instructions

02 | Warranty

03 | Getting to Know Your Device

What's in the Box

At a Glance

06 | Using Your Vacuum Cleaner

Wall Mounting

Assembling

Charge Your Vacuum

Cleaning

09 | Maintenance

Recommended Cleaning / Replacement Frequency

Clean the Dust Box and Filters

Clean the Rolling Brush

13 | Troubleshooting

13 | Specifications

Important Safety Instructions

To reduce the risk of injury or damage, read these safety instructions carefully and keep them at hand when setting up, using, and maintaining this device.

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may cause a risk of fire when used with another battery pack.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this device.
- Cleaning and maintenance shall not be performed by children without adult supervision.
- The battery must be removed from the device before the device is disposed of.
- This appliance must be disconnected from the mains supply when removing the battery.
- The used battery should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
- Fully assemble before operating.
- Intended for household use only.
- Do not use outdoors or on wet surfaces.
- Do not leave this appliance unattended when it is plugged in. Unplug it from the outlet when you are not using it and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer recommended attachments.
- For the purposes of recharging the battery, only use the detachable power supply unit provided with this device.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, or has been dropped, damaged, or submerged in water, contact our customer service for advice.
- Do not handle the plug or appliance with wet hands.
- Do not unplug the adapter by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not put any object into openings or vents. Do not use if any opening is blocked. Keep free of dust, lint, hair, and anything else that may reduce airflow.
- Keep hair, loose clothing, fingers, and other body parts away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.


- Always turn off this appliance before connecting or disconnecting the motorized floor brush.
- To prevent unintentional starting, ensure the appliance is switched off before installing the battery pack, picking up or carrying the appliance. Do not carry the appliance with your finger on the power switch, doing so may cause accidents.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without the dust box and/or filters in place.
- Store this appliance indoors, in a cool and dry area.
- Make sure that the outlet voltage corresponds to the voltage rating on the charger's label.
- Do not attempt to repair or disassemble this appliance. There are no user-serviceable parts inside. Repair or service must be performed by a qualified repairman and only identical replacement parts can be used. This will ensure the safety of the appliance.
- This appliance includes a rechargeable lithium-ion battery pack. Do not expose the battery pack or appliance to fire or excessive temperature (above 130°C/265°F), as it may catch fire and/or explode.
- Do not use a damaged or modified battery pack, as it may catch fire and/or explode.
- Follow all the charging instructions and do not charge the battery pack out of the temperature range specified in the instructions, otherwise, it may damage the battery and increase the risk of fire.
- Do not attempt to disassemble the battery pack.

Warranty


We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our devices.

Getting to Know Your Device


What's in the Box

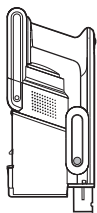


Cordless Vacuum Cleaner

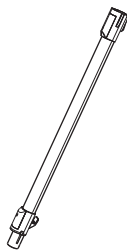


Metal Tube

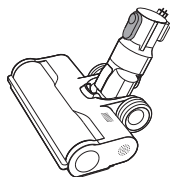


Floor Brush

 


Long Crevice Tool

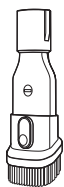

2-in-1 Cleaning Tool

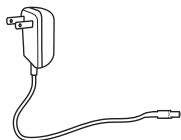


Charger

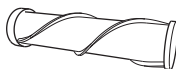


Rolling Brush
(preinstalled)




Wall Mount Bracket

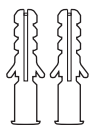

Wall Plugs

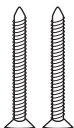


Screws

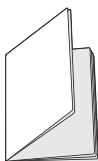



User Manual

At a Glance

• Main Unit

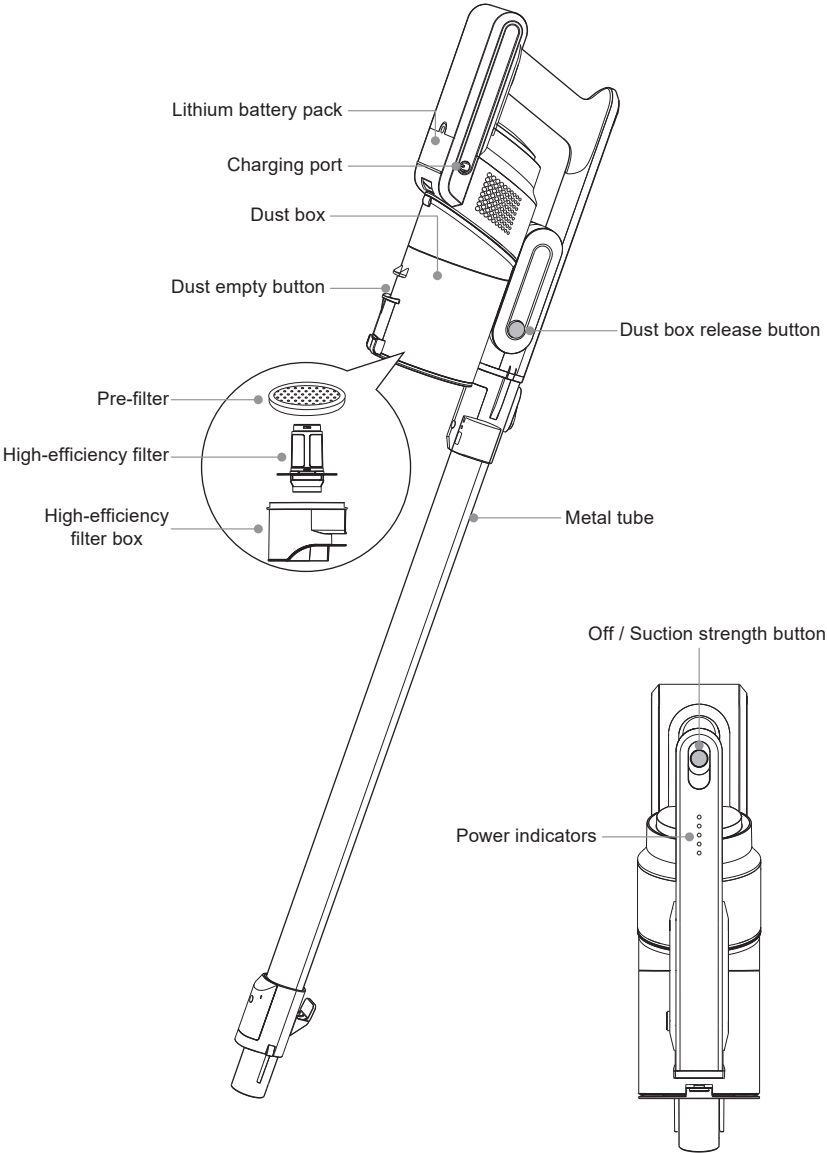

• **Floor Brush**

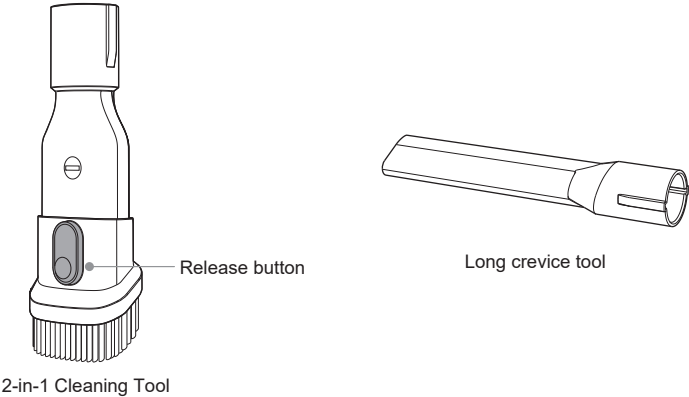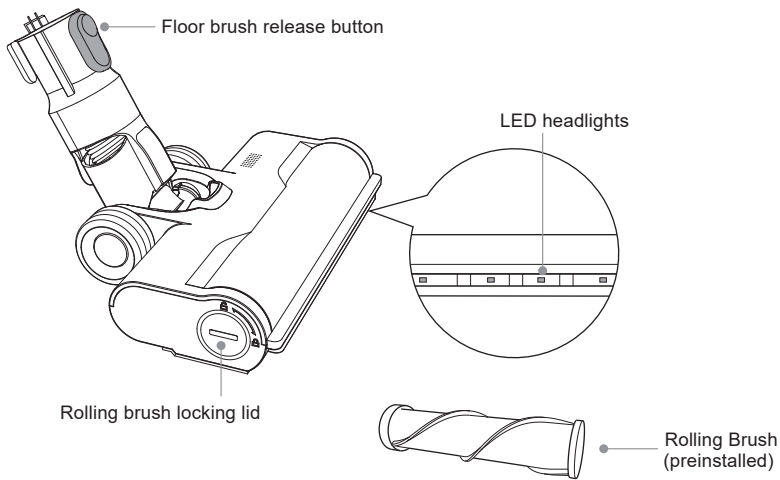


Using Your Vacuum Cleaner


Wall Mounting

The vacuum cannot stand on its own. Make sure it is mounted securely.


1

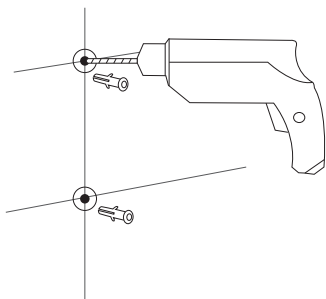



2

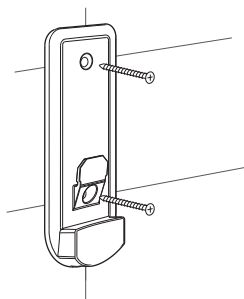

3

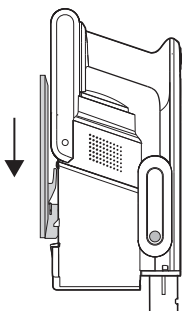


4

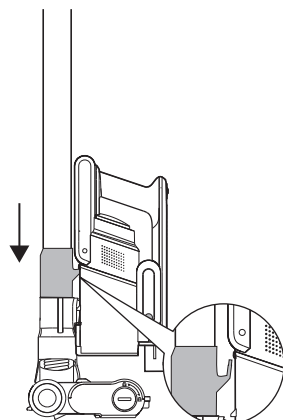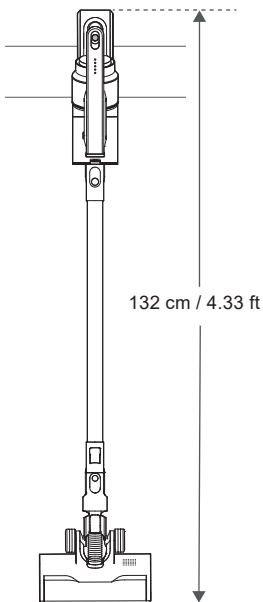

You can also hang the main unit on the metal tube.


Assembling

Attach your desired cleaning accessory to the metal tube or main unit of the vacuum as illustrated.

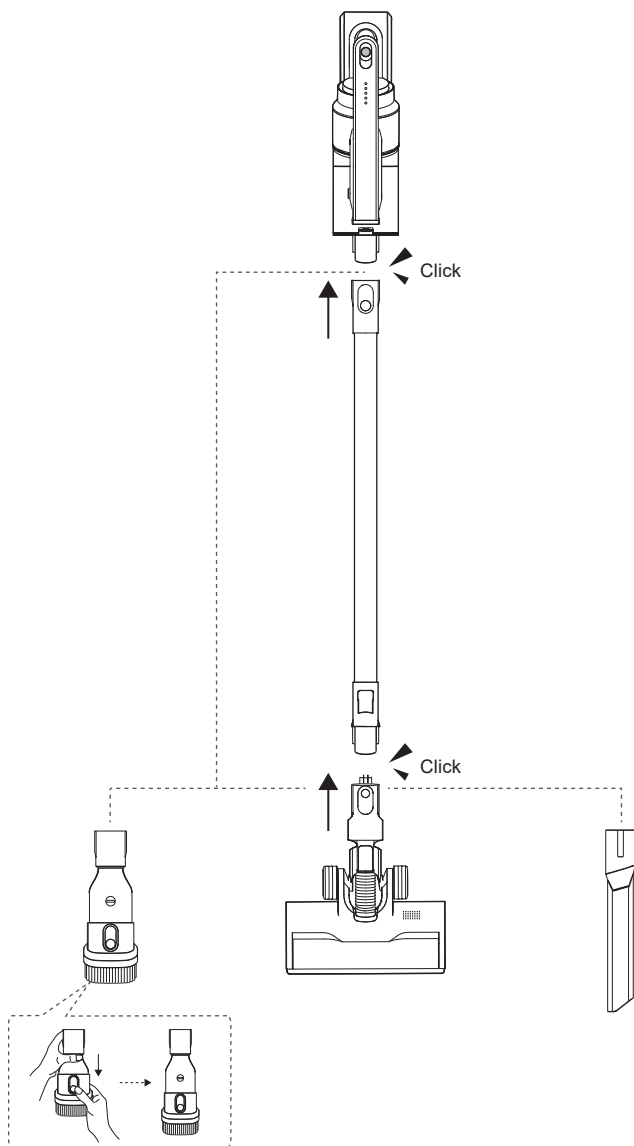

Charge Your Vacuum

The vacuum is powered by the built-in lithium battery. Before first use, charge the battery for at least 3.5 hours.

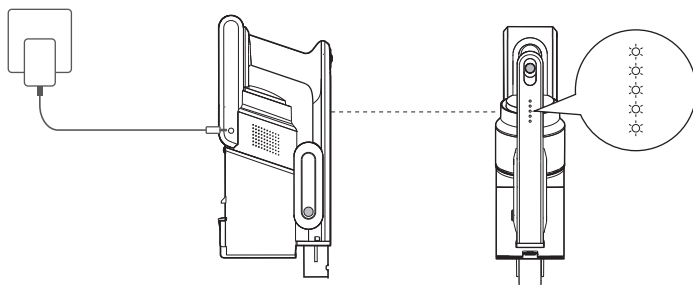


Notes:

- The vacuum cannot work while charging.
- The vacuum cannot be charged when the ambient temperature is below 10°C/50°F or above 45°C/113°F.
- The power indicator(s) is(are) flashing during charging, and go(es) off when fully charged.

Cleaning

Before use, make sure that the vacuum is fully charged and the dust box and filters are cleaned, dried, and fixed in place.

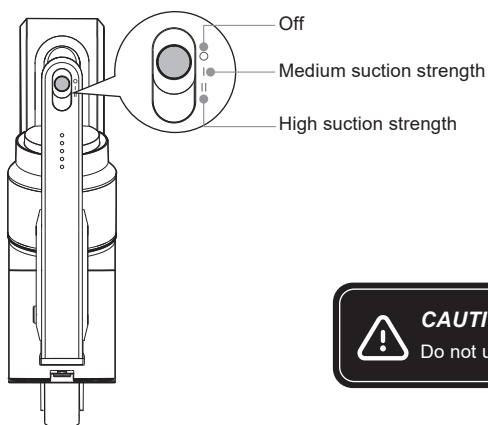

CAUTION

Do not use the vacuum to clean up water.

Maintenance

For optimal performance, follow the instructions below to clean and maintain the vacuum regularly. The cleaning/replacement frequency will depend on your usage habits of the vacuum.

Recommended Cleaning /Replacement Frequency

Vacuum Part	Cleaning Frequency	Replacement Frequency
Dust Box	After each use	—
Filters	Once every week (Twice a week if you have a pet)	Every 6-12 months
Rolling Brush	Once every week	Every 6-12 months

Note:

We manufacture various replacement parts and assemblies. If you think you need a replacement part, please contact our customer service for more information.


Clean the Dust Box and Filters

CAUTION




- Turn off the vacuum before cleaning it.
- If the dust box is filled with dust, the vacuum may stop to prevent overheating.
- Clean the dust box before it fills to the MAX line.


- 1 Disassemble the metal tube.

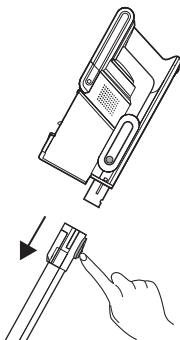


- 2 Press the dust empty button to empty the dust box.

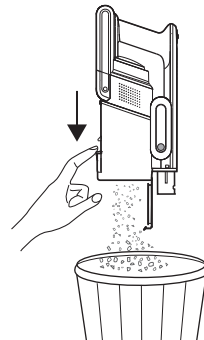


- 3 Press and hold the dust box release button and pull the dust box out in the direction as illustrated.

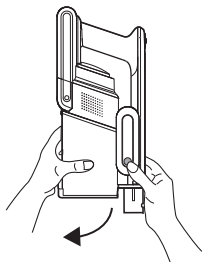


- 5 Turn the high-efficiency filter counter-clockwise to take it out.

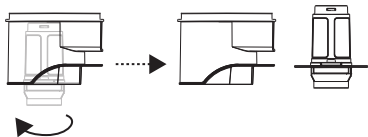


- 4 Take out the pre-filter and the high-efficiency filter box.

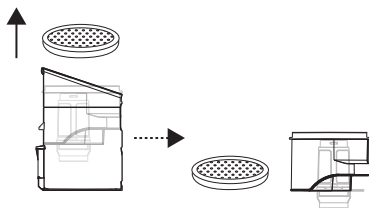


- 6 Shake off debris by tapping the filters against your trash container.

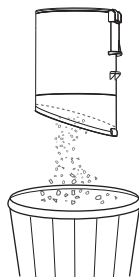

- 7 Rinse the dust box, high-efficiency filter box and filters

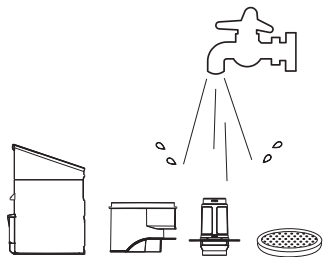

- 8 Air-dry the dust box, high-efficiency filter box and filters completely before reassembly.

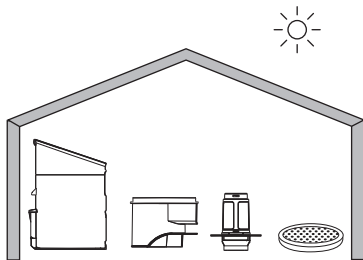

Note:


Do not use a brush, hot water, or any detergent to clean the filters.

CAUTION




- Keep away from direct sunlight.
- All parts must be completely dry before reassembly.


- 9 Turn the high-efficiency filter clockwise to install it in the high-efficiency filter box.

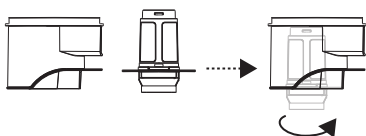

- 10 Put the high-efficiency filter box and pre-filter back into the dust box.

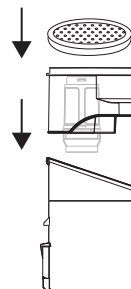


- 11 Push the dust box back into the vacuum in the direction as illustrated until you hear it click.

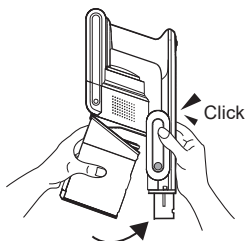


Clean the Rolling Brush


- 1 Turn off the vacuum, press the floor brush release button to remove the floor brush from the metal tube.

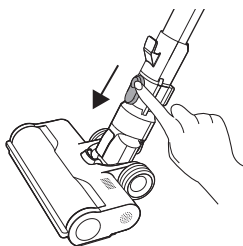


- 2 Use a coin to turn the rolling brush locking lid counter-clockwise to unlock the rolling brush as illustrated.

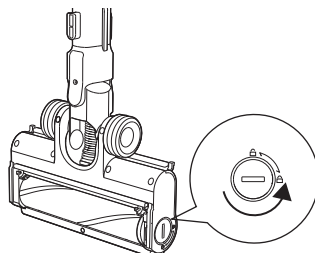


- 3 Lift the rolling brush to remove.

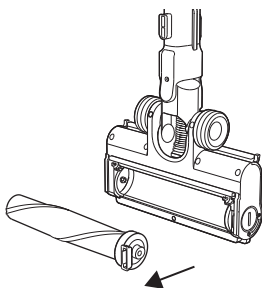


- 4 Clean the rolling brush using scissors or other tools, rinse and then air-dry the rolling brush.

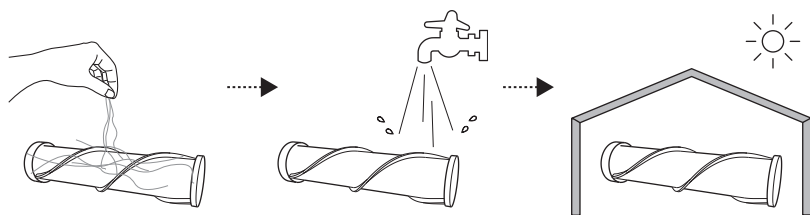

- 5 Reinstall the rolling brush by inserting the fixed protruding end first and then clicking into place.

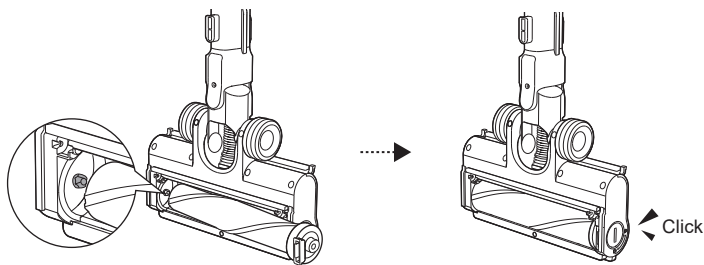

- 6 Use a coin to turn the rolling brush locking lid clockwise to lock the rolling brush.

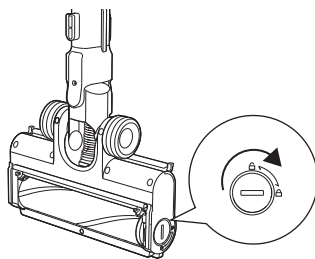

Troubleshooting

Problems	Solutions
Vacuum is not picking up debris. No suction or light suction.	• Dust box may be full; empty the dust box. • Check crevice tool nozzle and floor brush for blockages; clear blockages if required. • Remove any string, carpet fibers, or hair that may be wrapped around the rolling brush. • Check connection between the main unit and metal tube for blockages; clear blockages if required. • Check the metal tube for any blockages and clear any debris. • Check filters to see if they need cleaning. Follow instructions for rinsing and completely air-drying the filters before reassembling.
Vacuum turns off on its own.	There are several possible reasons for the vacuum turning off on its own, including blockages, battery issues, and overheating. If vacuum turns off on its own, perform the following steps: 1. Turn on the vacuum and check the battery indicator lights. If recharging is needed, plug in while vacuum is in the off position. 2. Empty the dust box and clean filters. 3. Check the metal tube, accessories, and inlet openings and remove any blockages. 4. Allow the main unit of the vacuum to cool for at least 45 minutes, until they return to room temperature. 5. Restart the vacuum.

Specifications

	Input	26V ~ 0.4A
	Rated Power	140W MAX (Main unit) 30W MAX (Floor brush)
	Battery Type	Lithium-ion 22.2 V, 2200 mAh, 6 cells
	Dust Box Capacity	1 L
	Charging Time	5-5.5 hours
	Max Running Time	45 mins
	Operating Temperature	0°C/32°F to 40°C/104°F
	Product Net Weight	2.3 kg/5.1 lb