



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

2-IN-1 CORDLESS Hand Mixer and Chopper



Model No.

400900

User Manual

Please read and keep these instructions for future use



HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Children shall not play with the appliance.
- Keep appliance and cord out of the reach of children.
- **CAUTION:** Ensure that the Mixer/Chopper is switched off before removing parts that move in use.



HEALTH AND SAFETY

- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the blades/whisks during operation, to prevent personal injury and/or damage to the appliance.
- Do not operate for periods longer than stated.
- Care shall be taken when handling the sharp cutting blades, emptying the chopping jug and during cleaning.
- For care & cleaning refer to the care and cleaning section of the manual.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.



HEALTH AND SAFETY

LOCATION

- Ensure that the appliance is used on a firm, flat surface to reduce noise and vibration.
- Do not expose the appliance to direct sunlight.
- Do not use outdoors or in a bathroom.
- Always locate your appliance away from the edge of the worktop.
- Do not place the jug used with the appliance on a highly polished wooden surface as damage may occur to the surface.

OTHER SAFETY CONSIDERATIONS

- Do not use the appliance for anything other than its intended purpose.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- **WARNING:** Misuse of appliance could cause personal injury.

PRODUCT SPECIFIC SAFETY

- Do not use the appliance if the chopping jug or lid is damaged or has visible cracks.

CHARGING CABLE

 
- Do not let the charging cable hang over the edge of the worktop where a child could reach it.
- Do not let the charging cable run across an open space e.g. between a low socket and table.
- Do not let the charging cable run across a cooker or other hot area which might damage the charging cable.
- The charging cable should run from the power source/socket to the appliance without straining the connections.
- Do not operate the appliance with a damaged charging cable or charger (not supplied).



BATTERY SAFETY & DISPOSAL

- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may cause an explosion.
- Recommended ambient charging and storage temperature:
 - 10°C–40°C (50°F–104°F). Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as lithium-ion batteries may explode in fire.
- The lithium battery is not a serviceable item. Check with your Local Authority for recycling advice.

PRODUCT OVERVIEW

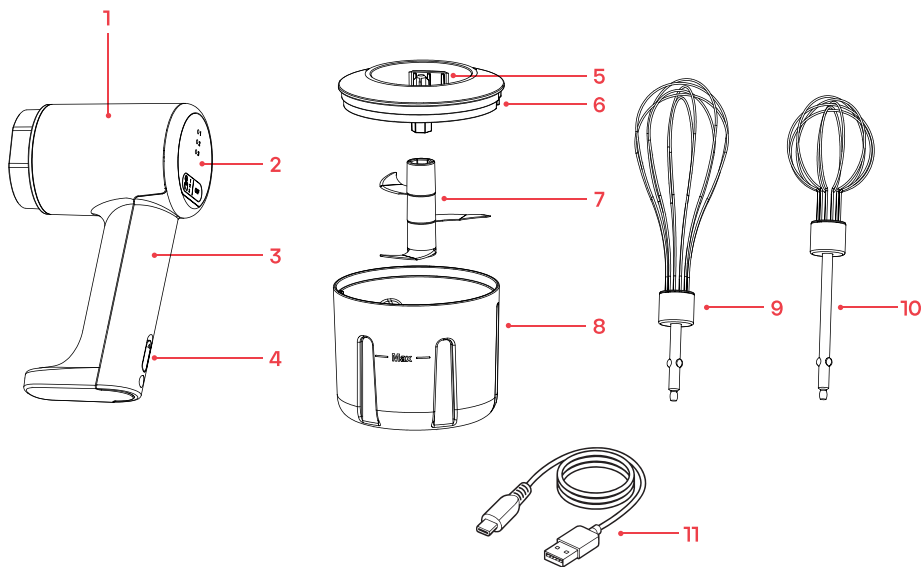


- | | |
|--|----------------------------|
| 1. Main Unit | 6. Chopping Bowl Lid |
| 2. Control Panel | 7. Chopping Blade Assembly |
| 3. Handle | 8. Chopping Bowl |
| 4. USB-C Charging Port with silicone cover | 9. Egg/Cream Whisk |
| 5. Chopping Blade Drive gear | 10. Butter Whisk |
| | 11. USB-C Cable |





 PRODUCT OVERVIEW

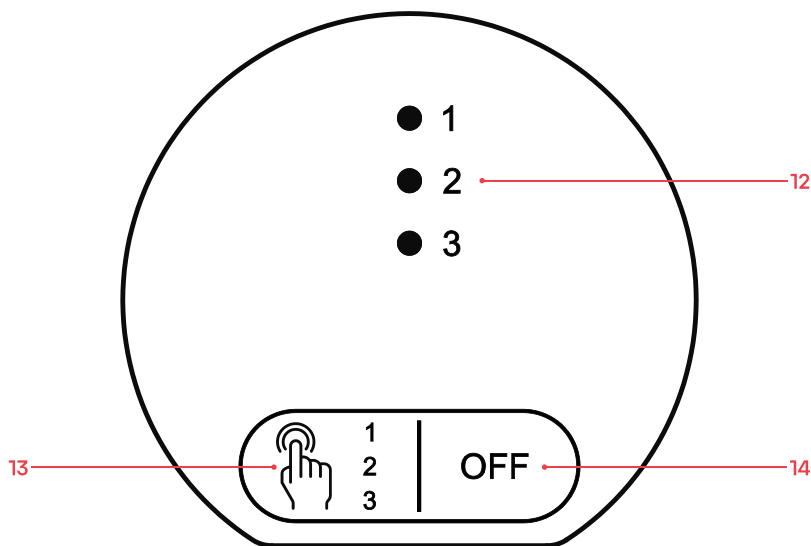

- 12. Speed / Charging Indicators
- 13. Speed Selector button
- 14. Power Off button

BEFORE FIRST USE

WARNING: Carefully unpack your 2-in-1 Hand Mixer and Chopper as the blades are very sharp.

- Wash all parts (except the Main Unit) with warm soapy water before use. Dry all parts thoroughly before use.

DO NOT immerse the Main Unit in water, use a warm damp cloth to clean.

Important: The product should be switched off and the USB cable should be removed before assembling.





CHARGING THE 2-IN-1 HAND MIXER AND CHOPPER

Note: When using the Mixer and Chopper for the first time (or after a period of being stored) it should be charged fully.

- Remove the silicon cover from the USB port of the main body and connect the USB-C cable (supplied) to the USB-C port on the main unit and then connect to the mains socket using a 5VDC 1A adapter (not supplied).

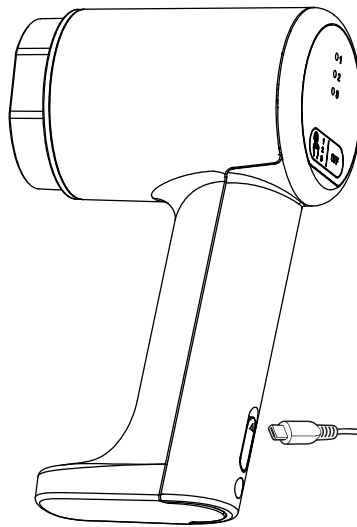 


Figure 1

- During charging, the red light will be on. When fully charged, the white light will be on. Charging time is approximately 2 to 3 hours.

Note: When the battery has very low charge remaining, all the three lights flash 5 times before the product turns off.

Note: The product will not operate during charging.



USING YOUR 2-IN-1 HAND MIXER AND CHOPPER

WHISKS

Important: The **MAXIMUM** working cycle for the whisk is 2 minutes at Low, Medium or High Setting. We recommend the appliance is allowed to rest for at least 1 minute after 1 working cycle before it is used again. After 3 consecutive cycles it should be allowed to rest for 30 minutes. Using the appliance for longer than this time may cause damage to the appliance.

- Attach the desired whisk to the main unit. Pressing firmly until it clicks securely into place. Figure 2.
- Place a mixing bowl on a flat, firm, level surface and add your ingredients to the bowl. Figure 3.
- Place the whisk inside the ingredients before turning on the product. It is recommended to start at a low speed and gradually increase to a high speed to prevent the mixture from spilling.
- Use one hand to hold the main unit firmly and use your thumb to press the Power On Button.
- Press the Power On button again, the appliance will operate at Speed 1 and the corresponding Speed / Charging Indicator will illuminate.
- Continue to press the Power On button to increase the speed. When speed 3 has been reached the speed will cycle back to speed 1 when the button is pressed.
- To stop, press the OFF button, the Speed / Charging Indicators will all illuminate red for approximately 5 seconds then go off.

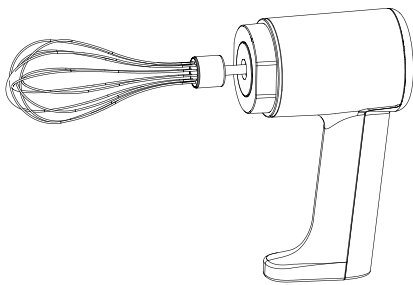 


Figure 2

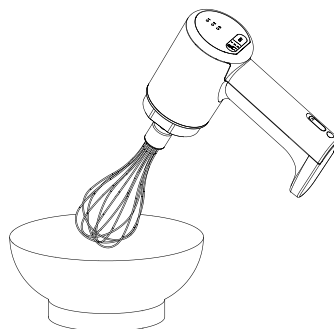 


Figure 3





USING YOUR 2-IN-1 HAND MIXER AND CHOPPER

CHOPPING BOWL

WARNING: Handle the blades with care as they are sharp.

Important: The **MAXIMUM** working cycle for the whisk is 2 minutes at Low or High Setting and 30 seconds for Pulse Setting. We recommend the appliance is allowed to rest for at least 1 minute after 1 working cycle before it is used again. After 3 consecutive cycles it should be allowed to rest for 30 minutes. Using the appliance for longer than this time may cause damage to the appliance.

- Place the Chopping Bowl on a flat, firm, level surface.
- **CAREFULLY** Place the Blade onto the chopping bowl spindle. Figure 4.
- Add your ingredients to the chopping bowl. Do not exceed the MAX fill line. Figure 5.
- Press the lid onto the chopping bowl. Lining up the notches in the lid with the grooves in the chopping bowl. Figure 6.

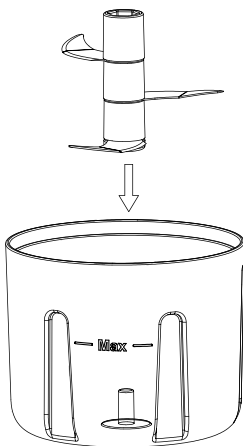 


Figure 4

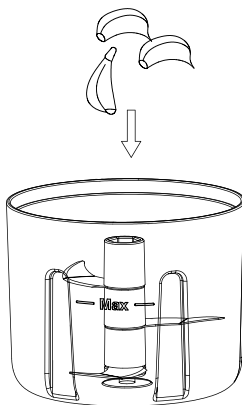 


Figure 5

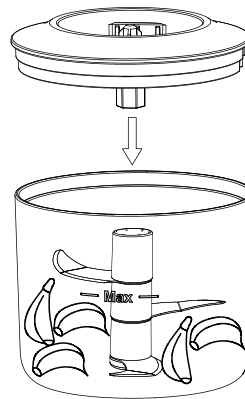 


Figure 6



USING YOUR 2-IN-1 HAND MIXER AND CHOPPER

- Locate the Main Unit onto Chopping Bowl Drive Gear on top of the lid. Figure 7 & 8.

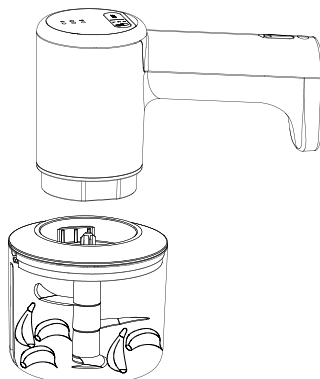 


Figure 7

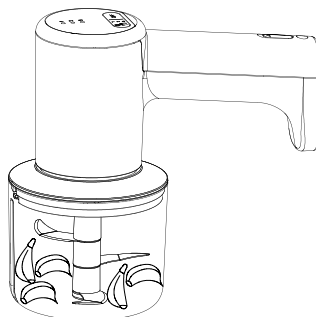 


Figure 8

- Hold the main unit firmly with one hand and with the other press the Power On button, the Speed / Charging Indicators will illuminate white.
- Press the Power On button again, the appliance will operate at Speed 1 and the corresponding Speed / Charging Indicator will illuminate.
- Continue to press the Power On button to increase the speed. When speed 3 has been reached the speed will cycle back to speed 1 when the button is pressed.
- To stop, press the OFF button, the Speed / Charging Indicators will all illuminate red for approximately 5 seconds then go off.
- Ensure the blades have stopped rotating completely before removing the Main Unit and Chopping Bowl Lid.
- Remove the blades from the chopping bowl with care before emptying the ingredients.

Note: If the chopping blades have difficulty turning, remove the main unit and check the ingredients aren't caught in the blades.

Note: Not suitable for chopping hard and dry ingredients, eg. Coffee beans or nuts.

Note: **DO NOT** exceed the **MAXIMUM** fill line.



HINTS AND TIPS

Important: The product should not be used to mix dough.

- Frozen foods **MUST** be defrosted before whisking/chopping.
- To avoid eggshells entering your mixing bowl, crack eggs into a separate container before transferring them.
- It is recommended to start with the whisk at low speed and then slowly increase to high speed to prevent the mixture from splattering.
- The amount of food to be chopped should not exceed the **MAXIMUM** fill line.
- Food must be cut into 15mm x 15mm x 15mm chunks, and meat should have skin and/or fat removed.
- This product should not be used to whisk/stir fruit juices or to chop dry, hard or pitted objects.

CARE AND CLEANING

WARNING: Handle the blades with care as they are sharp.

Important: The product should be switched off and the USB cable should be removed before disassembling for cleaning.

- **DO NOT** immerse the Main Unit in water, use a warm damp cloth to clean and dry thoroughly.
- The chopping bowl, chopping bowl lid, blade assembly and whisks can be washed in warm water with a mild detergent. Do not use abrasive or corrosive cleaners.
- Dry all parts thoroughly before re-assembling.

Note: The chopping bowl, chopping bowl lid, blade assembly and whisks are dishwasher safe.

- This product should not be used to whisk/stir fruit juices or to chop dry, hard or pitted objects.



STORAGE

- Ensure the product is clean and dry before storing.
- To store your product we recommend using the original box or similar size box.
- Store in a clean and dry place when not in use.
- If the product isn't used for prolonged periods, it should be charged every 3 months to maintain optimum performance of the battery and product.

TROUBLESHOOTING

Problem	Solution
No power.	The battery isn't sufficiently charged. Charge the battery using the charging cable supplied.
	Has the blender been used consecutively without resting? Allow the motor unit time to cool down.
Speed/Charge Indicators flash 5 times and appliance turns off.	The battery needs charging.
Blades / whisks are not turning.	Make sure the food you are trying to chop is not too thick or too hard.
	The chopper hasn't been assembled correctly. Remove the main unit and re-assemble securely.
	Unsuitable ingredients. Make sure you do not use ingredients that cannot be chopped or whisked.
	The chopping bowl has been overfilled. Remove some of the ingredients and allow the motor unit to cool for 10 minutes.



SPARES

Part Number	Description	Qty Per Product	Features Key Number
05636	Chopping Bowl and Lid (with chopping blade drive gear)	1	5, 6 & 8
05637	Chopping Blade Assembly	1	7
05638	Egg/Cream Whisk	1	9
05639	Butter Whisk	1	10

CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



FP400900MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

