

nutrarchef™



Start Here



nutrarchefkitchen.com/register

NCSTKTL8L - NCSTKTL13L - NCSTKTL19L

Electric Water Boiler and Hot Water Dispenser

USER GUIDE

About NutriChef

A mission born out of need

NutriChef was created on the principle that healthy home cooking should be attainable to all, regardless of skill level and economic status. Starting in 2014, we noticed the disconnect in our lives and in the lives of those around us. We were so busy, always rushing forward, and our health and personal lives suffered. We needed to find some way to slow down and put our health first, all without sacrificing convenience or taste. Could we somehow create healthier versions of our favorite foods, easily in our own kitchens? The answer was a resounding yes, and NutriChef was born.

We create products that make life a little easier and a little healthier

Our brand was created out of a desire to provide an alternative to fast food convenience and reintroduce people to home cooking. A healthy home-cooked meal is what brings families and friends together. We believe strongly in the value of simple pleasures. An evening spent cooking and sharing a meal of wholesome, nourishing foods is a memory in the making.

We believe a moment shared is priceless

Today, we have built upon our original mission and now in addition offer products that make the art of entertaining a simpler one. Entertaining and hosting family and friends are one of the great joys of life. Why waste a moment stuck in the kitchen? We offer products that free you up to socialize, while never sacrificing quality or taste.



TABLE OF CONTENTS

FEATURES AND TECHNICAL SPECS	4
IMPORTANT SAFEGUARDS	5
SAFETY WARNINGS	5
INSTRUCTIONS FOR USE	6
BOIL DRY PROTECTION	6
CLEANING AND MAINTENANCE	6
REGISTER PRODUCT	7

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Initial Use Odor Warning:

During the first use, the appliance may emit a small amount of haze and a burnt plastic-like odor due to protective coatings. This is temporary and will disappear after a few uses. Use the appliance in a well-ventilated area to minimize the smell.

California Prop 65 Warning

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



NCSTKTL8L



NCSTKTL13L



NCSTKTL19L

Features:

- 8, 13, 19 Liter Food Grade Stainless Steel Inner Pot
- Electric Water Boiler & Hot Water Dispenser
- Consistent Temperature Maintenance
- Equipped with 3 Levels Switch Options: Heating, Cut Off, Keep Warm
- Safety Fuse and Overheat Protection
- Boil & Keep Warm Indicator Light
- With Visual Water Level Gauge for Brewing Process
- Cool Touch Handle and Safety Lock On Lid
- Sturdy and Durable
- Non-drip Water Tap
- Sleek and Compact Design
- Quick Heating, Automatic Boiling and Reboiling Feature
- Simple Electric Plug-in Design
- Easy to Clean & Easy to Refill
- Insulation Keeps Water Warm and Longer
- Maintain Warm Water for Extended Periods
- Thermal Safety Cut-Off to Prevent Dry Boiling Countertops
- Enjoy Hot Food & Beverages Anytime

What's in the Box:

- Electric Water Boiler and Hot Water Dispenser
- Power Cable US Plug

Technical Specification:

- **Kettle Capacity:**
 - NCSTKTL8L: 8 Liter or 270.5 oz.
 - NCSTKTL13L: 13 Liter or 439.5 oz.
 - NCSTKTL19L: 19 Liter or 642.4 oz.
- Power: 120V, 60Hz
- High-Powered Heating Element: 1100 Watts
- Maximum Heat Temperature: 212 °Fahrenheit
- Maintains a Temperature of 176- 212 °Fahrenheit
- **Product Dimensions (L X W X H):**
 - NCSTKTL8L: 8.66" x 8.66" x 19.49" -inches
 - NCSTKTL13L: 11.42" x 11.42" x 20.08" -inches
 - NCSTKTL19L: 11.42" x 11.42" x 23.82" -inches

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

IMPORTANT SAFEGUARDS

1. Read all instructions carefully before use.
2. Check that the water boiler voltage matches your outlet.
3. Plug into a grounded outlet.
4. Do not use if the cord or plug is damaged.
5. If the boiler is faulty or damaged, return it with proof of purchase.
6. Turn off the boiler before unplugging.
7. Always turn it off before moving.
8. Unplug by holding the plug, not pulling the cord.
9. Keep the cord away from table edges.
10. Place the boiler in the center of a stable table.
11. Never turn it on with an empty tank. Fill with water first.
12. Keep it away from stoves, burners, or ovens.
13. If an accident occurs, turn it off and place it on a flat, stable surface.
Keep it horizontal.
14. Do not let the cord or plug touch water.
15. Unplug and let it cool completely before cleaning.
16. Turn it off and unplug after use.
17. Use indoors only, in homes, restaurants, hotels, etc.
18. Requires a 13-amp plug.
19. Only use in places where trained personnel can oversee it.
20. Includes a thermal safety feature that does not reset itself.

SAFETY WARNINGS

1. The surface of the water boiler becomes very hot during use.
Do not touch the surface.
2. Do not remove the lid while the water is boiling.
3. Position the lid so that steam is directed away from the handle.
4. If the appliance is overfilled, boiling water may be ejected.
5. If the supply cord is damaged, it must be replaced by a qualified person to avoid hazards.
6. This appliance is intended for use in households and similar applications, such as staff kitchens in workplaces, farmhouses, hotels, hostels, bed and breakfasts, cafes, and restaurants.
7. This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have received supervision or instruction from a person responsible for their safety.
8. Children should be supervised to ensure they do not play with the appliance.

INSTRUCTIONS FOR USE

1. Open the lid and pour in water.

Ensure the water level is below the "FULL" indicator.

2. Plug the appliance into the power outlet.
3. Move the switch to the "Boil" (-) position.

The red pilot light will illuminate, indicating that the water is heating.

When the water reaches boiling temperature, you can switch to the "Keep Warm" (=) position to maintain the temperature.

4. The time taken to reach boiling temperature depends on the volume of water and the initial water temperature when the appliance was switched on.
5. Regularly check the water level to prevent the appliance from running dry. We recommend turning off the appliance when fewer than three cups of water remain.
6. To turn off the appliance, move the switch to the center (Off) position and unplug it from the power outlet.

BOIL DRY PROTECTION

Always ensure there is a sufficient water level in the appliance during use to avoid damage. This water boiler has a boil-dry prevention feature:

if the appliance overheats due to lack of water, the heating element's fuse will automatically cut off, protecting the unit from damage. If the safety cut-off activates, turn off the appliance, unplug it from the mains, and have it inspected by a qualified professional before using it again.

CLEANING AND MAINTENANCE

Cleaning

- Rinse the water boiler with hot water before each use.
- Unplug the unit, empty any remaining water, and let it cool before cleaning.
- Do not immerse the appliance in water.
- Add a small amount of hot water, brush the sides, and rinse with hot water until it runs clear.
- Remove the lid for easier cleaning.
- Wipe the body of the water boiler with a soft cloth.
Avoid using abrasive materials that could scratch the surface.
- Do not clean this unit with a water jet.
- Follow this cleaning process regularly and perform routine descaling to prevent limescale buildup, which can reduce the appliance's lifespan.

Discoloration of the Water Tank

Minerals in water, such as iron, can cause discoloration.

To remove it:

- a. Cut a lemon into four pieces, wrap it in a cloth, and place it in the water tank.
- b. Fill the tank up to the “Full” indicator.
- c. Boil the water and let the mixture sit in the tank for about one hour.
- d. Pour out the water, then scrub the water tank with a nylon brush.
- e. To remove the lemon smell, boil fresh water and then discard it.

USAGE PARAMETERS

Rated Capacity	Power	Voltage/Frequency	Environmental Temperature in Use	Environmental Humidity in Use
6-10L	1100W	AC 120 V, 60 Hz	50–100°F (10–38°C)	Up to 90%
13L-40L	1100W	AC 120 V, 60 Hz	50–100°F (10–38°C)	Up to 90%

NOISE LEVEL

The A-weighted sound pressure level is below 70 dB.

PRODUCT DISPOSAL



The WEEE directive requires defective or used products to be disposed of in an environmentally responsible manner.

The WEEE symbol indicates that this product should not be disposed of as unsorted household waste.

Take the product to a designated collection point.

Please contact your local authority for information on the nearest collection site.

Register Product

Thank you for choosing Nutrichef. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your Nutrichef purchase in perfect condition.

Start Here



nutrichefkitchen.com/pages/register

nutrichef™



Questions or Comments?

We are here to help!

Phone: 1.718.535.1800

nutrichefkitchen.com/ContactUs