



## EN User Manual | Refrigerator



## Welcome to our family

Thank you for bringing Frigidaire into your home! We see your purchase as the beginning of a long relationship together.

This manual is your resource for the use and care of your product. Please read it before using your appliance. Keep it handy for quick reference. If something doesn't seem right, the troubleshooting section will help you with common issues.

FAQ, helpful tips and videos, cleaning products, and kitchen and home accessories are available at <http://www.frigidaire.com>.

We are here for you! Visit our website, chat with an agent, or call us if you need help. We may be able to help you avoid a service visit. If you do need service, we can get that started for you.

Let's make it official! Be sure to register your product.

## CONTENTS

1. IMPORTANT SAFETY INFORMATION.....	2
2. FEATURES.....	5
3. INSTALLATION.....	6
4. CONTROL PANEL: CONVERTIBLE.....	8
5. CONTROL PANEL: REFRIGERATOR.....	9
6. STORAGE FEATURES.....	10
7. STORING FOOD AND SAVING ENERGY.....	11
8. CARE AND CLEANING.....	11
9. TROUBLESHOOTING.....	12
10. LIMITED WARRANTY.....	13
11. QUEBEC RIGHT TO REPAIR.....	14

# 1. IMPORTANT SAFETY INFORMATION

## 1.1 Keep a record for quick reference

Model number

.....


Serial number

.....

Purchase date

.....

## 1.2 Serial number location

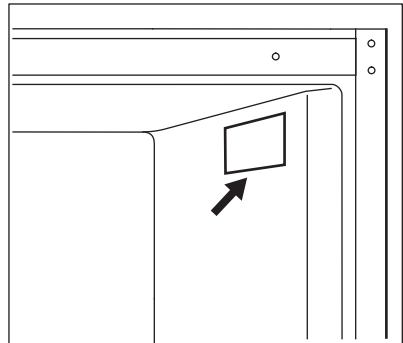

## **WARNING!**

You must follow these guidelines to ensure that your appliance's safety mechanisms are operating correctly.

## 1.3 Safety definitions



This is the safety alert symbol. It is used to alert of potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

## **DANGER**

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

## **WARNING!**

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

## **CAUTION!**

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

## **IMPORTANT**

IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related.

## 1.4 Child safety

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Destroy or recycle the carton, plastic bags, and any exterior wrapping material immediately after the appliance is unpacked. Children should never use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.

## 1.5 Important safety instructions

### **DANGER**



DANGER Risk of fire or explosion. Flammable refrigerant used. Do not use mechanical devices to defrost the appliance. Do not puncture refrigerant tubing.

DANGER Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. Use only manufacturer-authorized service parts. Any repair equipment used must be designed for flammable refrigerants. Follow all manufacturer repair instructions. Do not puncture refrigerant tubing.

### **CAUTION!**



CAUTION Risk of fire or explosion due to puncture of refrigerant tubing. Follow handling instructions carefully. Flammable refrigerant used.

This appliance is for storage only and should not be used for any other purpose.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Do not operate the appliance in the presence of explosive fumes. Avoid contact with any moving parts of automatic ice maker.

Remove all staples from the carton. Staples can cause severe cuts, and also destroy finishes if they come in contact with other appliances or furniture.

**⚠ WARNING!**

Do not use electrical appliances inside the food storage compartments of the appliance unless they are of the type recommended by the manufacturer.

**⚠ WARNING!**

CALIFORNIA RESIDENTS ONLY  
WARNING! Cancer and Reproductive Harm <http://www.P65Warnings.ca.gov>

## 1.6 Proper disposal of your appliance

**⚠ CAUTION!**

CAUTION Risk of fire or explosion. Dispose of the appliance properly in accordance with the applicable federal or local regulations. Flammable refrigerant used.



### Risk of child entrapment


Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous – even if they will sit for “just a few days”. If you are getting rid of your old appliance, follow the instructions below to help prevent accidents.

We strongly encourage responsible appliance recycling/disposal methods. Check with your utility

company or visit <http://www.energystar.gov/recycle> for more information on recycling your old appliance.

### Before you throw away your old appliance:

- Remove doors.
- Leave shelves in place so children may not easily climb inside.
- Have it removed by a qualified service technician.

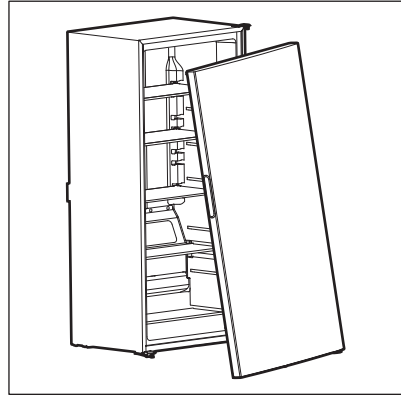

## 1.7 Electrical information

- The appliance must be plugged into its own dedicated 115 Volt, 60 Hz., 15 Amp, AC only electrical outlet. The power cord of the appliance is equipped with a three-prong grounding plug for your protection against electrical shock hazards. It must be plugged directly into a properly grounded three-prong receptacle. The receptacle must be installed in accordance with local codes and ordinances. Consult a qualified electrician. Do not use an extension cord or adapter plug.

**⚠ WARNING!**

Avoid fire hazard or electric shock.

- If the power cord is damaged, it should be replaced by an authorized service technician to prevent any risk.
- Never unplug the appliance by pulling on the power cord. Always grip the plug firmly, and pull straight out from the

receptacle to prevent damaging the power cord.

- Unplug the appliance before cleaning and before replacing the AC LED light bulb to avoid electrical shock.
- Performance may be affected if the voltage varies by 10% or more. Operating the appliance with insufficient power can damage the compressor. Such damage is not covered under your warranty.
- Do not plug the unit into an electrical outlet controlled by a wall switch or pull cord to prevent the appliance from being turned off accidentally.
- Do not pinch, knot, or bend the power cord in any manner.

### **WARNING!**

When positioning the appliance, ensure the supply cord is not trapped or damaged. Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

### **WARNING!**

Do not, under any circumstances, cut, remove, or bypass the grounding prong (A). Always use the power cord with a three-prong grounded plug and grounding type wall receptacle.



## 2. FEATURES


### **IMPORTANT**

Features may vary by model. Accessories are available for your appliance and may be purchased at [Frigidaire.com](http://Frigidaire.com) or by calling toll-free 1-800-374-4432.

### 2.1 Product overview

### **IMPORTANT**

Depending on the model, the appliance can have either an internal or an external control panel. Refer to the Control Panel section to identify your controls.

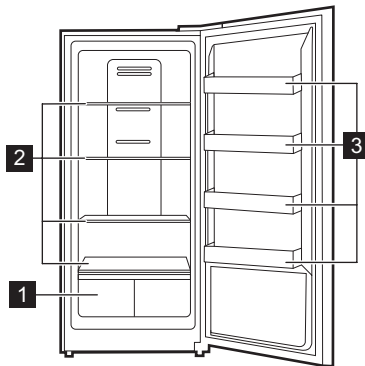

- 1** Drawer(s) - varies by model
- 2** Shelf
- 3** Door bin

## 3. INSTALLATION

This User Manual provides general installation and operating instructions for your model. We recommend using a service or kitchen contracting professional to install your appliance. Use the appliance only as instructed in this User Manual. Before starting the appliance, follow these important first steps.

### 3.1 ✓ Installation Checklist

#### Doors

- Door seals completely the cabinet on all sides
- Freezer door is level from side to side across the top

#### Leveling

- Appliance is level side-to-side and tilted 1/4" (6 mm) front-to-back
- Cabinet is setting solid on all corners
- Anti-tip bracket set in front on both sides

#### Electrical Power

- House power is turned on
- Appliance is plugged in

#### Final Checks

- Shipping material is removed
- Registration card is sent in

### 3.2 Moving the appliance

#### IMPORTANT

The appliance is heavy. Always move the appliance with two people. When moving it for cleaning or service, remove all food, unplug the appliance, secure the power cord, and tape the movable parts. Cover the floor with cardboard or hardboard to prevent damage. Always pull the appliance straight out. Do not wiggle or "walk" the appliance, because this can damage the floor.

### 3.3 Connecting the appliance

After installation, wait at least 2 hours before switching on the power. Switching on the appliance too soon can reduce cooling performance or cause damage.

#### IMPORTANT

Let the appliance run empty for 24 hours to cool the compartment to the correct temperature.

### 3.4 Cleaning the appliance

#### IMPORTANT


Remove tape and glue residue from surfaces before turning the appliance on. Rub a small amount of liquid dish soap over the adhesive with your fingers. Rinse with warm water and dry with a soft cloth.

Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of the appliance.

After you remove all of the package materials, clean the inside of the appliance before using it. Refer to Care and Cleaning.

See important information about cleaning glass shelves and covers in the Storage Features section.

### 3.5 Dimensions

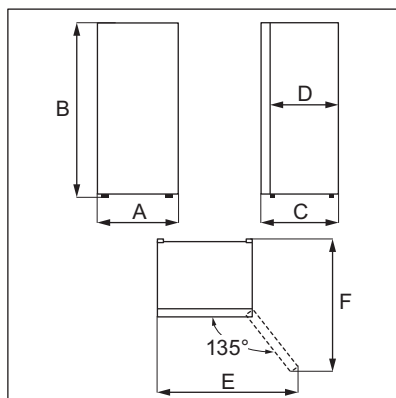

- A. Width: 2' 8.8" (832 mm)
- B. Overall height: 5' 5.0" (1650 mm)
- C. Depth: 2' 5.3" (745 mm)
- D. Depth of the cabinet: 2' 2.0" (660 mm)
- E. Width with door open at 135°: 4' 7.9" (1420 mm)

F. Depth with door open at 135°: 4' 3.8"  
(1315 mm)

### 3.6 Location

- If possible, place the appliance out of direct sunlight and away from the range, dishwasher, or other heat sources.
- The appliance must be installed on a floor that is level and strong enough to support a fully loaded appliance.

#### **WARNING!**

This appliance is intended for use in residential household and similar interior applications such as:

- Kitchen / kitchenette
- Pantry room
- Basement
- Enclosed garage
- Other interior residential type environments

#### **IMPORTANT**

This appliance is garage-ready. It is designed to operate in ambient temperatures between 38°F (3°C) and 110 °F (43 °C).

#### **CAUTION!**

This appliance is convertible and can operate as a refrigerator or a freezer. Do not install the appliance where the temperature:

- raises above 110 °F (43 °C).
- drops below 38°F (3°C).

The compressor will not be able to maintain proper temperatures inside the appliance.

#### **NOTE**

Sufficient air circulation is essential for the proper operation of the appliance.

#### **WARNING!**

Allow the following clearances for ease of installation, proper air circulation, plumbing, and electrical connections:

- Top 3/8" (9.5 mm)
- Sides 3/8" (9.5 mm)
- Back 1" (25.4 mm)

#### **NOTE**

The exterior walls of the appliance may become warm as the compressor transfers heat from the inside. The temperatures may be even 30°F higher than the room temperature. In hotter climates it is important to allow enough space for air circulation around the appliance.

#### **NOTE**

If you place the appliance with the door hinge side against a wall, you may have to allow additional space so the door can be open wider.

### 3.7 Cabinet leveling and door alignment

Guidelines for final positioning of appliance:

- All 4 corners of the cabinet must rest firmly on the floor.
- The cabinet should be level at the front and rear.
- The door should be level.


### 3.8 Leveling

When positioning the appliance, ensure that it is level, with all bottom corners resting firmly on a solid floor. You can adjust this using the two leveling feet located at the front bottom of the appliance. To lower the unit, turn the feet clockwise. To raise the unit, turn the feet counterclockwise.

#### **NOTE**

The front of the appliance should be slightly higher than the rear to help the doors close properly.

## 4. CONTROL PANEL: CONVERTIBLE

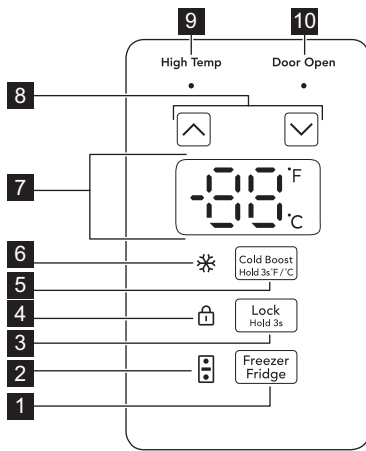

- 1 Freezer/Refrigerator Switch button**  
Press the button to set the appliance to Refrigerator or Freezer mode. The Freezer/Refrigerator indicator lights up: the upper dot for the Freezer mode and the lower dot for the Refrigerator mode.

### IMPORTANT

Before you change the mode:

- From freezer to refrigerator - remove any food that you want to keep frozen. Put it in another freezer to prevent it from defrosting.
- From refrigerator to freezer - remove any food that you want to keep fresh. Put it in another refrigerator to prevent it from freezing.

- 2 Freezer/Refrigerator indicator**  
Indicates the mode of the appliance. Upper dot represents Freezer mode, lower dot represents Refrigerator mode.
- 3 Lock button**  
Press and hold the button for 3 seconds to lock or unlock the control panel. When the control panel is locked, you cannot change the appliance setting.
- 4 Lock indicator**  
Lights up when Lock is active.
- 5 Cold Boost and °F/°C button**

- Press and hold the button for 3 seconds to toggle between °F and °C units.
- Press the button to turn Cold Boost on or off. When the function is active, Cold Boost indicator lights up. The function turns off automatically after 3 hours if the temperature drops below -13 °F (-25 °C) or after 24 hours if the temperature stays above -13 °F (-25 °C). Use this function to quickly freeze food.

- 6 Cold Boost indicator**  
Lights up when the function is active.
- 7 Temperature indicator**  
Temperature range for refrigerator: 35 – 46 °F (2 – 8 °C).  
Temperature range for freezer: -11 – 10 °F (-24 – -12 °C).
- 8 Temperature regulation buttons**  
Press to increase or decrease the temperature.
- 9 High Temperature Alarm indicator**  
If the temperature inside the appliance is too high, the indicator lights up and the alarm sounds. Press any button to stop the alarm.  
The alarm activates when:
- In Freezer mode: the interior temperature stays above 18 °F (-8 °C) for 36 hours.
  - In Refrigerator mode: the interior temperature stays above 59 °F (15 °C) for 36 hours.
- Check that the appliance is in a well-ventilated room, the appliance door close and seal properly, and the room temperature is not too high.
- 10 Door Open Alarm indicator**  
If the door stays open for more than 3 minutes, the indicator lights up and the alarm sounds. Close the door to stop the alarm.  
Make sure no items block the door from closing completely and that the appliance stands level.

### 4.1 Sabbath Mode

The Sabbath Mode disables parts of the appliance and its controls to support

observance of the weekly Sabbath and religious holidays in the Orthodox Jewish community. The compressor and fan keep working in normal mode. Their operation does not change when the door opens or closes.

### NOTE

The temperature setting is not affected by the Sabbath mode. Sounds and alarms are off, except for the High Temperature alarm. If a fault occurs, the appliance keeps working in the preset fault mode, but it does not show an error code or make a sound.

1. To enter the Sabbath Mode, press and hold the **Refrigerator/Freezer Switch** and **Cold Boost** buttons together for 5 seconds.

The display shows **SB** when the function is active.

2. To exit the Sabbath Mode, press and hold the **Refrigerator/Freezer Switch** and **Cold Boost** buttons together for 5 seconds.

### NOTE

While in Sabbath mode, the lights and the control panel do not work until Sabbath mode is deactivated. The appliance stays in Sabbath mode after power failure recovery. Deactivate it with the appliance control.



For further assistance, guidelines for proper use and a complete list of models with the Sabbath feature, please visit [star-k.org](http://star-k.org).


## 4.2 Display Always-On Mode

To activate or deactivate the Display Always-On mode:

Press and hold the **Temperature increase** and **Temperature decrease** buttons together for 4 seconds.

- When you activate the function, the display shows **ON** for 3 seconds and four rising beeps sound.
- When you deactivate the function, the display shows **OF** for 3 seconds and four falling beeps sound.

## 5. CONTROL PANEL: REFRIGERATOR

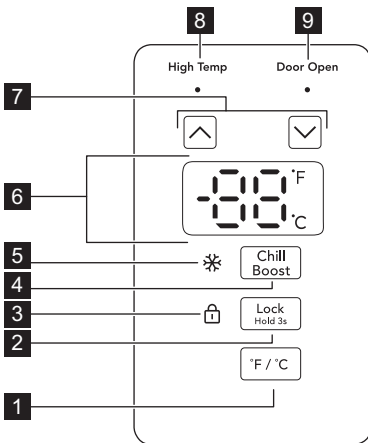

- 1 **°F/°C button**  
Press the button to toggle between °F and °C units.
- 2 **Lock button**  
Press and hold the button for 3 seconds to lock or unlock the control panel. When the control panel is

locked, you cannot change the appliance setting.

- 3 **Lock indicator**  
Lights up when Lock is active.
- 4 **Chill Boost button**  
Press the button to turn the function on or off. When the function is on, the Chill Boost indicator lights up. Use this function to quickly chill food.
- 5 **Chill Boost indicator**  
Lights up when the function is active.
- 6 **Temperature indicator**  
Temperature range: 35 – 46 °F (2 – 8 °C).
- 7 **Temperature regulation buttons**  
Press to increase or decrease the temperature.
- 8 **High Temperature Alarm indicator**  
If the temperature inside the appliance is too high, the indicator lights up and the alarm sounds. Press any button to stop the alarm. The alarm activates when the interior temperature stays above 59 °F (15 °C) for 36 hours.

Check that the appliance is in a well-ventilated room, the appliance door close and seal properly, and the room temperature is not too high.

### 9 Door Open Alarm indicator

If the door stays open for more than 3 minutes, the indicator lights up and the alarm sounds. Close the door to stop the alarm.

Make sure no items block the door from closing completely and that the appliance stands level.

## 5.1 Sabbath Mode

The Sabbath Mode disables parts of the appliance and its controls to support observance of the weekly Sabbath and religious holidays in the Orthodox Jewish community. The compressor and fan keep working in normal mode. Their operation does not change when the door opens or closes.

### NOTE

The temperature setting is not affected by the Sabbath mode. Sounds and alarms are off, except for the High Temperature alarm. If a fault occurs, the appliance keeps working in the preset fault mode, but it does not show an error code or make a sound.

1. To enter the Sabbath Mode, press and hold the °F/°C and **Chill Boost** buttons together for 5 seconds.

The display shows **SB** when the function is active.

2. To exit the Sabbath Mode, press and hold the °F/°C and **Chill Boost** buttons together for 5 seconds.

### NOTE

While in Sabbath mode, the lights and the control panel do not work until Sabbath mode is deactivated. The appliance stays in Sabbath mode after power failure recovery. Deactivate it with the appliance control.



For further assistance, guidelines for proper use and a complete list of models with the Sabbath feature, please visit [star-k.org](http://star-k.org).

## 5.2 Display Always-On Mode

To activate or deactivate the Display Always-On mode:

Press and hold the **Temperature increase** and **Temperature decrease** buttons together for 4 seconds.

- When you activate the function, the display shows **ON** for 3 seconds and four rising beeps sound.
- When you deactivate the function, the display shows **OF** for 3 seconds and four falling beeps sound.


# 6. STORAGE FEATURES

Equipment varies by model.

## 6.1 Door Bins

To remove the door bin:


1. Lift the bin up.
2. Pull it straight out.

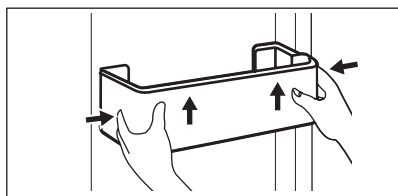

## 6.2 Shelves

To remove the shelves:

1. Lift the shelf.
2. Pull it straight out.

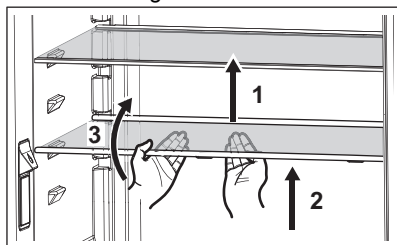

### 6.3 Removing/Installing crisper drawers

Use the crisper to keep produce fresh for longer.

You can remove the drawer for cleaning. To remove the drawer:

1. Pull the drawer out until it stops.
2. Lift the front slightly and remove the drawer.

To install the drawer, reverse the procedure.

## 7. STORING FOOD AND SAVING ENERGY

### 7.1 Saving Energy

For optimal appliance performance and food quality:

- Place the freezer in the coolest area of the room, away from heat-producing appliances, heating ducts, and direct sunlight.
- Allow hot foods to cool to room temperature before placing them in the freezer. Overloading the freezer can cause the freezer compressor to run longer. Foods that freeze too slowly may lose quality or spoil.
- Wrap foods properly and ensure containers are dry before placing them in the freezer to prevent frost buildup.
- Organize and label food to minimize lid openings and search time. Take out all needed items at once and close the lid promptly.

### 7.2 Ideas for storing food

#### Fresh food storage

- Keep the fresh food compartment between 34°F and 40°F, with an optimum temperature of 37°F.
- Avoid overcrowding the refrigerator shelves, which reduces air circulation and causes uneven cooling.
- Avoid placing food in front of air ports.

#### Fruits and vegetables

- Store fruits and vegetables in crisper drawers, where trapped moisture helps preserve food quality for longer time periods.

- Wash items and remove excess water.
- Wrap any items that have strong odors or high moisture content.

#### Meat

- Wrap raw meat and poultry separately and securely to prevent leaks and contamination of other foods or surfaces.

#### Frozen foods storage

- Keep the freezer compartment at 0°F or lower.
- A freezer operates most efficiently when it is at least 2/3 full.

#### Packaging foods for freezing

- To minimize food dehydration and quality deterioration, use aluminum foil, freezer wrap, freezer bags, or airtight containers. Force as much air out of the packages as possible and seal them tightly. Trapped air can cause food to dry out, change color, and develop an off-flavor (freezer burn).
- Wrap fresh meats and poultry with suitable freezer wrap prior to freezing.
- Do not refreeze meat that has completely thawed.

#### Loading the freezer

- Avoid adding too much warm food to the freezer at one time. This overloads the freezer, slows the rate of freezing, and can raise the temperature of frozen foods.
- Leave a space between packages, so cold air can circulate freely, allowing food to freeze as quickly as possible.

## 8. CARE AND CLEANING

### 8.1 Protecting your investment

Keeping your appliance clean maintains its appearance and prevents odor build-up. Wipe up any spills immediately and clean

the appliance and fresh food compartments at least twice a year. When cleaning, take the following precautions:

- Never use chloride or cleaners with bleach to clean stainless steel.

- Do not wash any removable parts in a dishwasher.
- Always unplug the electrical power cord from the wall outlet before cleaning.
- Do not remove the serial plate. Removal of your serial plate voids your warranty.
- Remove adhesive labels by hand. Do not use razor blades or other sharp instruments which can scratch the appliance surface.

Do not use abrasive cleaners such as window sprays, scouring cleansers, brushes, flammable fluids, cleaning waxes, concentrated detergents, bleaches or cleansers containing petroleum products on plastic parts, interior doors, gaskets or cabinet liners. Do not use paper towels, metallic scouring pads, or other abrasive cleaning materials or strong alkaline solutions.

Refer to the guide below for more details on caring and cleaning specific areas of your appliance.

### **CAUTION!**

Pull the appliance straight out to move it. Shifting it from side to side may damage flooring.

### **CAUTION!**

Damp objects stick to cold metal surfaces. Do not touch refrigerated surfaces with wet or damp hands.

Some upright freezers are frost-free and defrost automatically, but should be cleaned occasionally.

## 8.2 Cleaning

Before cleaning remove food from the appliance and store it well covered.

Clean the appliance interior and accessories regularly with a cloth and lukewarm water.

Do not use abrasive cleaners. After cleaning rinse with fresh water and dry thoroughly with a clean cloth.

### **CAUTION!**

Unplug the appliance from the power source before cleaning to avoid electrical hazard. Never clean the appliance with a steam cleaner. Allow the appliance to dry before using it.

### **IMPORTANT**

Do not use organic solvents, such as lemon juice, juice from an orange peel, butyric acid, or cleaners containing acetic acid.

## 8.3 Vacation and moving tips

### Short vacations

- Leave the appliance operating during vacations of three weeks or less.
- Use all perishable items from the appliance compartment.

### Long vacation

- Remove all food and ice if you will be gone one month or more.
- Unplug the appliance.
- Clean interior thoroughly.
- Leave both doors open to prevent odors and mold build-up. Block doors open if necessary.

### Moving

- Unplug the appliance
- Remove all food and ice.
- Recommend use of a handcart, load from the side.
- Adjust rollers all the way up to protect them during sliding or moving.
- Pad cabinet to avoid scratching surface.

## 9. TROUBLESHOOTING

Let us help you troubleshoot your concern! This section will help you with common issues. If you need us, visit our website, chat with an agent, or call us. We may be able to help you avoid a service visit. If you do need service, we can get that started for you! Visit [Frigidaire.com](http://Frigidaire.com) or call toll-free 1-800-374-4432.

## 9.1 Common occurrences

The appliance does not run.	<ul style="list-style-type: none"> <li>• Ensure the plug is tightly pushed into an electrical outlet.</li> <li>• Check/replace the fuse with a 15amp time-delay fuse. Reset the circuit breaker.</li> <li>• The appliance may be in defrost cycle. Wait 20 minutes and check again.</li> </ul>
The appliance temperature is unsatisfactory.	<ul style="list-style-type: none"> <li>• Set the appliance control to a warmer or colder setting until the temperature is satisfactory. Allow 24 hours for the temperature to stabilize.</li> </ul>
The appliance is noisy or vibrates.	<ul style="list-style-type: none"> <li>• The cabinet is not level.</li> <li>• Floor is weak.</li> </ul>
Odors in the appliance.	<ul style="list-style-type: none"> <li>• The interior needs to be cleaned.</li> <li>• Cover or wrap the foods that produce odors.</li> </ul>
Cabinet light is not working.	<ul style="list-style-type: none"> <li>• Ensure the plug is tightly pushed into an electrical outlet.</li> </ul>

## 9.2 Errors

The following error codes might appear on the display indicating the malfunction of the appliance. The appliance may operate despite the following errors.

Error Code	Description
E1	Refrigerator temperature sensor error.

Error Code	Description
E5	Defrost sensor error.
E6	Communication failure.
E7	Ambient temperature sensor error.

## 10. LIMITED WARRANTY

Your appliance is covered by a one year limited warranty. For one year from your date of delivery, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

### Exclusions

This warranty does not cover the following:

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA, Puerto Rico, or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased "as-is" are not covered by this warranty.
5. Food loss due to any refrigerator or freezer failures.
6. Products used in a commercial setting.
7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
10. Service calls to repair or replace appliance light bulbs, air filters, water

filters, other consumables, or knobs, handles, or other cosmetic parts.

11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
12. Damages to the finish of appliance or home incurred during transportation or installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

#### **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES**

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE

DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

#### **If You Need Service**

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA, Puerto Rico and Canada. In the USA and Puerto Rico, your appliance is warranted by Electrolux Consumer Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

#### **USA**

**1-800-374-4432**

Electrolux Consumer Products, Inc.

10200 David Taylor Drive

Charlotte, NC 28262

#### **Canada**

**1-800-265-8352**

Electrolux Canada Corp.

5855 Terry Fox Way

Mississauga, Ontario, Canada L5V 3E4

## **11. QUEBEC RIGHT TO REPAIR**

Though Frigidaire makes every effort to make replacement parts, repair services and information necessary to maintain or repair our products available to consumers, parts, service and information are not guaranteed, pursuant to section 39


of the Consumer Protection Act, CQLR, c. P-40.1 and sections 79.18 to 79.20 of the Regulation respecting the application of the Consumer Protection Act, CQLR, c. P-40.1, r. 3. If you need replacement parts, you may call us at 1 (800) 265-8352






for service in French or English, or purchase online at **Frigidaire Parts | Shop Frigidaire Replacement Parts & Accessories - Frigidaire Appliance Parts.**

You may book repair services online at <https://www.frigidaire.ca/RIGHT-TO-REPAIR/>. Alternatively, our resource library is available at **Resource Library | Frigidaire** to help you diagnose and resolve issues which may arise during the lifetime of your appliance.

Though most parts are available for purchase, subject to short-term availability constraints, the following appliances and parts are not serviceable.

**Legend**

Availability of replacement parts, repair services, and information for maintenance or repair.	
	Partially Available

Availability of replacement parts, repair services, and information for maintenance or repair.		
	Not Available	
	Available	
<b>Refrigerators</b>		Cabinet, 14cu ft and less no sealed system parts
<b>Freezer</b>		9 cu. ft and less no sealed system parts.
<b>Beverage Centers</b>		Only cosmetic parts available



