

Kwikset

WI-FI **SMART** LOCK

powered by 
HUBSPACE™
SMART HOME PLATFORM

57750-001
Rev 01

English



Installation and Reference Guide

Welcome to the Kwikset family!

This guide will get you up and running with your new Wi-Fi Smart Lock.

If you have any issues, please visit our support center: kwikset.com/support or call us at 1-800-327-5625.

Getting started

For an interactive version of this installation guide, scan here or go to kwikset.com/hubspace-install





Table of contents

Parts in the box4


Required tools5

Installation7


Reference guide18




Parts in the box

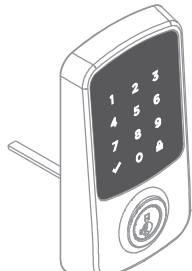


Exterior Assembly

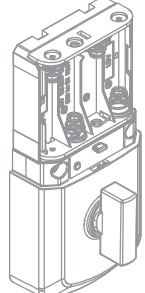

Interior Assembly

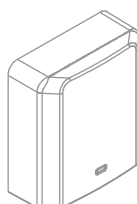

Interior Cover

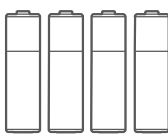


Batteries

Pack 1



Smart Plug


Pack 2

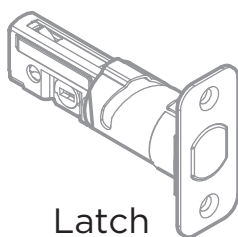

Latch




 Collar




Strike


03809

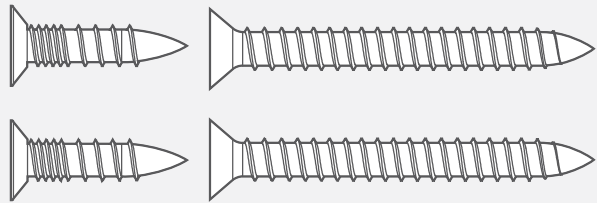

52531

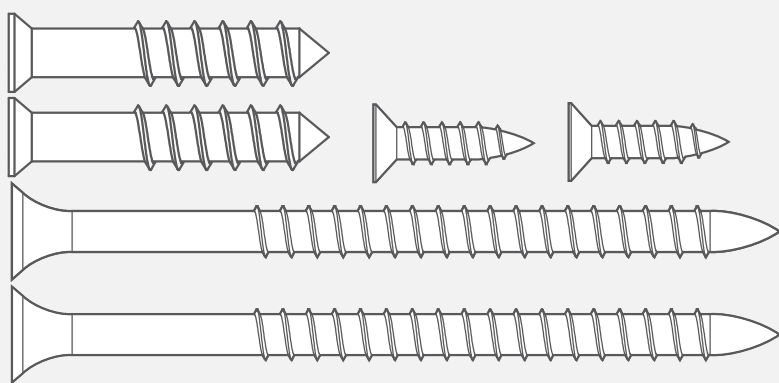


Pack 3


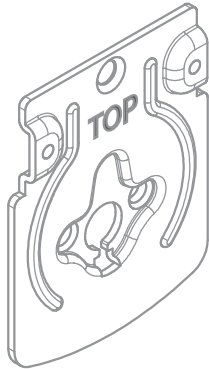


Mounting
plate

52367

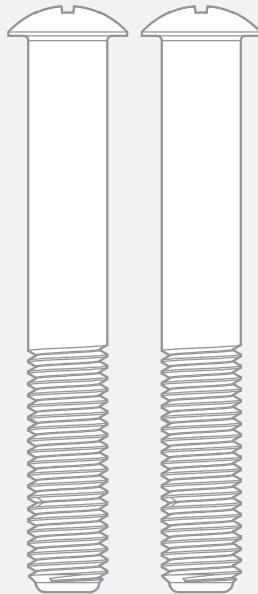

52502

  


Keys



SmartKey™
tool


Required tools

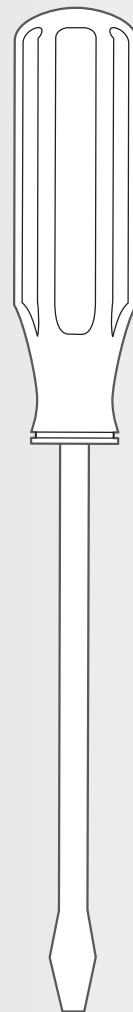

Flat head
screwdriver



 Phillips head
screwdriver



Ruler



No electric drills


Installation

! Remove your existing deadbolt

Your new lock will only support a door thickness of 1-3/8" to 2-1/4" (35mm to 57mm) and a door bore hole diameter of 1-1/2" or 2-1/8" (38mm or 54mm).

1-3/8" to 2-1/4"
(35mm - 57mm)


1-1/2" or 2-1/8"
(38mm to 54mm)

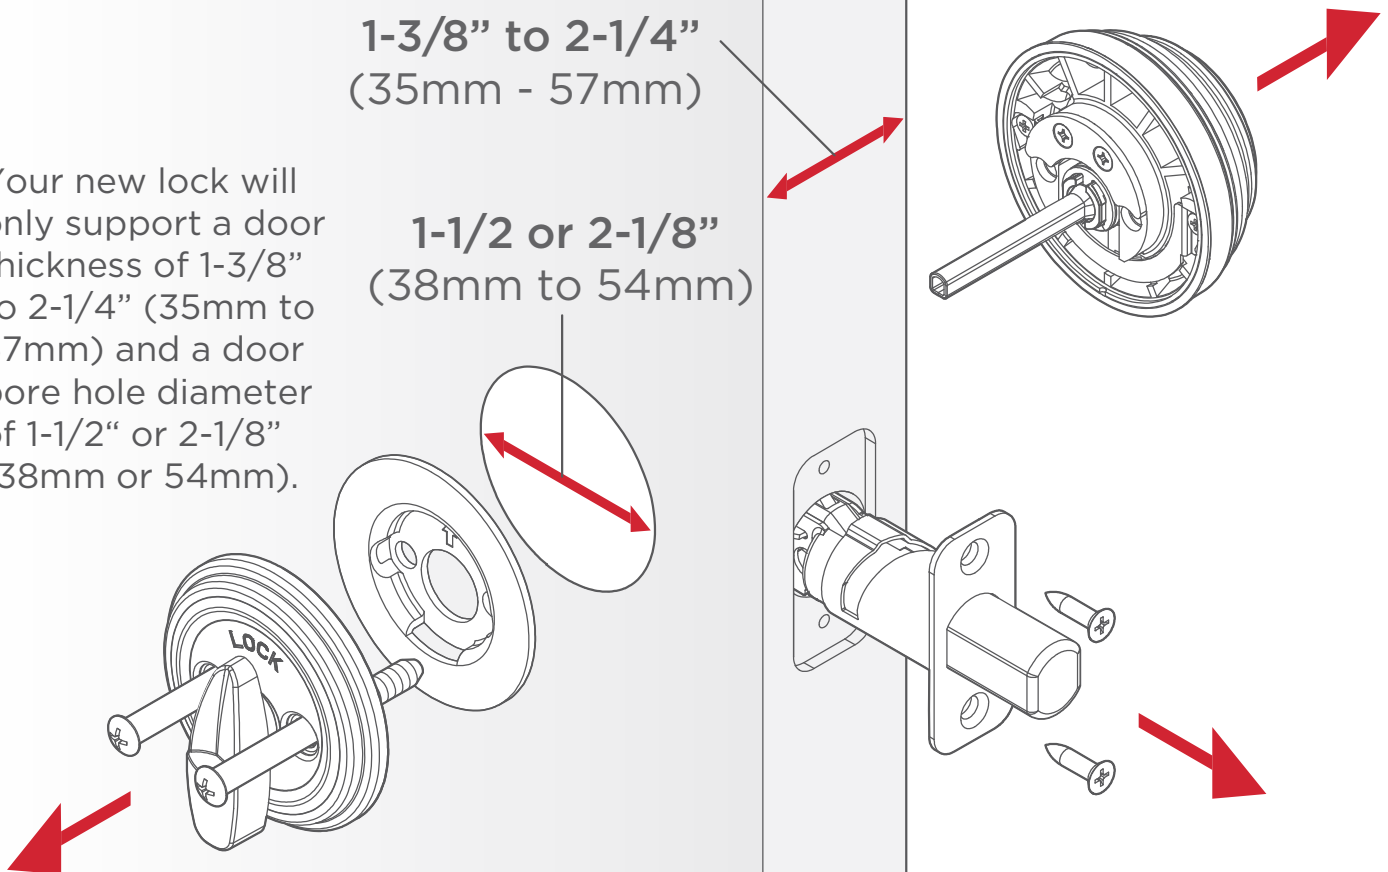


If drilling a new door, use the supplied template and instructions available at: [kwikset.com/doorprep](https://www.kwikset.com/doorprep)

1 Install the latch

A UP is on top.

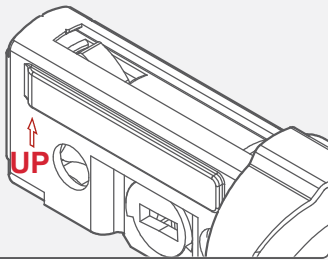

B If the rectangle shaped hole is not centered in the door hole, rotate the latch face to extend the latch.

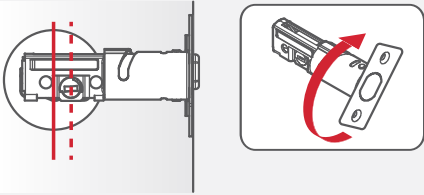


[OUTSIDE]

*Use the longer screws if the holes are worn out.





You will have two extra screws.

03809*
(2X)

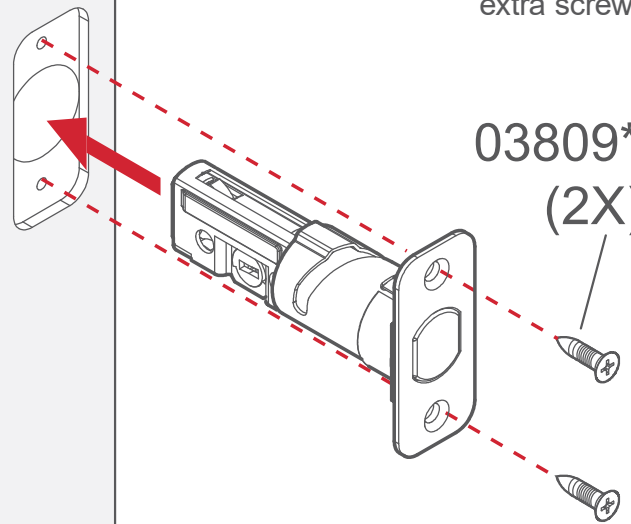


! If your door is not chiseled, install the drive-in collar.

Loosen faceplate with flathead screwdriver.

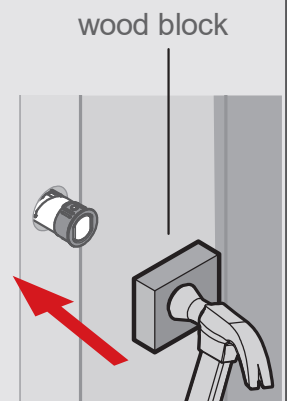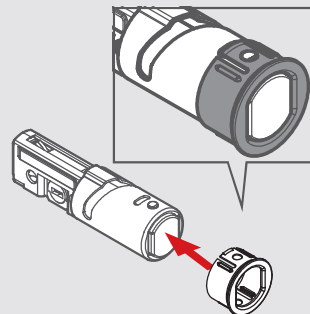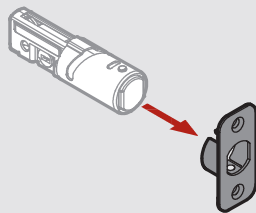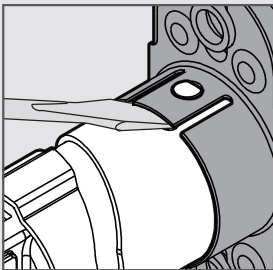


2 Install the strike

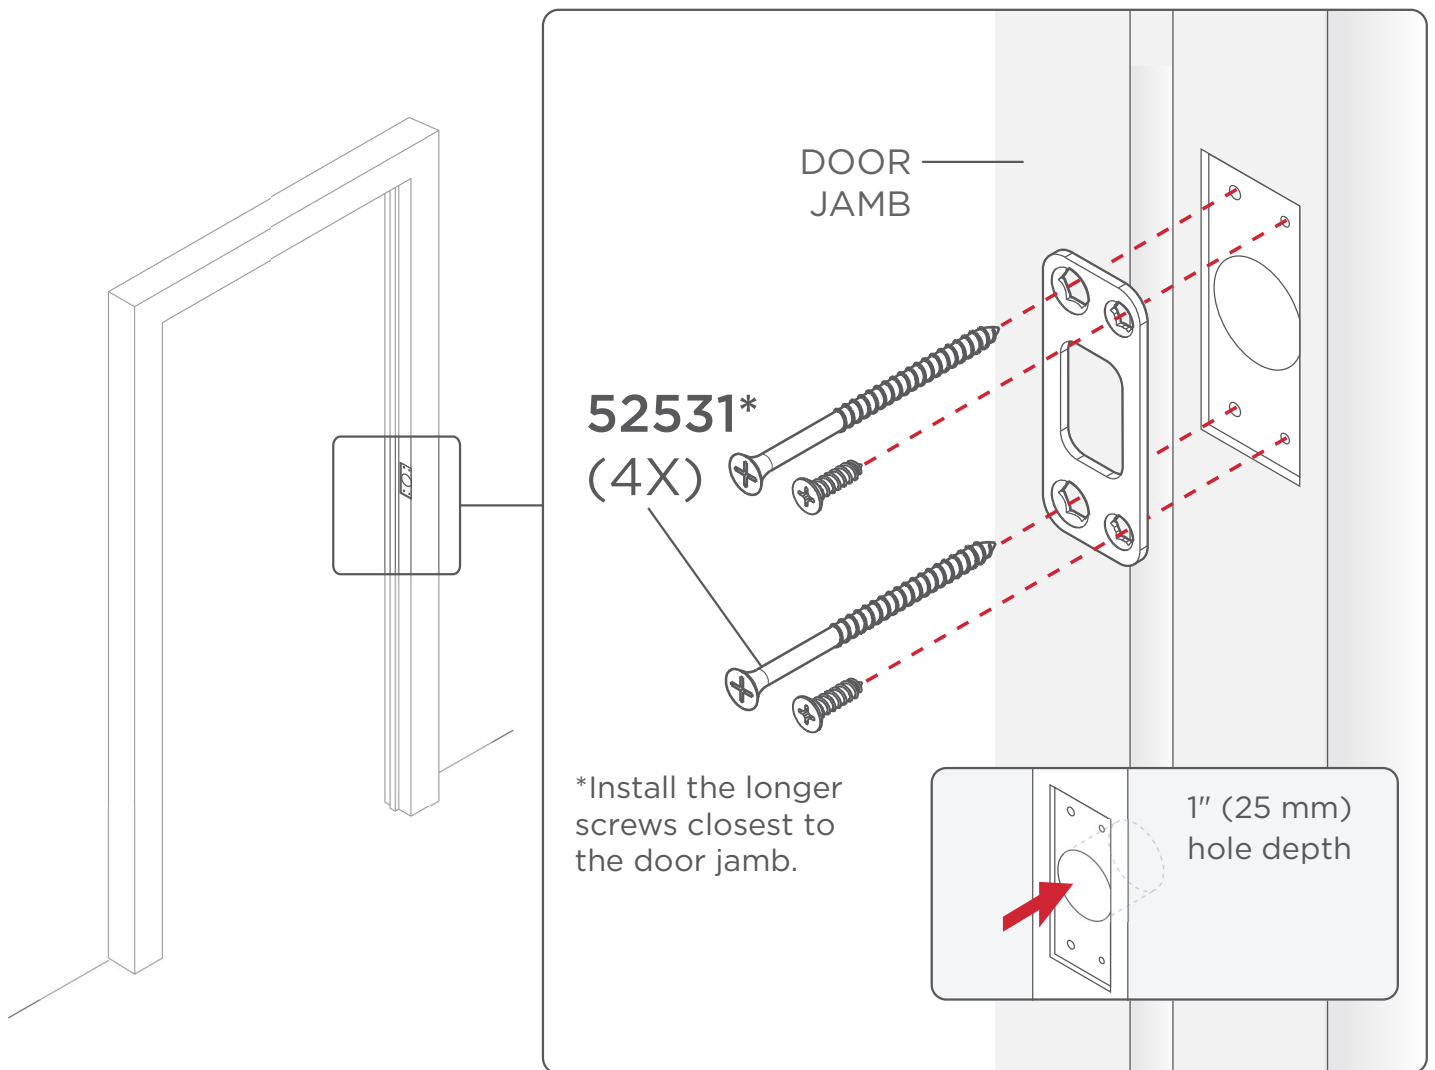


3 Install the exterior assembly


[OUTSIDE]

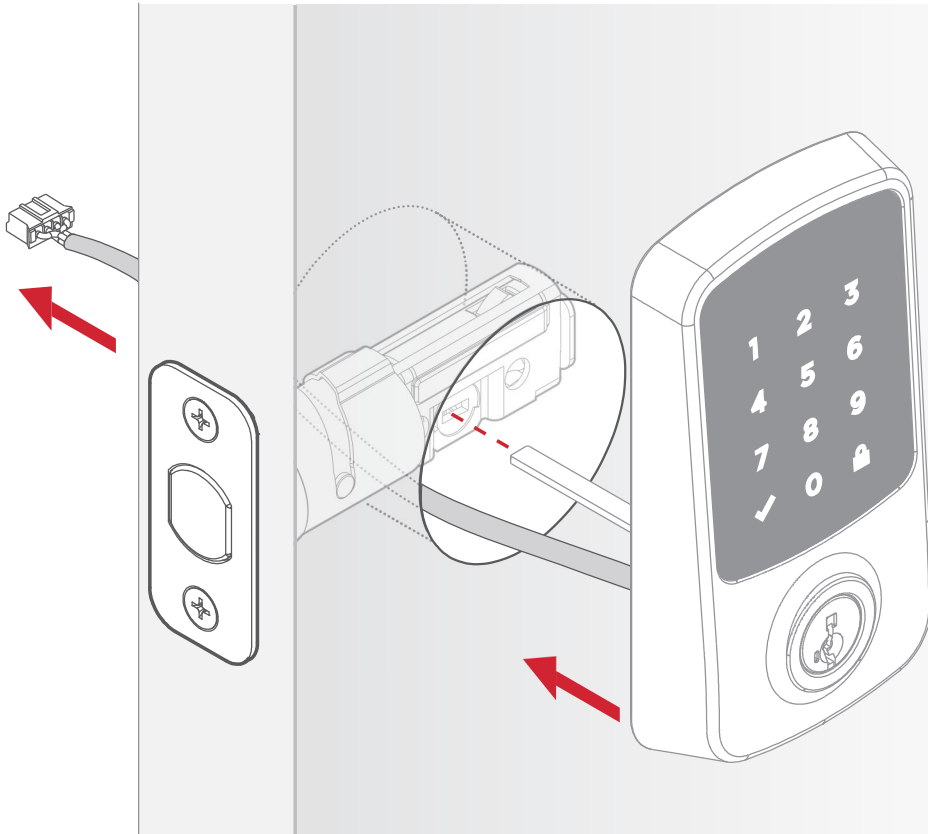

 Remove adapter ring if bore hole measures 1-1/2" (38mm) diameter.

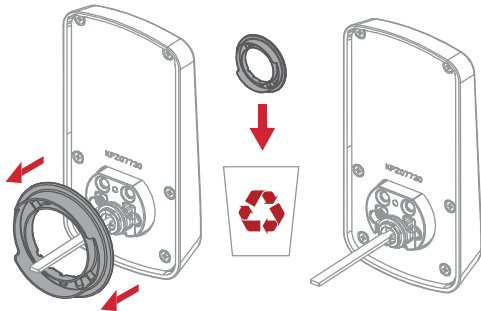

A Cable goes under the latch.

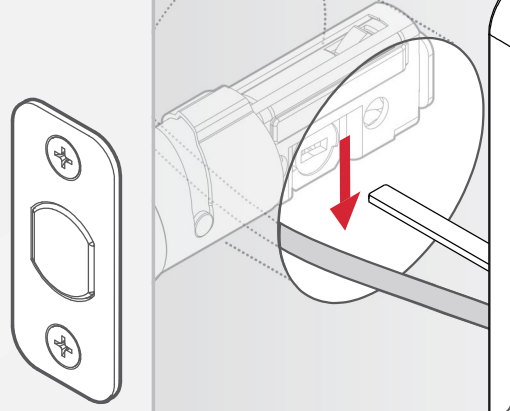


[INSIDE]

Keep parallel to
the door edge


Tighten the screws evenly.
DO NOT over-tighten.




52367
(2X)

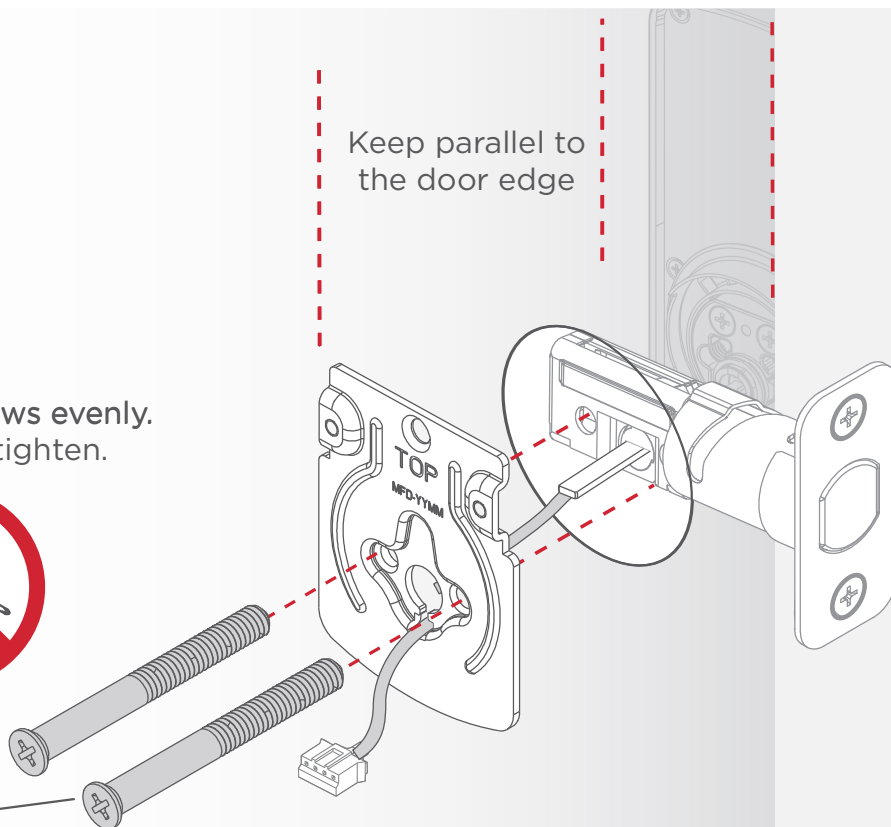

- B** Route the cable through the center hole of the mounting plate, then push the cable down into the bottom hole.

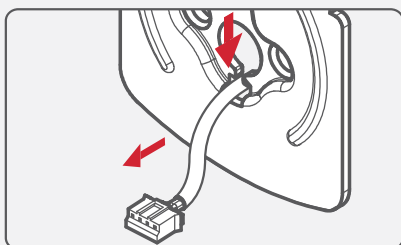


- C** Insert the key and test the latch. If the latch does not extend or retract smoothly, adjust the screws. Leave bolt **LOCKED/EXTENDED**.

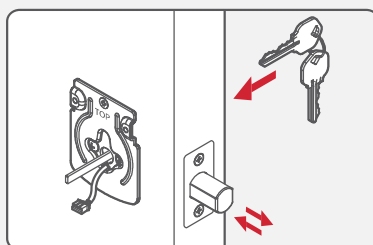

**Before You
Continue**

Ensure the latch bolt is
in the extended position.

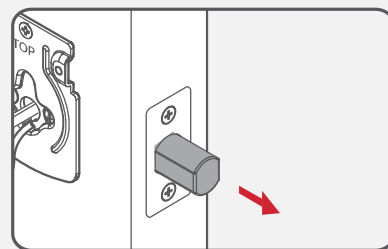


4 Install the interior assembly


 DO NOT install the batteries. Wait until Step 5.




A If the turnpiece is not pointing up, rotate the turnpiece until it's in a vertical position.

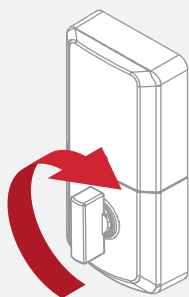


Remove the interior cover from the interior assembly.

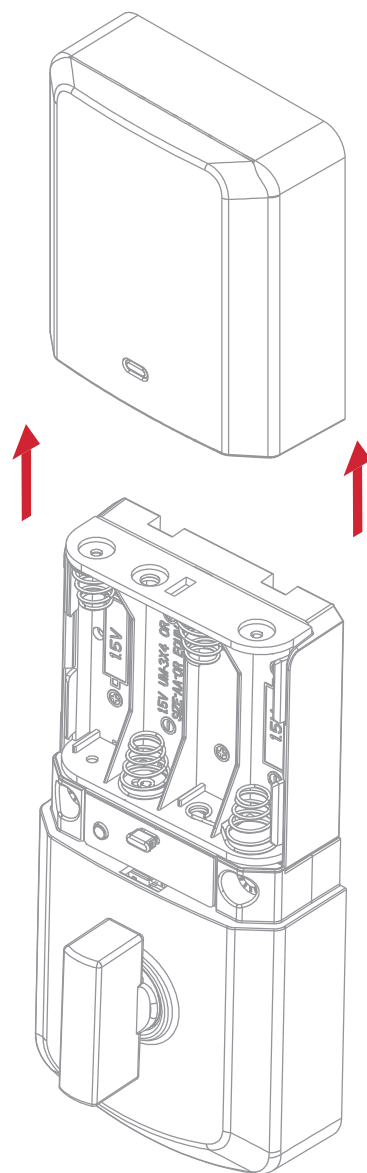


- B** Connect the cable.
Ensure a tight cable
connection.

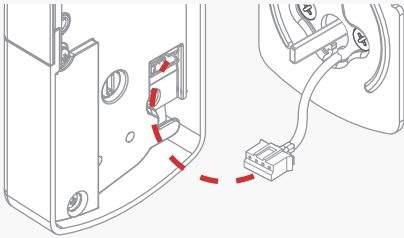

- C** Excess cable will sit
inside the bottom of the
interior housing.

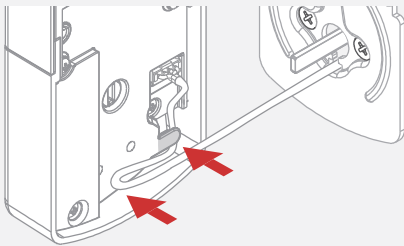





- D** Ensure the flat blade
fully engages with the
turnpiece shaft.

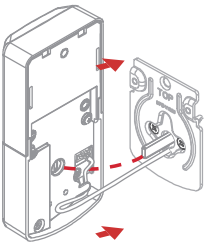

 Ensure cable remains
connected.

Secure the interior
assembly onto the
mounting plate.

  52502
(2X)

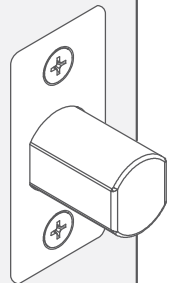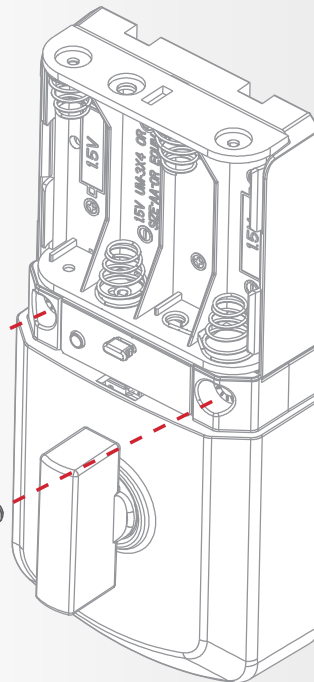


[INSIDE]


5 Install batteries

- A** Insert (4) AA batteries (included) into the battery pack.


⚠ Ensure correct polarity. Use new, non-rechargeable alkaline batteries only.

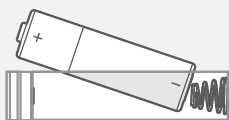


- B** Insert the (4) AA batteries.

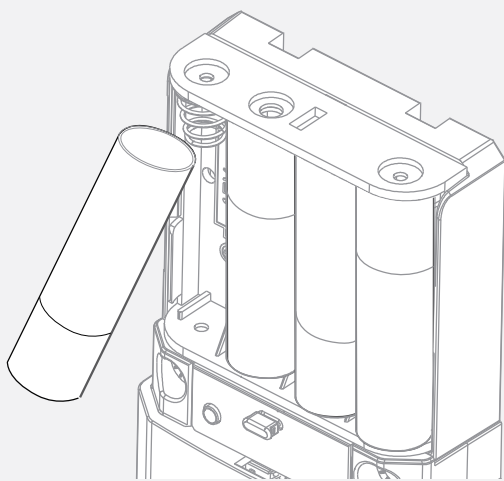

With the door open, install the batteries. **NOTE:** Lock must be installed on the door before inserting the batteries.

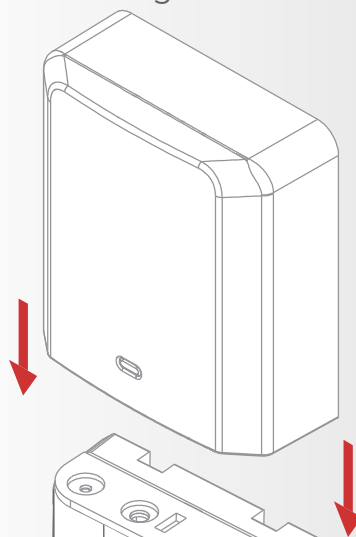

[INSIDE]

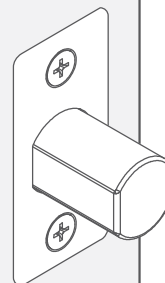

Complete your lock set up

1. Download the Hubspace app.



2. Add your Lock: Tap the ⊕ icon to add new device and begin lock setup. Scan the QR code included in the box or located on the lock interior.

3. Add Smart Plug: Tap the ⊕ icon to add new device and begin smart plug setup. Scan the QR code included in the box or located on the plug.


⚠ If this lock was professionally installed (or installed by someone other than the homeowner), make sure this step is performed by the homeowner.

Smart Plug at a Glance

Smart Plug

LED State	Plug State	Meaning	Action To Take
Orange Quick Blink	Off	Wi-Fi is not connected.	Set up Wi-Fi for the product. If you have already set up Wi-Fi for this product, wait for it to connect. Check the Hubspace app for connectivity status.
Orange/ Green Quick Blink	On		
Off	Off	The plug is off.	No action required.
Green	On	The plug is on.	
Red	Off	There is a Wi-Fi error.	Go to the device settings in the app and set up Wi-Fi Access Point is allowing the device to join the network.
Orange	On		

Part	Description
a	Power Socket
b	Indicator Light
c	Power Button

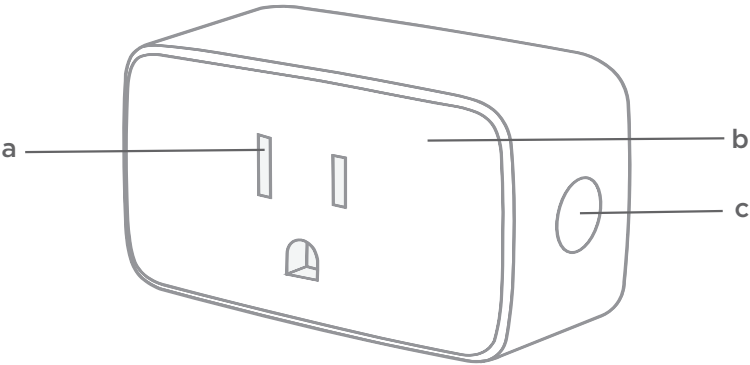


Note: The range of the Bluetooth® connection is approximately 30 feet (10 meters). However, maximum communication range will vary depending on obstacles (person, metal, wall, etc.). For best connectivity, we recommend plugging Smart Plug in a power outlet near your lock.



Reference Guide


Locking

To lock your door, press the lock icon. The bolt will extend, then the screen will display the Locked LED Indicator and play the locked tone.

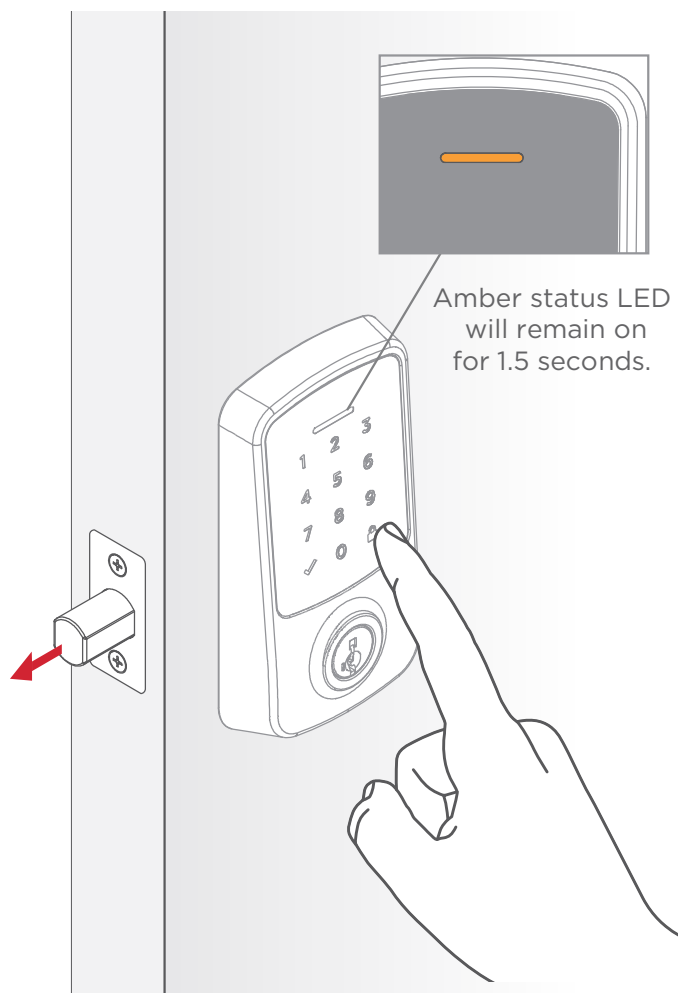

Unlocking


To unlock your door, enter your access code. The bolt will retract, then the screen will display the Unlocked LED Indicator and play the unlocked tone.

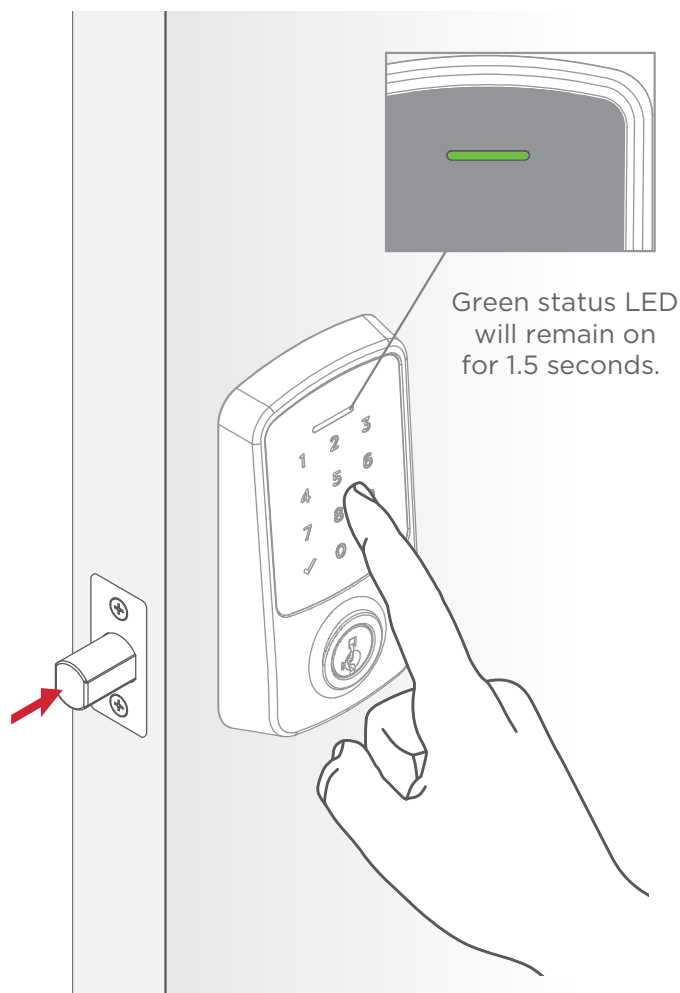

SmartKey® Re-key

Re-key the lock to work with your existing key by following the **SmartKey® Re-key instructions**.

NOTE: If Auto-Lock is enabled, remove the batteries before re-keying your lock.

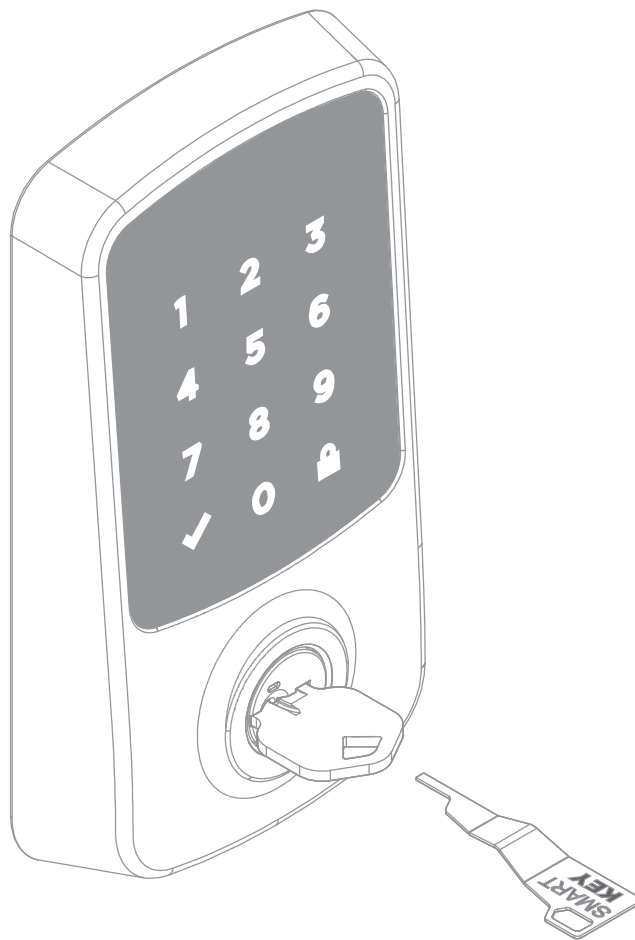

Exterior LED Indicators

Amber:
Locked



Green:
Unlocked



Red and Keypad flashes alternatively:
Lock Jammed



Flashes Red 3x:
Low Battery



Flashes Red once:
Invalid Credentials



Flashes Red 15x:
Lockout




Interior Status LED Indicators

Green

Slow Blinking:


Unlocked

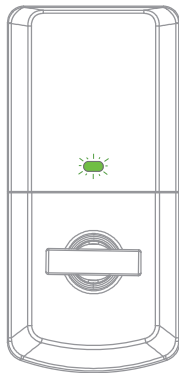

Amber

Slow Blinking:


Locked

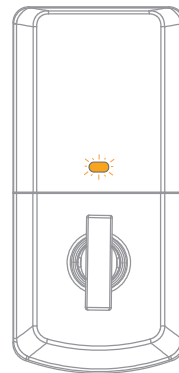

Red

Blinking:

Low Battery

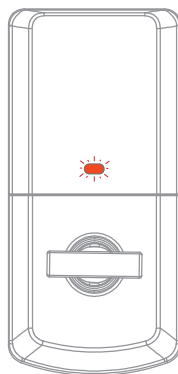


Remove Device/Reset Lock Settings

To remove the lock from your Hubspace account or reset lock settings back to default, follow the below steps:

1. Open the Hubspace app
2. Select the desired lock
3. Tap the  Settings Icon
4. Tap "Remove from Account"

Your lock is now ready to be set up and added to the Hubspace app.

Wi-Fi Smart Lock at a Glance

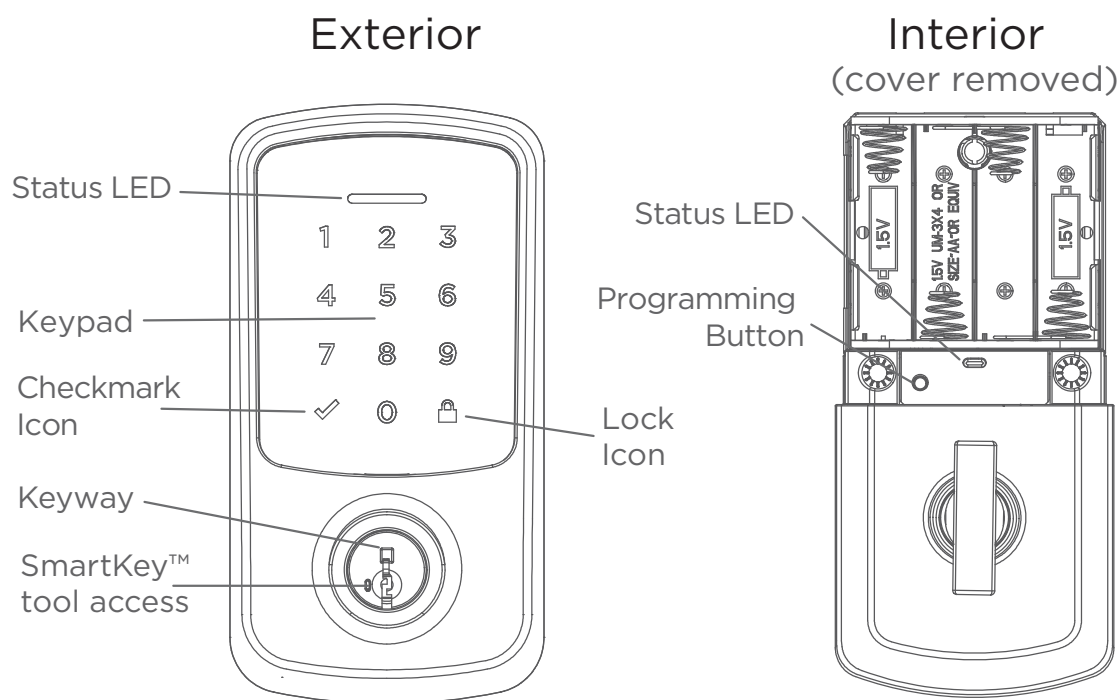

Troubleshooting

If you have any issues, please visit our support center: [kwikset.com/support](https://www.kwikset.com/support) or call us at **1-800-327-5625**.



Important Safeguards

1. Read all instructions in their entirety.
2. Familiarize yourself with all warning and caution statements.
3. Remind all family members of safety precautions.
4. Always have access to your lock's standard key.
5. If using the Auto-Lock features, make sure you have your smartphone or standard key with you to prevent locking yourself out.
6. Familiarize yourself with all light bar error notifications.
7. Replace low batteries immediately.
8. Dispose of used batteries according to local laws and regulations.

 **WARNING:** This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.

Regulatory Compliance

FCC ID: NUL-9490
IC: 34767-GED9490

FCC Interference Statement

This product complies with standards established by the following regulatory bodies:

- Federal Communications Commission (FCC)
- Industry Canada

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT! Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Industry Canada

This device contains license exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and a human body.

This equipment complies with ICED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and a human body.

Cet équipement est conforme aux limites d'exposition aux rayonnements ICED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et un corps humain.