 


蓝牙自拍杆 使用手册

 


- ① 手机夹
- ② 伸缩杆
- ③ 指示灯
- ④ 三脚架
- ⑤ 锁紧装置
- ⑥ 蓝牙遥控器
- ⑦ 拍照键
- ⑧ 补光灯(选配)

自拍杆功能介绍

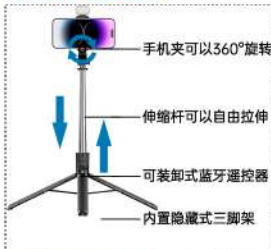

补光灯 (选配)

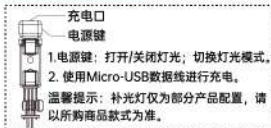

蓝牙遥控器的装回



 
蓝牙遥控使用步骤

- 1.取出遥控器
 - 2.电源键:向下滑动开启电源, 向上滑动关闭电源
 - 3.快门按钮:点击拍摄照片/视频
 - 4.初次连接时:打开遥控器电源, 使其进入闪烁的配对状态。在智能手机上搜索 "Selfie" 并连接, 配对成功后指示灯将熄灭。
 - 5.未连接状态:若5分钟内未操作遥控器, 电源将进入休眠状态(按下按钮会唤醒遥控)
 - 6.自动连接功能:开启遥控器电源后, 将自动连接至已配对的智能手机。
- 温馨提示: 此蓝牙遥控器兼容 Android 4.3, iOS 5.0及以上系统版本。

遥控操作步骤



按照图示箭头方向将后盖推开, 取出电池进行更换, 随后将后盖安装回去即可。



故障排除:

- 1.蓝牙遥控器无法开机。
•更换一块新电池。
- 2.开机后蓝牙无法连接/无法正常工作。
•移除手机上的蓝牙配对, 重启蓝牙遥控器后重新配对连接。
- 3.安卓手机如果无法使用遥控器拍照。
I. 按下拍照键可以调节音量。
•打开相机 App, 将"音量键功能"修改成默认或者拍照, 即可使用遥控器拍照。
II. 按下拍照键无法调节音量。
•按照问题2的步骤重新进行配对连接。

注意事项:

- 1.请勿将产品置于低温、潮湿环境保存。
- 2.请勿将产品置于暴晒、火烤等高温环境。
- 3.请勿在设备被限制的场所中使用, 避免违反公共秩序。
- 4.更换电池时, 请将电池正极朝外放置, 禁止将正负极反接。
- 5.本产品含有电池, 请放置于婴幼儿触摸不到的地方, 防止小孩误吞。

感谢您的支持!

FC CE RoHS

合格证

 


Selfie Stick User Manual




- ① Phone Clip
- ② Telescopic Shaft
- ③ Indicator Light
- ④ Built-in Tripod
- ⑤ Locking Knob
- ⑥ Remote Control
- ⑦ Shutter Button
- ⑧ Fill Light (options)


Selfie Stick Introductions

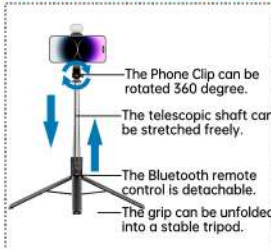

Fill Light (options)

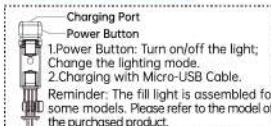 


Detachable Remote

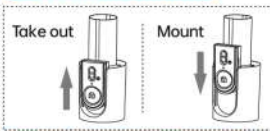 


Quick Steps for Remote

1. Remove the remote control
 2. Power button: Slide down to turn on the power, slide up to turn off the power
 3. Shutter button: Click to take photos/videos
 4. When connecting for the first time: Turn on the remote control power and put it into a flashing pairing state. Search for "Selfie" on your smartphone and connect. After successful pairing, the indicator light will turn off.
 5. Unconnected state: If the remote control is not operated within 5 minutes, the power will enter sleep mode (pressing the button will wake up the remote control)
 6. Automatic connection function: After turning on the remote control power, it will automatically connect to the paired smartphone.
- Reminder: The remote control is compatible with Android 4.3, iOS 5.0 and later.

 Replace the Battery

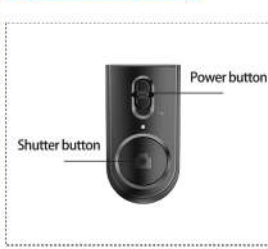

 Slide the back cover in the direction of the arrow as shown, then replace a new battery, and finally insert the cover back.



Troubleshooting:

1. If your phone is unable to connect to the remote.
•Delete the Bluetooth pairing on your phone, reboot the remote and start a new device search.
2. If your Android phone can't take photos when you press the shutter button.
•Open the camera App and change the "Volume button function" to "Default" or "Shutter".

Attention:

1. Don't store the product in icy or damp environment.
2. Don't place the product in the heat.
3. When replacing the battery, place the positive pole "+" of the battery outdoors.
4. This product contains a battery, please place it out of the touch of infants to prevent children from swallowing it by mistake.
5. Don't use the product in restricted district to avoid violating public order.

Thanks for your support !

FC CE RoHS

Certificated



FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.