 


Luxury Towel Warmers

User Manual

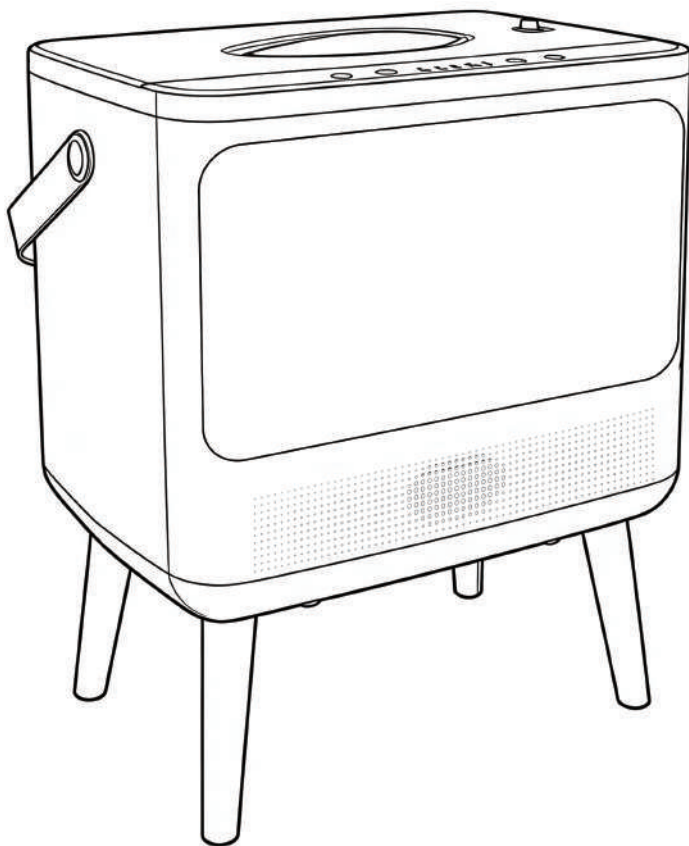

Model: TJTW-25

Contents

Important Safety Instructions	01
FCC Information	02
Location of Parts & Controls	03
Remote Control Battery Instruction	05
Product Specifications	06
Set Up	06
Using The Towel & Blanket Warmer	06
Fragrant Disc Instructions	09
Tips for Best Results	09
Care and Maintenance	10
Special Features & Benefits	10



CAUTION

TO REDUCE THE RISK OF SERIOUS INJURY, PLEASE NOTE THAT THIS IS NOT A TOY. DO NOT ALLOW CHILDREN TO OPERATE OR PLAY NEAR THE TOWEL & BLANKET WARMER.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

Important Safety Instructions

ALL OF THE SAFETY AND OPERATING INSTRUCTIONS SHOULD BE READ, ADHERED TO FOLLOWED BEFORE THE UNIT IS OPERATED.

- FOR HOUSEHOLD USE ONLY
- FOR ADULT USE ONLY
- FOR DRY FABRIC ITEMS ONLY

SAVE THESE INSTRUCTIONS.



WARNING

To reduce the risk of fire, electric shock, or serious injury to persons when using the appliance, follow basic precautions including: Read all instructions before using the appliance.

- Always unplug the unit from the electrical outlet immediately after using.
- Do not use the appliance for anything other than its intended use.
- Do not place or store the unit where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a unit that has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall into and/or liquids are not spilled onto the unit.
- This unit should never be left unattended when plugged in.
- Close supervision is necessary when this unit is used near children or disabled persons.
- Use this unit for its intended use as described in this manual.
- Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped in water.
- Keep cords away from heated surfaces. Do not wrap the cord around the exterior of the appliance or let the cord hang over a table or counter edge.
- Do not use outdoors.

- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces.
- Do not use accessory attachments not recommended by the manufacturer as this may cause injuries.

FCC Information



CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try and correct the interference by one or more times of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC Radiation Exposure statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Note: Towel warmer (TJTW-25)


Location of Part & Controls

1	Side Handles
2	Speaker
3	Lid
4	Flame Light
5	Stands
6	Child Safety Lock
7	Power cord
8	Power cord Case

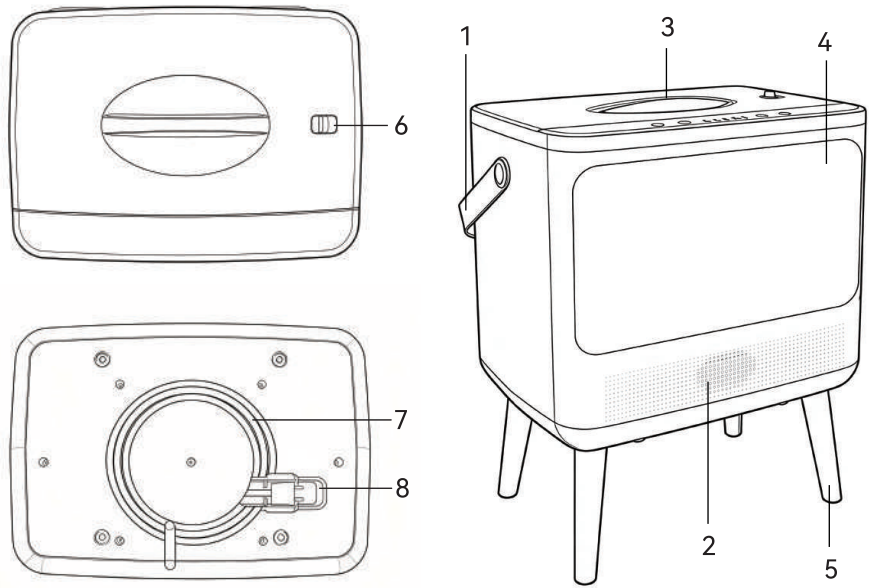 


Introduction to Top Buttons


N°	PART NAME
9	On/Off Button
10	Heating Time Button
11	Bluetooth Button
12	Light Button
13	Heating-time indicator light
14	Bluetooth Indicator Light

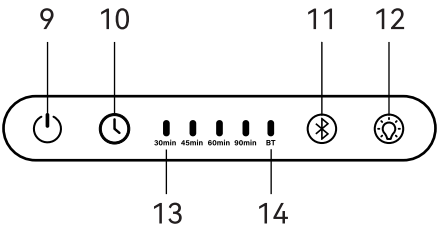 

Remote Control Functions

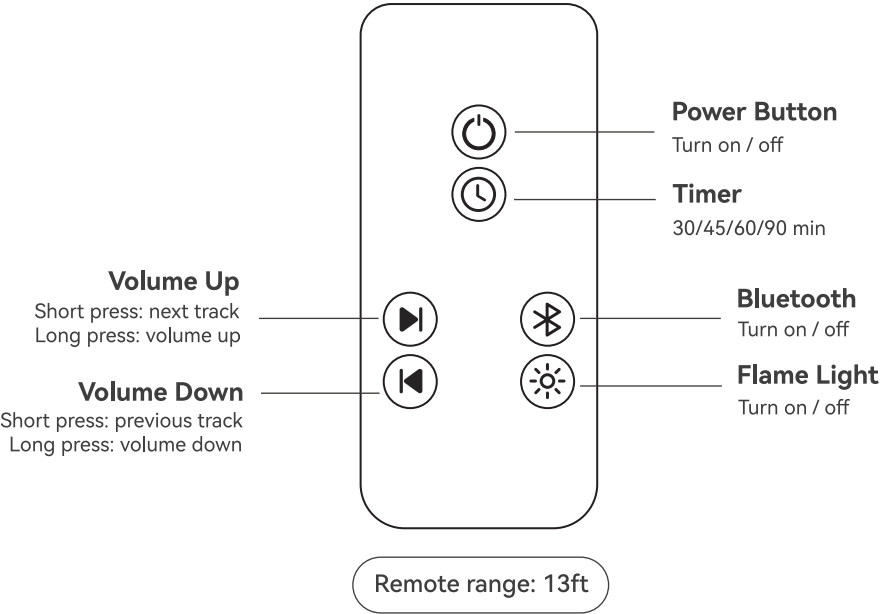 

Remote Control Battery Instruction

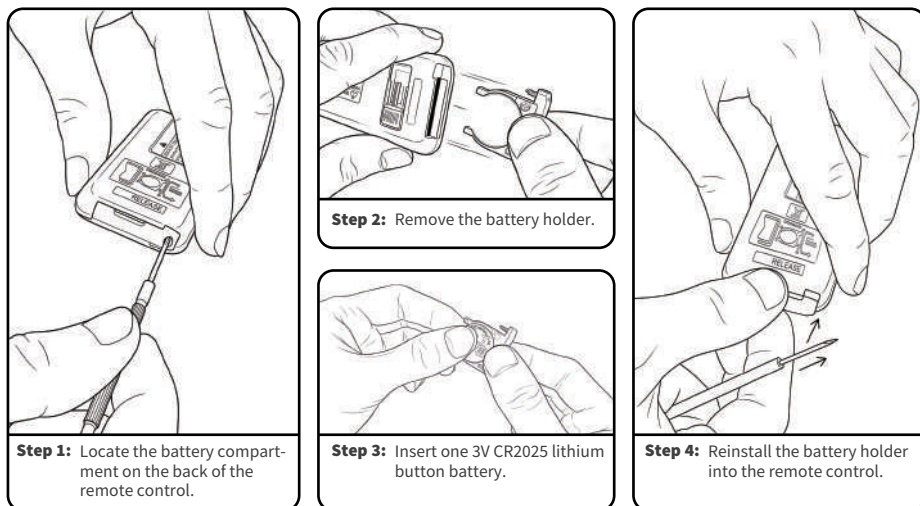 

Steps to Replace Battery

Locate the battery latch marked "RELEASE" on the back of the remote control.

Press the latch and slide out the battery holder.

Place one CR2025 coin battery into the holder following the "+" positive mark.

Push the holder with battery back into the compartment until it clicks and locks tightly.

If the remote signal weakens or buttons stop working, replace with a new CR2025 battery.

⚠ WARNING: Coin batteries pose an ingestion hazard. Keep batteries away from children. Do not disassemble or dispose of batteries in fire.

- The statement "Ensure the batteries are installed correctly according to polarity (+ and -)."
- The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- The statement "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

Product Specifications

Rated Voltage	120V AC
Frequency	60Hz
Wattage Max	400W

 
Set Up

- Open the lid and remove any packaging contents.
- Place the towel warmer on a dry, level, hard surface.
- Insert the power cord into a grounded (earthed) electrical outlet (AC 120V~ 60Hz, 400W).
DO NOT plug it into outlets of 220-240V.


Using The Towel & Blanket Warmer

The Towel & Blanket Warmer can comfortably warm up two large cotton bath towels or a personal throw blanket.

1.Insert the power cord into an electrical outlet.

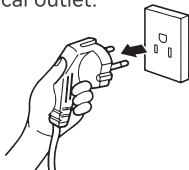

 2.Open the flap and place only a dry towel or blanket inside.

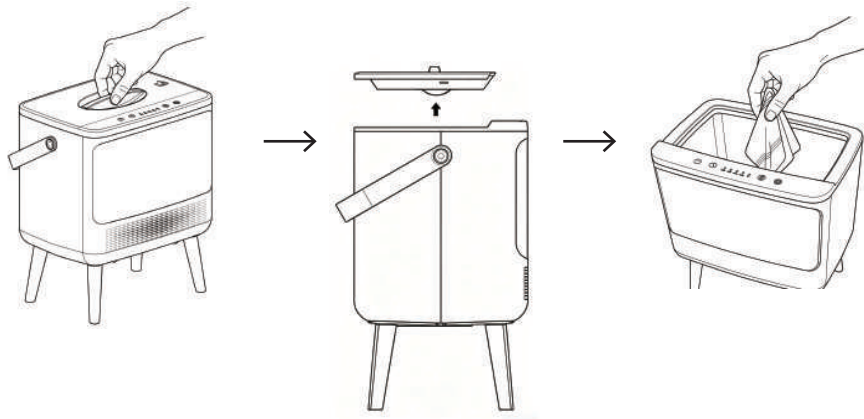


***NOTE:**


- Using cotton or cotton blend fabrics only.
- Avoid delicate fabrics that can't withstand high heat.
- Placing damp or wet towels inside the product can damage it and pose serious safety risks.

3.(1)Add a fresh odor-neutralizing scent to your towels and blankets by inserting a Fragrance Disc into the Fragrance Disc Holder.

 (2)The Fragrance Disc can last for up to two years at room temperature.The longevity of the scent will decrease when exposed to heat from the Towel & Blanket Warmer.Replace the disc when you no longer smellthe scent.

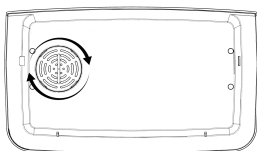


Open the aromatherapy box

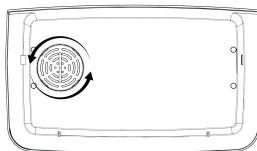 

Close the aroma diffuser box

 4. Put the top cover on.

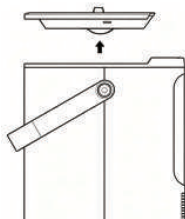

5.Operate the control buttons according to personal needs.

(1)One-button switch, just follow ① .

Press the ON/OFF button. Default heating is 30 minutes.It will turn off automatically after heating is completed.

(2)When you only need to select other heating time, just follow ①-② .

 
Press the ON/OFF button firstly, and then press the TIME button to select 30 /45 /60 /90 minutes.

(3)When you need to connect to Bluetooth, just follow ③ .

A short press of the Bluetooth button turns on Bluetooth; the Bluetooth indicator light will flash slowly. Search for “Bluetooth music” on your device and select it to pair. Once connected, the indicator light will stay on (blue). A short press of the Bluetooth button again turns off Bluetooth, and the indicator light will turn off.

(4)When you need to turn on the light, just follow ④ .

Flame Light: Briefly press the light button to turn the flame effect on or off. When turned on, the flame light will illuminate; press again to turn it off.

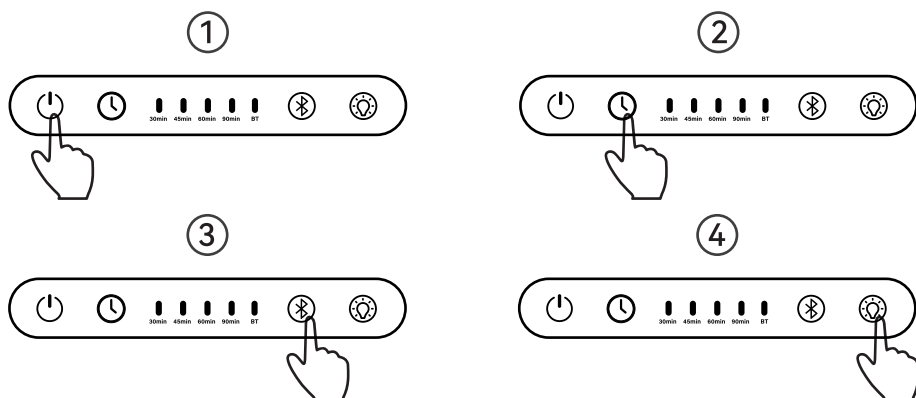

*NOTE:

 
(1)About ON/OFF button

- Press the ON/OFF BUTTON at any time to stop or start the heating cycle.
- Heating time indicator flashing: When the internal temperature sensor detects an operational malfunction, the device will stop heating. The 30 /45 /60 /90 minute heating time indicator will flash. Please unplug the device and contact customer service.
- White light stays on when temperature is below 140 °F; red light turns on when temperature exceeds 140 °F.


(2)About TIME button

- During the heating process, operate the time key to reset the heating time.
- At each operation time, the LED lights up corresponding to the time.
- After starting heating, the temperature rises to approximately 266°F in the first 20 minutes and remains within the range of 230-266°F (plus or minus 50°F).

6. After the heating cycle is complete, depress the child safety lock and open the lid, use a clip or directly take out the towel(s) or blanket.

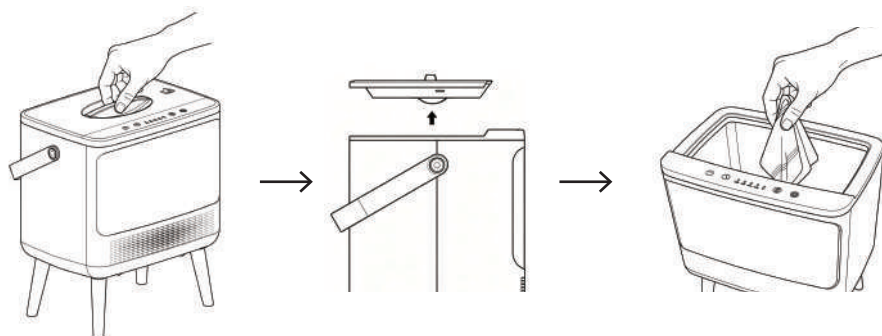

 *NOTE: After the heating cycle is complete, the INTERIOR SURFACE of the Towel & Blanket Warmer will remain dangerous to touch until the HOT SURFACE INDICATOR turns off.

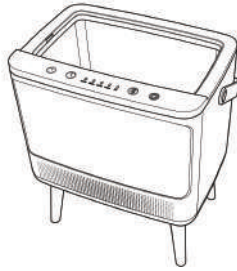

Fragrant Disc Instructions

This fragrance disc is designed for users who wish to use aromatherapy tablets or essential oils while warming towels.

NOTE: This product does not contain essential oils.

- Remove the Fragrance Disc from its sealed plastic bag.
- Put it into the Fragrance Disc Holder located on the underside of the lid.
- The Fragrance Disc is an innovative air freshener for your home. which also effectively eliminates odors.
- Fragrant is a breakthrough in the home fragrance world! Prepare fragrance disc and use with this product will bring you better enjoy experience.

Tips for Best Results

- 1 . Use cotton or cotton blend towels or fabrics.
- 2 . For fast and even heating, loosely pile one towel into the Towel & Blanket warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
- 3 . Use only with DRY fabrics.

*NOTE: DO NOT use with damp or wet articles.

- 4 . Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the Towel & Blanket warmer, resulting in damage to the fabric and the product.

- 5 . Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping. Opening the lid mid-cycle may result in slower heating times.

*NOTE:Condensation on the lid and interior of the product is normal

- 6 . When used with the Towel & Blanket Warmer, the Fragrance Disc may warp over time.
- 7 . The Fragrance Disc can last for up to two years at room temperature. The longevity of the scent will decrease when exposed to heat from the Towel & Blanket Warmer. eplace the disc when you no longer smellthe scent.

Care and Maintenance

Remove the power cord from the electrical outlet before cleaning. Wipe with a dry cloth only when the unit is cool to the touch.

Special Features & Benefits

1. With LED indicator light.
2. The control buttons function clearly. Meet the daily diversified needs!
4. Has a child safety lock design, prevent children from accidentally touching it and causing burns in the heating time.
5. Has side handles for easy moving.
6. The generous cavity has the capacity to hold two large bath towels or one personal throw blanket.
7. Add a fresh odor-neutralizing scent to your towels and blankets by inserting a Fragrance Disc into the Fragrance Disc Holder.
8. The power cord case can be stored at the bottom.
9. The double walled insulated lid keeps heat in while remaining cool to the touch.

90 Days Limited Warranty

Our products include a 90 Days limited warranty from date the of purchase against defects in materials and workmanship. This warranty does not include damage to the product as a result of misuse or accident.



Made in China