 


User Manual

Multifunctional Speaker



Model:TX05

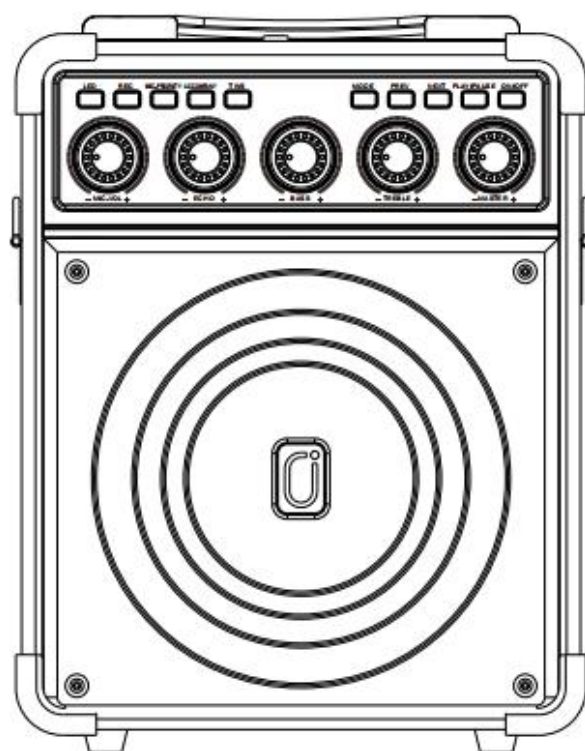

Manual


English-----	1-5
Deutsch -----	6-8
日本語-----	9-11
Français -----	12-14
한국어 -----	15-17
Español-----	18-20
Italiano-----	21-23
Português -----	24-26
العربية-----	27-29
Русский -----	30-32

  Control Panel Function Description

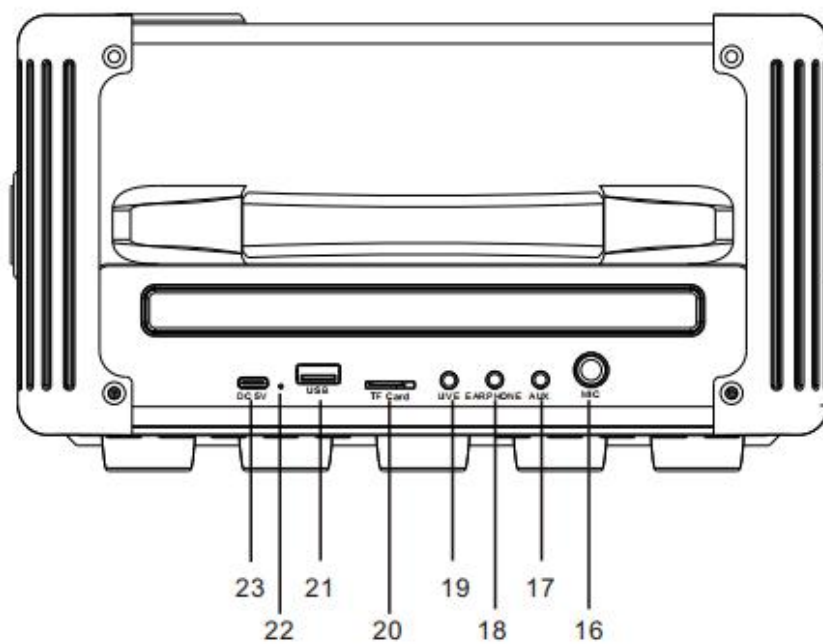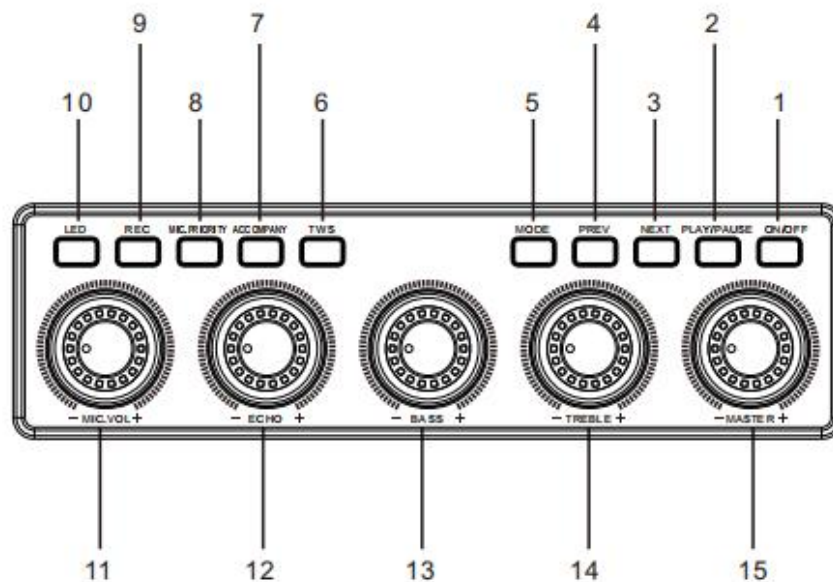

- 1.ON/OFF:**Long press to turn this speaker on or off.
- 2.PLAY/PAUSE:**Short press is for play/pause when working in USB/TF card/Bluetooth mode; Short press can mute the sound in AUX mode;Long press can disconnect actively the Bluetooth connection with the phone when working in Bluetooth mode.
- 3.NEXT:**When working in USB/TF card mode, short press for the next song, and long press for fast forward; during Bluetooth mode, short press also for the next song.
- 4.PREV:**When working in USB/TF card mode, short press for the previous song, and long press for fast backward; during Bluetooth mode, short press also for the previous song.
- 5.MODE:**Short press can switch different modes:USB mode/TF card mode/Bluetooth mode and AUX mode.
- 6.TWS:**Short press to activate the dual-device connection.Long press to disconnect the dual-device connection.
- 7.ACCOMPANY:**This function is only effective for stereo music.
- 8.MIC.PRIORITY:**Short press can turn the microphone priority feature on/off. Once this feature is activated, the volume of the music will automatically decrease when speaking into the microphone.
- 9.REC:** Long press to start recording. Then short press again will stop, play, and save the current recording file; Short press to play the recording files stored on the device. (Recording requires a wired microphone to be connected or a wireless microphone to be activated. After recording, turn off the microphone before exiting the recording mode.)
- 10.LED:**Short press can switch the LED lights.Long press to turn the LED light on or off.
- 11.MIC.VOL:**Adjust microphone volume.
- 12.ECHO:**Adjust the microphone reverb depth.
- 13.BASS:** Adjust bass sound.
- 14.TREBLE:** Adjust treble sound.
- 15.MASTER:** Main volume control.
- 16.MIC:**6.35mm wired microphone jack
- 17.AUX IN Jack**
- 18.EARPHONE Jack**
- 19.LIVE Jack:**You can connect the speaker to the phone using a live broadcast cable, then you can open the live broadcast app to start streaming.
- 20.TF CARD Port**
- 21.USB Port(For data transfer only.)**
- 22.Charging Lamp:** The light is red while charging, and it turns blue when fully charged.
- 23.Charging Port:**5V---1A

 Remote Control Key Illustration

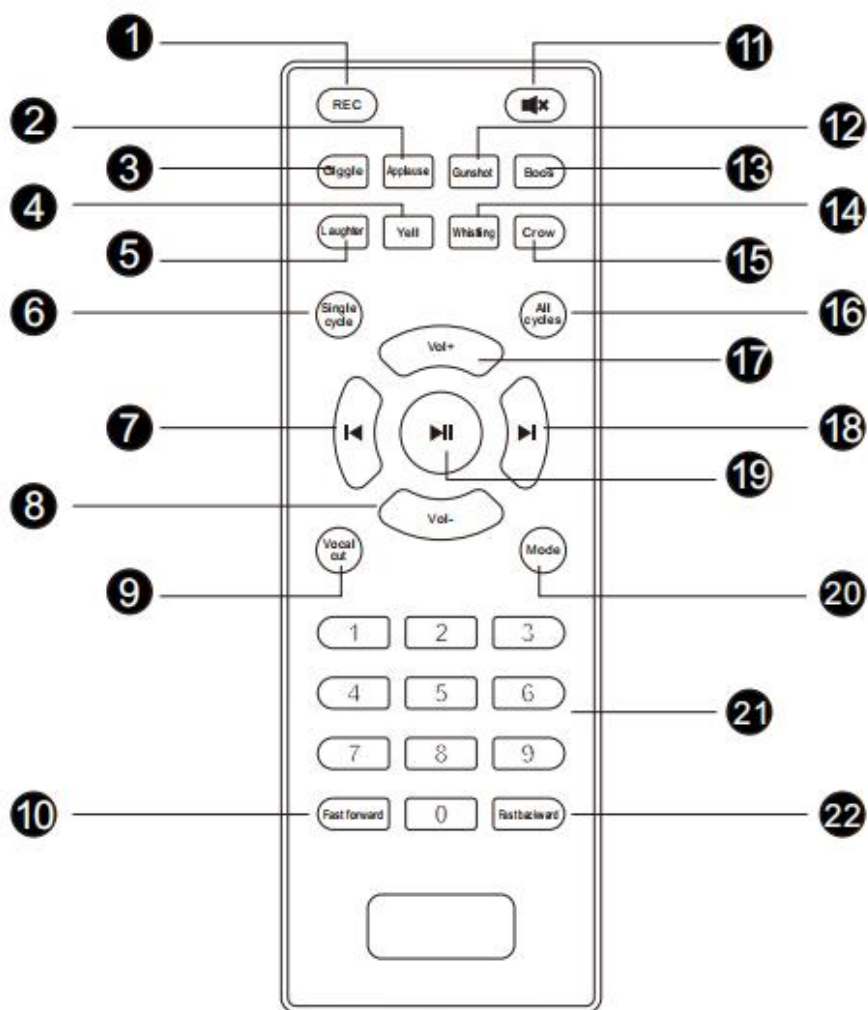

1. **REC:** Long press this key to start recording when a USB drive or TF card is inserted. (Before using the recording function, please remember to connect a wired microphone or connect a wireless microphone. After recording, turn off the microphone before exiting the recording mode. Short press can play the recorded files.)
2. **Applause:** (sound card effects)
3. **Giggle:** (sound card effects)
4. **Yell:** (sound card effects)
5. **Laughter:** (sound card effects)
6. **Single Cycle:** Short press can loop single music playback.
7. **PREV:** Short press for previous song.
8. **VOL-:** Short press to decrease the volume.
9. **Accompany:** This function is only effective for stereo music.
10. **Fast Forward:** Short press can fast-forward the song while playing music.
11. **Mute:** Press this key can mute the sound, pressing again restores the volume.
12. **Gunshot:** (sound card effects)
13. **Boos:** (sound card effects)
14. **Whistling:** (sound card effects)
15. **Crow:** (sound card effects)
16. **All Cycles:** Short press can loop all musics playback.
17. **VOL+:** Short press to increase the volume.
18. **NEXT:** Short press for next song.
19. **PLAY/PAUSE:** Short press to pause/continue playback.
20. **MODE**
21. **Number key:** Press the "0-9" number keys to quickly select the song you want, if you want to play the 3rd song, press the number 3 first .The display shows "0003", and the third song is played after 3 seconds; To play the 12th song, press the number button 1 first, and then press the number key 2 (you must have this song in the folder to select it!). After that, the 12th song will be played, and the other songs you want will be selected similar (Note: It only works when playing music from USB and TF.).
22. **Fast Backward:** Short press can fast-backward the song while playing music.

Bluetooth Playback

1. The device defaults to Bluetooth mode upon powering on, or you can repeatedly press the MODE button to enter Bluetooth mode.
2. Turn on your phone's Bluetooth and search for "Tx05" to pair. Then you can open the music app on your phone after a successful connection and play music.

TWS Function

Please turn on both speakers simultaneously, then short press the TWS button on either one of the speakers. The speakers will then automatically pair with each other, and a "Di" sound will indicate a successful pairing.

Music Playback

1. Insert the TF card/USB drive, then repeatedly press the MODE button to enter music mode can play MP3 songs from the TF card/USB drive.
2. Short press the PLAY/PAUSE button to play/pause , short press the PREV/NEXT button to switch songs, and rotate the volume knob can adjust the volume level.

AUX Function

1. Please use the appropriate audio cable to connect the audio output device. Then you can turn on the device and play audio at a suitable volume.
2. Insert the other end of the audio cable into the AUX port of this speaker, then repeatedly press the MODE button to enter audio input mode for playback.

Lighting Function

Short press the LED button can switch the light effects; long press can turn the LED light on or off.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.