 


Kid's Smart Watch

User Guide

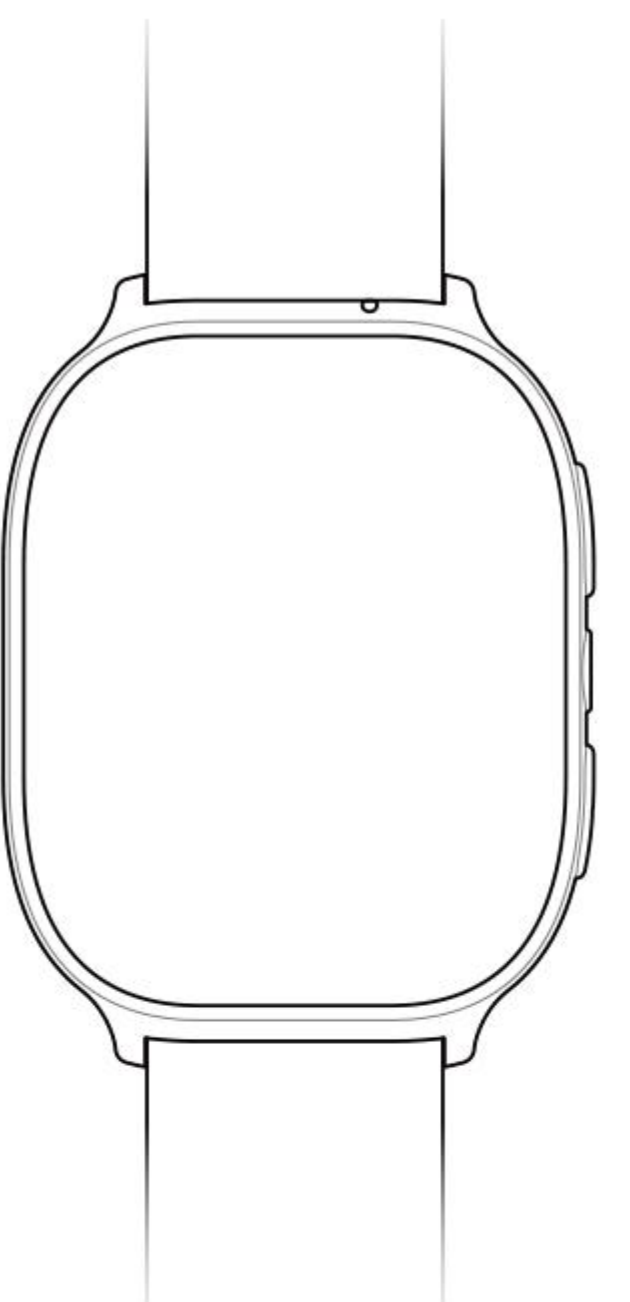

Component Introduction

•Short press:
Game shortcut key

•Long press:
Turn on the flashlight

•flashlight

•Long press:
power on/off

•Short press:
Enter the function menu

•Mic

•Horn

•Charging interface

screen operation

 


Swipe down the screen: You can turn on or off the watch sound check the battery level

Swipe left and swipe right on the screen: switch dials

charge

- Insert the charging cable USB port into the computer USB port or charger.
- Align the magnetic pins on the charging cable with the contacts on the back of the watch until they snap into place.
- The screen displays the battery charging symbol, indicating that the device is charging.
- After the battery is fully charged, the full battery symbol will appear on the screen

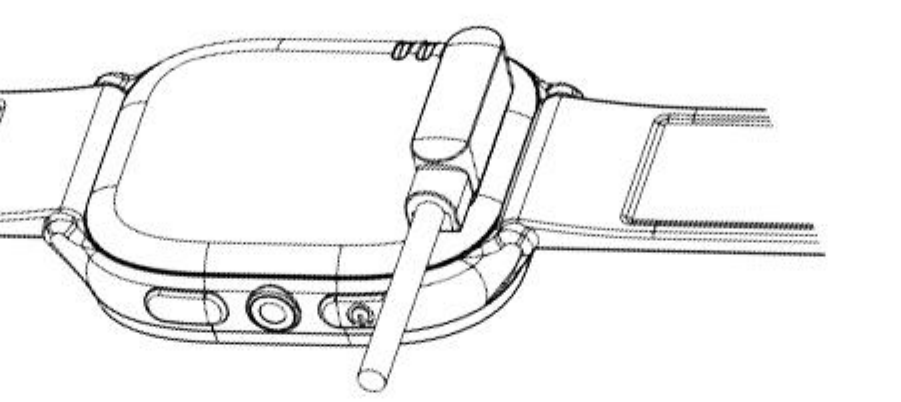

* Attention: When the device crashes unexpectedly, pressing the power button frequently for 10 seconds will restart the device

Data transmission

(only for music/story updates)

- connected device**
Insert the USB end of the charging cable into the USB port on the computer, and then connect the other end of the cable to the smartwatch.
- Connection confirmation**
After the smartwatch is successfully connected, the message "Device Connected" will be displayed.
- Accessing the smartwatch driver**
After a few seconds, your computer will recognize the smartwatch driver and display it as an external device.
- Start transferring files**
Open the smartwatch drive on your computer and browse to the folder with the corresponding tag. Copy or move media files as needed.
- Safe pop-up smartwatch driver**
To prevent data loss, click to safely eject the smartwatch drive from the computer before disconnecting.
- Disconnect the USB data cable**
Disconnect the USB data cable, and the smartwatch will automatically exit the transfer mode.

Attention: Music file downloads should be placed in the "MUSIC" folder, and story file downloads should be placed in the "STORY" folder, Do not delete or modify other files, otherwise it will affect the use of the watch.

Feature Introduction

Step counting
This watch can track a child's daily steps, walking distance, and calories burned.

Game
Including various fun mini games, combined with fitness and learning, aimed at motivating children to exercise and learn through play. Game restriction time can be set

Local Music
Play music stored on the watch, or use a USB cable to import your child's favorite songs and create a personalized music library.

Study card
A step-by-step tutorial helps children develop hands-on skills and creativity. Interesting guided activities include painting, cooking, gardening, and other practical skills.

Video
Recording daily life through the camera, the video will be stored in the watch internal memory space.

 
Player
View the video list stored in the watch internal memory space, click to play the video as you want.

Camera
Snap the daily life picture anytime anywhere, the photos will be stored in the watch internal memory space.

Photos
Browse the photos stored in the watch memory space, click the photo as you want.

Storybook
Build-in 10 digital stories, including image and audio contents, click to read and listen the story, it can help the kids to improve speaking and listening abilities.

Word
Built-in English letters and extended words help children improve their basic English listening and reading skills.

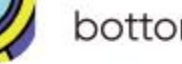Recorder
After entering, click on the  icon to start recording. Click on the bottom left corner  to view the recording record.

Sleep
Wear a watch while sleeping to automatically track sleep patterns and help parents understand their child's sleep quality.

Alarm
Set up to 10 reminders with alarm only, vibration only, or both alarm and vibration to help children develop good daily habits and improve time management.

Flashlight
Three different lighting modes under different conditions
Emergency distress mode: In case of emergency, flash three long signals, and three short signals.
Warning mode: Rapid flashing during night alarm
Stable mode: Continuous illumination, suitable for general use or searching for objects in the dark.

Calculator
Support basic mathematical operations: addition, subtraction, multiplication, and division, helping children practice basic mathematical skills.

Calendar
Using a calendar screen to track dates helps children develop a sense of time and improve their planning and organizational skills.

Drainage
If you got water goes into watch speaker hole, simply put the watch speaker hole downward to lead the water drain out, swing the watch helps to drain out the water

Time tool
Alarm & Vibration: Set up to 10 reminders with alarm only, vibration only, or both alarm and vibration to help children develop good daily habits and improve time management.
Stopwatch: measures the passage of time and is suitable for sports or other activities.
Countdown timer: Set a countdown to enhance children's time awareness and planning skills.

Theme
Change the background theme of the watch. Children can choose their favorite themes to make the watch more interesting and attractive.

Settings
Customize the time, time format, screen brightness, volume, date, dial, and advanced settings of the watch, which can be easily adjusted according to children's preferences.

Battery precautions

Misuse of batteries may lead to their explosion. Causing fire or chemical burns. Please read the following precautions:

- Do not disassemble, do not short-circuit.
- Do not crush the battery, nor expose it to any impact or force, such as hammering, dropping, or stepping.
- Do not expose to high temperatures or near heat sources. Do not place it in direct sunlight for a long time.
- Do not handle in the fire.
- Do not handle damaged or leaking batteries.
- Keep the battery out of reach of children.
- Keep the battery dry.
- If you find any signs of damage, please stop using and contact supplier support
- If it is found that the charging interval is significantly shortened and there is no need to charge during use, then the battery may be close to use the end of life. The battery life varies depending on storage conditions, working environment, and specific model.
- Regularly checking the condition of the charging cable may pose a risk of fire, electric shock, or personal injury, such as damaged wires in other parts of the house, wires should not be used until they are properly repaired or replaced.

Working temperature:
Charging: 0 ~40 ° C Discharge: -10 ° C~60 ° C

maintenance

- To keep the watch clean, please gently wipe it with a damp cloth and air dry it before wearing.
- Please store the watch away from direct sunlight and heat sources, such as electric heaters, ovens, stoves, microwaves, etc water heaters, candles, or other places that may generate high temperatures.
- Do not drop the watch on hard surfaces, do not expose it to damp environments, and do not immerse it in water entering the water.
- Do not place sharp metal objects near speakers, microphones, or charging connectors to prevent them from adhering and cause harm to the child.
- Do not allow children or pets to chew on equipment or its accessories, as this may result in injury or equipment malfunction or an explosion.

*Note: It needs to be operated by an adult. Smart watch charging requires the watch to be connected to a computer or come with a matching USB on the UL certified wall charger of the cable, and the operation process must be carried out correctly. The actual charging time depends on the power supply, remaining power, and the surrounding temperature of the charging environment. most suitable
The ambient temperature is 0~40 ° C (32 ° F~104 ° F). Please avoid using fast chargers.

Your satisfaction is our top priority!
If you have any questions about this product, feel free to reach out to us anytime. We are committed to providing you with fast and friendly support.
We look forward to serving you!
Email: ticcic@163.com

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



SeekTag

Operation Manual



Please scan the QR code
(Install APP or view electronic manual)



version:2.0

 
1. Preface

Due to functional differences between various versions of this App, some features mentioned in this document may not fully match those in the version you are currently using. We apologize for any inconvenience caused.

2. Install the app

Scan the QR code on the homepage and select the corresponding software according to your mobile phone. Please use the mobile phone's built-in browser to download the software. If you scan the code with WeChat, after scanning, click the top right corner to open it in the browser.

Please turn on the mobile phone's location and Bluetooth functions before use.

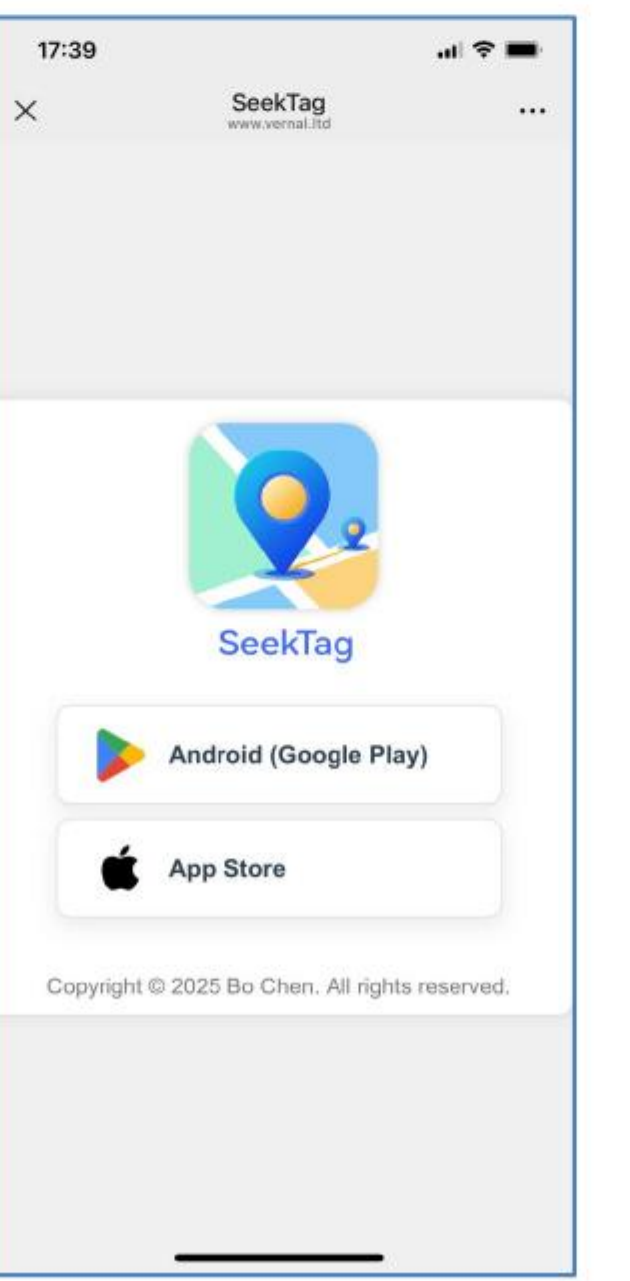


2

3. Register an account

3.1 Click the "SeekTag" app icon to open the software, and select "Agree" in the warm reminder.

 3.2 Select "Register Now", enter your mobile phone number or email address as the account, and set a password. After completing the registration, enter your account and password to log in to the software. In the prompt box where "SeekTag" requests permission to access location information, select "Allow".

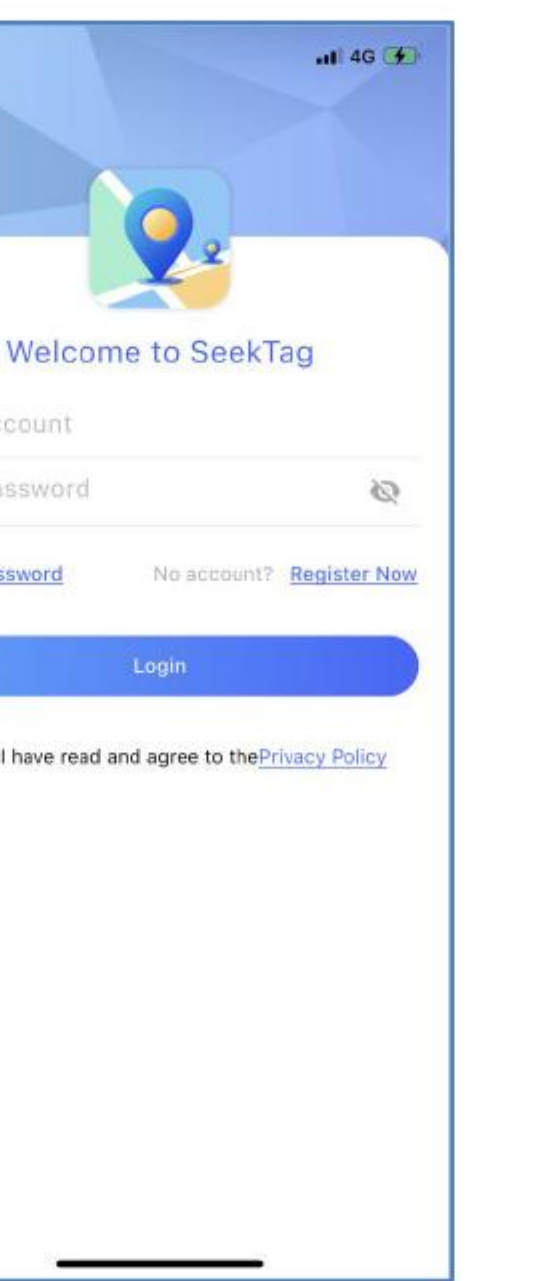


3

4. Add Device

4.1 Press the power button briefly or remove the insulating sheet to turn on the device (depending on the user's device). For devices with a power button, they need to be bound within three minutes after being turned on. If not bound, the device will automatically shut down after three minutes. To continue binding the device, you need to press the button again to turn it on.

4.2 After turning on the device, bring it close to your phone. Go to the "Home" page and click the "+" icon to add a new device. This will take you to the "Add Device" page, where the device will be detected automatically. If no device is detected, you can click "Click to Search" repeatedly until the "Add Device" page appears.

 4.3 Once you enter the "Add Device" page, enter the device name, select an avatar, and click "Confirm".

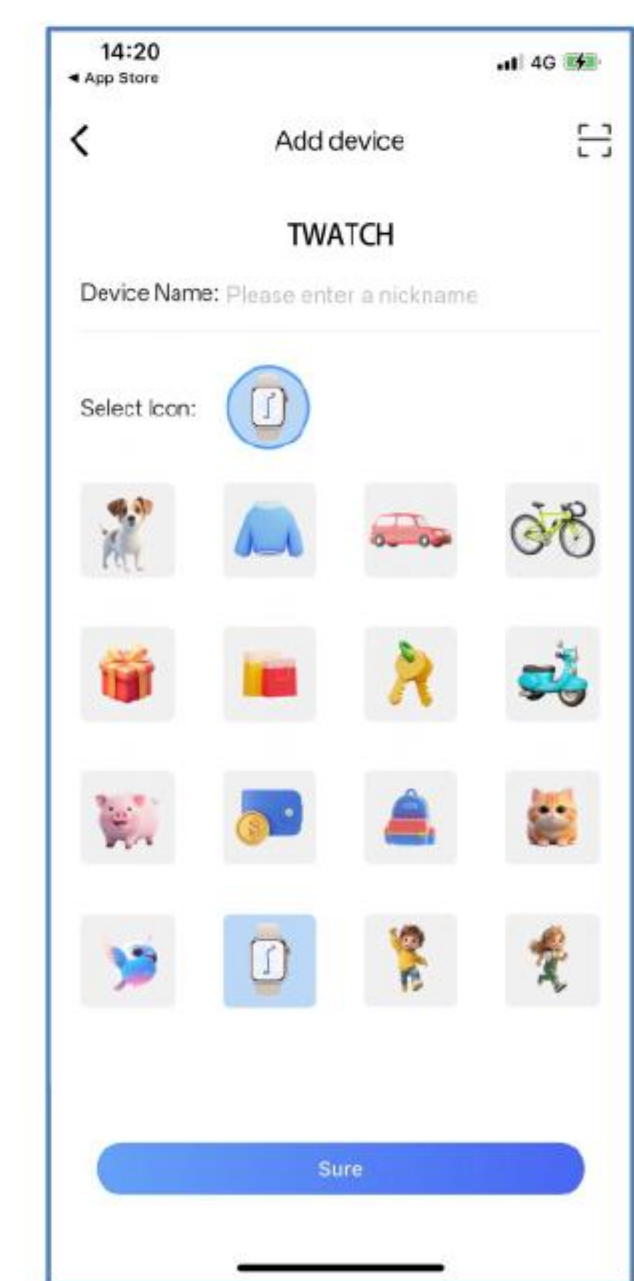

4

After the device is successfully bound, the bound device will be displayed on the "Home" page.

5. Device Location Search

Go to the "Home" page, find the device you want to query, click the "📍" icon of that device, and you will enter the "Location Query" page.

5.1 Click the "📍" icon at the top left to refresh the device's location.

5.2 Click the "📍" icon at the top right to select either Google Maps.

5.3 Click the "📍" icon at the top right to switch between the basic map and satellite map.

5.4 Click the "📍" icon at the bottom right to enter the "Track" page.

5.5 Click the "📍" icon at the bottom right to open the installed "Map App" and navigate to the device's location.



5

6.1 The information such as the device's battery level, address and last update time is displayed below.

 
6. Device Track Query

Go to the "Home" page, find the device you want to query, click the "📍" icon of that device, and enter the "Track" page.

6.1 On the "Track" page, adjust the query date and time period to view the track for that period.

6.2 Drag the "Accuracy Adjustment" icon to adjust the number of positioning points. If there are relatively few positioning points, you need to adjust it to the far right; if there are too many positioning points, you can adjust it appropriately to the left.

6.3 Click the "📍" icon to play the movement track of the selected time period.

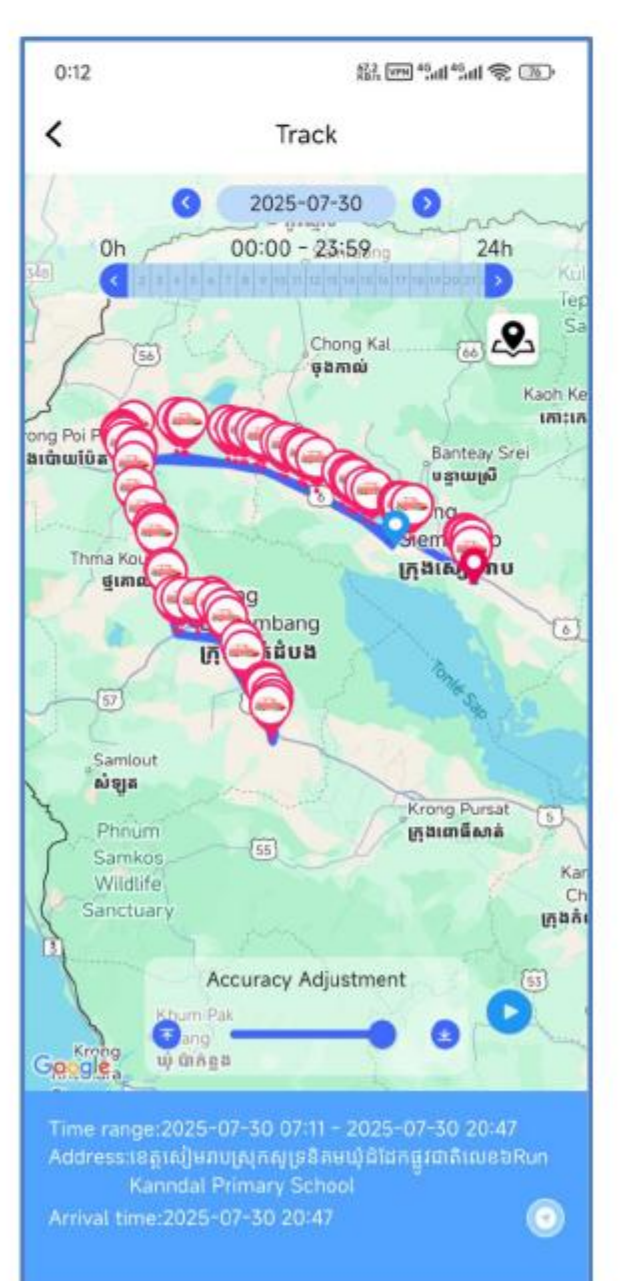

6

6.4 Click the "📍" icon at the bottom right to select a map and navigate to the current device's location.

7. Device Sharing

7.1 Go to the "Home" page, find the device you want to share, click the "📍" icon of that device, and a "Device QR Code" will pop up.

7.2 Other users should go to the "Add Device" page, click the "📍" icon at the top right, turn on the camera as prompted, scan the "Device QR Code", and bind the device according to the instructions. This allows multiple users to bind the same device and share the device information simultaneously.

8. Unbind Device

Go to the "Home" page, find the device you want to unbind, and click the "📍" icon of that device. After the unbinding prompt page pops up, select "Confirm" to complete the

 


7

unbinding. Once unbound, other users can bind the device. Select "Cancel" to abort the unbinding process.

9. Device Renaming

Go to the "Home" page, find the device you want to rename or change the avatar for. Click the avatar icon of the device to enter the "Edit" page, where you can change the device name and replace the avatar. Alternatively, click the "⋮" icon to bring up the function menu, select "Rename and Change Avatar" to enter the "Edit" page, and then change the device name and replace the avatar

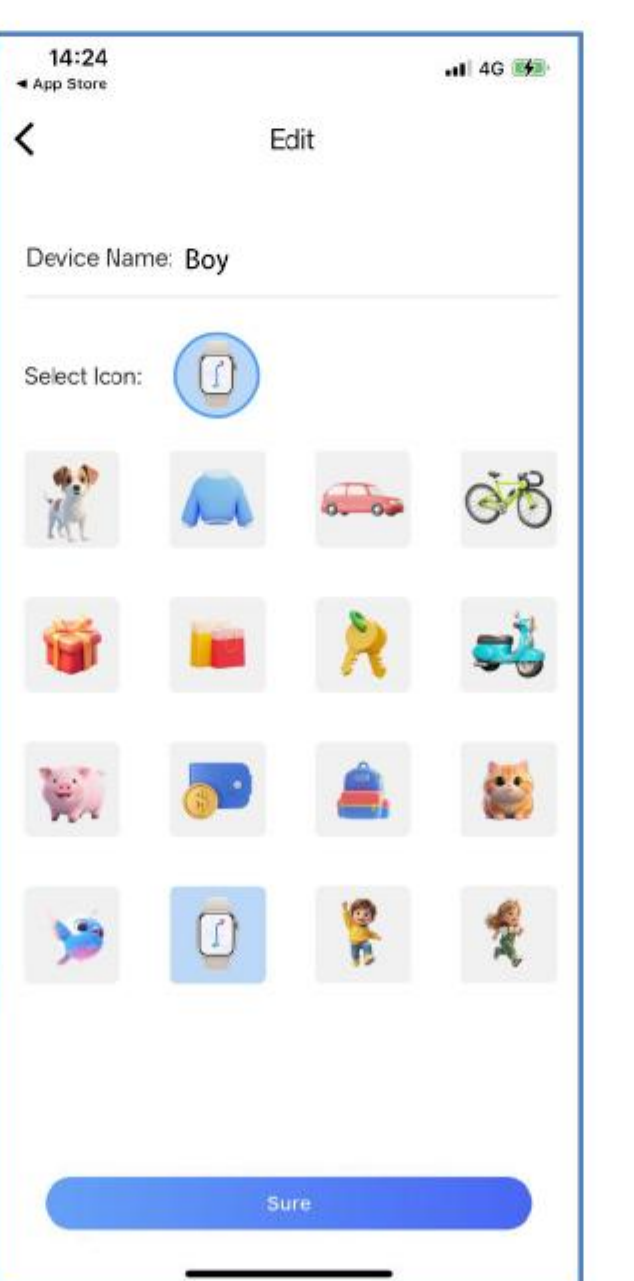

8

10. Introduction to the 'Me' Function

10.1 My Info: View the account and registration time.

 
10.2 Reset Password: Modify the account login password.

10.3 Delete Account: Canceling an account means deleting it. After cancellation, you will no longer be able to use the account, and all devices under the account will be deleted.

10.4 About SeekTag: Check for and update to the latest version of the app.

10.5 Privacy Policy: Learn in detail about how SeekTag respects and protects users' personal privacy.

10.6 Logout: After clicking to log out, you will need to re-enter your account and password to log in when opening the software again.

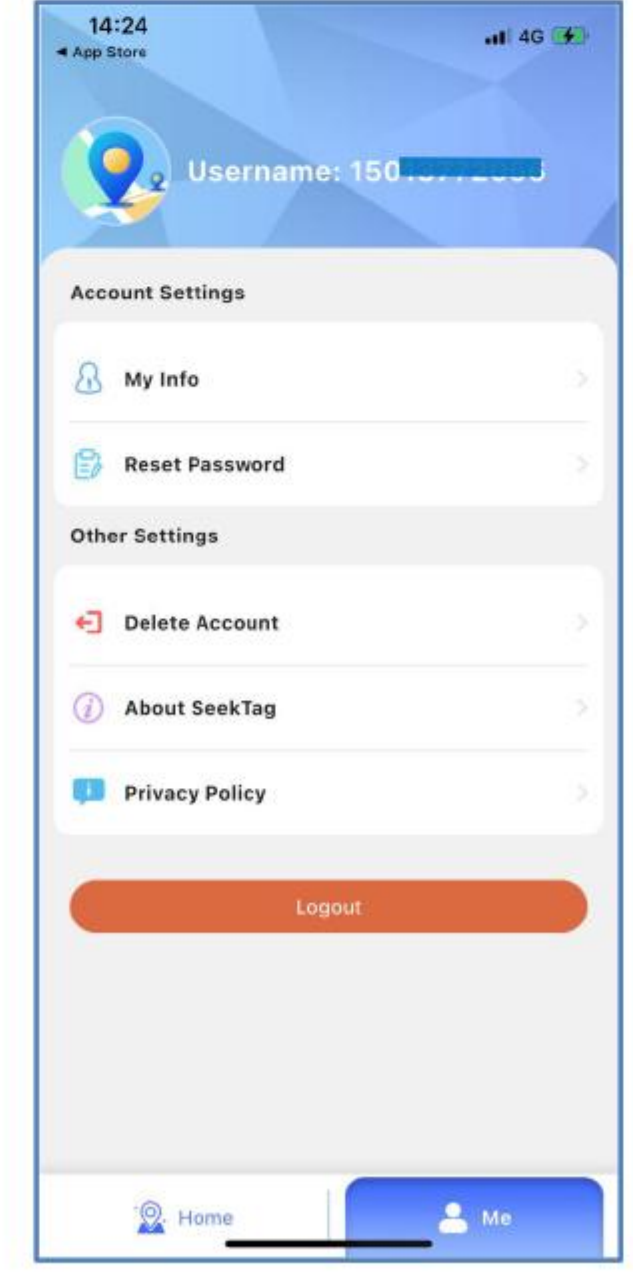

9

11. FAQ

11.1 Binding Failure
Please check if the phone network is working properly and whether all permissions were allowed when opening the app. If you accidentally disabled the permissions and don't know how to enable them, you can first uninstall the app and grant all required permissions when reinstalling it.

11.2 Slow Remote Location Updates
The remote positioning function of this device reports location through relevant communication products near the device. It is normal for there to be a certain delay sometimes.

Warm Reminder
The product is strictly prohibited from being used for illegal purposes; otherwise, the legal liabilities arising therefrom shall be borne by the user themselves.

10