 


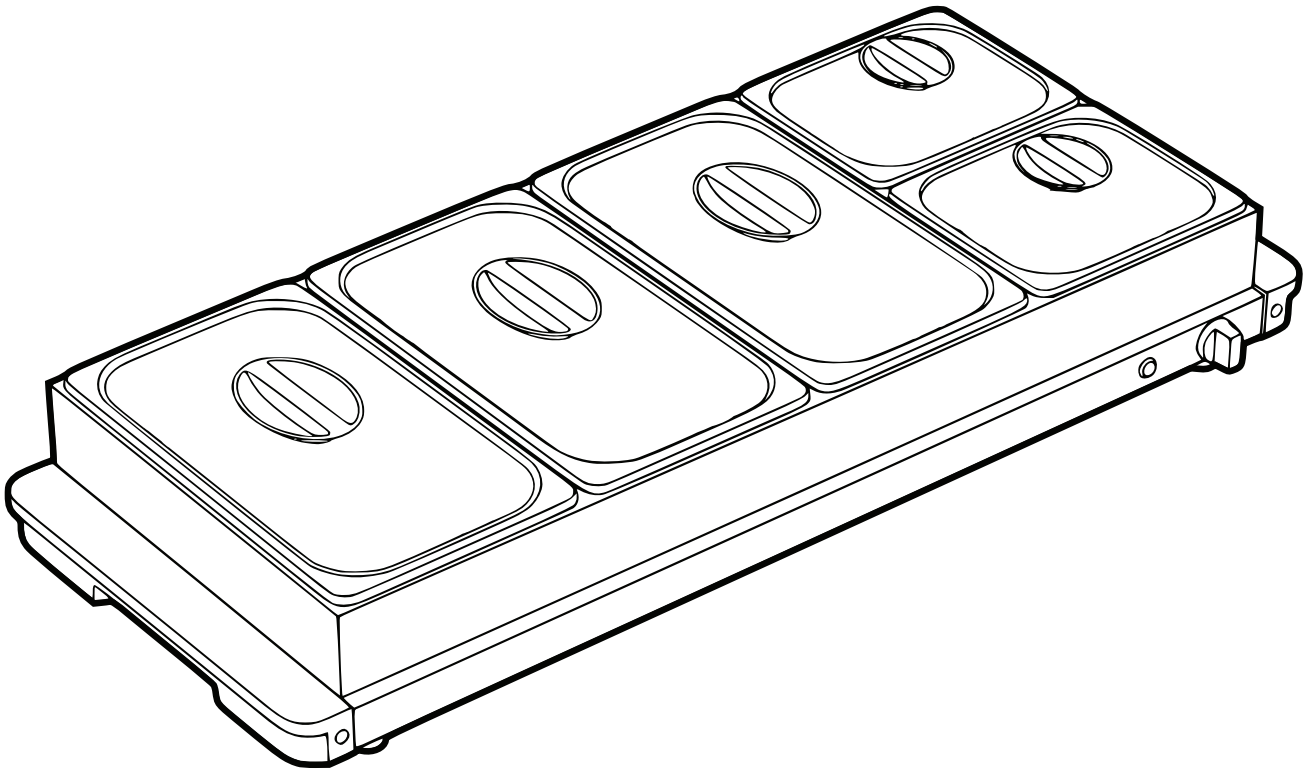

5 TRAY BUFFET WARMER

Product Instructions

Product No. 2000317

vonshef

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.


SCAN ME



Need further help?
support@vonhaus.com

See our full range at
www.vonhaus.com

Components

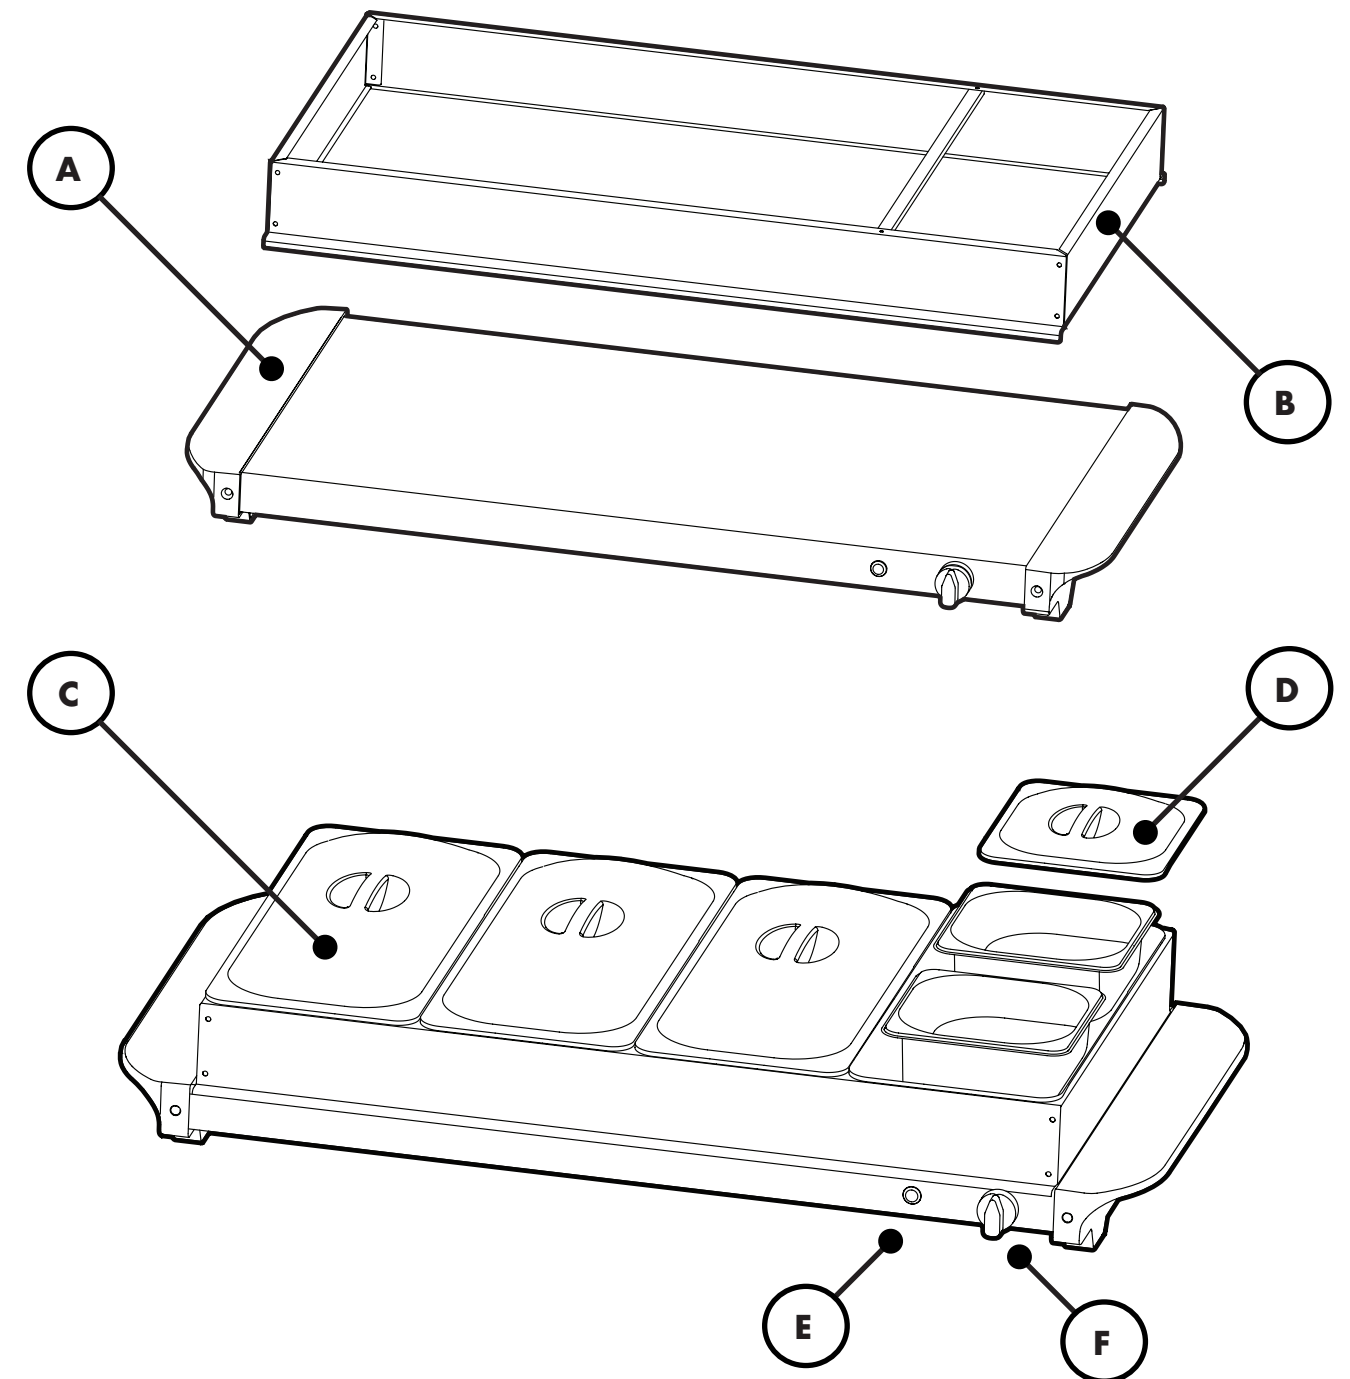


- A. Warming Tray
- B. Pan Frame
- C. x3 Large Warming Pans + Lids

- D. x2 Small Warming Pans + Lids
- E. Indicator Light
- F. Temperature Dial

Using the Buffet Warmer

With Warming Pans


- Place the buffet warmer onto a stable, heat-resistant surface. Place the warming pans into the pan frame, and then place the pan frame onto the warming tray.
- Plug the buffet warmer into the mains and turn the temperature dial to your desired temperature. The red indicator light will switch on to indicate the appliance is heating up.
- Once the indicator light switches off, place your precooked food into the warming pans.
- Place the lids onto the warming pans to help retain heat and keep the food fresh.
- The indicator light will cycle on and off as the appliance maintains its temperature.
- Do not run the appliance continuously for more than 6 to 8 hours.
- After use, switch off the appliance and unplug it from the mains. Allow the appliance to cool completely before handling or cleaning.

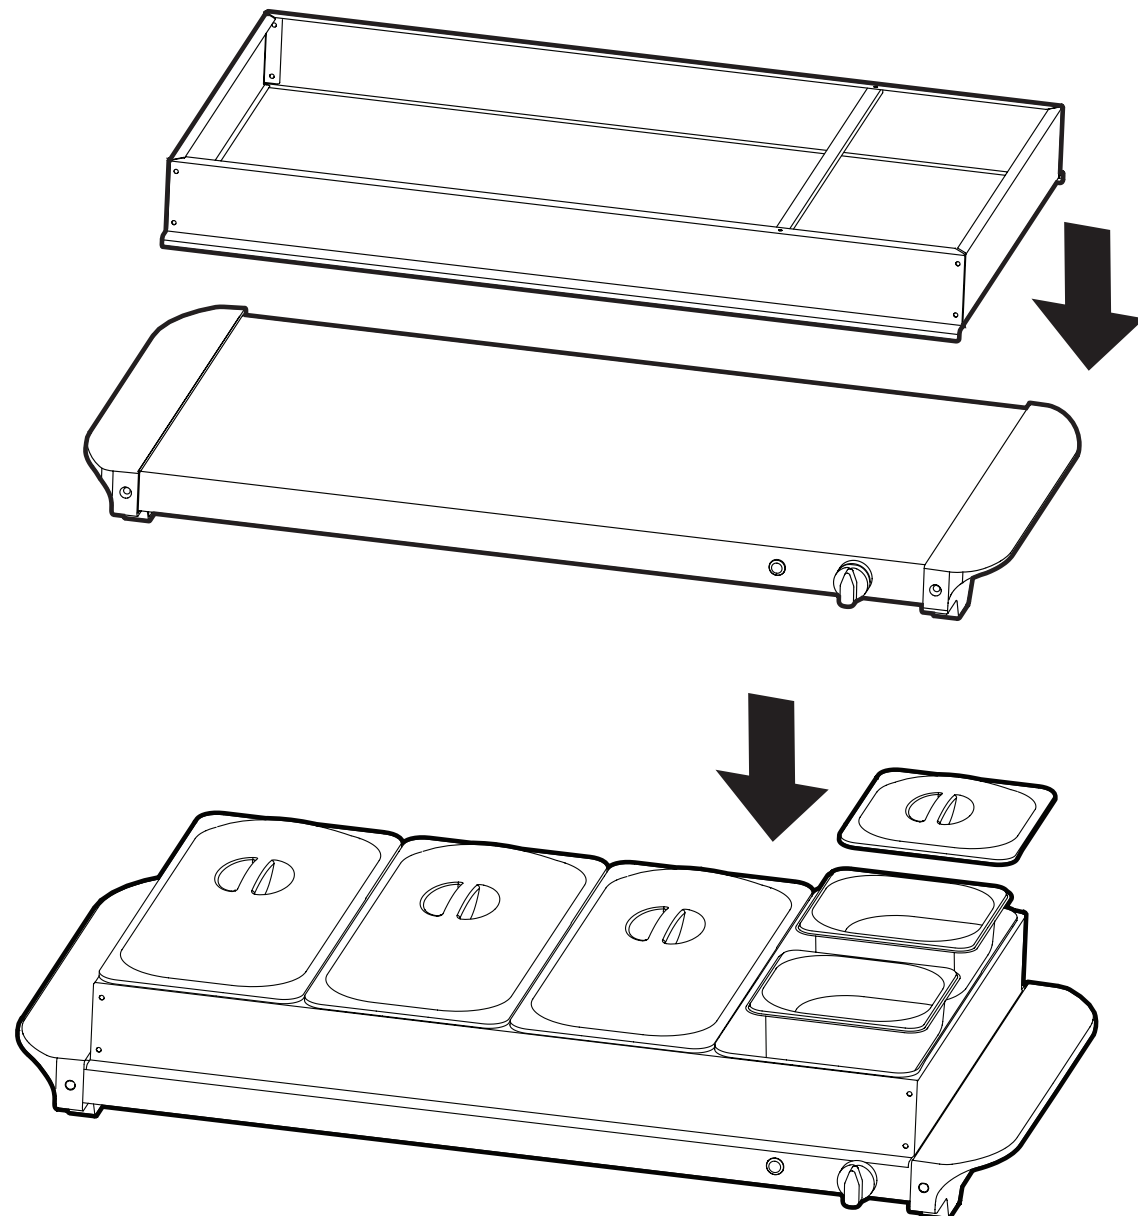

Using the Buffet Warmer

Warming Tray Only

- Remove the pan frame and warming plans from the warming tray and place the tray on to a stable, heat-resistant surface.
- Plug the appliance into the mains and turn the temperature dial to your desired temperature. The red indicator light will switch on to indicate the appliance is heating up.
- Once the indicator light switches off, you can place your heat-resistant plates, dishes or precooked food directly onto the warming tray. Allow the appliance to preheat for 10 minutes before use.
- This appliance is not designed to heat cold or frozen food.
- After use, switch off the appliance and unplug it from the mains. Allow the appliance to cool completely before handling or cleaning.

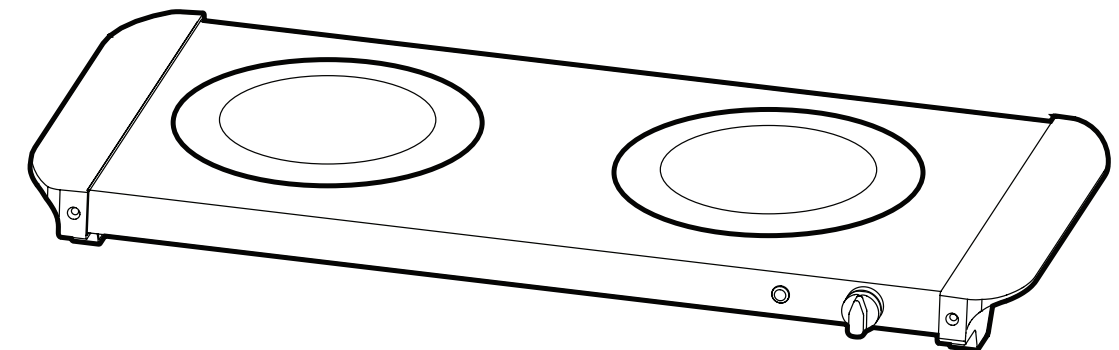

Note: A faint odour may be noticeable the first time you use the appliance. This is normal and will disappear with use.

WARNING: This appliance gets hot during use. Take care when handling.

Safety

Important Safety Notice

This product is **not suitable for use by children** or by individuals with **physical, sensory, or mental impairments** that may limit their ability to operate the equipment safely, **unless** they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Safety

Please read all instructions before use and retain for future reference.

Check that the voltage shown on the data plate matches your local mains supply before connecting.

Do not leave the appliance unattended while connected to the mains.

Do not immerse the appliance, cord, or plug in water or any other liquid.

Always unplug before cleaning, after use, or during servicing.

Keep out of reach of children. Close supervision is required when children are nearby.

Do not operate with a damaged cord or plug, or if the appliance has been dropped or damaged.

Use only as described in this manual. Do not use for any other purpose.

Do not touch hot surfaces during operation — use the handles and knobs only.

Do not place your hand over any steam vents while the appliance is in use.

Always place on a stable, heat-resistant surface.

All food placed in the buffet server must be thoroughly cooked beforehand. Do not use with raw meat.

Electrical repairs must be carried out by a qualified electrician. Improper repair may result in serious risk to the user.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person.

This appliance is not designed for use with an external timer or remote-control system.

This appliance is intended for household and similar applications. It is not suitable for commercial use.

Cleaning and Maintenance

WARNING: Always unplug the appliance and allow it to cool completely before cleaning or storing.

- Remove the pan frame, warming pans and lids and wash in warm, soapy water. Ensure each part is thoroughly dried before reassembling.
- Clean the warming tray with a soft, damp cloth and mild detergent. Do not use abrasive cleaning detergents, cloths or sponges, as this could damage the stainless steel.
- Once everything has thoroughly dried, the buffet warmer can be reassembled and stored.

Specifications

Rated Voltage: 220-240V~, 50-60Hz

Rated Power: 400W

Usage & Safety



Please read all instructions carefully before use and retain for future reference.



CAUTION: Hot surfaces.



Keep all electrical components dry at all times. Water and electricity create serious safety hazards that can result in injury or death.



Materials approved for food use.



Do not cover.

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Disposal



This appliance carries the WEEE symbol and must not be disposed of with general household waste. Under the WEEE Directive (in effect since August 2006), all electrical and electronic equipment must be recycled separately from domestic rubbish.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonhaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

