

# cosori ICONIC™

THE STAINLESS STEEL 6.5-QUART SMART AIR FRYER



User Manual



# Thank you for your purchase!



## Customize Your Experience

Download and connect your smart air fryer to the VeSync app to enjoy smart features, recipe inspiration, and more.



**Elevate** your menu with our recipe gallery at [cosori.com](https://cosori.com)



**Enjoy** weekly, featured recipes handcrafted by our chefs in the Cosori kitchen



## Contact Our Chefs

For recipes that need a touch of magic, reach out to our chefs at:

**Email:** [recipes@cosori.com](mailto:recipes@cosori.com)

**Toll-free:** 1-888-402-1684

Mon–Fri, 9:00 am–5:00 pm PST/PDT

## Table of Contents

Package Contents	3
Specifications	3
Important Safeguards & Warnings	4
VeSync App Setup	7
Getting To Know Your Smart Air Fryer	8
Before First Use	11
Using Your Smart Air Fryer	13
Troubleshooting	19
Limited Warranty Information	21
Customer Support	23

## Package Contents

- 1 × Cosori Iconic™  
6.5-Quart Smart Air Fryer
- 1 × Crisper Plate
- 1 × User Manual
- 1 × Quick Start Guide
- 1 × Recipe Book

## Specifications

Model	CAF-SE601S-CUS
Power Supply	120V, 60Hz
Rated Power	1,725W
Capacity	6.5 qt / 6.2 L (serves 3–5 people)
Temperature Range	90°–450°F / 30°–230°C
Time Range	1 min–24 hr
Dimensions (including handle, L x W x H)	14.8 x 11.8 x 11.6 in / 37.7 x 30.0 x 29.5 cm
Dimensions (not including handle)	11.8 x 11.8 x 11.6 in / 30.0 x 30.0 x 29.5 cm
Weight	14.1 lb / 6.4 kg

Your culinary masterpiece awaits.

# READ AND SAVE THESE INSTRUCTIONS

## Important Safeguards & Warnings

Follow basic safety precautions when using your air fryer. Read all instructions.

### KEY SAFETY POINTS

**CAUTION HOT:** After cooking is complete, **do not** touch the outer surface of the air fryer for 30 minutes as it may be hot.

- **Do not** touch hot surfaces. Use handle.
- Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.
- Firmly insert the crisper plate into the basket to reduce the chance of it falling out.
- **Do not** block any ventilation openings. Hot steam is released through openings. Keep your hands and face clear of openings.
- **Always** use tongs to carefully remove hot food.

### GENERAL SAFETY

- To protect against electric shock, **do not immerse the air fryer** housing, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children. Unplug when not in use, and before cleaning. Allow to cool before putting on or taking off parts.
- **Do not** operate any appliance with a damaged cord or plug, or

after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment. Contact **Customer Support** (page 23).

 
 
- **Do not** use your air fryer if it is damaged, not working, or if the cord or plug is damaged. Contact **Customer Support** (page 23).
- The use of accessory attachments is not recommended by Cosori and may cause injuries.
- **Do not** use outdoors.
- **Do not** place the air fryer or any of its parts on a stove, near gas or electric burners, or in a heated oven.
- Use extreme caution when removing the basket and crisper plate or disposing of hot grease.
- **Always** place the crisper plate and basket on a heat-resistant surface after removing from the air fryer.
- **Do not** clean with metal scouring pads. Metal fragments can break off the scouring pad and touch electrical parts, creating a risk of electric shock.
- **Do not** place anything on top of your air fryer. **Do not** store anything inside your air fryer.
- This air fryer is not intended for use by persons (including children) with reduced physical, sensory,

### Safety Information (cont.)

- or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the air fryer by a person responsible for their safety.
- Cleaning and user maintenance shall not be done by children without supervision.
- Children should be supervised to ensure that they **do not** play with the air fryer.
- This air fryer is not intended to be operated by means of an external timer or separate remote-control system.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- **Do not** use the air fryer for anything other than intended use.
- Any servicing should be performed by an authorized service representative, contact **Customer Support** (page 23).
- For instructions on cleaning the accessories, see **Care & Maintenance** (page 17).
- Not for commercial use. Household use **only**.

### WHILE AIR FRYING

- An air fryer works with hot air **only**. **Never** fill the basket with oil or fat.
- **Never** use your air fryer without the basket in place.
- **Do not** place oversized foods or metal utensils into your air fryer as they may create a fire or risk of electric shock.
- **Do not** overfill the basket. Heaping amounts of food may touch the heating coils and cause a fire hazard.

- **Do not** touch accessories (including the crisper plate) during or immediately after air frying.
- **Do not** place paper, cardboard, non-heat-resistant plastic, or similar materials into your air fryer.
- **Never** put baking or parchment paper into the air fryer without food on top. Air circulation can cause paper to lift and touch heating coils.
- If lining the basket with foil, make sure it does not contact the heating elements, which can cause overheating and risk of fire.
- **Always** use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- To reduce the risk of fire, keep your air fryer away from flammable materials (curtains, tablecloths, etc.). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- Immediately turn off and unplug your air fryer if you see dark smoke coming out. White smoke is normal, caused by heating fat or food splashing, but dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact **Customer Support** (page 23).
- To turn the air fryer off, tap  once. The air fryer will beep, and all buttons will shut off except the  button, which will turn orange.
- **Do not** leave your air fryer unattended while in use.
- **Do not** use **AIR FRY** or **ROAST** cooking functions for thin, lightweight food. Air circulation may cause food to lift and touch the heating coils.

## Safety Information (cont.)

### POWER & CORD

- Turn off the air fryer before removing the plug from the outlet.
- To unplug, grab the plug and pull from the outlet. **Never** pull from the power cord.
- **Do not** let the power cord (or any extension cord) hang over the edge of a table or counter or touch hot surfaces.
- **Always** plug in to a grounded electrical outlet. **Do not** modify the plug in any way. **Never** use an outlet below the counter when plugging in your air fryer.
- **Never** use an outlet below the counter when plugging in your air fryer.
- Your air fryer has a 3-prong grounding plug, and should **only** be used with **120V, 60Hz** electrical systems in North America. **Always** plug in to a grounded electrical outlet. **Do not** modify the plug in any way.
- Your air fryer should **only** be used with **120V, 60Hz** electrical systems. **Do not** plug into another type of outlet.
- Keep the air fryer and its cord out of reach of children.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- If the power-supply cord is damaged, it must be replaced by Arovast or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (page 23).

### EXTENSION CORDS


- Longer extension cords are available and may be used if care is exercised in their use. If a longer extension cord is used:
  - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the air fryer.
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
  - If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

**WARNING:** Any other servicing should be performed by an authorized service representative.

**WARNING:** Items marked with the following symbol may reach high temperatures and should be handled carefully.



**CAUTION:**  
Hot surface.

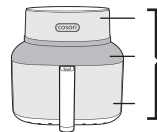

Hot Metal  
Surface Areas

Avoid touching the air fryer's metal surfaces, especially hot areas, during operation and 30 minutes after cooking has completed to prevent burns.

## VeSync App Setup

### Note:

- The VeSync app is continually being improved and may change over time. If there are any differences, follow the in-app instructions.
- Requires device to run app, Wi-Fi or mobile data, and iOS version 15 or Android version 8 (or above). Standard data and messaging rates may apply. Registration is required.

1. To download the VeSync app, scan the QR code or search "VeSync" in the Apple App Store® or Google Play Store.



**Note:** For Android™ users, choose "Allow" to use VeSync.

2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.


**Note:** You must create your own VeSync account to use third-party services and products. These will not work with a guest account. With a VeSync account, you can also allow your family and friends to control your smart air fryer.

3. Plug in your smart air fryer to enter pairing mode.
4. Tap **+** and select your smart air fryer.
5. Follow the in-app instructions to set up your smart air fryer.

### Note:

- You can change the name and icon at any time by going to the smart air fryer screen and tapping .
- You can use the VeSync app to connect your smart air fryer to Amazon Alexa or Google Assistant™.

## DISCONNECTING FROM WI-FI®

- To disconnect Wi-Fi, press and hold the  for 15 seconds until the Wi-Fi indicator turns off. This will restore the smart air fryer's default settings and disconnect it from the VeSync app.
- To reconnect, please follow the instructions in the VeSync app for adding a device.

## VeSync App Features

The VeSync app allows you to access additional smart air fryer functions, including those listed below.

### REMOTE CONTROL

- All smart air fryer functions can be controlled remotely, except for starting the cooking process (to comply with UL safety regulations).
- Cooking progress can be monitored from a distance.

### IN-APP RECIPES

- Recipes made by Cosori's in-house chefs are available on the app. These recipes automatically set the recommended time and temperature on your air fryer.
- Create and save custom recipes.

## THIRD-PARTY VOICE CONTROL

- Compatible with Amazon Alexa and Google Assistant™ for voice commands.

**Note:** The VeSync app is continually updated and app features will expand.

# SAVE THESE INSTRUCTIONS


## Getting to Know Your Smart Air Fryer

Your smart air fryer uses a DC motor which heats up the air fryer quicker and allows for precise air flow and variable fan speed, so your food cooks exactly the way you want it.

### Note:

- **Do not** try to open the top of the air fryer. This is not a lid.
- The basket is made of stainless steel with nonstick, ceramic coating.

### AIR FRYER DIAGRAM

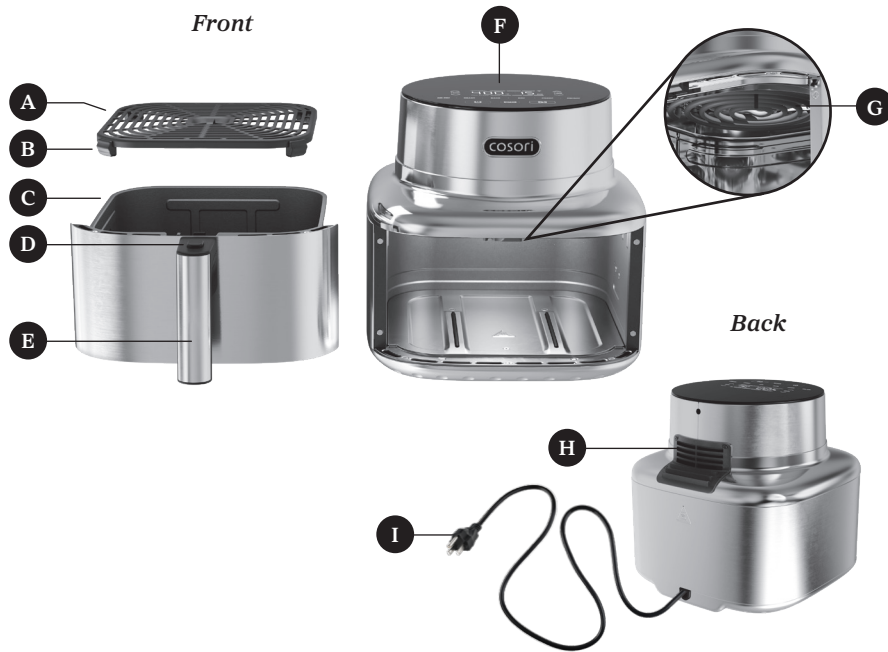


- |                          |                     |
|--------------------------|---------------------|
| A. Crisper Plate         | F. Control Panel    |
| B. Silicone Stoppers     | G. Heating Elements |
| C. Basket                | H. Air Outlet       |
| D. Basket Release Button | I. Power Cord       |
| E. Basket Handle         |                     |

## Display Diagram


**Note:** When you tap a button to use a function, it will turn orange to show that it is selected.

### CONTROL PANEL

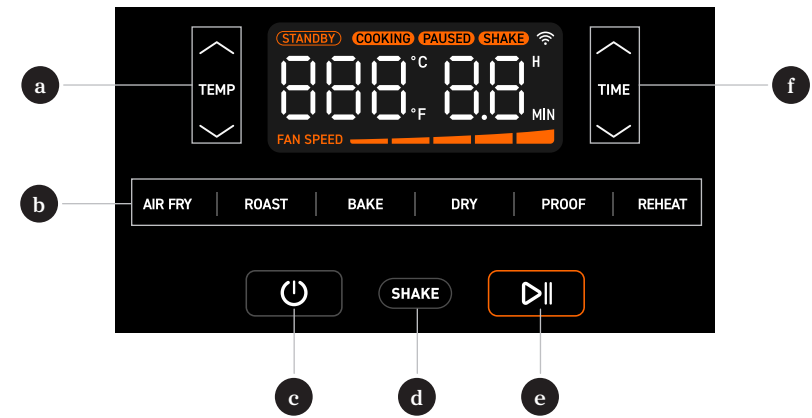

- |                                  |                           |
|----------------------------------|---------------------------|
| a. Increase/Decrease Temperature | d. Shake Reminder         |
| b. Cooking Functions             | e. Start/Pause            |
| c. On/Off                        | f. Increase/Decrease Time |


## DISPLAY

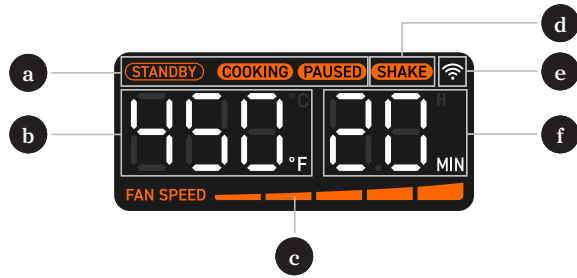

- |                    |                    |
|--------------------|--------------------|
| a. Cooking Status  | d. Shake Indicator |
| b. Temperature     | e. Wi-Fi Indicator |
| c. Fan Speed (1–5) | f. Time            |


## DISPLAY MESSAGES

### Cooking

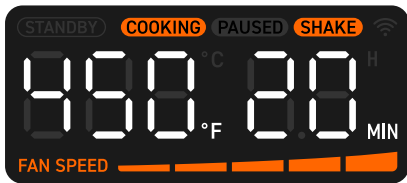

The Shake Indicator blinks when you need to check the basket. The indicator will turn off when the basket is removed.

### Basket Removed

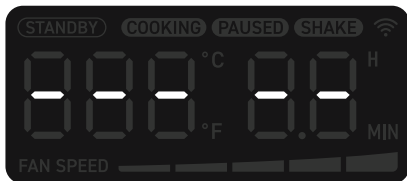

### Paused



### Ready



## Before First Use

### Setting Up

1. Before you get started, remove the air fryer from the product bag and discard all packaging from the air fryer, including any temporary stickers.

**Important:** Remove the basket and discard all packaging material inside. [Figure 1.1]



Figure 1.1

2. Place the air fryer on a stable, level, heat-resistant surface. Keep away from areas that can be damaged by steam (such as walls or cupboards).

**Note:** Leave at least  $\geq 5$  in / 13 cm of space behind and above the air fryer. [Figure 1.2] Leave enough room in front of the air fryer to remove the basket.



Figure 1.2

3. Wash both the basket and crisper plate thoroughly using either a dishwasher or a non-abrasive sponge.

**CAUTION:** Gentle handwashing is recommended to prolong the life of the ceramic coating on the crisper plate and inside the basket.

- Avoid using abrasive cleaning materials on the basket and crisper plate. These will scratch or damage their surfaces.
  - If you notice any cracking or peeling in the coating of the crisper plate or basket, we recommend replacing them to maintain cooking performance.
4. Wipe the interior and exterior of the air fryer with a slightly moist cloth. Dry with a towel.
  5. Place the crisper plate back into the basket. Tilt the crisper plate to insert one side first, then press down on the other side.
  6. Place the basket inside the air fryer.

## Test Run

A test run will help you become familiar with your air fryer, make sure it's working correctly, and clean it of possible residues in the process.

1. Make sure the air fryer basket is empty, then plug in the air fryer.
2. Tap **AIR FRY**. The display will show "385°F" and "10 MIN". Adjust the time to 5 minutes.
3. Tap **▶||** to begin.
4. When finished, the air fryer will beep and the display will show "End".
5. Press the basket release button and remove the basket. Let the basket cool completely for 10–30 minutes.

### Note:

- Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.
- Do not unscrew the basket handle from the basket.

## SILICONE STOPPERS

- The crisper plate contains four silicone stoppers made of food-safe material. These stoppers keep the plate fitted to the bottom of the basket.
- When placing the crisper plate into the basket, tilt the crisper plate to insert one side first, then press down on the other side. [Figure 2.1]



Figure 2.1

**Note:** Forcing the crisper plate into the basket incorrectly may cause damage.

- Make sure children **do not** play with the silicone stoppers or swallow them.

## Using Your Smart Air Fryer

### Note:

- **Do not** place anything on top of your air fryer to avoid damaging the glass control panel. [Figure 3.1].

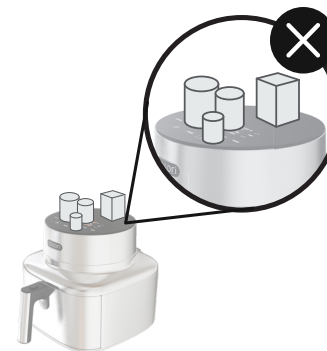


Figure 3.1

- An air fryer is not a deep fryer. **Do not** fill the basket with oil, frying fat, or any liquid.
- When taking the basket out of the air fryer, be careful of hot steam.

Time and temperature for all cooking functions can be adjusted.

To customize a cooking function:

1. Select the function's button you want to customize.
2. Tap  $\wedge$  or  $\vee$  to change the function's time or temperature.
3. To save, press and hold the function's button for 3 seconds until you hear a beep.

**Note:** Press and hold  $\wedge$  or  $\vee$  to rapidly increase or decrease the time or temperature.

To reset all cooking functions:

- Press and hold  $\cup$  for 15 seconds.

## COOKING FUNCTIONS

Using a cooking function is the easiest way to cook. Functions are programmed with an ideal time, temperature, and fan speed for cooking certain foods. See **Cooking Chart** (page 14).

## COOKING CHART

Function	Default Temperature	Default Time	Temperature Range	Time Range	Fan Speed
AIR FRY	385°F / 195°C	10 min	195°–450°F / 90°–230°C	1–60 min	5
ROAST	400°F / 205°C	12 min	350°–450°F / 175°–230°C	1–60 min	5
BAKE	330°F / 165°C	20 min	260°–400°F / 125°–205°C	1–60 min	3
Dehydrate (DRY)	135°F / 55°C	6 hr	100°–200°F / 35°–95°C	15 min–24 hr	2
PROOF	90°F / 30°C	60 min	90°–110°F / 30°–45°C	15 min–12 hr	1
REHEAT	390°F / 200°C	5 min	300°–425°F / 150°–220°C	1–60 min	4

**Note:** Results may vary. Time and temperature for all cooking functions can be adjusted. To go back to default settings, press and hold the cooking function's button on the display.

## AIR FRYING

- Place the crisper plate into the basket. The crisper plate allows excess oil to drip down to the bottom of the basket.

**Note:** The crisper plate may not be used for certain recipes, such as muffins and breads.

- To preheat, tap **AIR FRY**, adjust temperature to 450°F and time to 4 minutes, then tap ▶||.
- When the air fryer beeps and the display shows "End", add food to the basket.
- Select a cooking function (page 14).

**Note:** Cooking functions are programmed with an ideal time, temperature, and fan speed for cooking certain foods. The air fryer will default to the Air Fry function if no other function is selected.

- Change the temperature and time by tapping ^ or v. You can do this anytime during cooking.
- Tap ▶|| to begin cooking.
- The air fryer will beep when finished. The display will show **End**.
- Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove the food from the basket.
- Allow to cool before cleaning.

## SHAKE REMINDER

The Shake Reminder offers a convenient progress check mid-cook, giving you the chance to flip, shake, or adjust your dish for the desired texture and flavor.

- Tap **AIR FRY**.

**Note:** The Shake Reminder **only** works with **AIR FRY**.

- If necessary, adjust the time and temperature.
- Tap **SHAKE** to turn Shake Reminder on.
- Tap ▶|| to begin cooking. At the halfway point, the air fryer will beep 5 times and **SHAKE** will blink on the display.
- Remove the basket to shake, flip, or check on your food. The Shake Indicator will stop blinking once you remove the basket.

### Note:

- You can turn the Shake Reminder off anytime during the cooking process by tapping **SHAKE**.
- Shake Reminder can also be turned on/off in the VeSync app.
- Do not** shake if there is a risk of hot liquids splashing.
- If you do not remove the basket, the air fryer will beep again after 1 minute.
- When you remove the basket, the air fryer will pause cooking automatically, and the display will show [- - -] until the basket is replaced.
- When you replace the basket, cooking will automatically resume.
- Avoid having the basket open for longer than 30 seconds, as the air fryer may start to cool down.

## FOODS TO CHECK

- Small foods that are stacked will usually need shaking, such as roasted potatoes, fries, or chicken tenders.
- Larger pieces of meat like steaks and ribs benefit from flipping to ensure even browning.
- Checking baked goods like cakes and muffins at the halfway point can help avoid over and underbaking.

## Cooking Tips

### OVERFILLING

- If the basket is overfilled, food will cook unevenly.

### USING OIL

- Adding a small amount of oil to your food will make it crispier. Use no more than 2 US tbsp / 30 mL of oil.
- Oil sprays are excellent for applying small amounts of oil evenly to all food items.

### FOOD TIPS

- You can air fry any frozen foods or goods that can be baked in an oven.
- To make cakes, hand pies, or any food with filling or batter, place food in a heat-safe container before placing in the basket.
- Air frying high-fat foods will cause fat to collect underneath the crisper plate. To avoid excess smoke while cooking, pour out fat drippings after cooking.
- Liquid-marinated foods create splatter and excess smoke. Pat these foods dry before air frying.
- Refer to the **Cooking Chart** to select the ideal cooking function for your recipe (page 14).

### FRENCH FRIES

- Add ½–1 US tbsp / 8–15 mL oil for crispiness.
- When making fries from raw potatoes, soak uncooked fries in water for 15 minutes to remove starch prior to frying. Pat dry with a towel before adding oil.
- Cut uncooked fries smaller for crispier results. Try cutting fries into ¼ x 3-in / 0.6 x 7.6-cm strips.

**Note:** For more tips and recipes, check out the VeSync app and Cosori website.

## More Functions

### SWITCHING TEMPERATURE UNITS

- Press and hold **TEMP**,  $\wedge$ , and  $\vee$  for 3 seconds.
- The temperature unit will change from Fahrenheit to Celsius.
- Repeat to switch back to Fahrenheit.

### PAUSING

- Tap  $\blacktriangleright\parallel$  to pause cooking. The air fryer will stop heating, and  $\blacktriangleright\parallel$  will blink until you tap  $\blacktriangleright\parallel$  again to resume cooking.
- After 10 minutes of inactivity, the air fryer will go into standby.
- This function allows you to pause cooking without removing the basket from the air fryer.

### AUTOMATICALLY RESUME COOKING

- If you pull out the basket, the air fryer will pause cooking automatically. The display will show **[- - - -]**.
- When you return the basket, the air fryer will automatically resume cooking based on your previous settings.

### AUTOMATIC STANDBY

- If the air fryer has no active cooking functions, it will clear all settings and turn to standby after 10 minutes of inactivity.
- If the basket is removed, the air fryer will clear all settings and turn to standby after 10 minutes of inactivity.

## Care & Maintenance

**Note:** **Always** clean the air fryer basket and crisper plate after every use.

1. Turn off and unplug the air fryer. Allow it to cool completely before cleaning. Pull out the basket for faster cooling.
2. The basket and crisper plate are dishwasher-safe. You can also wash the basket and crisper plate using a non-abrasive sponge with hot water and a mild detergent. Soak if necessary.
3. For the stainless steel housing:
  - a. Wipe the exterior of the air fryer with a microfiber cloth or stainless steel polishing cloth to remove any fingerprints or marks.
  - b. For blemishes or tarnishing, use a stainless steel cleaner with a soft, damp cloth, gently rubbing with the metal grain for best results.

**Note:** **Do not** use appliance wax, polish, bleach, steel wool, abrasive sponges and chemicals, or commercial oven cleaners on the air fryer.

**CAUTION:** Gentle handwashing is recommended to prolong the life of the ceramic coating on the crisper plate and inside the basket

- Avoid using metal utensils and abrasive cleaning materials on the basket and crisper plate. These will scratch or damage their surfaces.
- Avoid dropping the basket and crisper plate, as well as hitting or bumping them with other hard

## Care & Maintenance (cont.)

objects. This may cause damage to the coating.

- If you notice any cracking or peeling in the nonstick coating of the crisper plate or basket, we recommend replacing them to maintain cooking performance.

### 4. For stubborn grease:

- In a small bowl, mix 2 US tbsp / 30 g of baking soda and 1 US tbsp / 15 mL. tbsp of water to form a spreadable paste.
- Use a sponge to spread the paste on the basket and crisper plate, then scrub. Let the basket and crisper plate sit for 15 minutes before rinsing.
- Wash the basket and crisper plate with soap and water before using.

- Clean the cavity of the air fryer with a slightly moist, non-abrasive sponge or cloth. **Do not** immerse in water. If needed, clean the heating coil to remove food debris. *[Figure 4.1]*

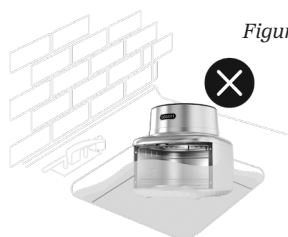


Figure 4.1

- Dry before using.

**Note:** Make sure the heating coil is completely dry before turning on the air fryer.

## Accessories

Additional and replacement accessories are available for your air fryer. For more information, contact **Customer Support** (page 23).

## Troubleshooting

Problem	Possible Solution
The air fryer will not turn on.	Make sure the air fryer is plugged in.
	Push the basket securely into the air fryer.
Food is not completely cooked.	Place smaller batches of food items into the basket. If the basket is overstuffed, then food will be undercooked.
	Increase cooking temperature or time.
Food is not crispy after air frying.	Spraying or brushing a small amount of oil on food can increase crispiness. See <b>Cooking Tips</b> (page 16).
French fries are not cooked correctly.	See <b>French Fries</b> (page 16).
Basket will not slide into the air fryer securely.	Make sure the basket is not overfilled with food.
White smoke or steam is coming out of the air fryer.	The air fryer may produce some white smoke or steam when you use it for the first time or during cooking. This is normal.
	Make sure the basket and the inside of the air fryer are cleaned properly and not greasy.
	Cooking greasy foods will cause oil to collect beneath the crisper plate. This oil will produce white smoke, and the basket may be hotter than usual. This is normal and should not affect cooking. Handle the basket with care.
Dark smoke is coming out of the air fryer.	Immediately unplug your air fryer. Dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact <b>Customer Support</b> (page 23).
Display shows Error Code "E01"	There is an open circuit in the temperature monitor. Contact <b>Customer Support</b> (page 23).
Display shows Error Code "E02"	There is a short circuit in the temperature monitor. Contact <b>Customer Support</b> (page 23).
Display shows Error Code "E03"	The air fryer's overheat protection has activated. Turn off and unplug the air fryer, then allow it to cool completely. If the display continues to show "E03", contact <b>Customer Support</b> (page 23).
Display shows Error Code "E04"	The air fryer has been plugged into a 220–240V outlet. Turn off and unplug the air fryer. <b>Only</b> use the air fryer with 120V, 60Hz outlets.
Display shows Error Code "E12"	The DC motor has failed. Contact <b>Customer Support</b> (page 23).

If your problem is not listed, please contact **Customer Support** (page 23).

# Federal Communication Commission Interference Statement – Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

## FCC SDOC Supplier's Declaration of Conformity

Arovast Corporation hereby declares that this equipment is in compliance with FCC requirements. The declaration of conformity can be found at <https://www.vesync.com/legal/compliance/fcc>

# Limited Warranty Information

<b>Product Name</b>	Cosori Iconic™ 6.5-Quart Smart Air Fryer
<b>Model</b>	CAF-SE601S-CUS
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
<b>Order ID</b>	
<b>Date of Purchase</b>	

### Five (5) Year\* Limited Consumer Product Warranty For COSORI ICONIC Air Fryer

"VESYNC" is a trade name used herein for the warranty providers. For products directly sold in the United States, the warranty is provided by AROVAST CORPORATION. For products directly sold in EU Member States, the warranty is provided by ETEKCITY GMBH. "VESYNC" is used for reference purpose only and do not alter or expand the territorial warranty obligations of either entity.

### FIVE (5) YEAR\* LIMITED CONSUMER PRODUCT WARRANTY FOR ICONIC AIR FRYER

VESYNC guarantees that the **Base Unit** of your air fryer will be free from material and workmanship defects for five (5) years from the original purchase date. The Base Unit **does not include the basket, crisper plate & silicone feet**. This warranty applies only in the region of original purchase and only if the product is used properly, following the instructions provided.

**\*This warranty does not affect any statutory rights under applicable consumer protection laws in your region, and where required, the warranty period will be extended in accordance with such laws.**

### YOUR LIMITED WARRANTY BENEFITS

During the above-mentioned warranty period, VESYNC may, at its sole discretion, (i) issue a refund, (ii) repair defects in materials or workmanship, or (iii) replace the product with one of equal or greater value.

### WHO IS COVERED?

This warranty applies only to the original purchaser and cannot be transferred to later owners, even if the product is resold during the warranty period. To claim warranty benefits, the original purchaser must provide proof of the defect and the purchase date.

### BE AWARE OF UNAUTHORIZED DEALERS OR SELLERS.

This warranty does not cover products bought from unauthorized sellers. It only applies to purchases from authorized dealers who follow VESYNC's quality standards. Products from unauthorized sellers may be counterfeit, used, defective, or not suited for your country. To ensure authenticity and warranty coverage, buy only from VESYNC or its authorized dealers.

If you're unsure about a seller or think you purchased from an unauthorized source, please contact Regional Customer Support.

### WHAT'S NOT COVERED?

**- The basket, crisper plate & silicone feet are eligible for a one (1) year limited consumer product warranty from the original purchase date of the ICONIC air fryer.**

- Normal wear and tear, including parts that naturally wear out over time.

- Altered or unreadable proof of purchase.

- Altered, removed, or unreadable model numbers, serial numbers, or production date codes.

- Products that have been modified from their original condition.

- Damage from not following the user manual's instructions.

- Damage caused by using unapproved accessories or peripherals.

- Damage from accidents, misuse, abuse, or improper maintenance.

- Repairs or services done by unauthorized providers or anyone other than VESYNC.

- Damage from commercial, rental, or unintended uses.

- Damage caused by animals, lightning, abnormal voltage, fire, natural disasters, transport or overly excessive usage of dishwasher.

- Any incidental or consequential damages, including indirect damage, temporary loss of use, or related out-of-pocket expenses.

- Damage or defects exceeding the product's original cost.

### Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Confirm that your product is still within the warranty period.

2. Have a copy of your invoice, order ID, or proof of purchase.

3. Keep your product—**do not** dispose of it before contacting us.

4. Reach out to Regional Customer Support based on the region of original purchase.

5. If your request is approved, return the product along with a copy of your invoice and order ID. Warranty service is available only in the region of original purchase and may vary by location.

**SOLE AND EXCLUSIVE REMEDY.**

THIS LIMITED WARRANTY IS VESYNC'S ONLY RESPONSIBILITY AND YOUR ONLY SOLUTION FOR ANY PRODUCT ISSUES OR WARRANTY CLAIMS. IT REPLACES ALL OTHER WARRANTIES. NO VESYNC EMPLOYEE OR ANY OTHER PARTY IS AUTHORIZED TO OFFER ADDITIONAL WARRANTIES BEYOND WHAT IS STATED HERE.

**DISCLAIMER OF LIMITED WARRANTIES.**

TO THE FULLEST EXTENT ALLOWED BY LAW, EXCEPT FOR THE WARRANTIES PROVIDED IN THIS POLICY, VESYNC PRODUCTS ARE SOLD "AS IS." VESYNC DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.

**LIMITATIONS OF LIABILITY.**

TO THE FULLEST EXTENT ALLOWED BY LAW, VESYNC, ITS AFFILIATES, AND THEIR EMPLOYEES, AGENTS, OR DIRECTORS ARE NOT LIABLE FOR:

(A) DAMAGES EXCEEDING THE PURCHASE PRICE OF THE PRODUCT, OR

(B) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES, EVEN IF VESYNC WAS AWARE OF THE POSSIBILITY OF SUCH DAMAGES.

VESYNC'S LIABILITY WILL NEVER EXCEED THE AMOUNT YOU PAID FOR THE DEFECTIVE PRODUCT, AND VESYNC IS NOT RESPONSIBLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL, OR PUNITIVE DAMAGES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS STATED IN THIS WARRANTY, VESYNC IS NOT RESPONSIBLE FOR ANY COSTS RELATED TO THE REPLACEMENT OR REPAIR OF PRODUCTS, INCLUDING LABOR, INSTALLATION, OR REMOVAL OF THE PRODUCT.

**OTHER RIGHTS YOU MAY HAVE**

SOME JURISDICTIONS DO NOT ALLOW (1) THE EXCLUSION OF IMPLIED WARRANTIES, (2) LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, OR (3) THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. IN THOSE CASES, THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. YOU WILL ONLY HAVE THE IMPLIED WARRANTIES REQUIRED BY APPLICABLE LAW.

THE LIMITATIONS ON WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE FULLEST EXTENT ALLOWED BY LAW.

THIS LIMITED WARRANTY PROVIDES SPECIFIC LEGAL RIGHTS, BUT YOU MAY HAVE ADDITIONAL RIGHTS DEPENDING ON YOUR JURISDICTION. PLEASE REVIEW LOCAL LAWS TO FULLY UNDERSTAND YOUR RIGHTS.

**U.S. CALIFORNIA RESIDENTS ONLY:**

The Warranty Period begins on the original date of delivery or pick-up.

**CHANGES TO THIS POLICY**

The terms and availability of this warranty may be updated at any time, but any changes will not apply to past claims.

**REGIONAL CUSTOMER SUPPORT**

Region	Email*
United States	support@cosori.com
United Kingdom	support.uk@cosori.com
France	support.fr@cosori.com
Deutschland	support.de@cosori.com
Italia	support.it@cosori.com
España	support.es@cosori.com

\*Please have your order invoice PDF or screenshot(s) ready so Customer Support can help you more efficiently.

## Customer Support

If you have any questions or concerns about your new product, please contact our Customer Support Team.

**Arovast Corporation**

1775 Flight Way, Suite 150  
Tustin, CA 92782  
USA

**Support Hours**

Mon–Fri, 9:00 am–5:00 pm PST/PDT

**Email:** support@cosori.com

**Toll-Free:** 1-888-402-1684

*\*Please have your order invoice PDF or screenshot(s) ready before contacting Customer Support.*

## Attributions

Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Google, Android, and Google Play are trademarks of Google LLC.

App Store® is a trademark of Apple Inc.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

iOS is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Arovast Corporation is under license. Other trademarks and trade names are those of their respective owners.



**Questions or Concerns?**

[support@cosori.com](mailto:support@cosori.com)

BL121824AC-M1\_CAF-XXX