 


Baby 5M

QUICK GUIDE

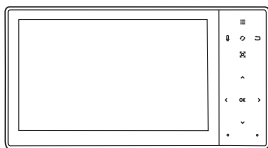

In the Box

Please consult this checklist for all parts.



Monitor X1



RESET pin X1



 
 
Power cable X1



Power adapter X1



Quick guide X1

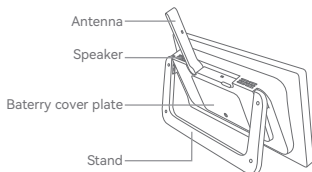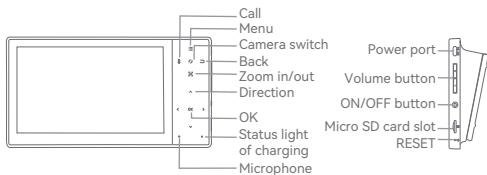

Name	Description
Power supply	DC 5V/2A
Status light of charging	● Orange light: Charging ● Green light: Fully charged
Call	Make a call after pressing the button
Menu	Access the settings and options
Camera switch	Press to switch between cameras bound to the screen
Back	Press to back up; Long press to stop playing music
Zoom in/out	Adjust the image magnification in 1X, 2X or 4X
Direction	Navigate and select options
OK	Confirm selections or wake the screen

Name	Description
Micro SD card slot	Micro SD card storage (up to 128GB)
RESET	Press with pin to reset the monitor
ON/OFF button	Long press 5 seconds to turn on/turn off the monitor
Volume button	Press to adjust the volume
Antenna	Adjust the angle to get better signals
Battery cover plate	Cannot be removed for individual charging, used for battery maintenance and environmental requirements (Factory specific batteries are required)

Monitor Using Tips

1 Pairing of camera and monitor

Power on the camera and the monitor, and they will automatically connect. If the connection fails, please follow the steps below to pair. The pairing is distance limited, please determine the appropriate distance according to the signal strength of the monitor.

• Bind the monitor and camera

1. Press the **Menu** button on the monitor, and select  > **Camera**.

Select **Camera 1** or **Camera 2** which you need to pair.

2. Long press the camera pairing button until you hear the prompt tone.
3. Press the **OK** button on the monitor to start pairing.
4. If you need pair 2 cameras, please repeat step 2~ step 4.

• Unbind the monitor and camera

 
1. Press the **Menu** button on the monitor, and select  > **Camera**.
2. Select **Camera 1** or **Camera 2** which you need to unbind.
3. Long press the **OK** button to release the binding.



2 Camera switching method

If you have added 2 cameras, the monitor will display 2 live views at the same time. If you want to set parameters or enable functions of one of the cameras, you need to select and switch to the camera first (the number shown in the  represents the selected camera).

On the home page, press **Camera switch** button to switch the camera between Cam1 or 2 if you have added 2 cameras. Press the **Menu** button after you select one camera and set parameters or enable functions according to your needs. You can also press **Zoom in/out** button to zoom in and zoom out after selection of camera.

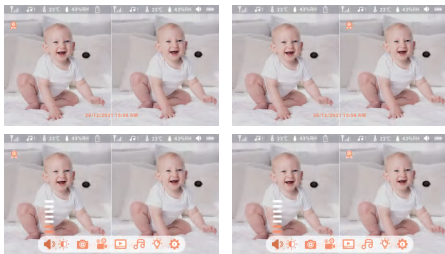

3 Rotate the camera

You can adjust the monitoring angle for better vision.

The **Direction** buttons on the monitor screen are available

when the camera is powered on. Press the **Direction** buttons to rotate the camera horizontally and vertically for better vision.

4 Photo & video

• Take a photo

You can take a photo when you want to capture an interesting scene of the baby. Press **Menu** button on the monitor, select  and press **OK** to take a photo.

• Record a video

You can record a video when you want to capture a meaningful moment for the baby. Press **Menu** on the monitor, select  and press **OK** to record a video.

• View the taken photos and recorded videos

 
1. Press the **Menu** button on the monitor, select  and press **OK** to enter the interface.
 2. Select the camera and date, then select the photo or video you want to view and press **OK** to enter preview mode.
- * Press **OK** to play or pause the video in the preview mode.
- * Press the **Back** button to the quit preview or back to the main menu.



5 Play music

You can use the monitor to play music when your baby needs to be soothed. There are various soft music to select.

Press the **Menu** button on the monitor screen, select  and press **OK** to enter the music interface. You can select different music, change the music cycle mode, or adjust the music volume.

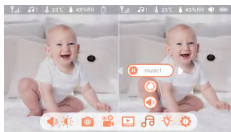

6 Feeding reminder

Remind you to feed your baby when you are too busy, or when you want to give your baby a regular diet.

1. Press the **Menu** button on the monitor, and select  > **Feeding Reminder**.
2. Select on or off to open or close feeding reminders. You can set up to 10 feeding times one day. And when the set time is up, a feeding alarm will appear on the monitor screen.
3. Press **UP** and **DOWN Direction** buttons to select between 10 time options, and press **OK** to start the time setting.

 


7 Smart care

Note: This function is only available when the camera supports it.

1. Press **Menu** on the monitor and select  > **Smart Care**.
2. Press **UP** and **DOWN Direction** buttons to select options between several smart detections, and alarm volume, then press **OK** to save.
3. When set up one detection mode, please press **LEFT** and **RIGHT Direction** buttons to change options, and press **UP** and **DOWN Direction** buttons to adjust the sensitivity.

* You can select different sensitivity according to your needs. Low refers to low sensitivity, and high refers to high sensitivity.

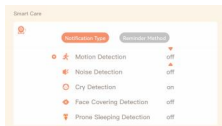

8 Temperature and humidity detection

Note: This function is only available when the camera supports it.

You can monitor the temperature and humidity of your baby's room in real-time. When the temperature and humidity are out of range, you will receive the alarms immediately, so that you can take measures.

1. Press the **Menu** button on the monitor, and select  > **Temperature and humidity**.
2. Press **UP** and **DOWN Direction** buttons to select options between Temperature Range, Humidity Range and Out of range Reminder, then press **OK** to set up.
3. Press **LEFT** and **RIGHT** buttons to change options, then press **UP** and **DOWN** buttons to change values and units.

In the Out of range Reminder option, select to turn on or off the alarm when the temperature and humidity are out of range.



9 Safety protection

• Wi-Fi network channel

If you turn off the Wi-Fi network channel, the App will not be able to view the camera.

- **Visited records**

You can also view the visited records as all visits through the App will be recorded.



10 Night light

Note: This function is only available when the camera supports it.

You can turn on the night light if needed, and you can set lighting mode and light color.

Press the **Menu** button, and select  > **Light** > **Night light**.



11 General settings

- **Set up brightness**

1. Press **Menu** on the monitor, select  and press **OK** to enter.
2. Press **UP** and **DOWN** buttons to adjust brightness.

- **Set up time:**

1. Press **Menu** on the monitor and select  > **Date and time**.
2. Press the **Direction** buttons to change the date, time, and time displaying mode.

• Set up language:

1. Press **Menu** on the monitor and select  > **Language**.
2. Select the language you need.

• Set up sleep mode:

You can set up sleep mode to increase standby time.

1. Press **Menu** on the monitor and select  > **Sleep mode**.
2. In default mode(Audio off), the audio from the camera can not be heard after the display is off, so the standby time is long. In Audio on mode, the audio from camera can still be heard even after the screen is turned off, and you can choose the time(1, 5, 10, 30 or 60min), but the standby time is shorter. In Always on mode, the monitor remains on unless the power button is pressed, with short standby time.

• Turn on and off status indicator:

If you turn on the status indicator, you can get the working status of the camera. You can also turn off the status indicator if you think it will affect your baby's sleep.

Press **Menu** on the monitor and select  >  **Open** (Or Press the **Menu** button, select  > **Light** > **Status light**.).

• SD card:

1. Press **Menu** on the monitor and select  > **SD card management**. Then you can view the total capacity and remaining capacity of your SD card.
2. (Optional) You can format the SD card as you needed, but make sure that the important data is backed up.

• Upgrade:

You can upgrade your camera when the upgrade alarm appears. Or press **Menu** on the monitor and select  > **Device information** to check whether there is an upgrade.

• Low battery alarm:

When the monitor is low on battery, the low battery alarm will appear on the monitor screen. Please charge the monitor as soon as possible.

FAQs

Q: What should I do if the monitor is stuck?

A: Press the **RESET** button or long press the **ON/OFF** button to turn on the monitor again.

Q: How can I change the wallpaper of monitor screen?

A: Press **Menu** on the monitor and select  > Wallpaper.

Q: How can I upgrade the version of the monitor?

A: Firstly, add the camera to the App. Then press **Menu** on the monitor and select  > **Device Information**, then check for available upgrades.

Q: The monitor cannot be previewed properly?

A: Check whether the monitor has connected to the camera. If not, pair the camera and the monitor firstly.

Q: Why the camera or the monitor cannot identify the Micro SD card?

A: Confirm whether the Micro SD card is normally available and the format is FAT32.

Tech Specs

Model	Baby 5M
Resolution	1024(H) x 600(V)
Battery capacity	5200mAh
Working temp	0°C to 40°C
Local storage	Micro SD card (up to 128GB)
Input power	DC 5V / 2A
Wi-Fi Halow	866MHz (Max. power<14dBm) (For CE)
	905-925MHz (Max. power<30dBm) (For FCC)

Certifications



Don't throw batteries or out of order products with the household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collect of garbage proposed by your city.



Hereby, we declare that the radio equipment type **Baby 5M** is in compliance with the Directive 2014/53/EU.

Specific precautions for EMC

This is a Class B product, in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

RF EXPOSURE INFORMATION

This device meets the EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

Power Adapter Safety

1. The power plug is intended to serve as a disconnect device. Do not drop or cause an impact to the power adapter.
2. If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
3. Do not touch the device or the power adapter with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.

Note: The adapter is compatible with LPS.

Child's Safety

1. Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous.
2. The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

Operation Requirements

1. Use the device under allowed humidity and temperature conditions.
2. Do not aim the device at strong light sources (such as lamplight, and sunlight) when focusing it, to avoid reducing the lifespan of the CMOS sensor, and causing overbrightness and flickering.
3. Observe local laws and regulations, and respect the privacy and legal rights of others.

Battery Safety

1. Your device contains a rechargeable lithium-ion battery and should be replaced only by a qualified service provider. Do not disassemble, open, crush, bend, deform, puncture, shred or attempt to access the battery in your device.
2. Do not modify or remanufacture the battery, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids, expose to fire, explosion or other hazard.
3. Do not use a battery if its case appears damaged, swollen, or compromised. Examples include, but are not limited to, leaking, odors, dents, corrosion, rust, cracks, swelling, melting, and scratches.
4. Do not put the battery in trash that is disposed of in landfills. When disposing of the battery, comply with local ordinances or regulations.

Industry Canada (ISED) Compliance Statement

This device complies with ISED's licence-exempt RSSs.

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED Statement

This device compliance with CAN ICES-003 (B)/NMB-003(B) CAN ICES-003 (B)

Déclaration d'ISED Canada

Cet appareil est conforme à la norme CAN ICES-3 (B)/ NMB-3 (B).

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF EXPOSURE WARNING

FCC Radiation Exposure Statement: This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

© 2026. All rights reserved. All trade names are registered trademarks of respective companies. Apple, the Apple logo, iPhone are trademarks of Apple Inc. registered in the U.S. and other countries. Google, the Google logo, Android are trademarks of Google Inc. App Store is a service mark of Apple Inc. Google Play is a service mark of Google Inc.

V1.0 202603