 


4.0" Touch Screen DIGITAL CAMERA

Instruction Manual

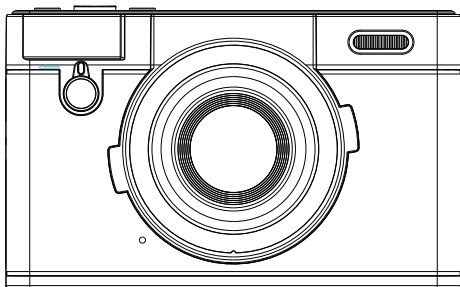

Ver: LY01

Please read this manual carefully before use
Please keep this manual safe for future reference

Contents

About the camera	1
Quick Start Guide	4
System Settings.....	10
Photo Mode & Setting.....	11
Video Mode & Setting.....	13
Other Modes.....	15
Using the Wi-Fi function.....	16
For Your Safety.....	19
Technical Notes	22
FCC Warning.....	23

About the camera

► Read this first

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

► Specification

Still Image Size (Horizontal x Vertical):

64M 9248x6913(4:3); 64M 10560x5921(16:9); 48M 8000x6000(4:3);
48M 9120x5129(16:9); 36M 6928x5184(4:3); 21M 5248x3930(4:3);
21M 6144x3454(16:9); 16M 4640x3480(4:3); 12M 4000x3000(4:3);
8M 3264x2448(4:3); 5M 2592x1944(4:3)

Still image format: JPEG

Movie size (Horizontal x Vertical):

4K 3840x2160; 2K 2560x1440; FHD 1920X1080; HD 1280X720

Movie format: MOV

4.0 inch Touch Screen

16X digital zoom

Multipoint autofocus

Digital anti-shake

Face detection

Continuous shooting

Self-timer

Wifi Fuction

Built-in flash


Built-in microphone

Built-in speaker


Built-in 32MB flash memory, Up to 256GB Micro SD card.

Design and specification are subject to change without notice.


About the camera

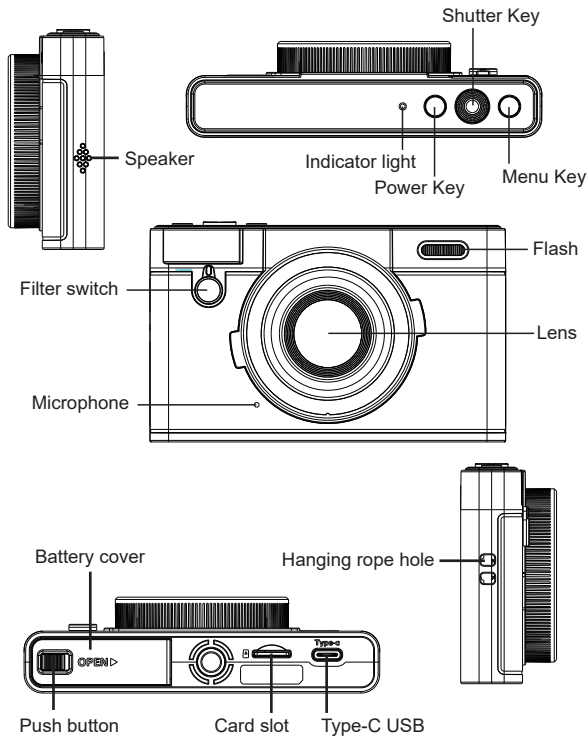

About the camera

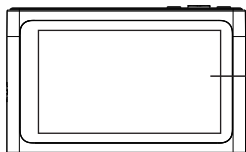


4.0 inch Touch Screen

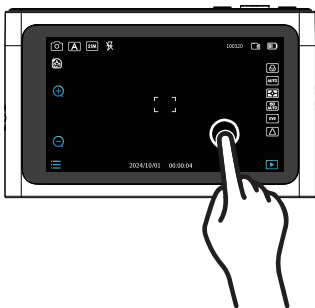


Touchscreen operation:

- Tap to select/highlight an item
- Tap the selected item again to enter its submenu.
- Swipe up, down, left, or right to browse the menu.

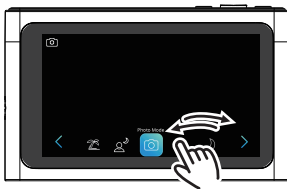

Quick Start Guide

► Inserting the battery and SD card

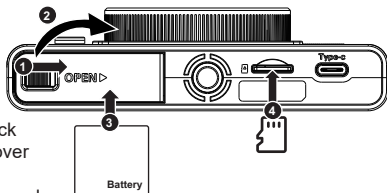

1. Unlock the cover lock
2. Open the battery cover
3. Insert the Battery
4. Insert the micro SD card

To remove the memory card/ battery

Memory card: push the memory card in once to eject the memory card.



Battery: Slide the battery eject lever.

! Format the memory card

After inserting the card, briefly press the [Power] button to turn on the camera. The screen will display [Card is not formatted.]

→ A pop-up window will automatically appear [Format? Yes/No]

→ Click [Yes] → Start using the camera.

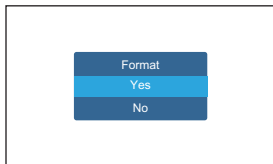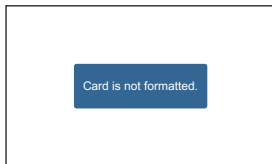

Quick Start Guide

● Setting the Language

Tap the [≡] icon in the bottom left corner → swipe left or right to find the [⚙] icon → swipe up or down to find [Language] → Click [Language] → swipe up or down to find the language you want → Click it.

[繁體中文 / Español / 简体中文 / Português / 日本語 / Italiano / 한국어 / Deutsch / English / Français]

● Setting the Date&Time

Tap the [≡] icon in the bottom left corner → swipe left or right to find the [⚙] icon → swipe up or down to find [Date & Time] → Click [Date & Time] → [Year-Month-Day-Hour-Minute-Second] → Click it. (Each click increments the number by 1; it cannot decrease. This cycle repeats continuously.)



Year	Cycle from 2026 to 2039	Hour	Cycle from 0 to 23
Month	Cycle from 1 to 12	Minute	Cycle from 0 to 59
Day	Cycle from 1 to 31	Second	Cycle from 0 to 59

● Setting the [Macro] 📷

In photo mode, tap the [≡] icon in the bottom left corner → swipe left or right on the screen to find [Macro] → [Macro On/Macro Off] → Click [Macro On]

● Format the memory card


Tap the [≡] icon in the bottom left corner → swipe left or right to find the [⚙] icon → swipe up or down to find [format] → tap [format] → tap [Yes].

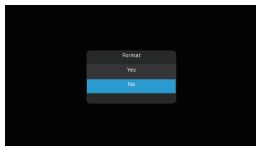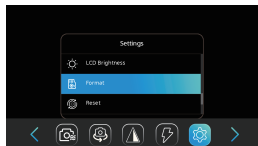

Quick Start Guide

● Setting the Filters

Click the [☰] icon in the bottom left corner → You will see [Filter] → Swipe up or down to find the filter you want → Click it → Enter the desired filter and take a photo.

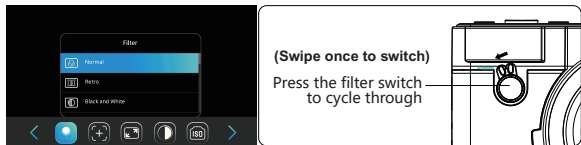


● Quickly adjust the filter

Press the filter switch to cycle through:


[Normal→Retro→Black and White→Sepia→Vivid→Lomo→Sketch→Colored Pencils→Negative→Dreamy→Salon→Japanese Style→Dopamine→Cream→Warm→Cool→Gothic→Single Red→Single Yellow→Single Blue→Single Green]

● Setting the Flash

Tap the [☰] icon in the bottom left corner → swipe left or right to find the [Flash] icon → In the Photo mode, you can see [Flash? Off/On/Auto]; In the Video mode, you can see [Flash? On/Off]

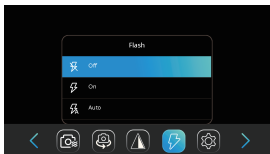

[Photo mode]

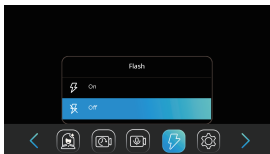


[Video mode]

Quick Start Guide

► Shooting still images/movies


Shooting still images 📷

1. Press the [M] button → swipe the screen → select [Photo Mode] to enter photo mode.
2. Half-press the shutter button to autofocus
3. Fully press the shutter button to take the photo.

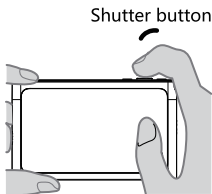

Shooting movies 🎬

1. Press the [M] button → swipe the screen → select [Video Mode] to enter video mode.
2. Half-press the shutter button to autofocus
3. Press the shutter button fully to start recording.
4. Press the shutter button again to stop recording.

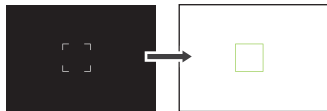


[White focus frame]

[Green focus frame]

Using the Zoom

T: Capture a bigger subject.


W: Capture a wider view

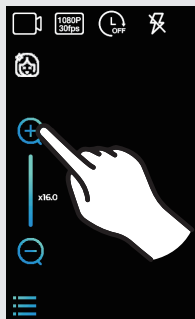


Quick Start Guide

► Viewing images

Click the [▶] icon in the bottom right corner → Enter the interface:

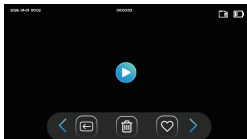


[Video]

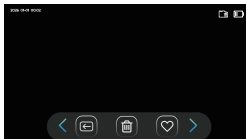

[Photo]


Click [➤] to view the next file, click [➤] to view the previous file.

Clicking [🖼️] will show all 12 files at once.

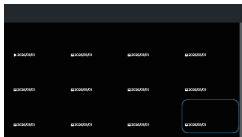


► Collect images

Click the [♥] icon → you can see 3 options [Favorite Single/Favorite All/Reset] → Click [Favorite Single] to favorite this file, click [Favorite All] to favorite all files, click [Reset] to reset favorites.

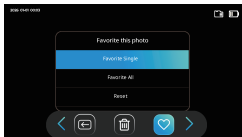


► Delete images

Click the [🗑️] icon → you can see 2 options [Delete Single/ Delete All] → Click [Delete Single] to delete a single file, click [Delete All] to delete all files.

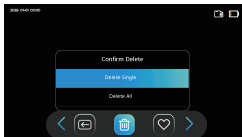

Quick Start Guide

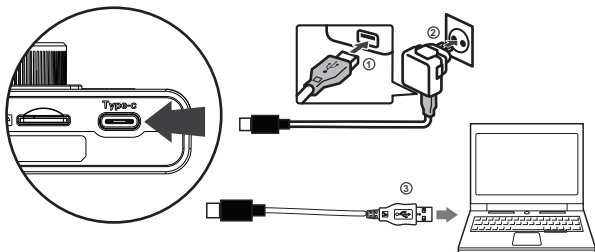

► Charging the battery


Turn off the camera while charging the battery.

1. Connect the camera to the AC Adaptor, using the dedicated USB cable(Supplied).
2. Connect the AC Adaptor to the wall outlet.
3. Connect the camera to the computer using the dedicated USB data cable to charge it.

► To charge by connecting to a computer


The battery can be charged by connecting the camera to a computer using the dedicated USB cable.

Connect the camera to the computer using a data cable → Briefly press the Power button to power on → Three options will appear → Select [Charge].

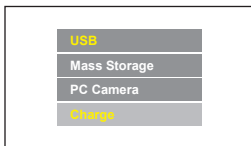

System Settings


Tap the [≡] icon in the bottom left corner → swipe left or right to find the [⚙] icon → Settings can be configured

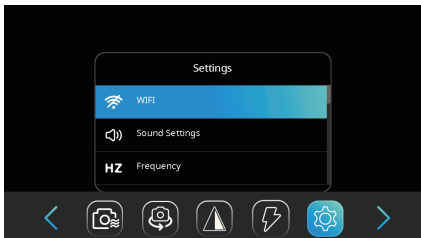

Menu Name	Explanation
Wifi	Off, On
Sound Settings	Off, Low, Middle/High
Frequency	50 Hz, 60 Hz
Auto Poweroff	Off, 5Minutes, 3Minutes, 1Minute
Screen Saver	Off, 1Minute, 3Minutes, 5Minutes
Language	繁體中文, Español, 简体中文, Português, 日本語, Italiano, 한국인, Deutsch, English, Français
Date & Time	YY, MM, DD, hr, min, sec
LCD Birghtness	2, 1, Normal, -1, -2
Format	Yes, No
Reset	Yes, No
Firmware Version	Current version number

Photo Mode & Setting

Press the [M] button → swipe the screen → select [Photo Mode] to enter photo mode:

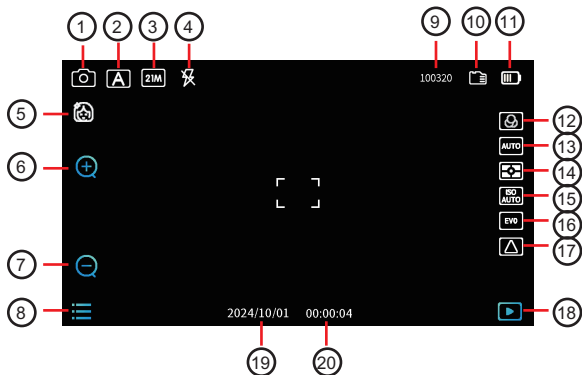

- | | |
|--------------------------------------|---|
| 1. Photo Mode | 11. Current battery level or battery status |
| 2. Current selected scene | 12. Current Filter |
| 3. Current photo resolution settings | 13. Current White Balance |
| 4. Current LED Light settings | 14. Current Metering Mode |
| 5. Current Face Beauty | 15. Current ISO settings |
| 6. Zoom in | 16. Current exposure value |
| 7. Zoom out | 17. Image Sharpness |
| 8. Setting | 18. Playback mode |
| 9. Recordable page count | 19. Current date |
| 10. SD card inserted | 20. Current time |


Photo Mode & Setting

Tap the [≡] icon in the bottom left corner → Settings can be configured

Menu Name	Explanation
Filter	Normal, Retro, Black and White, Sepia/Vivid, Lomo, Sketch, Colored Pencils, Negative, Dreamy, Salon, Japanese Style, Dopamine, Cream, Warm, Cool, Gothic, Single Red, Singe Yellow, Singe Bule, Singe Green
Metering Mode	Average, Spot, Center
Image Size	64M 9248x6913(4:3); 64M 10560x5921(16:9); 48M 8000x6000(4:3); 48M 9120x5129(16:9); 36M 6928x5184(4:3); 21M 5248x3930(4:3); 21M 6144x3454(16:9); 16M 4640x3480(4:3); 12M 4000x3000(4:3); 8M 3264x2448(4:3); 5M 2592x1944(4:3)
White Balance	AWB, Daylight, Cloudy, Tungsten Lamp, Fluorescent
ISO	Auto, 100, 200, 400, 800, 1600
Exposure	+0.7EV, +0.3EV, +0.0EV, -0.3EV, -0.7EV, -1.0EV, -1.3EV, -1.7EV, -2.0EV, -2.3EV, -2.7EV, -3.0EV
Face Beauty	On, Off
Macro	Macro On, Macro Off
Continuous Shot	Single, 3 Shots, 5 Shots, 10 Shots
Date Imprint	Off, Date, Date/Time
Self-timer	Self-timer Off, Self-timer 2sec, Self-timer 5sec, Self-timer 10sec
Sharpness	Soft, Standard, Starp
Flash	Off/On/Auto

Video Mode & Setting


Press the [M] button → swipe the screen → select [Video Mode] to enter video mode:

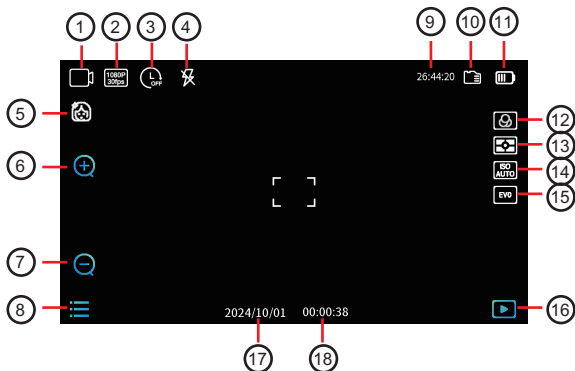

- | | |
|--------------------------------------|---|
| 1. Video Mode | 10. SD card inserted |
| 2. Current video resolution settings | 11. Current battery level or battery status |
| 3. Time-lapse Video | 12. Current Filter |
| 4. Current LED Light settings | 13. Current White Balance |
| 5. Current Face Beauty | 14. Current Metering Mode |
| 6. Zoom in | 15. Current ISO settings |
| 7. Zoom out | 16. Playback mode |
| 8. Setting | 17. Current date |
| 9. Remaining recording time | 18. Current time |

Video Mode & Setting



Tap the [≡] icon in the bottom left corner → Settings can be configured

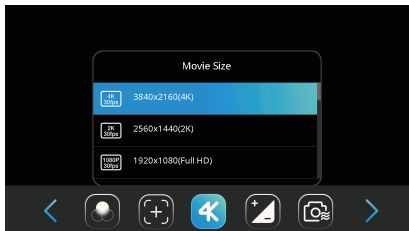

Menu Name	Explanation
Filter	Normal, Retro, Black and White, Sepia/Vivid, Lomo, Sketch, Colored Pencils, Negative, Dreamy, Salon, Japanese Style, Dopamine, Cream, Warm, Cool, Gothic, Single Red, Singe Yellow, Singe Bule, Singe Green
Metering Mode	Average, Spot, Center
Movie Size	4K 3840x2160; 2K 2560x1440; FHD 1920X1080; HD 1280X720
Exposure	+0.7EV, +0.3EV, +0.0EV, -0.3EV, -0.7EV, -1.0EV, -1.3EV, -1.7EV, -2.0EV, -2.3EV, -2.7EV, -3.0EV
Date Imprint	Off, Date, Date/Time
Face Beauty	On, Off
Time-lapse Video	Off, 1 fps, 2 fps, 5 fps
Recording Audio	On/Off
Flash	On/Off


Other Mode

Press the [M] button → swipe the screen, You can see these eight shooting modes

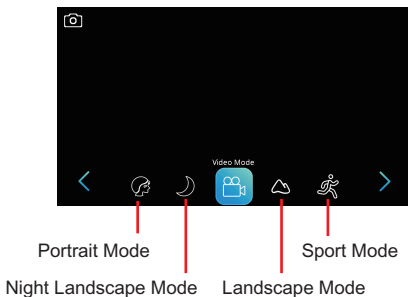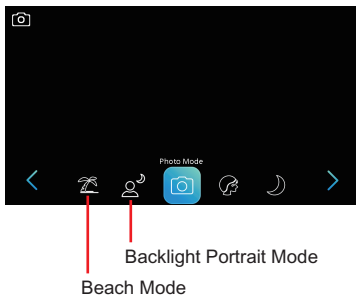

Using the Wi-Fi Function

1. Download APP Installing iMEKE on your smartphone/ tablet pc

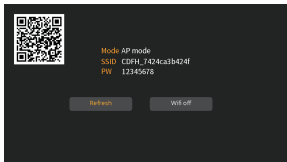

Android OS

Available ways to download & install "iMEKE" APP.

1. Scan the QR code in the upper left corner of the screen.
2. Search "iMEKE" on Google Play .

IOS



Available ways to download & install "iMEKE" APP.

1. Scan the QR code in the upper left corner of the screen.
2. Search "iMEKE" on App Store

! Attention:

- Android 6.0 or higher is required.
- IOS 8.0 or higher is required.
- You may not be able to download "iMEKE" from Google play or App Store depending on the country or the region. In that case, connect to the seller for help.



! Notes:

- If "iMEKE" is already installed in your smartphone, update the software to the latest version.
- The Wi-Fi function described here is not guaranteed to work on all smartphones and tablets.
- The Wi-Fi function of the camcorder cannot be used connected to a public wireless LAN.
- The operation methods and display screens for the application are subject to change without notice by future upgrades.

Using the Wi-Fi Function


2. Connect to a Wi-Fi network

- Tap the [☰] icon in the bottom left corner → swipe left or right to find the [⚙️] icon → swipe up or down to find [Wifi] → Click [Wifi] → Click[On] → You can see:

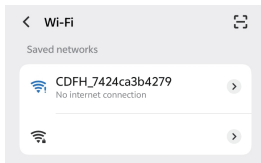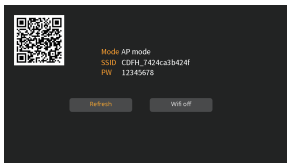


- On smartphone, select [Settings] → select [WLAN] → Select the SSID of the camcorder and enter password displayed on camcorder to connect.
- Go back to home and start up "iMEKE" APP.

Connect Camera → Enter camera

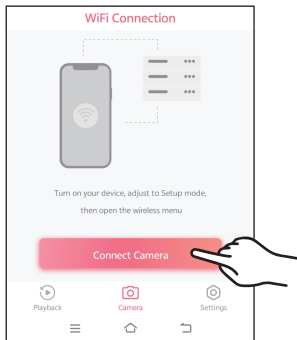

Using the Wi-Fi Function

3. Using your smartphone as a wireless remote commander

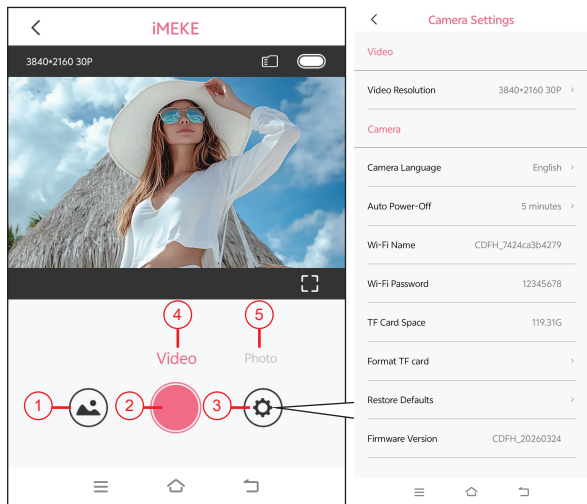


- ①: Can be downloaded to smartphones/tablets, or deleted.
- ②: Watch the live view images and remote control the camcorder to take photos and record movies.
- ③: **Setting** the camera
- ④: **Switch** Video Camera
- ⑤: **Switch** Photo Camera

For Your Safety



Indicator light description

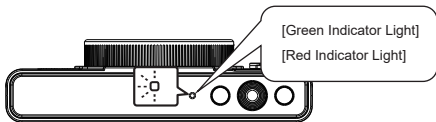

1. [Operation Indicator]

The green indicator light remains constantly on after power-on; it will flash when taking photos or recording videos.

2. [Charging Indicator]

The red indicator light remains constantly on when the device is connected to the charger.

The red indicator light will gradually turn off after the battery is fully charged.

! Note: If the battery is not installed or has poor contact while charging, the charging indicator light will flash frequently.



NOTES for Using the camera

- Do not drop the camera, impact it with hard objects (such as rocks), or throw it into water.
- If moisture (such as water droplets) adheres to the exterior of the camera or the inside of the battery cover, wipe it clean immediately with a soft, dry cloth.
- If foreign objects adhere to the exterior of the camera or the inside of the battery cover, remove them immediately with a hairdryer or a soft cloth.
- Do not expose the camera to cold environments or temperatures of 40°C (104°F) or higher for extended periods.
- Do not use the camera in hot springs.

For Your Safety

To prevent property damage or injury to yourself or others, please read the "Safety Instructions" in full before using this product.



WARNING

- Do not disassemble or modify this product. Never touch any internal parts exposed due to malfunction or other accident. Failure to follow these precautions may result in fire, burns, or other injuries.
- If you notice any abnormalities, such as smoke, heat, or unusual odor emanating from the product, immediately disconnect the battery or power source. Continued operation may cause fire, burns, or other injuries.
- Do not handle plugs with wet hands. Failure to comply with this precaution may result in fire or electric shock.
- Do not use this product in the presence of flammable dust or gases (such as propane, gasoline, or aerosols). Failure to comply with this precaution may result in an explosion or fire.
- When using this product with batteries, chargers, AC adapters, and USB cables, do not damage, modify, forcibly pull or twist the cables, place them under heavy objects, or expose them to high temperatures or flames. Failure to comply with these precautions may result in fire or electric shock.



CAUTION

- If this product will not be used for an extended period, please remove the batteries and disconnect the AC adapter. Failure to follow this precaution may result in fire or product malfunction.
- Do not place this product in environments where it will be exposed to extremely high temperatures for extended periods, such as inside a closed car or under direct sunlight. Failure to take these precautions may result in fire or product malfunction.

For Your Safety



DANGER for Batteries

- Do not handle the battery improperly. Failure to follow these precautions may result in battery leakage, overheating, cracking, or fire:
 - Use only rechargeable batteries approved for use in this product.
 - Do not expose the battery to flames or excessive heat.
 - Do not disassemble.
 - Do not short-circuit the battery by touching it to a necklace, hairpin, or other metal object.
 - Do not expose the battery or the product into which it is inserted to strong physical impacts.
- Please charge the battery using the specified method. Failure to follow these precautions may result in battery leakage, overheating, cracking, or fire.



WARNING for Batteries

- Keep batteries out of reach of children. If a child swallows a battery, seek immediate medical attention.
- Do not immerse this product in water or expose it to rain. Failure to take these precautions may result in fire or product malfunction. If the product gets wet, dry it immediately with a towel or similar material.
- If you notice any abnormal changes in the battery, such as discoloration or deformation, stop using it immediately. If the battery cannot be charged within the specified time, stop charging. Failure to follow these precautions may result in battery leakage, overheating, cracking, or fire.
- Insulate the battery terminals with tape before handling. Contact with metal objects may cause overheating, cracking, or fire.
- Please recycle or dispose of the battery according to local regulations.
- If battery fluid comes into contact with skin or clothing, immediately flush the affected area with plenty of water. Failure to take this precaution may result in skin irritation.

Technical Notes

Troubleshooting:

If your camera is not working as expected, please check the list of frequently asked questions below before contacting your retailer.

Question	Causes/Solutions
Camera cannot be turned on	- Battery depleted. - Battery installed incorrectly.
Camera shuts down without warning	- The camera automatically shuts off to save power (automatic shutdown function). - The camera and battery may not function properly in low temperatures. - The camera is overheating internally. Please turn off the camera and allow it to cool down before trying to turn it back on.
The monitor displays no image.	-The camera is off. -The camera automatically shuts down to save power (automatic power-off). -During this period, only one display will be on.
Camera gets hot	- The camera may get hot during prolonged use (such as filming) or in high-temperature environments; this is not a malfunction.

Compatible Memory Cards

This camera supports Micro SD (TF) memory cards.

- It is recommended to use a TF memory card with a speed rating of 6 or higher for movie recording. Using a lower speed rating memory card may cause movie recording to stop unexpectedly.
- If you are using a card reader, please ensure it is compatible with your memory card.
- Please contact the manufacturer for information on features, operation, and usage limitations.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.