

SKYLARK



DOMO (M) Bluetooth® Speaker

FCC ID: 2ARRB-DOMOM090

IC: 20353-DOMOM090

IMPORTANT SAFETY INSTRUCTIONS

WARNING

This speaker is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User Guide, safe to use. Even so, always read the instructions in this User Guide carefully before using the device. Listen at reasonable volumes for reasonable periods of time.

Be careful not to adjust the volume continuously upwards as your hearing adapts.

- Do not turn up the volume so high that you can't hear what is around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- For your safety, avoid distractions from music while in traffic or other potentially dangerous environments.
- Leaving a battery in an extremely high-temperature environment can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Do not shock the battery at a high altitude.

CAUTION

- Do not expose the speaker to excessive heat.
- Do not drop your speaker.
- The speaker shall not be exposed to dripping or splashing water.
- Do not allow your speaker to be submerged in water.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives.
- If cleaning is required, use a soft cloth, dampened if necessary with a small amount of water or mild diluted soap.
- The integrated battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

DOMO (M)

Bluetooth® Speaker

- Auracast™ Party Mode
- up to 50 ft (15 m) Wireless Range
- Up to 20 Hours Play Time
- Water and Dust Resistant (IP67)
- Bluetooth® 6.0

SUPPORT

For setup assistance, troubleshooting, and product information, visit [SKYLARK.COM](https://www.SKYLARK.COM).

PACKAGE CONTENTS

- DOMO (M) Bluetooth® Speaker
- Silicone Strap
- USB-C Charging Cable
- User Guide

1. SPEAKER OVERVIEW.....5

2. CHARGING.....7

3. BLUETOOTH PAIRING AND RECONNECTION...7

4. AURACAST™ / PARTY MODE.....8

5. OPERATIONS.....9

6. LED STATUS INDICATORS.....10

7. HELP.....11

 
8. TECHNICAL SPECIFICATIONS.....12

9. GENERAL INFORMATION.....14




1. SPEAKER OVERVIEW

Top Side

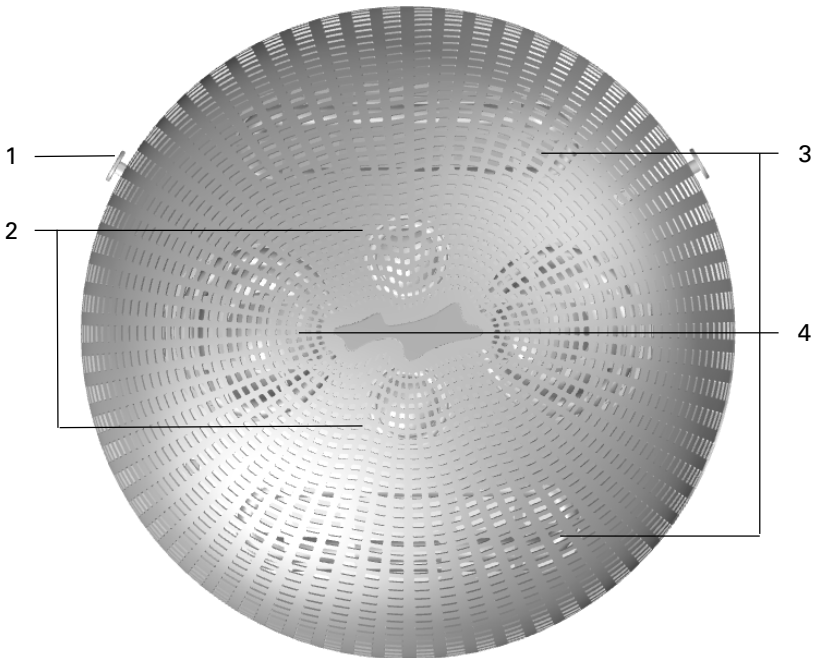

 1. Strap buttons for attaching the silicone strap.
2. Tweeters x 2
3. Passive radiators x 2
4. Drivers x 2

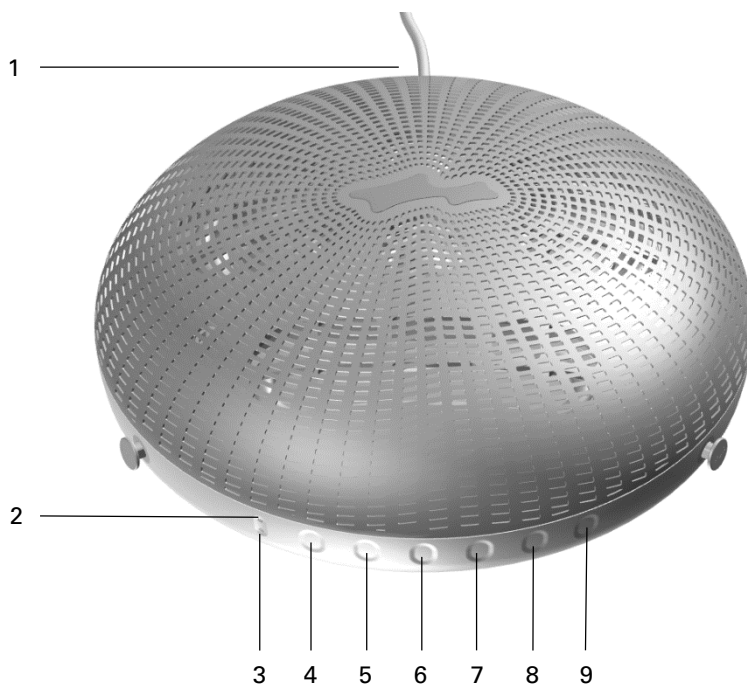

1. USB-C charging port
2. LED 1 (Power)
3. LED 2 (Bluetooth / Auracast™) Touch buttons:
4.  Power On/Off
5.  Bluetooth Pairing
6.  Auracast™ / Party Mode pairing
7.  Play/Pause/Next/Previous
8.  Volume down
9.  Volume up

2. CHARGING

When the speaker is powered off, connect the USB-C charging cable. LED 1 flashes orange while charging and turns solid white when fully charged.

NOTE

To maintain battery performance, fully charge the speaker at least once every 3 months.

Do not expose DOMO (M) to water or liquids while charging.

3. BLUETOOTH PAIRING AND RECONNECTION

Touch  for 2 seconds to turn on DOMO (M). If a previously connected device is nearby, the speaker will reconnect automatically.

AUTOMATIC PAIRING

- If a previously connected device is nearby, DOMO (M) will reconnect automatically.
- If no device is available, select “SKYLRK DOMO (M)” from the Bluetooth menu on your device.
- When connected, LED 2 turns solid blue and you will hear a voice prompt.

PAIRING A NEW DEVICE

If the speaker is currently connected and you want to switch to another device:

Touch  for 2 seconds to enter pairing mode.

- LED 2 will flash blue rapidly, indicating the speaker is ready to pair.
- Select “**SKYLRK DOMO (M)**” from the Bluetooth menu on your device.
- When connected, LED 2 turns solid blue and you will hear a voice prompt.

4. AURACAST™ / PARTY MODE

Auracast™ allows multiple compatible speakers to play from the same audio source.

Starting a Party (Broadcasting Audio)

- 1) Connect DOMO (M) to your Bluetooth device.
- 2) Touch  for 3 seconds.
 - You will hear a voice prompt.
 - LED 2 will blink white, indicating Auracast™ mode is active.
- 3) On the second speaker, touch  once to join.
- 4) When connected successfully, LED 2 turns white on the second speaker and the LED 2 on the broadcasting speaker keeps blinking white for other speakers to join.

Your speaker remains in Auracast™ / Party Mode, allowing additional speakers to join by repeating step 3 above.

Exiting Auracast™ / Party Mode

To stop broadcasting, touch  for 3 seconds. You will hear a voice prompt, and LED 2 changes from white to blue, indicating the pairing status.

Join an Existing Party

Touch  once to search for and join an available Auracast™ broadcast.

5. OPERATIONS

Task	Operation
Power on	Touch  for 2 seconds
Power off	Touch  for 2 seconds
Pairing	Touch  for 2 seconds
Play/Pause	Touch  once
Next song	Touch  for 1 second
Previous song	Touch  for 3 seconds
Volume up	Touch  once
Volume down	Touch  once
Auracast™ / Party Mode	Touch  for 3 seconds
Voice assistants	Touch both  and  once at the same time

SYSTEM RESET

- 1) Power on DOMO (M) by touching  for 2 seconds.
- 2) With the speaker powered on, touch both  and  for 5 seconds.

When the reset is successful, the speaker will sound **“Power On”**.

VOICE PROMPTS

The speaker provides corresponding voice prompts to confirm the operations described above.



6. LED STATUS INDICATORS

Status	LED 1	LED 2
Power off	Off	Off
Power on	White	-
Low Battery	Flashes Orange (0.5s on / 2s off)	-
Battery Charging (0 – 33%)	Flashes Orange (0.2s on / 0.8s off)	-
Battery Charging (34% – 67%)	Flashes Orange (0.4s on / 0.6s off)	-
Battery Charging (68% – 100%)	Flashes Orange (0.8s on / 0.2s off)	-
Battery Fully Charged	White	-
Bluetooth Pairing	-	Flashes Blue (once every 0.5s)
Bluetooth Pairing Successful	-	Blue
Auracast™ / Party Mode Pairing	-	Flashes White (1s on / 1s off)
Auracast™ / Party Mode Pairing Successful	-	Solid white on joined speakers
Party Mode - Select broadcasting in loop	-	Flashes White (1s on / 1s off) once
Exit Auracast™ / Party Mode	-	White off
Firmware updating	Flashing White (0.5s on / 0.5s off)	-
System Reset	White and then Off	White and then Off



7. HELP

The speaker does not turn on.

- The battery level is too low. Recharge your speaker (see section 2).

The speaker does not connect with the Bluetooth device.

- Ensure the Bluetooth function of the Bluetooth device has been turned on.
- Ensure the Bluetooth function of the previously connected device has been turned off.
- Ensure you follow the instructions in this User Guide to connect the speaker (see section 3).

The speaker keeps disconnecting.

- The battery level is too low. Recharge your speaker (see section 2).
- Ensure the speaker and Bluetooth device are operated within range.
- Remove the wireless speaker from the pairing list and connect them with the Bluetooth device again.

Poor audio quality.

- Ensure the speaker and Bluetooth device are within range.
- Remove the wireless speaker from the pairing list and reconnect the speaker to the Bluetooth device.

The music cannot be heard.

- Adjust the speaker's volume (see section 5).

Music plays on my Bluetooth device instead of through the speaker.

- Check on your Bluetooth device if you have selected to listen to music through the speaker.

For the most current guide, safety info, and troubleshooting, visit www.SKYLARK.com/support

8. TECHNICAL SPECIFICATIONS


RF frequency bands	2.402 – 2.480 GHz
RF transmission power	< 12 dBm (for Europe)
Bluetooth profile	A2DP (Advanced Audio Distribution Profile), AVRCP (Audio Video Remote Control Profile) and PBP (Public Broadcast Profile)
Bluetooth version	6.0
Battery	Lithium-ion, 11.1 V, 4900 mAh, 3S1P
Charging type	USB-C, DC 5/9/15/20 V, 3 A max
Output power	Up to 90 W
Music time	Up to 20 hours at 50% volume level (may be shorter in high or low temperature conditions)
Charging time	< 3 hours via USB-C, DC 20 V, 3 A < 6 hours via USB-C, DC 5 V, 3 A
Operating range	up to 50 ft (15 m)
Operating temperature and humidity	32°F (0°C) to 113°F (45°C) (up to 90% relative humidity with no condensation).
Storage temperature and humidity	-4°F (-20°C) to 140°F (60°C) (up to 90% relative humidity with no condensation).

Note

Specifications are subject to change without prior notice.



 Check the FCC and IC numbers

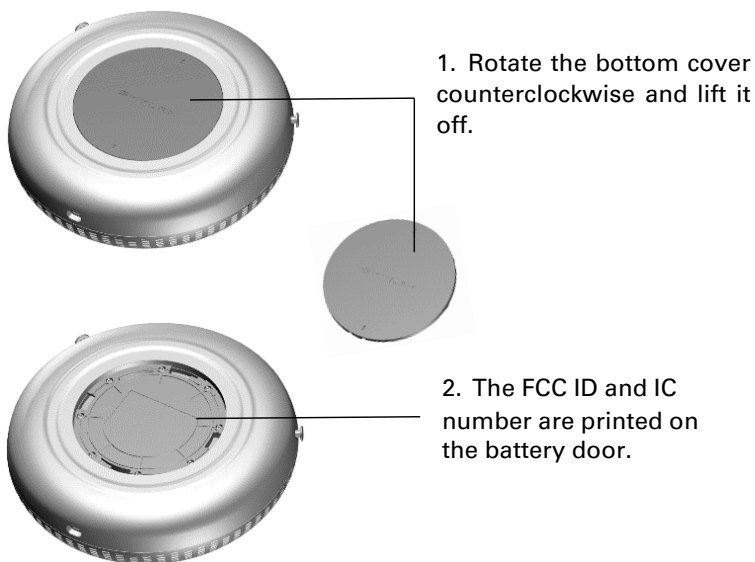

After checking the FCC ID and IC number, reverse the above steps to reassemble the unit.

9. GENERAL INFORMATION

FCC regulatory conformance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this

equipment. Such modifications could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

IC regulatory conformance

This device complies with CAN ICES-003 (B)/NMB-003(B) and CAN RSS-247 / CNR-247. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme à la norme CAN ICES-003 (B)/NMB-003 (B) et CAN RSS-247 / CNR-247. Cet appareil contient des émetteurs/ récepteurs exempts de licence conformes aux RSS exemptes de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes:

- 1) Cet appareil ne doit pas provoquer d'interférences.
- 2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

This device complies with RF exposure guidelines. Users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme aux exigences relatives à l'exposition aux radiofréquences (RF). Les utilisateurs peuvent obtenir des informations canadiennes concernant l'exposition aux radiofréquences et la conformité.

LIMITED WARRANTY

DOMO (M) is covered by a 12-month limited warranty from the date of purchase.

If the product fails due to defects in materials or workmanship under normal use during the warranty period, it will be repaired or replaced at our discretion.

This warranty does not cover normal battery wear, misuse, accidents, unauthorized modifications or repairs, improper charging, or damage resulting from use outside intended conditions.

Proof of purchase may be required for warranty service.

Warranty rights may vary by jurisdiction.

CUSTOMER SUPPORT

For product support, contact:

Email: SUPPORT@SKYLRK.COM

 
Website: WWW.SKYLRK.COM

When contacting support, please include the product model, a description of the issue, and proof of purchase.

<This page has been intentionally left blank>

<This page has been intentionally left blank>

<This page has been intentionally left blank>

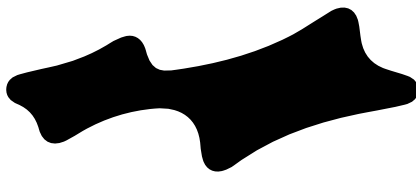

Version 6.0

©2026 SKYLRK Holdings, Inc.
All rights reserved.