




DRYER OPERATING INSTRUCTIONS

Model 84052/94052

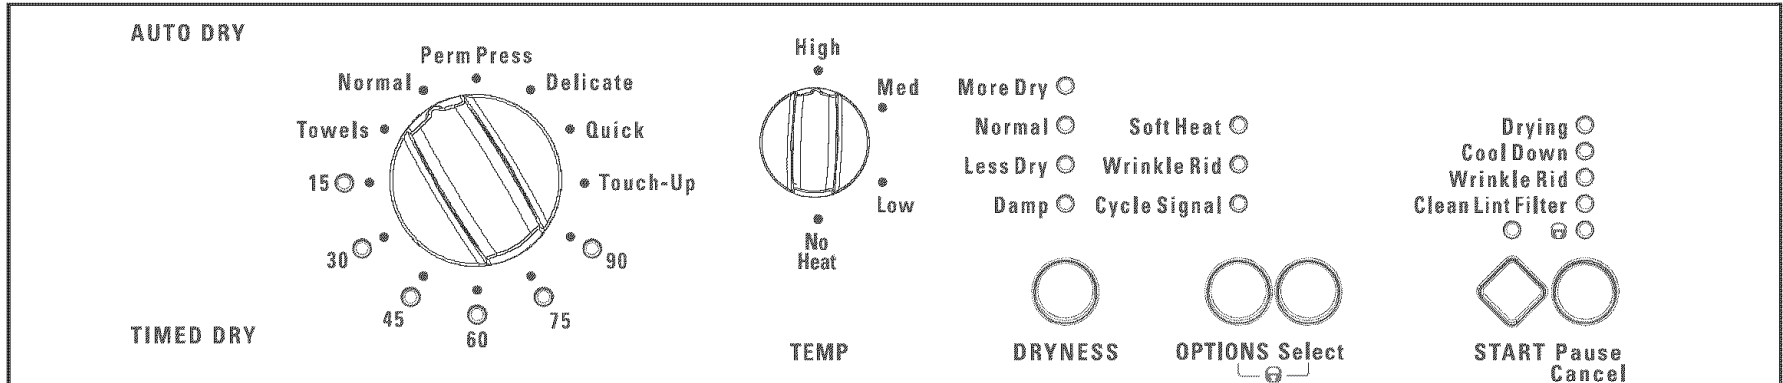

Before Operating Your Dryer

Read your dryer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best drying results.

⚠ WARNING To reduce the risk of fire, electric shock or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your dryer Owner's Guide before operating this appliance.

Operating Steps

Read "Drying Procedures" in your Owner's Guide. It explains these operating steps in detail.

1. Prepare items for drying.
2. Check that lint screen is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet. Close the door.
4. Select the cycle and drying temperature for each load. To change the temperature, turn the TEMP knob to the desired temperature.
5. A suitable dryness level and options will automatically be displayed for each cycle. To change the dryness level, press DRYNESS until the desired selection is made. To select an option, press OPTIONS until the indicator for a desired option flashes and press SELECT.

Follow the same steps to delete an option. If a dryness level or option is not available for a cycle, it will not light.

6. The changes you make will be remembered the next time that cycle is selected. See the "Dryer Settings Chart" for more details.
7. Press START to begin cycle.
 - To pause the cycle or change settings, press PAUSE/CANCEL once. To resume the cycle, press START again.
 - To stop or change the cycle, press PAUSE/CANCEL twice.
8. A signal will sound at the end of the cycle and periodically during Wrinkle Rid when the Cycle Signal option is selected. When the cycle ends, remove items immediately and hang or fold.
9. Clean the lint screen after every load.

Cycle Selection

For best results, follow the fabric care label instructions on items to be dried.

Auto Dry

Auto Dry cycles take the guesswork out of drying time. The load will automatically be dried at the selected temperature to the desired dryness level. The dryer senses the moisture level of the load as it tumbles through heated air. Auto Dry cycles save time and energy and protect fabrics.

When the load has reached the selected dryness level, it will continue to tumble, unheated, during a Cool Down period. This helps reduce wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Towels

Select this Auto Dry cycle for towel loads.

Normal

Select this Auto Dry cycle for cotton items.

Perm Press

Select this Auto Dry cycle to dry cottons and blends with a no-iron finish.

PN 134463900C (0412)

Cycle Selection (Con't)

Delicate

Select this Auto Dry cycle for knits and delicate items.

Quick

Select this cycle to quickly dry a small load made up of just a few items. It provides approximately 20 minutes of tumbling followed by a 10-minute cool down period.

Touch Up

Select Touch Up to help remove wrinkles from clean and dry items that were not taken from the dryer at the end of the cycle, have been stored in crowded closets or drawers, or unpacked from luggage following a trip. It provides approximately 10 minutes of tumbling followed by a 5-minute cool down period.

Timed Dry

To manually select the drying time for any load, turn the knob to a numbered setting. Drying times from 15 to 90 minutes are available in 15-minute increments. You will not be able to select a cycle or dryness level. Timed Dry is recommended when using the No Heat option.

Note: To change cycles, press PAUSE/CANCEL twice.

Temperature Selection

For best results, follow the fabric care label instructions on items to be dried.

High is recommended for sturdy fabrics.

Medium is recommended for wrinkle free, permanent press and lightweight fabrics.

Low is recommended for delicate fabrics.

No Heat should only be used with a Timed Dry setting to dry items containing feathers, down, foam rubber, plastics or rubber-like materials; to freshen clothing, pillows or blankets; or to dust draperies.

Note: Using No Heat in any Auto Dry cycle will result in wet loads at the end of the cycle.

⚠ WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use the No Heat setting only.

Cycle Adjustments

A suitable combination of dryness level and options will automatically be displayed for each cycle. The settings can be changed before the cycle is started. Those adjustments will automatically be remembered each time that cycle is selected. If a dryness level or option is not recommended for a cycle, the indicator will not light. See the "Dryer Settings Chart" for more details.

If changes are attempted after the cycle starts, the status lights will blink and the signal will beep 3 times. The cycle must be paused before the settings can be changed.

Dryness Level

To change the dryness level, press DRYNESS until the desired selection is made. Select **Normal** for most loads.

Occasionally a load may seem too damp or over-dried at the end of the cycle. To increase drying time for similar loads in the future, select **More Dry**. For loads requiring less drying time, select **Less Dry**.

Select **Damp Dry** for items you wish to partially dry before hanging or ironing.

Note: To prevent over-drying, not every dryness level is available with every cycle.

Options

To select an option, press OPTIONS until the indicator for the desired option flashes and press SELECT. If an option is not available for a cycle, the indicator will not light. Follow the same steps to delete an option.

The **Cycle Signal** will sound at the end of the cycle and periodically during Wrinkle Rid.

Select **Wrinkle Rid** if the dried load might not be removed promptly at the end of the cycle. The dry load will continue tumbling without heat for 30 minutes to help reduce wrinkling. When the Cycle Signal is selected, a beep will be heard periodically. The load may be removed any time during Wrinkle Rid.

Select **Soft Heat** to protect fabrics from the effects of over-drying. Wrinkling, static build-up, linting, fading and harshness can occur if loads are dried too long at the wrong temperature. As the load tumbles and becomes drier, the temperature is gradually lowered.

Dryer Features

🔒 (Control Lock)

To avoid having someone accidentally start or stop the dryer, press OPTIONS and SELECT at the same time until the 🔒 (Control Lock) indicator is lighted. To remove the control lock, press OPTIONS and SELECT again.

Status Lights

The following indicators may be lighted during the cycle:

- Drying
- Cool Down
- Wrinkle Rid
- Clean Lint Filter
- 🔒 (Control Lock)

ERROR CODE CHART

If the dryer stops, the status lights flash and the signal beeps, an error has occurred. Press PAUSE/CANCEL. Consult the Error Code Chart below or the "Avoid Service Checklist" in the Owner's Guide for the possible cause and solution. Make correction, then select a cycle and press START. If the dryer stops, status lights flash again and the beeping continues, please contact service for assistance.

| Error Code | Error | Possible Causes | Solutions |
|------------|-------------------------------|--|---|
| 4 beeps | Dryer ran too long | Lint filter blocked. Ventilation system clogged. Dryer overloaded. | Remove lint; wash lint filter to remove softener sheet residue. Clean out ventilation system. Reduce load size. |
| 6 beeps | Push button does not function | Push button held too long or wedged in the control panel. | Press buttons lightly and release. Disengage button. |

DRYER SETTINGS CHART

These temperatures, dryness levels and options are available with the following cycles:

| | Towels | Normal | Perm Press | Delicate | Quick | Touch Up | Timed Dry |
|-------------------------------------|-----------------|-----------------|-----------------|-----------------|-------|-------------|-----------|
| Estimated Cycle Duration *** | 60 minutes | 50 minutes | 40 minutes | 20 minutes | ** | ** | ** |
| Temperatures | | | | | | | |
| High | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Medium | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Low | ✓ | ✓ | ✓ | ✓ | ✓ | recommended | ✓ |
| No Heat | not recommended | not recommended | not recommended | not recommended | ✓ | ✓ | ✓ |
| Dryness Level | | | | | | | |
| More Dry | * ✓ | ✓ | | | | | |
| Normal Dry | ✓ | * ✓ | * ✓ | ✓ | | | |
| Less Dry | | ✓ | ✓ | * ✓ | | | |
| Damp Dry | | ✓ | ✓ | ✓ | | | |
| Options | | | | | | | |
| Soft Heat | | ✓ | * ✓ | * ✓ | | | ✓ |
| Wrinkle Rid | | ✓ | * ✓ | * ✓ | ✓ | ✓ | ✓ |
| Cycle Signal | * ✓ | * ✓ | * ✓ | * ✓ | * ✓ | * ✓ | * ✓ |

* Factory setting ✓ Available settings ** Timed Dry Cycle Only

*** Estimated cycle duration is based on normal dryness level and factory settings.

