

User's Manual



PLEASE READ BEFORE USE

Welcome

Thank you for purchasing .

 
NOTE: Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit.

Features Review

- FSK / DTMF Caller ID
- Speakerphone
- LCD Contrast adjustable Backlit display
- Ringer Volume and speakerphone volume adjustable
- 10 Two Touch Memories
- Incoming CID - 50 (8 Digits) or 32 (16 Digits)
- Outgoing CID - 15 (8 Digits) or 8 (16 Digits)
- Do Not Disturb (DND)
- Ringer Selection
- Tone/Pulse Selection
- Flash Time (90/95/100/120/180/300/600/1000ms)
(Default Setting 600ms)
- Alarm
- Local Area Code/Outside Line Code Setting
- Auto hang off function

Note: Caller ID requires subscription to your local telephone company.

Function Keys

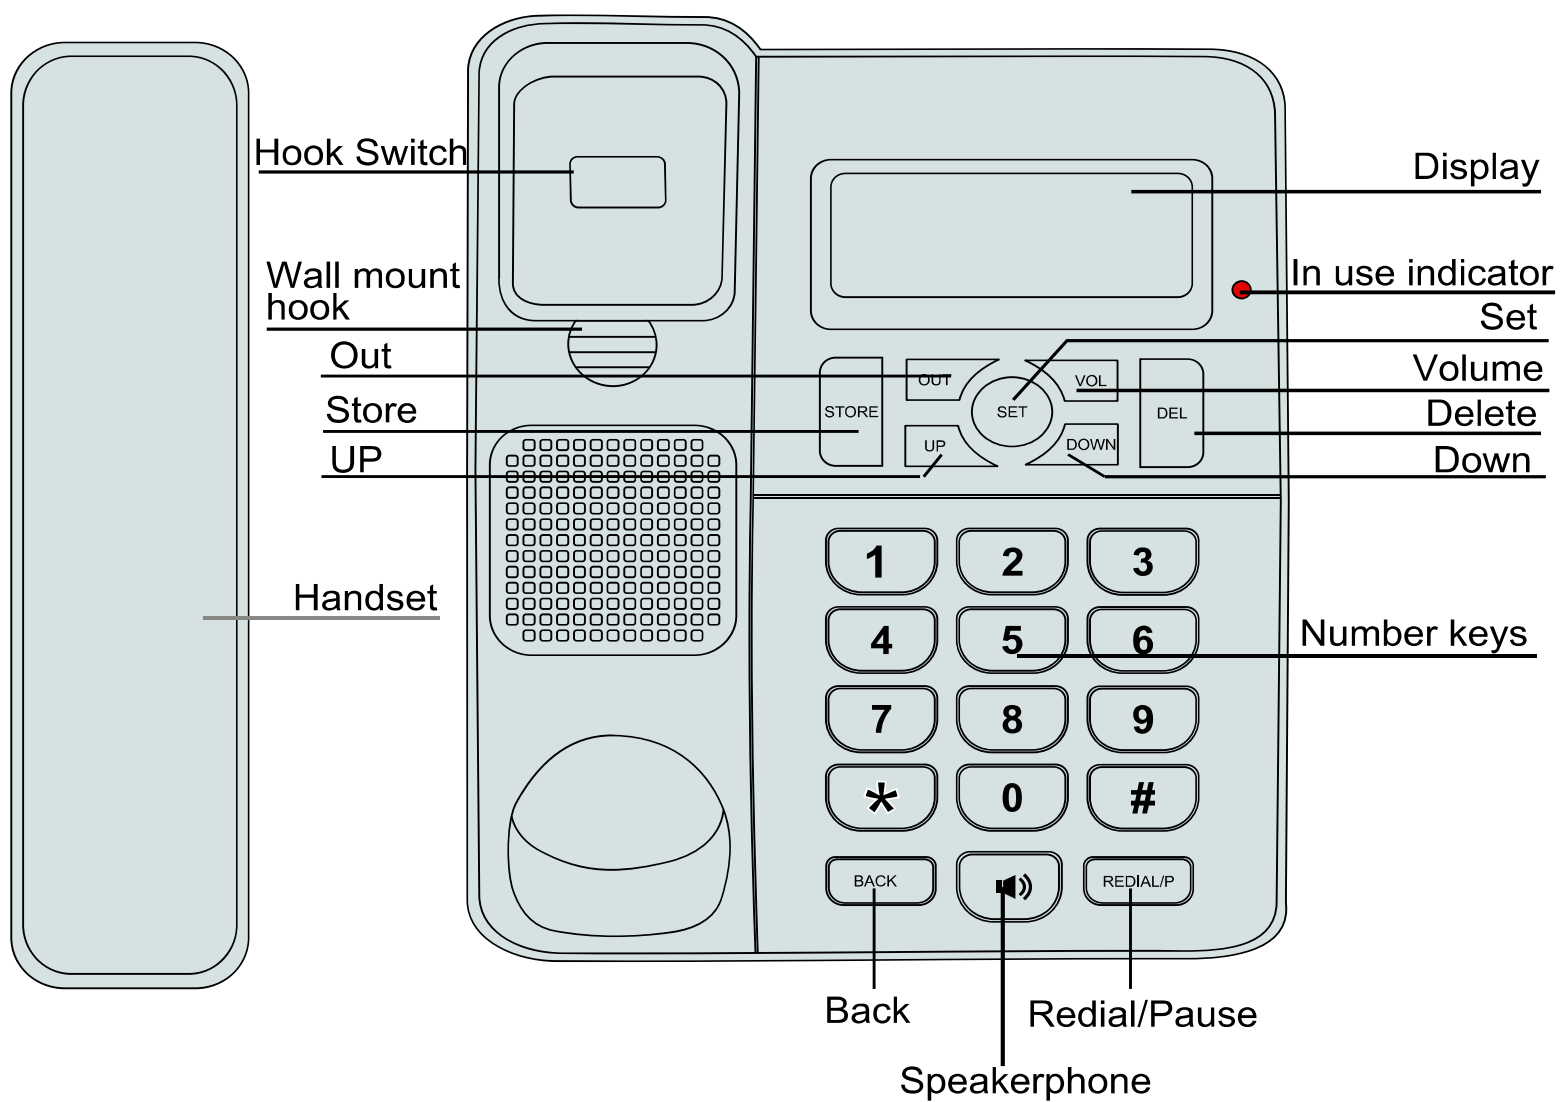

Accessories (included)


- | | |
|---|--|
| ☐ 1. Base unit one | ☐ 2. Handset one |
| ☐ 3. Telephone line cord one | ☐ 4. Handset cord one |
| ☐ 5. User manual one | |




①



 ②

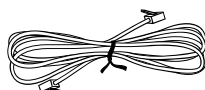

③

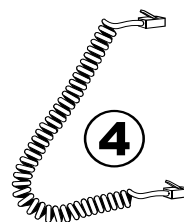 

④



⑤

NOTE: If you find any of the parts missing, please contact your local shop where you buy this product at once.

LCD Display Layout



1 18 M 28 D 88:88

2 IN

3 OUT

4 NEW REP MAIL

5 SUN MON TUE WED THU FRI SAT

6 88888888888888888888

Date, time

Incoming call

Outgoing call

Lock, new call, repeat, mail

Week display

Phone number display

Date/Time Setting

In on-hook state,press Set button to go to main menu,the display shows [SET 12345678] on the screen.

On the main menu,enter 1 and [1-DATE 2-CL] will appear on the screen.
Press 1 for Date Setting / Press 2 for Time setting . Enter the Date/Time and then press Set Button to confirm.Press Speakerphone Button to exit.

Ringling Selection

In on-hook state,press Set button to go to main menu,the display shows [SET 12345678] on the screen.

On the main menu,press 2 and [r RING IP 00L] will appear on the screen.
Press 1 for normal ringer selection and [r RING TYPE 01] will appear on the screen.

Press Up and Down button to choose the ringling you want.

Press Set button to confirm

Press DEL to go back to "Ringling Selection" menu.

Press 2 for VIP ringer selection and [r RING VIP 01] will appear on the screen.

Press Up and Down button to choose the VIP ringling you want.

Press Set button to confirm

Press DEL to go back to "Ringling Selection" menu.

Press 3 to adjust ringer volume and [r RING VOL 0 }] will appear on the screen.

Press Up and Down button to choose the ringling volume you want.

Press the Speakerphone button to exit

Alarm Setting

In on-hook state,press Set button to go to main menu,the display shows [SET 12345678] on the screen.

On the main menu, press 3 and [*AL* 1-2-3] will appear on the screen. Press 1 for first Alarm setting and [*AL* *OFF*] will appear on the screen indicating this function is off.

Enter the timing for alarm and press the Set button to confirm.

Press DEL to go back to "Alarm Setting" menu.

Press 2 for the second Alarm setting on the day, [*DAY* *OFF*] will appear on the screen. Enter the timing and press the Set button to confirm.

Press DEL to go back to "Alarm Setting" menu.

Press 3 for the third Alarm setting on the day, [*DAY* *OFF*] will appear on the screen.

Enter the timing and press the Set button to confirm.

Press the Speakerphone button to exit.

Note: To Cancel the Alarm settings, press Up to Down button until you find [*AL* *OFF*] on the screen and press the Set button to confirm.

In on-hook state, press Set button to go to main menu, the display shows [*SET* 12345678] on the screen.

On the main menu, enter 4 and [*OFF* *00-00*] will appear on the screen.

Enter the timing on the digits flashing, the first two digits are hours and the latter two are minutes.

Press the Set button to confirm. Once this setting is done, you can receive incoming call without ringing until the timing you have set has elapsed.

Press the Speakerphone button to exit.

To cancel this setting, press the Speakerphone button.

Flash Time/Pulse & Tone/Privacy Setting

In on-hook state, press Set button to go to main menu, the display shows [*SET* 12345678] on the screen.

On the main menu, press 5 and [1- F 2- P 3- d] will appear on the screen. Press 1 to go to Flash time setting and press the Up and Down button to select Flash time (90/95/100/120/180/300/600/1000ms). Press Set button to confirm. The default is 600ms. Press DEL to go back to Special function setting menu. Press 2 to go to Pulse/Tone selection and press the Up and Down button to select (Pulse/Tone). Press Set button to confirm. Press DEL to go back to Special function setting menu. Press 3 to go to Privacy protection and press the Up and Down button to select (On/ Off). Press Set button to confirm. Press the Speakerphone button to exit. Select Off if this unit is connected with an internal line.

Local Area Code/Outside Line Code Setting

In on-hook state, press Set button to go to main menu, the display shows [5 6 7 1 2 3 4 5 6 7 8] on the screen. On the main menu, enter 6 and [1- L 2- d] will appear on the screen. Press 1 to go to local area code setting and enter a local area code up to 8 digits. Press Set button to confirm. Press DEL to go back to setting menu. Press 2 to go to outside line code setting and enter a code up to 8 digits. Press Set button to confirm. Press the Speakerphone button to exit. The default is Off mode.

LCD Contrast Adjustable

In on-hook state, press Set button to go to main menu, the display shows [5 6 7 1 2 3 4 5 6 7 8] on the screen. On the main menu, enter 7 and [L c d c o n 4] will appear on the screen. Press Up and Down button to adjust contrast. Press the Set button to confirm. Press the Speakerphone button to exit.

3 Setup - On Hook Mode Operation

Incoming Caller ID List

Press UP and DOWN button to search.

Outgoing CID List

Press OUT button and then press UP and DOWN button to search.

Pre-Dial

In on-hook state, enter a telephone number. Or review the incoming CID list, choose the number you want to call back. Press BACK to dial the telephone number. In case of wrong digit entered during the process, press Delete button to amend the digit.

Delete

The pre-dialing digits entered can be edited, press DEL button to delete the last dialed digit of the call number.

While reviewing incoming and outgoing call numbers, press DEL button to delete the selected call number. If pressing the Delete button for 3 seconds, all incoming and outgoing calls will be deleted.

VIP

While reviewing the incoming calls, press the VOL key to mark or remove the incoming call as VIP.

10 Two touch memories

Store:

On hook, reviewing incoming CID/outgoing CID / enter a telephone number, press STORE button and hold it for 3 seconds, the LCD displaying SAVE -, then press one button of 0~9 (store location) to save it.

Make calls:

On hook, press STORE button and the LCD display AUTO, press the number location and the LCD will display the number. Then pick up the handset or press speakerphone button or BACK button to dial out the number.

4

Setup - Off Hook Mode Operation

Ringer Volume Selection

On hook state : press VOL button to select volume levels.(4 levels)

Hands-free volume adjustment

Under the hands-free state, press VOL button to enter hands-free volume menu, default high.

Redial/Pause

At off-hook state, before you dial the number, press [REDIAL/P] button to dial the last dialed call number.

In the pre-dial or the number is dial out, press [REDIAL/P] button pause for 4 seconds.

Flash Function

During conversation, pressing [SET] button will momentarily interrupt the telephone conversation to access telephone company services, default 600ms.

Take special care to follow the safety suggestions listed below.
Please do not use telephone during thunderstorm.

Installations Environment

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example,motors or fluorescent lamps).
2. Do not expose to direct sunlight or moisture.
3. Do not install the telephone during thunderstorm.
4. Clean the phone with a soft cloth.
5. Never use a strong cleaning agent or abrasive powder because it will cause damage to the unit.

WARNING : To prevent fire or electric shock , do not expose this product to rain or any type of moisture.