

A line drawing of a portable music player. It has a rectangular body with rounded corners. On the front face, there is a square button with a right-pointing arrow (play/pause symbol). To the right of this button is a vertical stack of three buttons: a '+' button, a '-' button, and a button with a circular arrow (repeat symbol). Below the play/pause button is a small dot. On the right side of the device, there is a small rectangular port. A cable is connected to this port, extending upwards and ending in a 3.5mm audio jack.

产品参数

型号: GH05	输入口: AUX
音频解码: SBC	传输范围: >10米
产品输入: 5V/1A	产品材质: ABS
支持协议: HSP, HFP, A2DP, AVRCP	

The diagram illustrates the A1000 device, a handheld communication unit. It features a main body with a screen and several buttons, and a separate charging dock. The components and their functions are labeled as follows:

- 充电指示灯** (Charging Indicator Light): Located on the top of the charging dock.
- AUX插头** (AUX Plug): A small plug at the top of the main device's antenna.
- Type-C充电孔** (Type-C Charging Port): A port on the side of the charging dock.
- 长按3秒开/关机** (Long Press 3s On/Off): A function associated with the power button on the side of the main device.
- 短按/长按音量增加** (Short Press/Long Press Volume Increase): A function associated with the volume up button on the side of the main device.
- 短按/长按音量减小** (Short Press/Long Press Volume Decrease): A function associated with the volume down button on the side of the main device.
- 状态指示灯** (Status Indicator Light): A light located at the bottom of the main device.
- 发射模式** (Transmit Mode): A function associated with the button located below the volume buttons on the side of the main device.

1. 首先将适配器插入到您需要连接的娱乐设备的耳机插孔；
2. 按多功能键5秒开机，开机后自动匹配“musiCozy、LC-dolida、V03”的蓝牙设备（不可匹配其他蓝牙设备）；
3. 连接成功后蓝指示灯常亮5秒后熄灭；
4. 同时长按“+”键5秒，蓝灯闪1-2秒，即可复位。

复位定义：（假设已经连接过一台“musiCozy”设备，这时需要断开连接另外一台“musiCozy”设备，先把原来的“musiCozy”设备关机同时长按“+”键5秒清除复位，才能跟另一台“musiCozy”设备配对）

安全准则

1. 请阅读本说明书的使用说明, 勿以任何理由拆卸或改装设备, 否则可能导致适配器发生故障或烧毁;
2. 请勿将产品浸入任何液体或用水冲洗产品;
3. 请使符合符合国家/地区安全性标准的充电线给适配器充电, 否则容易造成适配器电池损坏或发生危险;
4. 请在环境温度中使用和存放本产品, 勿将设备置于温度过低或过高的环境中;
5. 请勿在雷暴天气下使用设备, 雷暴可能导致设备工作不正常, 信号中断等现象。

功能/状态	按键操作	指示灯状态
开机	长按多功能键3秒	蓝灯常亮3秒熄灭
关机	长按多功能键3秒	蓝灯闪烁1秒，红灯常亮3秒熄灭
开机待连接	/	蓝灯快闪，30分钟无连接关机
连接成功	/	蓝灯常亮5秒后熄灭
工作中	/	灯不亮
蓝牙断开	/	蓝灯快闪，30分钟无连接关机
开机自动回连	/	蓝灯常亮5秒后熄灭
复位	同时长按“+”、“-”键5秒	蓝灯闪烁1-2秒，复位成功
低电量	/	电量 < 20%，充电指示灯红灯5秒闪烁1次，直至关机灭灯，或接入充电器后红灯常亮
充电中	/	充电指示灯红灯常亮
充满电	/	充电指示灯熄灭
音量加	短按/长按“+”	/
音量减	短按/长按“-”	/

Product Parameters

Model: GH05	Input port: AUX
Audio decoding: SBC	Transmission range: >10m
Product input: 5V/1A	Product Material: ABS
Supported Protocols: HSP, HFP, A2DP, AVRCP	

The diagram shows a black AUX cable with a 3.5mm jack at one end and a USB Type-C connector at the other. A separate inset shows a close-up of the Type-C connector. Labels with dashed lines point to various features:

- Charging indicator light**: Points to a small circular light on the top of the Type-C connector.
- Type-C charging port**: Points to the USB Type-C port on the connector.
- AUX plug**: Points to the 3.5mm jack at the top of the cable.
- Long press for 3S to turn on/off**: Points to a large oval button with a power symbol on the side of the cable.
- Short/long press to increase volume**: Points to a small circular button with an upward arrow.
- Short/long press to decrease volume**: Points to a small circular button with a downward arrow.
- TX mode**: Points to a small circular button with a radio wave symbol.
- Status indicator light**: Points to a small circular light at the bottom of the cable.

1. Firstly, insert the adapter into the headphone jack of the entertainment device you need to connect to;
2. Press and hold the multifunction key for 3s to turn on the device, which will automatically match wireless devices such as "musiCozy, LC-dolida, V03" (cannot be matched with other wireless devices);
3. After successful connection, the blue indicator light stays on for 5s and then goes off;
4. Press and hold the "+"&"-" keys for 5s at the same time, and the blue light will flash for 1-2s to reset.

Reset definition: (Assuming that a "musiCozy" device has already been connected, it is necessary to disconnect from another "musiCozy" device, first shut down the original "musiCozy" device, and long press the "+"&"-" key for 5s to dearter the reset before pairing with another "musiCozy" device.)

2

Function/ Status	Button operation	Indicator light status
ON	Long press the multifunction key for 3s	The blue light stays on for 3s and goes out
OFF	Long press the multifunction key for 3s	The blue light flashes for 1 second, and the red light stays on for 3s before turning off
Power on waiting to connect	/	Blue light flashes rapidly, shuts down after 30 minutes without connection
Connection successful	/	The blue light will turn on for 5s and then turn off
At work	/	The light doesn't work.
Wireless disconnection	/	Blue light flashes rapidly, shuts down after 30 minutes without connection
Auto-connect	/	The blue light will turn on for 5s and then turn off
Reset	Simultaneously press and hold the "+"&"->" keys for 5s	Blue light flashes for 1-2s, reset successful
Low battery	/	If the battery level is less than 20%, the red charging indicator light will flash once every 5s until the device is turned off, or the red light will remain on after connecting the charger
Charging	/	The red charging indicator light is always on
Fully charged	/	The charging indicator light is off
Volume up	Short press/long press "+"	/
Volume down	Short press/long press "-"	/

1. Please follow the instructions in this manual and do not disassemble or modify the device for any reason, otherwise it may cause the adapter to malfunction or burn out;
2. Do not immerse the product in any liquid or rinse the product with water;
3. Please use a charging cable that meets national/regional safety standards to charge the adapter, otherwise it may cause damage to the adapter battery or pose a danger;
4. Please use and store this product in a room temperature environment, and do not place the device in an environment with too low or too high a temperature;
5. Do not use the equipment during thunderstorm weather, as thunderstorms can cause abnormal equipment operation, signal interruption, and other phenomena.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.