

Digital Camera Quick Guide



Please read this manual before use!

Keep this manual and all related information for future reference.



Contents

Warnings	1
Cautions	1
About the Camera	3
System Requirements	3
Camera Components	3
Charging the Camera	6
Touch Functions	7
Turning the Camera On/Off	8
Camera Settings	8
Inserting and Formatting the Memory Card	10
Formatting the Memory Card	10
Using the Camera	11
Media Playback	12
Connecting to a Computer	13
Mass Storage Mode	13
PC Camera	13
Charging Mode	14
Wi-Fi APP User Guide	14
Camera Cleaning and Maintenance	15
Troubleshooting	15
Supplementary Notes	16

Warnings

To reduce the risk of fire or electric shock:

1. Do not expose the device to rain or humid environments.
2. Do not place liquid-filled objects such as vases on the device.
3. Do not expose batteries to direct sunlight, fire or other high-temperature environments.
4. Do not swallow batteries to avoid chemical burns.
5. Keep new and used batteries away from children. Stop using the product and keep it out of children's reach if the battery compartment cannot be closed tightly.
6. Seek medical help immediately if a battery is swallowed or inserted into any part of the body.

Cautions

Improper handling may cause the battery pack to burst, leading to fire or chemical burns. Please follow the rules below:

1. Do not disassemble the device.
2. Do not squeeze the battery pack, or subject it to impacts like hitting, dropping or stepping.
3. Do not short-circuit the battery pack; keep metal objects away from battery terminals.
4. Do not expose it to temperatures over 60°C (140°F), such as direct sunlight or a car parked in the sun.
5. Do not burn or discard the battery pack in fire.
6. Do not handle damaged or leaking lithium-ion batteries.
7. Keep the battery pack away from children.
8. Keep the battery pack surface dry.
9. Only use the specified battery model; otherwise burst, fire or injury may occur.
10. Dispose of used batteries as instructed.

11.Plug the AC adapter or charger into a nearby wall socket. Unplug it once malfunction occurs. For devices with charging indicators, note that the device is still connected to power even if the light turns off.

12.Do not use the AC adapter or charger in narrow spaces between walls and furniture.

13.If data transmission is interrupted by static electricity or electromagnetic interference, restart the app or reconnect USB and other cables.

 
About the Camera

System Requirements

You may transfer videos and photos to a computer that meets the following specifications: Intel Pentium 2.0GHz or higher / Microsoft Windows XP or later system 2GB RAM / More than 40GB available disk space Standard USB port / 1GB GPU or higher Resolution of 1920×1080 pixels or higher.


Camera Components

Front View

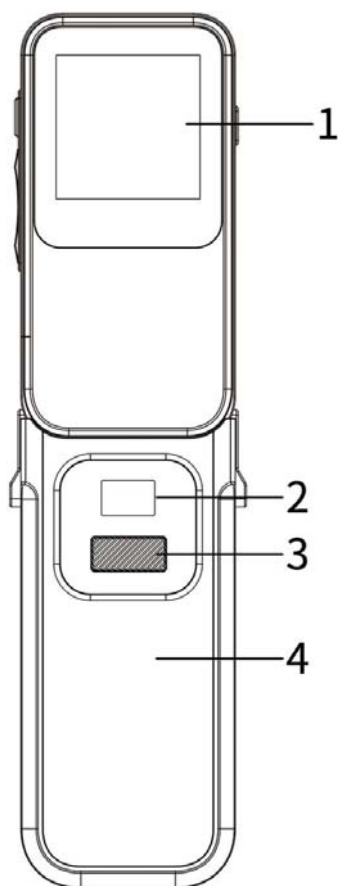


- 1: Display Screen
- 2: Power Display of Charging Grip
- 3: Shooting Button / Confirm Button of Charging Grip
- 4: Charging Grip

 Rear View

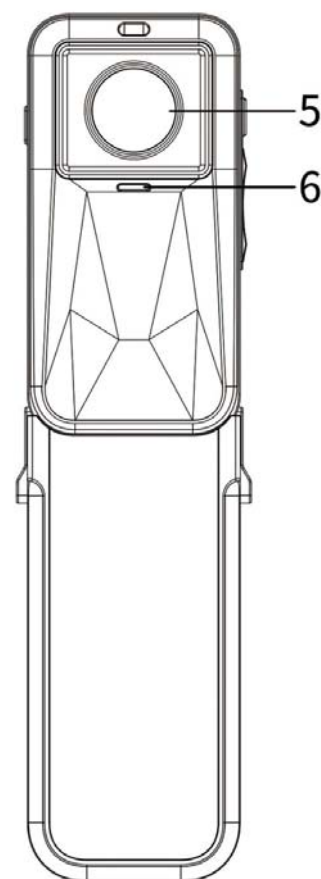


- 5: Lens
- 6: Charging Indicator / Working Indicator

 Left Side View

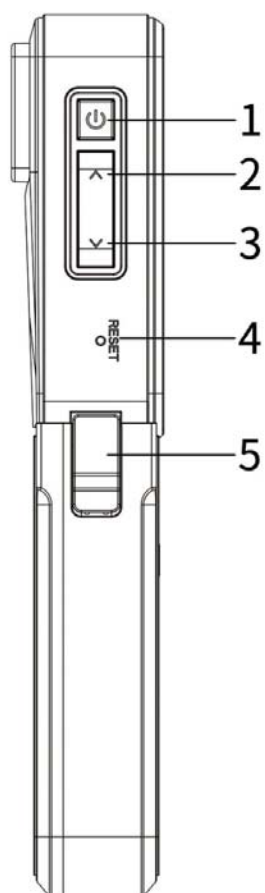


- 1: Power Button
- 2: Up Button
- 3: Down Button
- 4: Reset Hole
- 5: Charging Grip Lock Buckle

 Right Side View

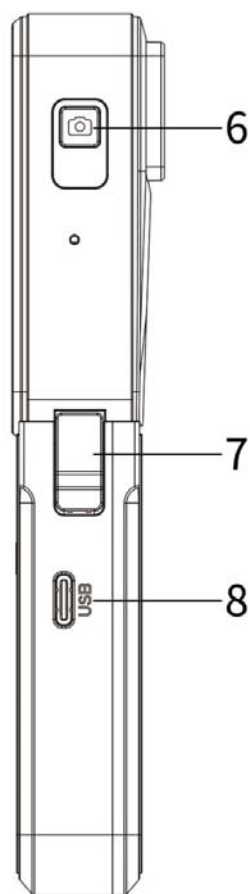


- 6: Photo / Video Button
- 7: Charging Grip Lock Buckle
- 8: Type-C USB Port

 Camera Top View

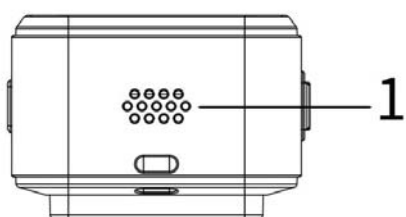

- 1: Speaker

 Charging Grip Top View

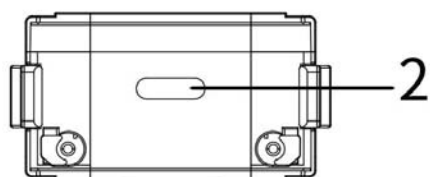


- 2: Type-C Male Port

Camera Bottom View



- 1: Type-C USB Port
2: Memory Card Slot

 Charging Grip Bottom View

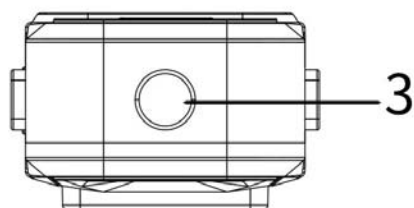


- 3: Tripod Mount


Buttons /Indicators	Functions
Power Button	Press and hold to power on/off
	Short press to open/exit menu
Photo Button	Take photos
	start/stop recording
	confirm
Up Button	Select upward
	switch modes
Down Button	Select downward
	enter playback mode
Indicator Light	Red for charging/Blue for working
Charging Grip Shooting Button	Take photos
	start/stop recording
	confirm
USB	Charge via USB cable
	connect to computer

Charging the Camera

 1. Charge the camera with the supplied USB cable and a 5V/2A adapter.

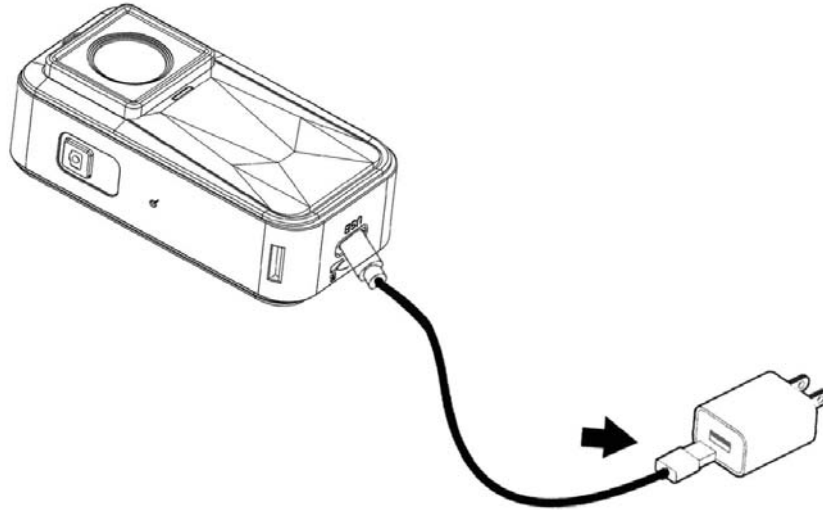

 2. Put the camera into the charging grip for extended battery life. The grip screen shows remaining power, and the camera supports recording while charging.

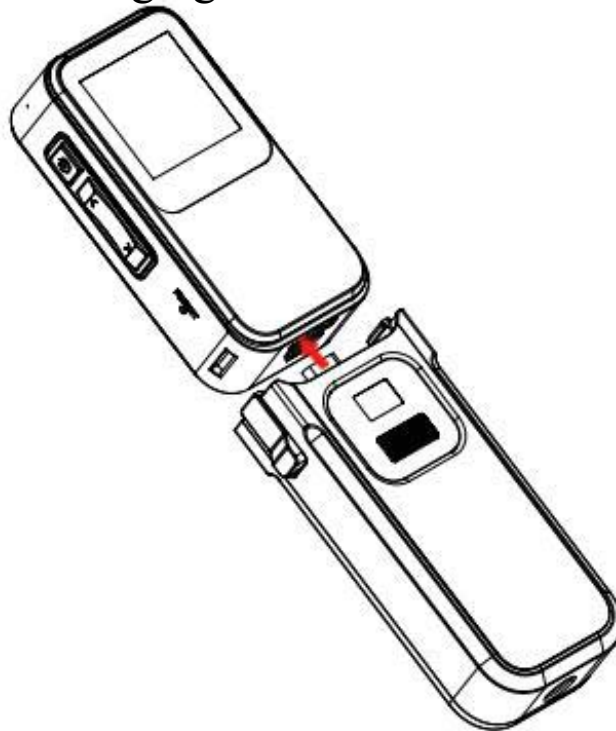

*The red light turns on when the camera is charging. The grip screen lights up and shows battery percentage during charging.

*The charging light turns off automatically when the camera is fully charged. The grip displays 100% when full.

It takes about 120 minutes to fully charge the camera, and about 90 minutes for the charging grip.

A fully charged camera records for about 100 minutes. The fully charged grip supports an extra 60 minutes of recording.

Touch Functions

Home screen gesture swipe instructions for touch screen (Please swipe along the edge of the touch area to avoid accidental touches.)

Screen Gestures	Related Functions
↓ Swipe down	Enable lock, adjust brightness, turn on Wi-Fi, open menu
→ Swipe right	Enter playback mode


The icons on the touch display and their corresponding functions are as follows.

icon	Instructions
	Lock function (swipe up to unlock)
	Brightness (0%-100%)
	Turn on wireless hotspot
	Adjust volume during video playback
	Enter menu settings
	Delete photos /videos
	Start /pause video playback

All submenus support touch control.

Turning the Camera On/Off

 Press and hold the Power Button to turn on the camera.

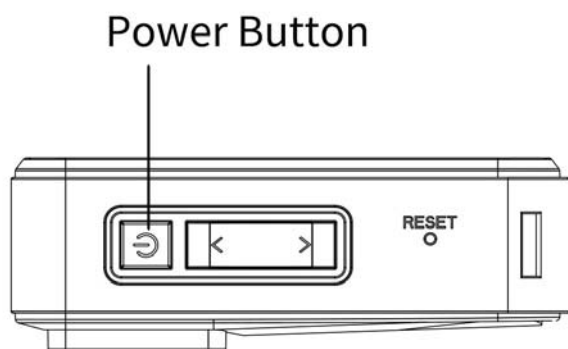


Hold the Power Button for 3 seconds to turn it off.

Note: Press and hold the Power Button for the first boot.

Camera Settings

You may customize the camera settings.

 After turning on the camera, press the power button to open the mode menu and access system settings.

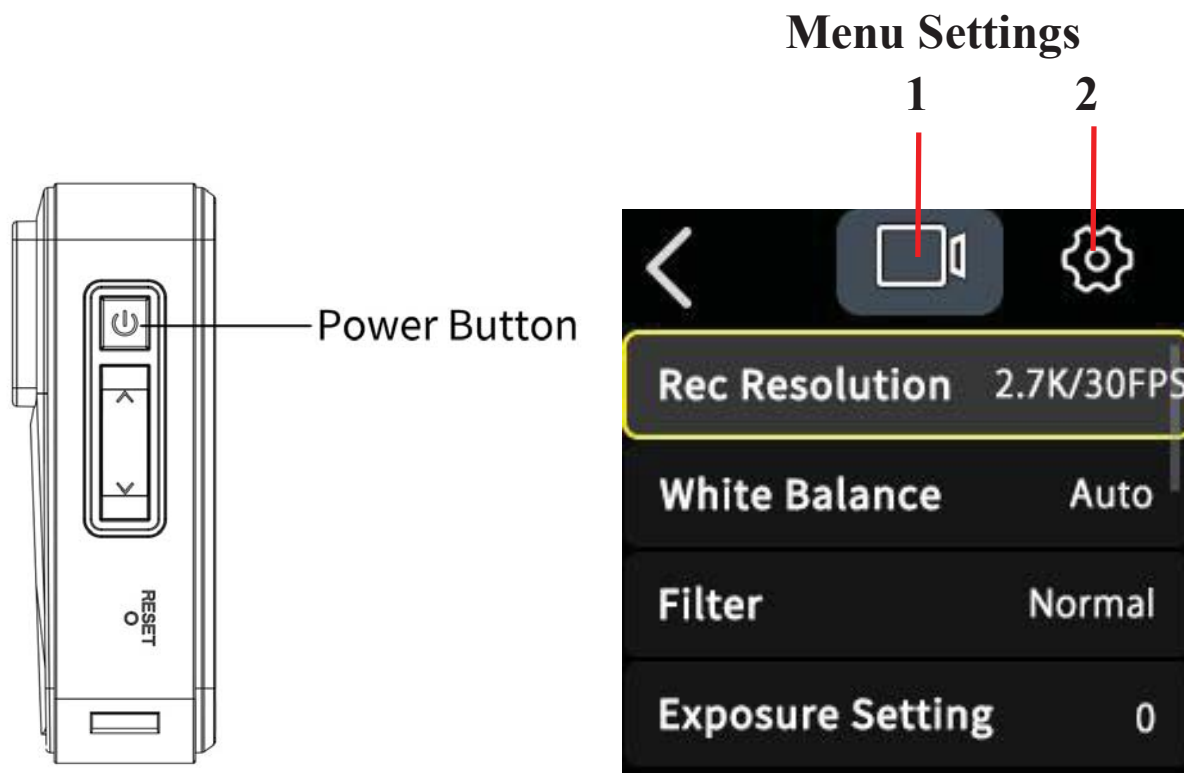


- 1: Current Mode Submenu
- 2: System Settings

Submenu	Menu Content
WIFI	Turn On/Turn Off
APP User Guide	Scan QR code for tutorials
Light Source Frequency	Auto/50Hz/60Hz
LED Indicator	Turn On/Turn Off
Auto Screen Saver	Turn Off/30s/1min/2min
Auto Power Off	Turn Off/3min/5min/10min
Prompt Tone	High/Medium/Low/Off
Power On/Off Sound	Turn On/Turn Off
Language	Simplified Chinese/Traditional Chinese/English/Japanese/Korean/ Russian/German/French/Italian/ Spanish/Portuguese/Thai/Dutch/ Polish/Swedish/Romanian/ Indonesian/Turkish/Greek
Time Format	Year/Month/Day/Month/Day/Year/ Day/Month/Year
Date Setting	Year/Month/Day
Time Setting	Hour/Minute/Second
Format	Confirm/Cancel
Device Information	Model and version
Restore Factory Settings	Confirm/Cancel

Inserting & Formatting Memory Card

Class 10 or higher speed memory card is recommended.

 1. Insert the card in the correct direction until you hear a click.

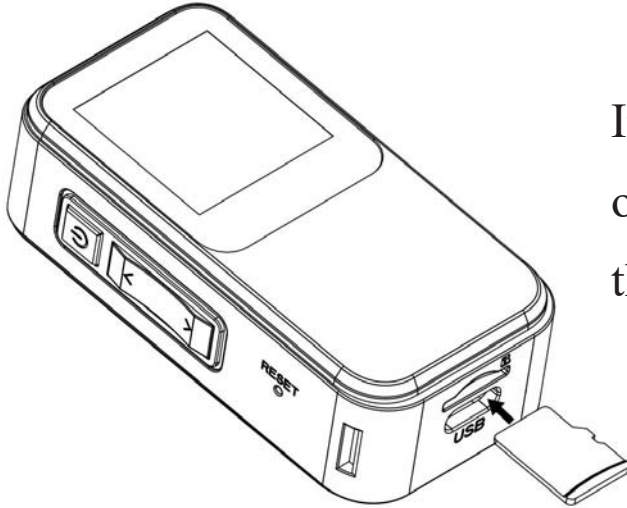



Insert the memory card in the orientation shown, Pay attention to the edges and corners.

2. To remove the memory card, push it in; it will pop out automatically.

Format Memory Card

It is recommended to format the memory card before first-time use.

  To format the memory card, press the Power button to open the menu system. Press the Power button once more to switch to System Settings. Use the Up or Down key to find "Format", then press the OK key to enter the sub-menu. Select "Confirm" to format the memory card.

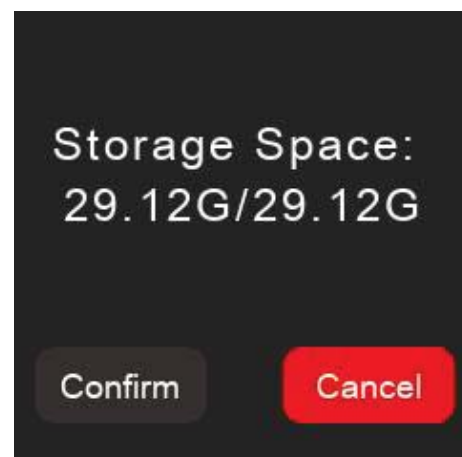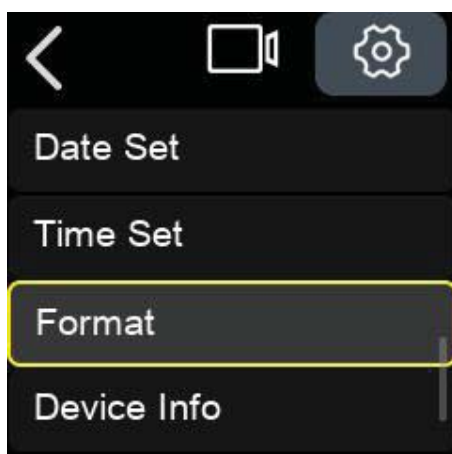

Note: If the file system is unsupported, the screen will prompt "Unsupported file system. Format now?". Select confirm to continue. Formatting will erase all data permanently. Back up files to computer in advance.

Using the Camera

Press the Up key to enter the mode selection page. Select the desired mode by swiping left or right, or by pressing the Up/Down key, then press the Camera key to confirm.

icon	Mode	Description
	Normal Video	Record standard videos
	Slow Motion	Record high-frame slow motion videos
	Loop Recording	Record continuously and save fixed-length clips
	Time-lapse Recording	Shoot time-lapse videos for static scenes
	Normal Photo	Take standard photos
	Auto Shooting	Take photos automatically at intervals
	Burst Shooting	Take multiple photos in quick succession
	Timer Shooting	Take one photo after set delay

The camera allows corresponding mode-specific menu settings under different modes.

After selecting the desired mode, press the Power button to open the menu and select the required settings.

Press the Camera button to take a photo; the photo will be automatically saved to the memory card.

Press the Camera button to start recording, and press it again to stop recording.

Media Playback

Press the Down button to open the media library.

Select the video or photo file you wish to view, then press the Camera button to open the selected file and view the videos and images stored on the camera's memory card.

Figure 1: Video Playback


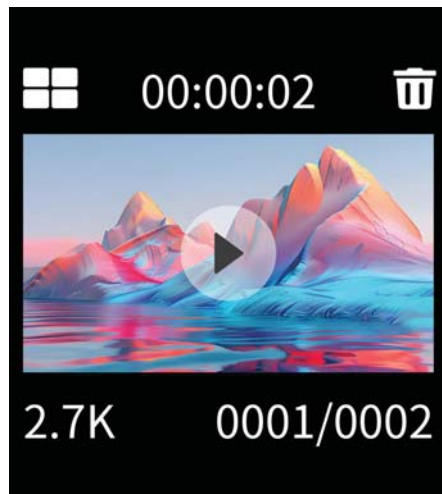 



Figure 2: Photo Playback

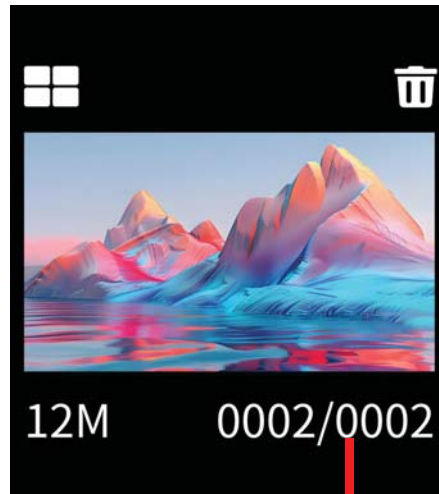 

Current / Total Image Count

Connecting to Computer

 1. Connect the Type-C USB port of the camera to the USB port of a computer using the supplied USB cable.

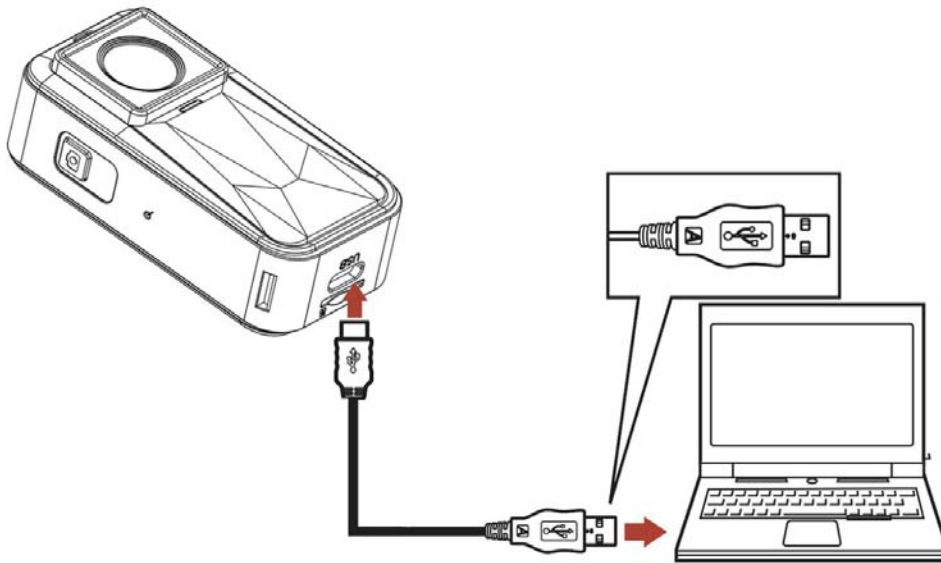

When the camera is powered on, available options will be displayed on the screen.

Press the Up/Down button(s), then confirm the settings by pressing the Camera button or selecting via touch.



Mass Storage Mode

Select Storage Mode. The computer will recognize the memory card for file transfer.

PC Camera

Select the "PC Camera" mode; the camera can be used as a webcam for live streaming and other purposes.

Charging Mode

Select the Charging mode. The camera supports normal video recording functions.

Turning off the camera will allow it to charge fully faster than leaving it powered on.

Wi-Fi APP User Guide

Swipe down from the home screen of the camera, then tap the Wi-Fi icon to enable Wi-Fi. Press the Power button to enter the menu, press the Power button once again to access System Settings, then use the Up/Down buttons to locate the sub-menu titled "APP Usage Guide". Finally, press the Camera button to enter and scan for the tutorial.

To download the Wi-Fi APP, scan the QR code on the lower right side below.



QR Code for WiFi APP Usage
Guide



QR Code for Wi-Fi APP
Download

Cleaning & Maintenance

- (1) To prolong battery service life when the camera is not in use for a long time, charge the camera at least once a month, and store it in a dust-free, dry environment with a temperature not exceeding 30°C.
- (2) If there is dust or dirt on the lens or screen, gently wipe it with a clean, soft lens cleaning cloth.
- (3) As this device is a precision instrument, do not drop it or subject it to strong impact or vibration.

Troubleshooting

Please refer to this section if you encounter problems with the camera.

1. Camera fails to power on

- (1) The battery level is low; please charge the camera.

2. Camera does not charge

- (1) The charging indicator does not light up, which means the charger is not properly connected. Please check whether the charger connection is normal.
- (2) If the ambient temperature is below 10°C, slow charging or charging failure may occur.

3. Camera freezes

If the camera freezes abnormally, use a pin to press the reset hole on the camera to reset it.

Note: Do not quickly press the Camera button while the camera is recording video or taking photos. Under normal circumstances, the camera will display a waiting icon.

4. Memory card not recognized:

- (1) Check whether the memory card complies with the SD card (Class 10) standard, with a maximum capacity of no more than 256 GB.
- (2) Check whether the memory card is inserted backwards.
- (3) It is recommended to format the memory card before its first-time use in the camera.

Supplementary Notes

- (1) Do not insert any objects into the slot except a memory card.
- (2) After power-on, the camera may display an unstable picture for several seconds. This is not a malfunction.
- (3) Due to the optical characteristics of the lens, chromatic aberration (magnified chromatic aberration) may appear at the edges of images. This is not a camera malfunction.
- (4) It is normal for the memory card to heat up after prolonged use.
- (5) It is normal for the camera screen to heat up after prolonged use.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction