

正面210X148MM


NO.22040261

Instruction Manual

Before using this product, please read this instruction manual carefully. After reading, please keep it properly for future reference.

Model	EF-34-64A	Brand	EXHALE
-------	-----------	-------	--------

 - ① Fan On/Off
- ② Fan Rotation Direction Clockwise / Counterclockwise
- ③ LED Dimmer
- ④ LED Color Selection
- ⑤ Light On/Off
- ⑥ Fan Speed (1-6)
- ⑦ LED Color Selection Indicator Light
- ⑧ Signal Indicator Light

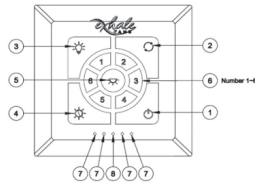

Pairing Method

- When the fan is powered on, you will hear a "beep" sound.
- Remote pairing: Press and hold the "①" key within 30 seconds until you hear the "beep" sound, indicating the pairing is complete.

Function Description

- ① Fan On/Off: Turns the fan on or off
- ② Fan Rotation Direction: Toggles the fan's rotational direction
- ③ LED Dimmer: Adjusts the LED brightness when pressed; the signal can be sent continuously for up to 1 minute
- ④ LED Color Selection: Adjusts the LED color when pressed; total of 4 colors
- ⑤ Light On/Off: Turns the light on or off. When the light is on, pressing and holding this button will activate the "LED Off Delay" function
- ⑥ Fan Speed (1-6): Adjusts the fan speed (1-6) when pressed
- ⑦ LED Color Selection Indicator Light: Lights up when the "LED Color Select" button is pressed
- ⑧ Signal Indicator Light: Lights up when any button is pressed

Notices

- When the remote is unable to control the receiver, check remote batteries are in good contact, oriented properly or whether they have run out of use.
- When the remote is unable to control the receiver, please check if other remote control products may be causing interference with each other resulting in poor receiving effect. Removing such articles will normalize the remote control function. (The infrared remote controller is not included).
- Please use this product under applicable voltage. Too low voltage will lead to failure of the remote controller.
- Please remove the batteries if you will not use this product for long periods of time.
- The product can be paired with up to 2 remote units simultaneously.
- Transmission distance: approximately 5 meters.
- Battery requirement : AAA Battery x 2

 
Installation Steps

①




Turn off the main power supply, remove the original power switch, and wrap the fire wire with tape. (If there is an extra 86 type bottom box, do not need to remove the original switch)

②




Use a flat-blade screwdriver to pry the wall control panel

 ③



Install the battery and cover the battery cover

 ④



Insert the wall control into the bottom box

反面210X148MM

NO.22040261

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

使用說明書

在使用本產品之前，請仔細閱讀本說明書。閱讀後，請妥善保存供參考。

型號	EF-34-64A	品牌	EXHALE
----	-----------	----	--------

 - ① 風扇 開/關
- ② 風扇 正/反轉
- ③ 明亮度調節
- ④ 燈色調節
- ⑤ LED 開/關
- ⑥ 風扇速度調整(1-6)
- ⑦ 燈色調節顯示燈
- ⑧ 按壓訊號顯示燈

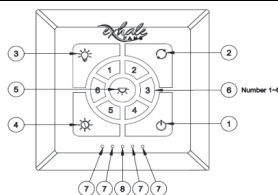

配對方式

- 當風扇電源開啟時，您會聽到「嗶」的一聲
- 遙控器配對：30秒內請長按「①」鍵直到聽到「嗶」聲，即完成配對

功能說明

- ①風扇開/關：開啟/關閉風扇
- ②風扇正/反轉：切換風扇旋轉方向
- ③明亮度調節：長按可調整明亮度，持續時間可達1分鐘
- ④燈色調節：按壓可調整燈色，共4種燈色
- ⑤LED開/關：開啟/關閉LED；開啟時長按至聽到嗶聲，即啟動延遲3分鐘關閉功能
- ⑥風扇速度調整(1-6)：按壓可調整風扇轉速(1-6段)；亦可直接開啟風扇
- ⑦燈色調節顯示燈：按壓【燈色調節】顯示此燈
- ⑧按壓訊號顯示燈：按壓任一按鍵顯示此燈

注意事項

- 當遙控器無法遠程控制接收器時，請檢查遙控器的電池是否接觸良好、安裝正確，或是否已耗盡電量。
- 當遙控器無法遠程控制接收器時，確認是否有其他遙控設備可能造成干擾，導致接收效果不佳。移除此類設備後，遙控功能將恢復正常。
- 請在適用電壓範圍內使用本產品。電壓過低可能導致遙控器無法正常工作。
- 若長時間不使用本產品，請取出電池。
- 本產品最多可同時配對2個遙控器。
- 訊號發射距離：約5m。
- 電池要求：AAA電池×2。

安裝步驟

①



 
關閉主電源，拆除原有的電源開關，並用絕緣膠帶包裹火線

②




使用一字螺絲起子撬開壁控面板

③



安裝電池並蓋上電池蓋。

 ④



將壁控安裝於底盒中

警語

取得實驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。