

*get started*

INSTANT® **COLD BREWER**  
USER MANUAL

Instant®

## Welcome to your new Instant™ Cold Brewer!

Make your morning a little more amazing. Be your own barista and create café-quality drinks.

We hope you fall in love with your Cold Brewer, and enjoy it in your kitchen for years to come.



Download the  
**Instant Brands®**  
**Connect app**  
to access 1000+  
recipe ideas.

## CONTENTS

Important safeguards	2
What's in the box	5
Before you brew	6
Your Instant® Cold Brewer	7
Cold brewing	8
Troubleshooting	10
Care, cleaning, storage	11
Learn more	12
Warranty	14

# **IMPORTANT SAFEGUARDS**

## **⚠ WARNING**

### READ ALL INSTRUCTIONS

#### **Placement**

**DO** operate the appliance on a stable, noncombustible, level surface.

**DO NOT** place the appliance on or near a hot gas or electric burner, or in a heated oven.

#### **General Use**

**DO NOT** use this cold brewer outdoors.

**DO NOT** let the cold brewer operate without water.

**DO NOT** use the appliance for anything other than its intended use. Not for commercial use.

**DO** regularly inspect the appliance and power cord.

**DO NOT** leave the appliance exposed to sun, wind, and/or snow.

**DO** operate and store the appliance above 0°C.

**DO NOT** allow children to operate or play with appliance; this appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities. Close supervision is necessary when any appliance is used near children.

#### **Glass Pitcher Use**

**DO NOT** use the pitcher if it is cracked or chipped.

**DO NOT** use the pitcher if the handle is loose or weakened.

## **⚠ WARNING**

**DO NOT** expose the pitcher to extreme temperature changes, such as adding hot water to the pitcher when it is cold. Doing so may cause the glass to crack.

**DO** make sure the lid is secure on the pitcher before pouring cold brew.

**DO NOT** clean the pitcher with harsh cleansers, steel wool pads or other abrasive materials; doing so can scratch the surface.

### **Care and Storage**

**DO** turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning.

**DO NOT** store any materials in the brewing chamber or glass pitcher when not in use.

### **Power Cord**

This appliance has an earthed plug. To reduce the risk of electric shock: **DO NOT** attempt to modify the plug.

### **Electrical Warning**

The unit contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock. To protect against electrical shock:

**DO NOT** use with power converters or adapters, timer switches or separate remote-control systems.

**DO** disconnect the appliance by first pressing the Start/Cancel button, and then grasping the plug and pulling from the outlet. Never pull from the power cord.

**DO** keep appliance and cord away from children.

To reduce the risk of fire or electric shock, **DO NOT** remove the bottom cover. No user-serviceable parts inside. Repair should be

## **⚠ WARNING**

done by authorised service personnel only.

**DO** regularly inspect the appliance and power cord.

**DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at [sales@cdbgoldair.com](mailto:sales@cdbgoldair.com) or by phone at **0393 655 100**.

**DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.

**DO NOT** tamper with any of the safety mechanisms, as this may result in injury or property damage.

To protect against electrical shock **DO NOT** immerse power cord, plug or the appliance the appliance in water or other liquid.

**DO** plug this appliance into an earthed outlet **ONLY**.

**DO NOT** use the appliance in electrical systems other than 220-240V ~ 50-60Hz.

If a long detachable power-supply cord or extension cord is used:


- The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

- The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

# SAVE THESE INSTRUCTIONS

# WHAT'S IN THE BOX

## Instant® Cold Brewer

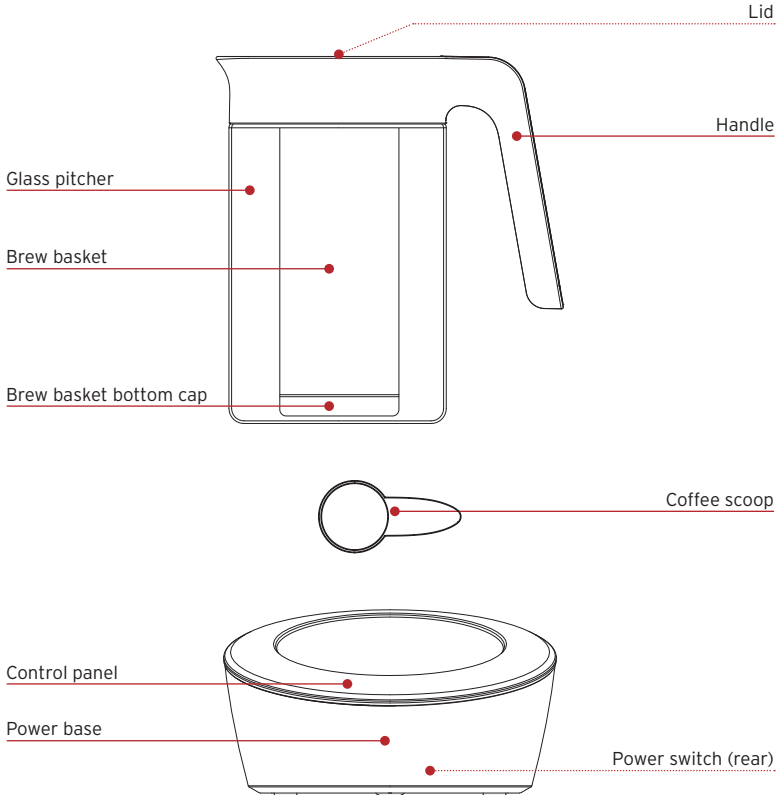

*Illustrations are for reference only and may differ from the actual product.*

### Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live. Be sure to keep this User Manual for reference.

# BEFORE YOU BREW


## Initial setup

1. Remove the Instant® Cold Brewer from the box.
2. Discard excess packaging materials.
3. Ensure the brew basket's bottom cap is securely fastened to the basket.  
*You can unscrew the bottom cap to dispose of grounds and prior to cleaning.*
4. Remove the pitcher lid.
5. Place brew basket through the handle housing, into the glass pitcher.
6. Place the Instant Cold Brewer power base on a dry, stable surface.
7. Place glass pitcher with brew basket onto power base.

## Clean before use

The glass pitcher and handle, lid and brew basket are all dishwasher safe. You can also handwash these pieces using soap and rinsing with warm water.


1. Remove lid from glass pitcher.
2. Use the brew basket handle to lift the brew basket from glass pitcher.
3. Unscrew the bottom cap of the brew basket.
4. Wash the pieces by hand or placing them onto the top rack of a dishwasher.
5. Ensure all pieces are sufficiently dried prior to reassembly and brewing.
6. While unplugged, use a damp cloth to wipe down the power base and control panel.

 **DO NOT** place power base into dishwasher or submerge power base in water.

# YOUR INSTANT® COLD BREWER

## Control panel

The control panel uses flat-touch buttons. To operate, touch lightly without pressing too hard.

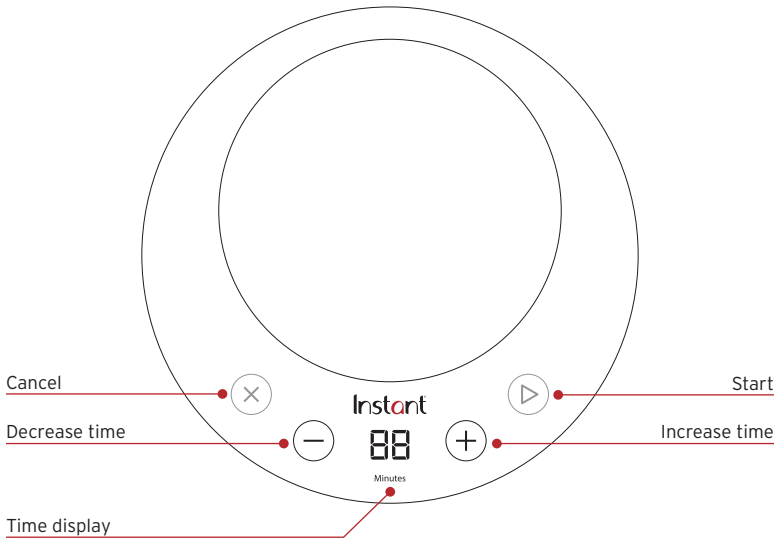

## Plugging in your Instant Cold Brewer

Once you've followed the Initial Setup instructions on page 6, plug the power base into an outlet. The Cold Brewer should power up. If the display does not power on, flip the switch at the back of the power base.

After 2 minutes of inactivity, the display will dim.

# COLD BREWING

## True cold brew

Traditional cold brewing takes up to 24 hours. The Instant Cold Brewer's FlashExtract™ technology delivers delicious, never-heated, café-quality cold brew or iced tea in under 30 minutes.

## Recommended brewing for coffee

We recommend using medium-ground coffee and a 14:1 water-to-coffee ratio. Depending on the size of the grind, the brew basket can hold up to 70 grams of coffee. Adjust coffee to water ratio as well grind consistency to taste. Scoop measurements are for the included scoop.

*DO NOT use fine grind coffee grounds.*

Servings	Coffee	Water	Time
2	3.5 scoops/18 tsp/34 grams	475ml	15 minutes
4	7 scoops/36 tsp/67 grams	950ml	20 minutes

## For delicious coffee

By brewing combining FlashExtract™ technology with overnight brewing delivers delicious cold brew. After the initial brew on the power base, store the pitcher with brew basket inserted into the fridge.

Servings	Coffee	Water	Time
4	7 scoops/36 tsp/67 grams	950ml	5 minutes on power base 12-16 hours in fridge

## For bolder cold brew

The Instant® Cold Brewer allows for a maximum brew time of 30 minutes. Increase the amount of ground coffee and brew time to create a bolder cup of coffee.

## Brewing iced tea

The Instant Cold Brewer can brew iced tea using loose tea leaves (not tea in bags). The brew basket can hold up to 6 teaspoons (2 tablespoons) of loose tea leaves.

*DO NOT use tea bags or loose teas containing large leaves, stems or dried fruits.*

Servings	Loose tea	Water	Time
2	1/2 scoop/2-3 tsp/5g	475ml	20 minutes
4	1 scoop/5-6 tsp/10g	950ml	20 minutes

### For stronger iced tea

The Instant® Cold Brewer allows for a maximum brew time of 30 minutes. Increase the amount of brew time to create stronger iced tea. Some tea varietals take more time to brew than others; green tea and chamomile are likely to take longer to brew.

## How to cold brew

### Prep

1. Plug in and turn on the Instant Cold Brewer.
2. Fill glass pitcher with water. Place glass pitcher onto power base.
3. Fill brew basket with coffee grounds or tea leaves.  
*DO NOT overfill the brew basket. Ensure bottom cap is fastened to brew basket before filling and brewing.*

### Brew

1. Place the loaded brew basket into the glass pitcher, through the handle housing.
2. Place lid onto the glass pitcher.  
*Turn the lid to the closed position, ensuring pour spout is closed.*
3. Use the + and - button on the Flat-Touch panel to set brewing time.  
*You can press and hold the '+' button to add time in 5 minute increments. For stronger coffee, you can increase brew time at any time.*
4. Press the **Start** button to begin brewing.  
*Cancel brewing anytime by pressing the X on the Flat-Touch control panel.*
5. When the timer reaches **00**, brewing is complete.
6. Remove lid and the brewing basket.
7. Unscrew brew basket bottom to discard coffee grounds or tea leaves.
8. Place lid back onto glass pitcher. Turn lid to open pour spout to serve.

## TROUBLESHOOTING

Problem	Cause	Solution
Display shows E1	Agitator at bottom of brew basket is jammed; this can be caused by overfilling with coffee grounds or loose tea, tea leaves that are too large, or tea ingredients such as stems or dried fruit.	<ul style="list-style-type: none"><li>Remove brew basket from pitcher, then remove coffee grounds or loose tea leaves, refill and do not overfill brew basket</li></ul>
Loud noise when brewing	Brew basket is not properly in place	<ul style="list-style-type: none"><li>Cancel brewing program, remove lid and lift the brew basket. Reseat basket through lid, centering the brew basket over the power base</li></ul>
Less water than initially used	Water trapped in brew basket	<ul style="list-style-type: none"><li>Remove and slightly tilt the brew basket to drain trapped water</li></ul>
Brewer stops after a few seconds	Pitcher not placed on power base or brew basket not fully assembled	<ul style="list-style-type: none"><li>Ensure bottom cap of brew basket is fully assembled, brew basket is fully seated through the lid, and the pitcher is properly placed on power base</li></ul>

## CARE, CLEANING, STORAGE

Clean your Instant® Cold Brewer regularly to ensure the best possible flavor and to prevent mineral deposits from building up in the unit.

Always unplug the power base before cleaning. Never use metal scouring pads, abrasive powders, or harsh chemical detergents on any of the cold brewer's parts.

Let all parts dry thoroughly before use, and before storage.

Part/Accessory	Cleaning methods and instructions
Glass pitcher	• Handwash or place on top rack of dishwasher.
Lid	• Handwash or place on top rack of dishwasher.
Brew basket	• Handwash or place on top rack of dishwasher.
Coffee Scoop	• Handwash or place on top rack of dishwasher.
Flat-Touch control panel and power base	• While unplugged, use a damp cloth to wipe down control panel.
Power cord	• <b>DO NOT</b> fold power cord when storing.

 **Be careful:** The power base contains electrical components.

To avoid fire, electric shock, personal injury, and/or property damage:

- **DO NOT** rinse or immerse the power base, power cord, or the plug into water or other liquids.
- Any other servicing should be performed by a qualified service technician.

## LEARN MORE

There's a whole world of Instant® Cold Brewer information and help just waiting for you. Here are some of the most helpful resources.

### Register your product

<https://www.instantpot.com.au/pages/product-registration>

### Contact Consumer Care

[w] [www.instantpot.com.au](http://www.instantpot.com.au)

[e] [sales@cdbgoldair.com](mailto:sales@cdbgoldair.com)

[ph] 0393 655 100

### Instant Brands Connect App with 1000+ recipes

iOS and Android app stores

### Join the community



## Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
CBCM-1000	946 mL glass pitcher	15 W	220-240V ~ 50/60Hz	1.13 kg	cm: 17 L x 20 W x 24.9 H

# WARRANTY



## *one (1) year limited replacement warranty statement.*

**If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:**

**For New Zealand Consumers:** We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.

**For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:**

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect reassembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.

# WARRANTY

## *YOUR WARRANTY DOES NOT COVER:*

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

**This warranty does not replace but is in addition to your statutory rights.**

**This warranty does not apply to accessories supplied with the item.**

**This warranty applies only to the original purchaser and may not be transferred.**

**Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.**

**PLEASE NOTE:** Only the defective product or parts returned to place of purchase will be replaced under this warranty.

