 


Sundu

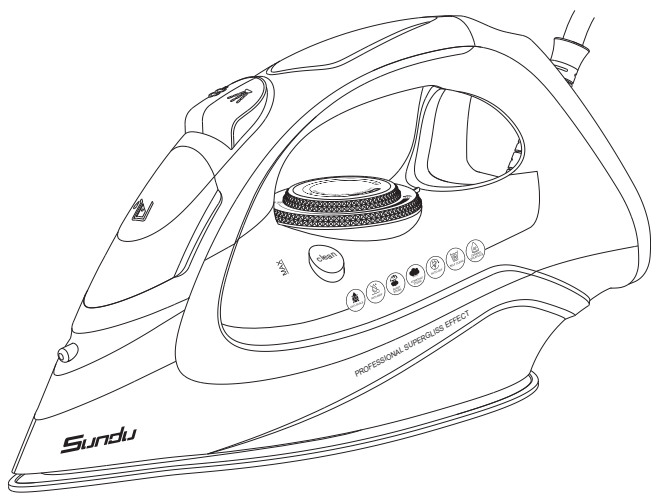

User Manual

1700W Steam Iron

Content

1. Package Contents -----	01
2. Specifications -----	01
3. Product Diagram -----	02
4. Operation Instructions -----	03-06
I. Fill The Water Tank -----	03
II. Dry Ironing -----	03
III. Burst of Steam -----	04
IV. Steam Iron -----	04
V. Anti-Calc System -----	05
VI. Anti-Drip System -----	05
VII. Self-Cleaning -----	06
VIII. Auto Shut Off -----	06
5. Product Care & Use -----	07
6. Warranty & Customer Support -----	08

Thank you for purchasing the Sundu LE-IR006 1700W Steam Iron. Please read this user manual carefully and keep it for future reference. If you need any assistance please contact our support team with your product model number and order number.

Support and after-sale service: support@sunduhome.com

PACKAGE CONTENTS

Sundu 1700W Steam Iron

Cup

User Manual

SPECIFICATIONS

Model	LE-IR006
Voltage	120V 60HZ
Power	1700W
Watertank Capacity	300ml/10.14oz
Power Cord Length	2.44m/8ft
Anti-Drip System	Yes
Anti-Calc System	Yes
Auto Shut-off	Yes
Self-Clean	Yes

PRODUCT DIAGRAM

a: Temperature Dial

 
Nylon

Silk

Wool

Cotton

Linen

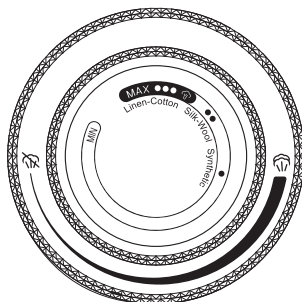

b: Steam Control Dial

Power Cord

Power Indicator Light

Burst of Steam Button

Spray Mist
Button

Thermostat Dial

Water-Filling
Cover

Spray
Nozzle

 
Ceramic Coating
Soleplate

Self-Cleaning
Button

Steam
Control Dial

Water
Tank

Measuring
Cup

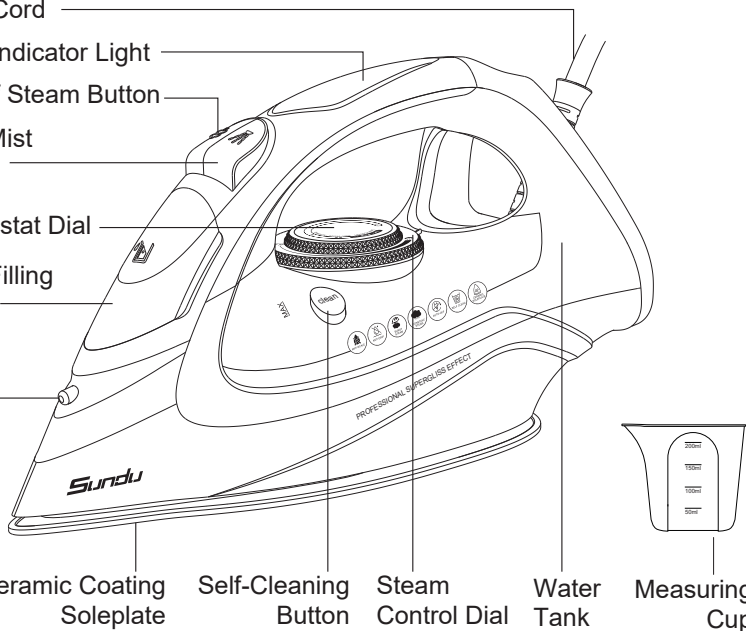


OPERATION INSTRUCTIONS

I. Fill the Water Tank

Before filling the water tank, make sure that the iron is unplugged, and the "Thermostat Dial" is positioned at "MIN", hold the steam iron in horizontal position. Use the included water cup to fill the water tank until it reaches Max Level.

Note:

 - This steam iron is designed to use tap water, However, if the water is very hard, it is advisable to use distilled water. The water tank should be emptied after each use.
- If you empty the water tank after the steam iron has cooled down, set the steam iron upright position on its heel rest, plug it in and set the temperature control dial to the maximum position, heat for 2 minutes. Unplug the steam iron from the power supply.

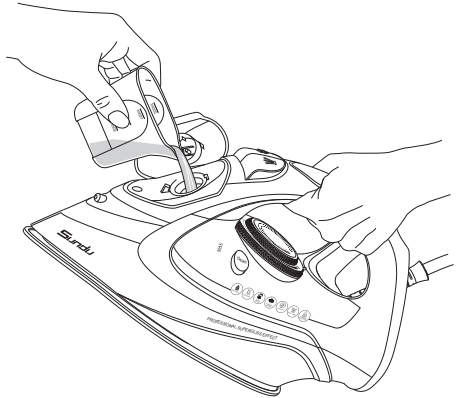

II. Dry Ironing

1. Set the steam control dial to the minimum position.
2. Adjust the ironing temperature as per fabric's requirement.
3. The blue light "on" on the handle indicates that the iron's temperature is increasing steadily, once desired temperature is reached, it will turn to red light automatically.

Caution:

If the steam iron has been used for a long time, it is hot and there is no water. Do not refill it with water until the steam iron cools down.

 
III. Burst of Steam

The burst of steam feature provides additional steam for removing stubborn wrinkles.

Set the dial temperature to the "●/Synthetic", "●●/Silk-Wool" or "●●●/Linen-Cotton/Max" position.

Set the steam control dial to "☒" (☒ = no steam).

When pressing the burst of steam button, steam will go out of the iron soleplate more intensively. To achieve the best burst of steam discharge, make sure that the thermostat dial is set at the max level.

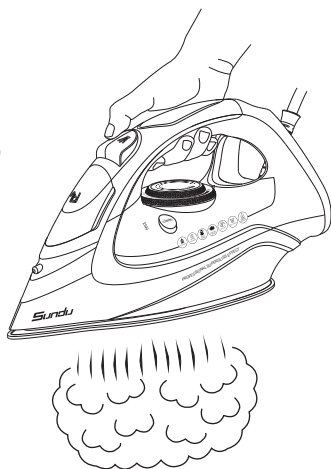




Note:

To avoid water leakage from steam openings, press the burst of steam button with a 4s-5s interval. To avoid dripping, do not hold the burst of steam button longer than 5 seconds.

 IV. Steam Ironing

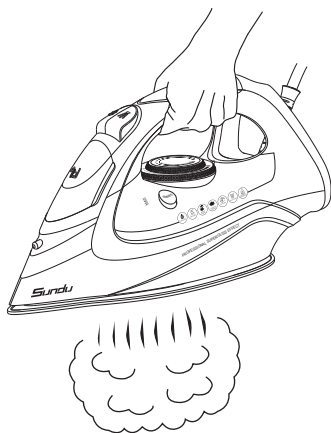1. Fill in the water with water tank as per the instructions in the "Filling with Water" Section.
2. Plug the cord into the outlet.
3. The red indicator light on the handle is always on.
4. Turn the temperature control to "●/Synthetic", "●●/Silk-Wool" or "●●●/Linen-Cotton/Max" position.
5. The blue indicator light on the handle turns on, which indicates that the iron's temperature is increasing steadily, once the desired temperature is reached it will turn to red light.



6. Adjust the steam control dial from "  " to the "  " position.
7. Ceramic Coating Soleplate Temperature Standard:
 - "●/Synthetic": 70-120°C/158-248°F
 - "●●/Silk-Wool": 100-160°C/212-320°F
 - "●●●/Linen-Cotton": 140-200°C/284-392°F
 - "MAX": 175-215°C/347-419°F

Note:

- There is less or no steam when you set the thermostat dial at level 2 (Wool).
- To Prevent water leakage from the soleplate, do not keep the powerful steam button pressed for more than 5 seconds.

V. Anti-Calc System

A special resin filter inside the water reservoir softens the water and prevents scale build-up in the plate. The resin filter is permanent and does not need replacing.

Note:

Use tap water only. Distilled and demineralized water makes the "Zero-Calc", anti-calc system ineffective by altering its physicochemical characteristics.

Do not use chemical additives, scented substances or decalcifiers.

Failure to comply with the above-mentioned regulations leads to the loss of guarantee.

VI. Anti-Drip System

With the anti-drip system, you can perfectly iron even the most delicate fabrics. Always iron these fabrics at low temperatures. The plate may cool down to the point where no more steam comes out, but rather drops of boiling water that can leave marks or stains. In these cases, the Anti-drip system automatically activates to prevent vaporization, so that you can iron the most delicate fabrics without risk of spoiling or staining them.

VII. Self-Cleaning

If the water in your area is hard (contains excessive dissolved mineral), self-cleaning should be done every two weeks.

Your iron should be unplugged before self-cleaning using the steam control level, set the steam level to "☹☹" (☹☹ =No Steam).

Fill the water tank to the max level. Do not add any cleaning solutions inside the water tank.

Before plugging in your iron, make sure that the thermostat dial is set to "Max". Now allow the iron to heat up.

The blue light turns off once the iron reaches its optimal working temperature, turn the thermostat dial to Min and disconnect the iron from the power line.

Firmly hold the iron over the sink and press/hold the self cleaning button for several seconds.

Shake the iron back and forth while pressing the self-cleaning button. Steam and boiling water will expel along with impurities and other contaminants.

Note:

Avoid any contact with the iron during the cleaning process and firmly hold it above the sink to prevent any burns.

VIII. Auto Shut Off

1. If the iron is left unused in upright position for 8 minutes, the red light and blue light will flash alternately signaling that the iron has automatically shut off.
2. If the iron is left flatwise unused for 30 seconds, the red light and blue light will flash alternately signaling that the iron has automatically shut off.
3. Move the iron back and forth on the fabrics to auto restart, the light will immediately stop flashing.

Vertical Steam

By holding the iron in a vertical position, you can apply burst of steam to remove creases from curtains or any type of hanging fabrics.

STORAGE

Unplug the appliance from the power supply, empty the water tank (do it after each use) and allow steam iron to cool down completely.

Wrap the cord around the heel rest.

To protect the soleplate, place the steam iron in an upright position on its heel rest.

PRODUCT CARE & USE

1. Before switching it on check that voltage indicated on the rating label corresponds to the main voltage in your home.
2. For home use only, Do not use for industrial purposes. Use the steam iron only for its intended use.
3. Do not use it outdoor or in damp area.
4. Do not immerse the steam iron and cord in water or other liquids.
5. Never pull the cord while disconnecting from the power outlet; instead, grasp the plug only and pull to disconnect.
6. Do not allow the cord to touch sharp edges and hot surfaces.
7. Always unplug the steam iron from the power supply when filling with water or emptying and when not in use.
8. Do not operate the steam iron with damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. To avoid risk of electric shock, do not disassemble the steam iron, take it to a service center for examination, repair or mechanical adjustment.
9. This appliance is not intended to use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
10. Do not leave the iron unattended while hot or connected or on an ironing board. If ironing is interrupted, stand iron on heel rest only, do not place the steam iron on metal or rough surfaces.

Note: To avoid circuit overload, do not operate another high wattage appliance on the same circuit.

WARRANTY & CUSTOMER SUPPORT

For questions, support, or warranty claims, please contact our Sundu support team with your product model number and order number.

Support and after-sale service: support@sunduhome.com

* Please note, can only provide after sales service for products purchased directly from. If you have purchased from a different seller, please contact them directly for service or warranty issues.

Model: LE-IR006

Sunduj

1700W Steam Iron

E-mail: support@sunduhome.com

MADE IN CHINA