


Function Key Mapping Table

Before using menu controls, press and hold the Menu button to unlock the child lock.

Smart Display Version	Control Panel	 Double-press to pause (the child lock does not need to be unlocked; use in an emergency).
		 Press and hold Reset.
		 Press Confirm.
		 Press to go back; press and hold to clear network settings.
		 Press to enter the menu; press and hold to unlock the child lock.
	Menu Function	Clean Waste  Press the Menu button 1 times.  Then press the "Confirm" button.
		Level Litter  Press the Menu button 3 times.  Then press the "Confirm" button.
		Empty Litter  Press the Menu button 4 times.  Then press the "Confirm" button.
		Auto Mode  Press the Menu button 5 times.  Then press the "Confirm" button.
		Deodorize  Press the Menu button 2 times.  Then press the "Confirm" button.
	Smart Display	Connected  Not connected  Waste tank full 
		Child lock enabled  Child lock disabled  Nighttime Do Not Disturb 

HT02 User Manual

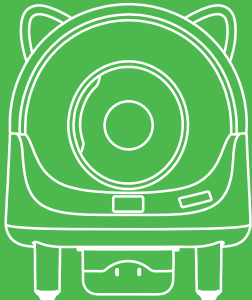

Smart Cat Litter Box


Every litter visit — clean
quiet, and worry-free

Suitable Pet: Cats (1–15 kg)


Rated Voltage: DC 12 V Rated Power: ≤18 W Connection: 2.4 GHz Wi-Fi

One QUICK START

1. Unpack the box, take out the product and complete assembly. Place the litter box on a flat, hard floor; extend all four legs and make sure all four foot pads are fully unfolded and in contact with the ground.
2. Open the accessory box, take out the power adapter, waste bags and other accessories, and confirm that the waste bag is properly installed.

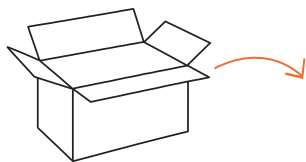

3. Pour litter in from the top: tofu / mixed litter is recommended not to exceed 4 kg, and mineral litter not to exceed 5 kg. The litter level should stay between the MIN and MAX lines, then put the top cover back on.

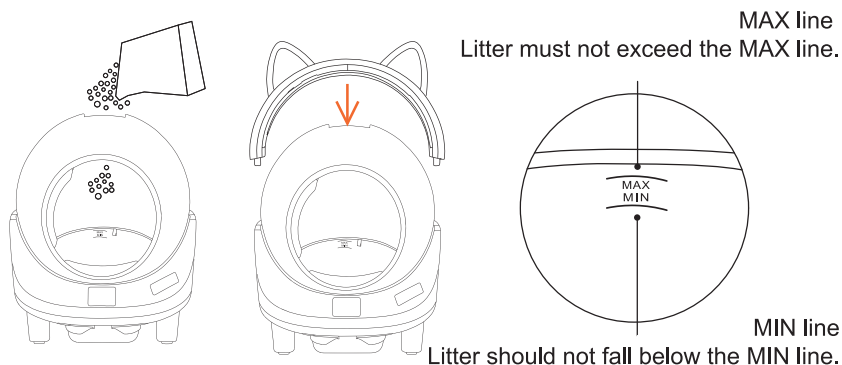

4. Plug in the power and wait for the unit to finish its self-check and reset. Do not move the machine during the self-check.
5. Once the self-check is complete, the unit enters Auto Sensing Cleaning Mode by default, and your cat can begin using it.

Tip: For first-time use, mix a small amount of old litter into the new litter to help your cat adapt to the new toilet more quickly.

Two PLACEMENT

1. Use indoors on a dry, flat, hard floor.
2. Do not place the unit on carpet, thick mats, or uneven tiles, as this may affect weighing and detection.
3. Leave at least 30 cm of clear space in front of the unit to prevent nearby objects from triggering the radar sensor.
4. Unplug the unit before moving or cleaning it, or before leaving it unused for an extended period.




Three APP & WI-FI

1. Scan the QR code or search for the “Smart Life ”app. Download the app, then register and sign in.



2. Connect your phone to a 2.4 GHz Wi-Fi network and enable Bluetooth and location permissions.

3. Press and hold the Menu button for 2 seconds to unlock the child lock. Then press and hold the Back button for 3 seconds until the Wi-Fi icon on the display flashes, indicating pairing mode.

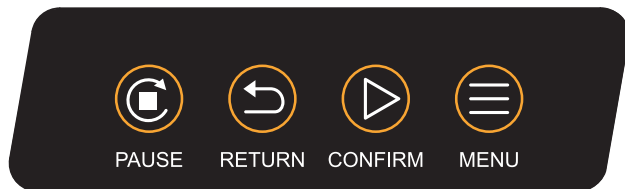

4. Open the app, select Add Device, and follow the on-screen instructions to enter the Wi-Fi password and complete the connection.

If pairing fails, check the following in order: (1) the phone is connected to 2.4 GHz Wi-Fi—5 GHz is not supported; (2) the Wi-Fi password is correct; (3) Bluetooth, location, and Wi-Fi are enabled; (4) the Wi-Fi icon is flashing; and (5) the signal is strong enough. If necessary, move the unit closer to the router and try again.

Four DAILY USE · 13 Common Operations

1-1.Auto Mode The unit enters Auto Cleaning mode by default when powered on.

After the unit detects that a cat has used the litter box and left, it first levels the litter. Once leveling is complete, cleaning begins automatically after the configured delay. The default cleaning delay is 3 minutes.

For soft stool: Increase the cleaning delay to reduce sticking inside the drum.

1-2.Turning Auto Mode On or Off

Press and hold the Menu button to unlock the child lock. Press Menu four times to move the cursor to Auto Mode (Figure 2), then press Confirm to turn the function on or off. You can also use the Auto Mode switch in the app.

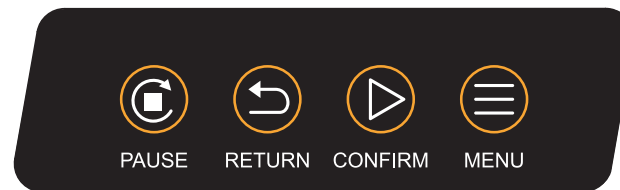


Fig. 1

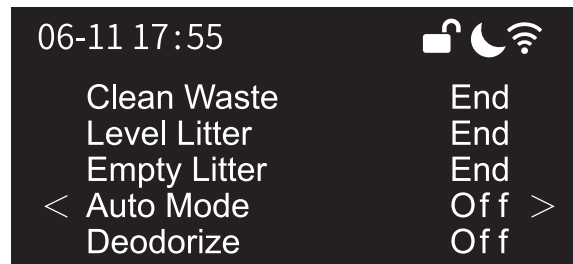


Fig. 2

2. Clean Waste

Press and hold the Menu button to unlock the child lock. Press Menu once to move the cursor to Clean Waste (Figure 2), then press Confirm. You can also tap Clean Waste in the app to start one cleaning cycle immediately.

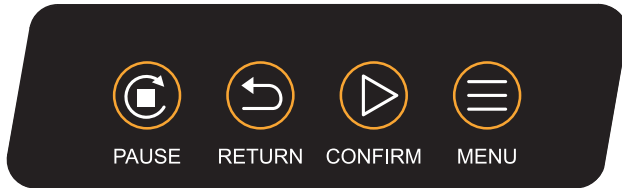


Fig. 1

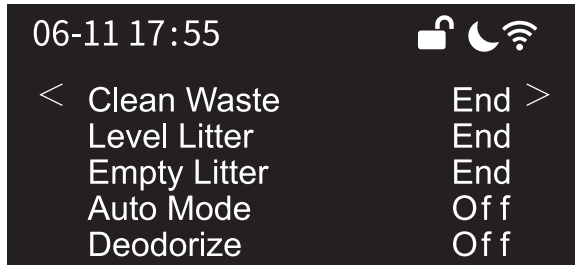


Fig. 2

Warning: If there is a kitten weighing less than 1 kg, a pregnant cat, or a nursing cat in the home, Auto Cleaning mode must be turned off. Clean manually only after confirming that it is safe to do so.

3. Deodorize

Press and hold the Menu button to unlock the child lock. Press Menu five times to move the cursor to Deodorize (Figure 2), then press Confirm. You can also tap Deodorize in the app to start the deodorizing function immediately.

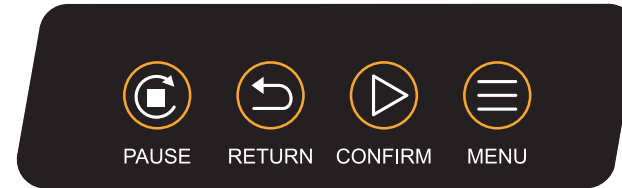


Fig. 1

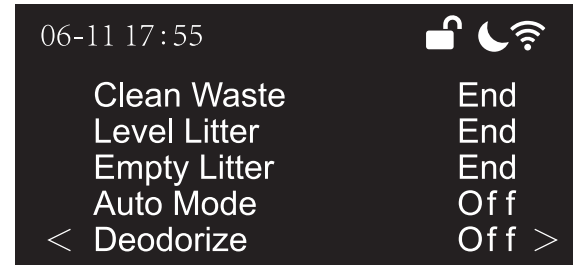


Fig. 2

Note: After every cleaning cycle, Deodorize mode runs automatically for 30 minutes.

4.Adding Litter

When the litter level falls below the MIN line, refill it promptly. After adding litter, calibrate the unit using either method below:

1. Disconnect and reconnect the power. Alternatively, tap Reset in the app. The unit will immediately level the litter and perform a self-check, then enter Auto Cleaning mode by default.
2. Press and hold the Menu button to unlock the child lock. Press Menu twice to move the cursor to Level Litter (Figure 1), then press Confirm. You can also tap Level Litter in the app to level the litter immediately.

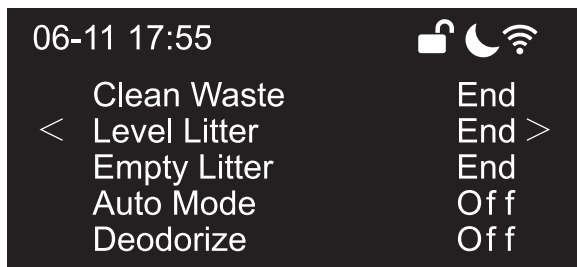


Fig. 1

Tip: Do not fill above the MAX line. Excess litter may cause clean litter to be carried into the waste drawer during cleaning.

5. Emptying the Litter

First install an empty waste bag and make sure the remaining litter level is below the MIN line. Press and hold Menu to unlock the child lock. Press Menu three times to move the cursor to Empty Litter (Figure 2), then press Confirm. You can also tap Empty Litter in the app. After emptying is complete, replace the waste bag and add fresh litter.

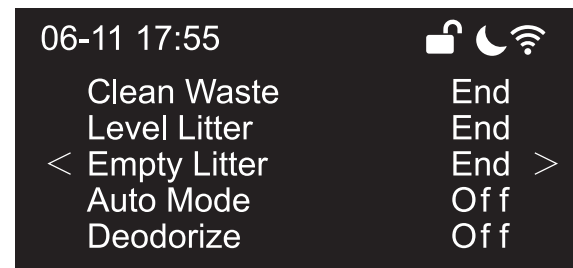



Fig. 2

6. Screen Sleep

If the display light disturbs sleep at night, enable Screen Sleep in the app to turn off the display.

7.Replacing the Waste Bag

Replace the waste bag every 3–5 days. Replace it more frequently in multi-cat households or during hot weather. Replace it immediately if the waste drawer is nearly full or has a noticeable odor.

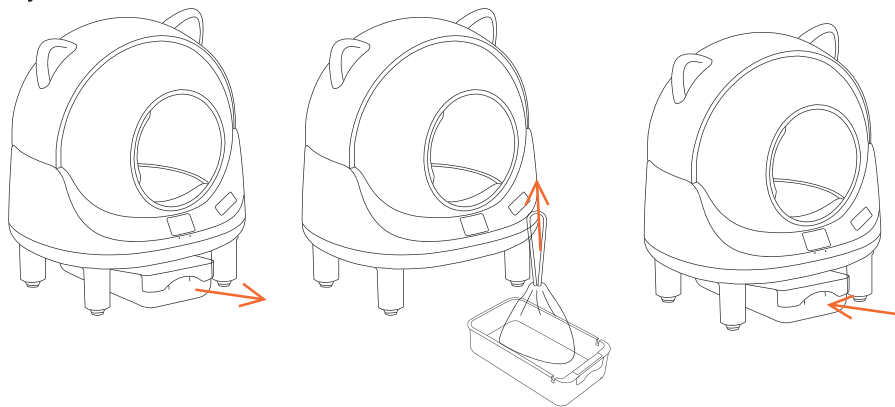

1-1. Pull out the waste drawer.

1-2. Remove the used waste bag and install a new one.

1-3. Slide the waste drawer back into place.

8. Radar


If there is insufficient space or an obstruction in front of the unit, you may turn off the radar in the app settings. Before doing so, make sure the unit can still be used safely without radar detection.

9. Child Lock

The child lock is enabled by default. Press and hold the Menu button to unlock it. You can also enable or disable it in the app settings.


10.Scheduled Cleaning

Open the app and tap Scheduled Cleaning. Set the cleaning time and select the days to repeat. Select Monday through Sunday to run the schedule every day.

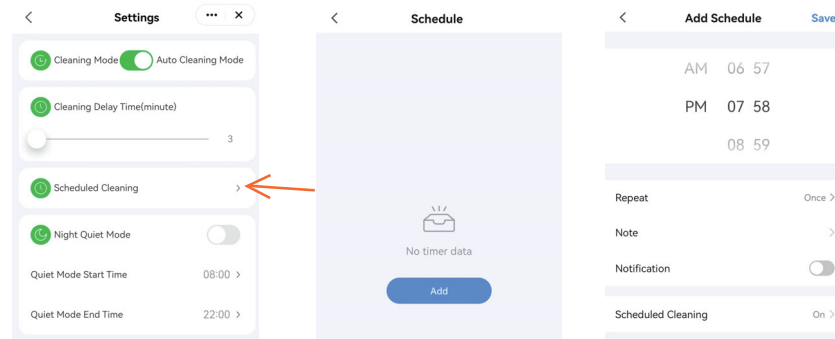

11. Night Quiet Mode

Open the app settings, set the nighttime quiet period, and turn on Night Quiet Mode.

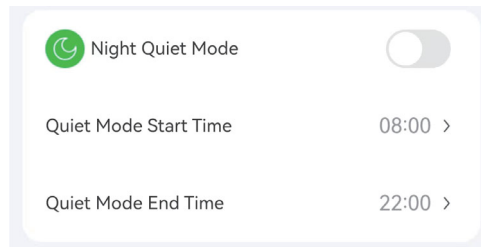

12.Reset

If the unit becomes stuck or after litter has been added, tap Reset in the app (Figure 1). The unit will perform another self-check and will be ready for normal use when the check is complete.

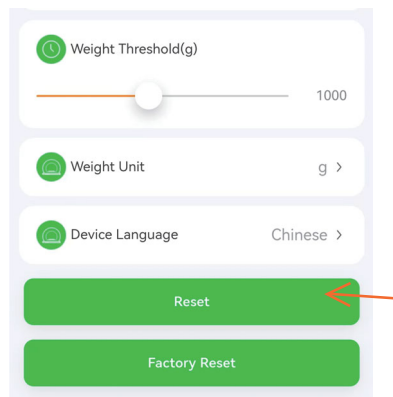


Fig. 1

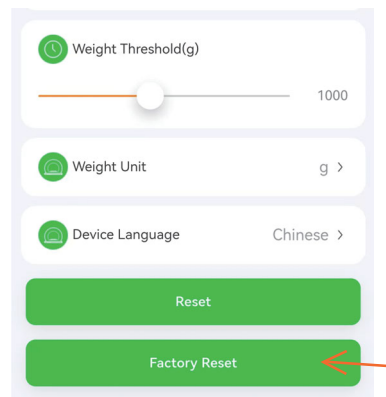



Fig. 2

13. Restore Factory Settings

If the current settings no longer meet your needs, open the app settings and tap Restore Factory Settings (Figure 2). The unit will return to its factory-default settings

Five **CLEANING & CARE**

1. Disconnect the power before washing the drum.

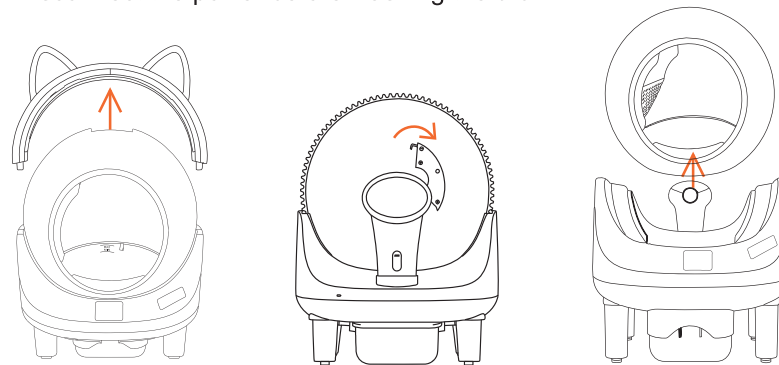

1-1. Remove the top cover. 1-2. Open the locking latches. 1-3. Remove the drum.

After washing, allow it to dry completely, reinstall it on the base, reconnect the power, and wait for the self-check to finish.

Six TROUBLESHOOTING

Q: Why does the unit remain in self-check or running status?

A: The drum may not be installed correctly, or a foreign object may be blocking a sensor. Disconnect the power, remove and inspect the drum, reinstall it correctly, and reconnect the power. If the problem continues, contact after-sales service.

Q: Why does a cleaning cycle take so long?

A: Low-speed operation reduces noise and litter loss. A complete cleaning cycle takes approximately 7 minutes. Brief reverse rotation during the cycle is normal.

Q: Why does clean litter enter the waste drawer?

A: Too much litter has usually been added. Keep the litter level between the MIN and MAX lines.

Q: Why is the cat's weight inaccurate?

A: Make sure the unit is on a hard, level floor and that all four support feet are in contact with the floor. After adding litter or moving the unit, reconnect the power or run Reset in the app.

Seven SAFETY

Use only the original power adapter. Never immerse or rinse the main base. Do not place the unit in direct sunlight, in a damp area, or near fire or heat sources.


Do not place heavy objects on top. Do not remove the drum or forcibly move the unit while it is operating.

Children must be supervised by an adult when using the product.

Kittens weighing less than 1 kg, pregnant cats, and nursing cats must not use Auto Cleaning mode.

If you notice unusual noise or odor, water ingress, or a failure to reset, stop using the unit and contact the seller or after-sales service.

Eight SPECIFICATIONS

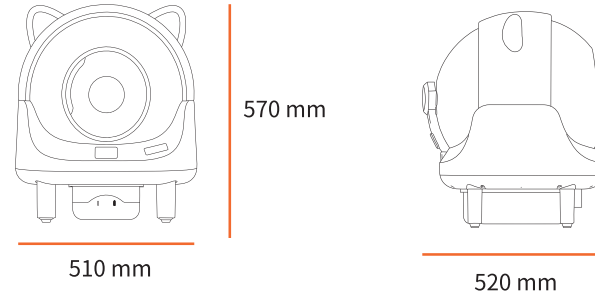

Product Name: Smart Litter Box

Model: HT02

Units per Carton: 1

Material: ABS

40 ft High-Cube Container: 420 cartons

Net Weight: 8 kg

Gross Weight: 11 kg

Suitable for: Cats weighing 1–15 kg

Product Dimensions: 510 × 520 × 570 mm

Package Dimensions: 520 × 560 × 555 mm

Certifications / Compliance: CE, FCC, RoHS

Package Contents: Litter box ×1, waste bags ×2 rolls, decorative ears ×2, power adapter ×1, power cable ×1, user manual ×1, top covers ×2.



FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.