




Use machine screws and receivers for metal or hollow doors only. Not included with all models.



Utilice tornillos de máquina y receptores para puertas metálicas o solo para puertas huecas. No incluido en todos los modelos.

Utilisez des vis mécaniques et des récepteurs uniquement pour le métal ou les portes creuses uniquement. Non inclus sur tous les modèles.

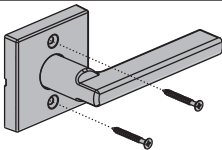

58612-002 rev 02
788 RLVR LVR BP

Copyright © 2026 ASSA ABLOY Americas Residential Inc. All rights reserved.

Copyright © 2026, ASSA ABLOY Americas Residential, Inc. Todos los derechos reservados.

Droits d'auteur © 2026, ASSA ABLOY Americas Residential, Inc. Tous droits réservés.