

说明书

 7479C

尺寸：14*14cm

材质：200g铜板覆亚膜

ELECTRIC KETTLE

azeus



INSTRUCTION MANUAL

INSPIRE BRIGHTER LIVING

AZEUS

ACTIVATE YOUR 5-YEAR WARRANTY & EXCLUSIVE GIFT

Register within 7 days after receiving your new product.

Make sure you do this NOW to ensure your purchase is 100% covered.

All we need is your name, email and purchase details... that's it!

It literally takes only 2 minutes.

REGISTER ONLINE NOW!

→ <http://azeus.net/warranty/>



CLAIM YOUR FREE GIFT

Step 1

Share Your Awesome Using Experience By Writing Honest Amazon Product Review

Step 2

Contact Us: azeus@claimthegift.com



Step 3

Choose one you like:



Kitchen Scale



\$10 Amazon Gift Card



or

1 ATTENTION

PLEASE PAY ATTENTION TO THE FOLLOWING BEFORE USING:

1. Check and confirm that the household power voltage complies with the rated voltage of this appliance, and only use this appliance with an earthed power socket.
2. Only use this appliance on a flat and solid surface.
3. Keep the appliance away from fire, other household appliances that generate heat, and combustible articles.
4. Keep appliance and power cable out of reach of children, so as to avoid scalding or electric shock.

SAFETY PRECAUTIONS

The appliance must not be immersed in water.

- This appliance must not be immersed in water.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - If the power cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.
1. This appliance is only for the purpose of boiling/heating water and is not to be used for the cooking or heating of any food.
 2. This kettle can only be used with the supplied power base and shall not be used with the base of other products . Likewise, the power base supplied with this kettle shall not be used with other products.
 3. The kettle cannot be lifted off the base as a means of disconnecting power to the kettle. Please ensure proper use of the power switch.
 4. During filling with water, the maximum water level mark cannot be exceeded.
 5. This appliance features a boil-dry protection device, however, the user shall take precautions to prevent this from happening, so as to extend the service life of the appliance.

3 SAFETY PRECAUTIONS

6. During operation, the surface of kettle's body will become extremely hot. Only touch, hold or lift the kettle by its handle.

Users shall comply with the above safety precautions



WARNING

Electric Shock Hazard

Failure to follow these instructions can result in electric shock, fire, or death.


USE INSTRUCTIONS

If the kettle is used the first time or it has not been used for long time, it is required to fill the kettle with water to the maximum level, then boil the water once or twice so as to clean it, and then pour out the water. This water should be discarded and not drunk.

1. Open the kettle lid, remove the kettle from the power base and fill with clean water. Ensure water does not exceed the maximum water level but ensure that it is higher than the minimum level.




2. Close the kettle lid properly and place it on the power base.

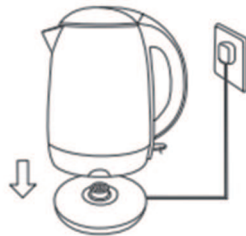

5 USE INSTRUCTION


3. Insert plug into power supply and press the switch to start boiling. The indicator lamp will light up.

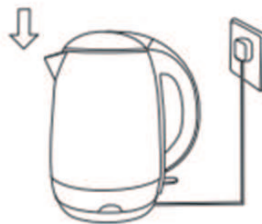

4. After it boils, the kettle will shut-off automatically.



5. Lift the water kettle from the power base and pour out water for drinking

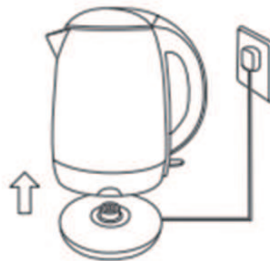

6. Only boil the amount of water that you need. Too much water may cause unnecessary waste.
7. If the kettle is not used for long periods, pour out the remaining water and leave the kettle to dry.
8. Ensure the outside of the kettle and the plug and socket are dry before use.

CLEANING OF THE KETTLE

The kettle body and base cannot be cleaned by putting them into water.

To extend the service life of kettle, the mineral sediment inside the kettle should be cleaned on regular basis. Before cleaning, it is required to disconnect from power and ensure the kettle has cooled down.

Do not clean the inside of the kettle or its outside surface with steel wire or chemical detergents.

CLEANING METHOD

1. Fill the kettle with 0.5 liter of edible white vinegar and soak it for more than 1 hour.
2. Pour out the vinegar from the kettle and clean the residual sediment with a wet cloth.
3. Fill the kettle with water, boil it and then pour out the water. Rinse the kettle with clean water 4 or 5 times. The kettle can then be used as normal again.
4. If necessary, repeat the above operation several times.
5. The outside of kettle can be wiped with a damp cloth.

7 TROUBLESHOOTING

Problem	Possible solution
The kettle and indicator light do not work when the power switch is turned on	<ul style="list-style-type: none">• Make sure the kettle is seated properly on the base and that the base is connected to a functioning electrical outlet.• If the problem persists, please contact customer support.
The water is boiling, but the power switch and indicator do not turn off.	<ul style="list-style-type: none">• The auto-shut off function does not operate properly if the lid is not completely closed. Disconnect power, allow the kettle to cool down, then make sure that the lid is properly locked into place.• If the problem persists, please contact customer support.
The kettle will not turn on.	<ul style="list-style-type: none">• Make sure that the kettle is seated properly on the base and that the base is connected to a functioning electrical outlet.• Water or debris on the bottom of the kettle or on the base may interfere with the functioning of the kettle. Be sure that the bottom of the kettle and the base are dry and free of debris.• If the problem persists, please contact customer support.

TROUBLESHOOTING 8

Problem	Possible solution
There are mineral deposits inside the kettle.	<ul style="list-style-type: none">• A certain amount of scale build-up is normal after long periods of use and is caused by minerals contained in hard water. The best way to prevent mineral deposits is to use distilled water in the kettle.• To remove deposits, try filling the kettle with water and adding a few slices of lemon, then boiling. If this does not work, see the "CLEANING METHOD" section of this user manual .• If the problem persists, please contact customer support.

azeus



Made in China