

JVC

Instruction Manual

Wireless DAB+/MP3/CD Boombox with Cassette

RC-D322B



Safety Warnings

Boombox

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/ electric fires.
- Avoid exposure to direct sunlight and other sources of heat.
- Attention should be drawn to the use of apparatus in moderate climates.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.

- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket before a lightning storm.

Mains Adapter Cable

- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.



The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Mains Adapter

- The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket. In the interests of safety and to avoid unnecessary energy consumption, never leave the adaptor plugged in the mains socket while unattended for long periods of time. Disconnect the adapter from the power supply.



Use only power supplies listed in the user instructions.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.
- Attention should be drawn to the environmental aspects of battery disposal.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not ingest the battery. Chemical Burn Hazard.
- Keep new and used battery away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.



Supervision

- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Class 1 Laser Product

This unit utilises a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



- Before moving the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is not in use.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack devices, heat from other devices may affect the performance of the unit.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

~ **AC voltage:** This symbol indicates that the rated voltage marked with the symbol is AC voltage.

≡ **DC voltage:** This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Useful Information and Licences

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.
UK: 0344 561 1234
IRE: 0818 810575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only) Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Currys Group Limited is under license. Other trademarks and trade names are those of their respective owners.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment. We continually strive to improve our products; specifications may change without prior notice.

For advice on where to purchase accessories, please contact the store where you purchased your equipment.

All trademarks are the property of their respective owners and all rights are acknowledged.

UK Representative

Currys Group Limited (No. 504877)
Currys Newark Campus, Long Hollow Way, Newark, NG24 2NH, UK
<https://www.currys.co.uk>

EU Representative

Currys Ireland Limited (No. 259460)
3rd Floor Office Suite, Omni Park SC, Santry, Dublin 9, Republic of Ireland
<https://www.currys.ie>

UK & EU Contact details: business.standards@currys.co.uk

This product is distributed and warranted exclusively by Currys Group Limited.
"JVC" is the trademark of JVC KENWOOD Corporation,
used by Currys Group Limited under license.

(Safety-JVC Boombox with Bluetooth-260513V7)

Contents

Unpacking	5
Product Overview	6
Front View	6
Rear View	6
Top View	7
Power Source	8
Battery Power	8
Battery Life (Approximate Hours)	8
Knowing when to Replace the Batteries	8
Mains Power	9
Connections	10
AUX Connection	10
Using Headphones	10
Playing MP3 audio files from USB Device	11
General Operation	11
Powering ON/OFF	11
Selecting Modes	11
Adjusting the Volume	11
Auto Setting of the Clock	12
Time Update Setup	12
Manual Setting of the Clock	12
Setting the Alarm Timer	13
Deactivate the Alarm Timer	13
DAB Operation	14
Full Scan	14
Manual Scan	14
Secondary Services	14
Presetting Stations	14
Recalling a Preset Station	15
DRC (Dynamic Range Compression)	15
DAB Display Modes	16
FM Operation	17
Auto Scan	17
Manual Scan	17
For Better Reception	17
Presetting Stations	17
Recalling a Preset Station	17
FM Display Modes	18
CD/MP3 CD Operation	19
Compatible Disc Types	19
Playback	19
Pause Playback	19

Stop Playback	19
Skip to Another Track	19
Fast Forward and Fast Reverse	19
Select an Album (MP3).....	20
Repeat Playback.....	20
Programme Setting.....	20
Programme Cancel.....	20
Cassette Playback.....	21
Fast Forward/Rewind.....	21
Bluetooth® Operation	21
AUX Operation	22
USB Operation	22
Skip to Another Track	22
Fast Forward and Fast Reverse	22
Repeat Playback.....	22
Programme Setting.....	23
Programme Cancel.....	23
Maintenance	24
Cleaning the Unit / Cassette Compartment.....	24
Handling Discs.....	24
Cleaning Discs.....	24
Storing Discs.....	24
Hints and Tips	25
Product Fiche and Specifications	26
Mains Adapter.....	27

Thank you for purchasing your new product.

 
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

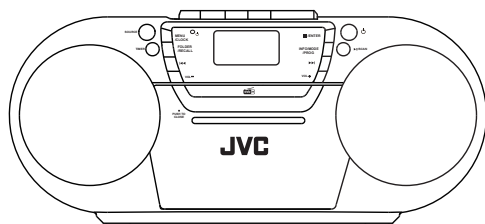


Main Unit

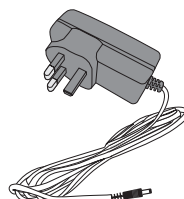 

Mains Adapter

 

Instruction Manual

 


Safety Warnings




- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- If you require additional assistance:
For UK, please call our UK Call Centre on **0344 561 1234**.
For Ireland, please call our Ireland Call Centre on **0818 810575**.

Product Overview

 Front View

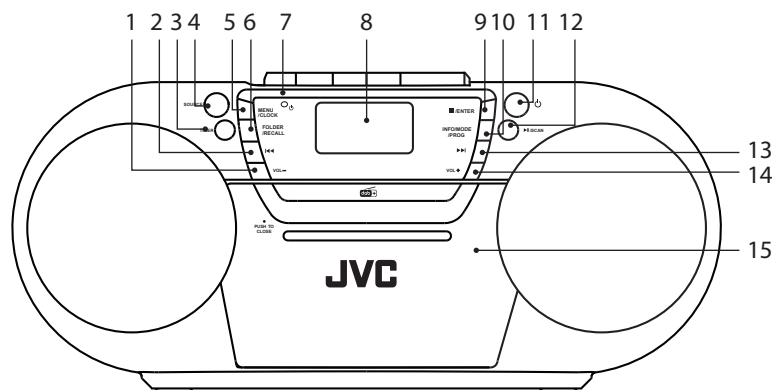


Rear View

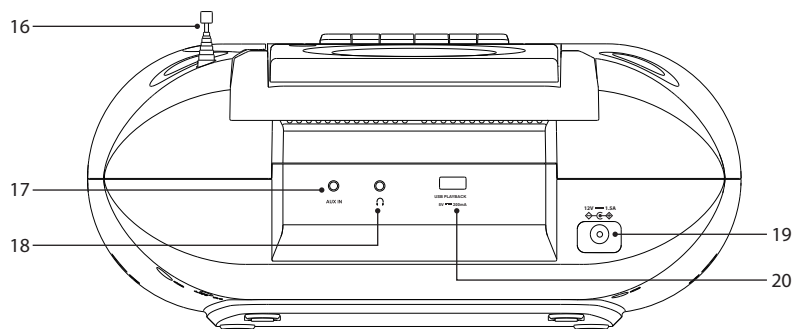 

- | | |
|----------------------------------|---|
| 1. VOL- Button | 11. ⏻ ON/OFF Button |
| 2. ⏮ Button | 12. ⏭/SCAN Button |
| 3. TIMER Button | 13. ⏭ Button |
| 4. SOURCE Button | 14. VOL+ Button |
| 5. MENU/CLOCK Button | 15. Cassette Compartment Door |
| 6. FOLDER/RECALL Button | 16. Aerial |
| 7. ⏻ Standby Indicator | 17. AUX IN Socket |
| 8. Display | 18. 🎧 Headphones Socket |
| 9. ■/ENTER Button | 19. 12V 1.5A ⚡ Socket |
| 10. INFO/MODE/PROG Button | 20. USB PLAYBACK 5V 200mA ⚡ Socket |

 Top View

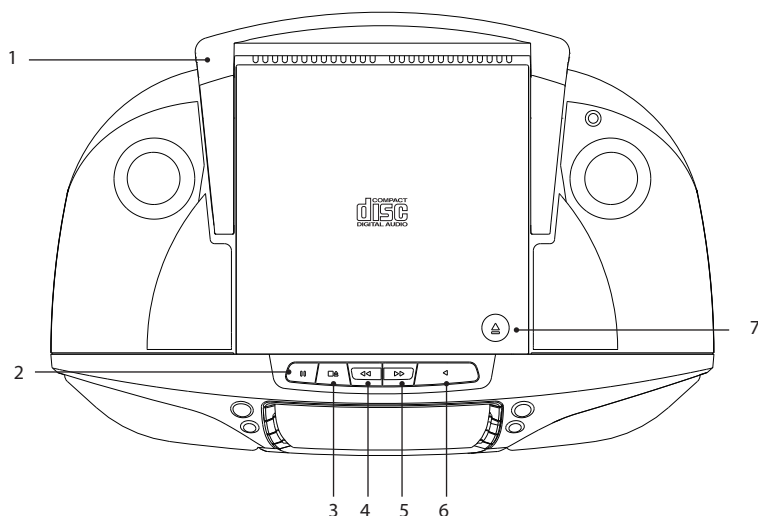

1. **Handle**
2. **|| Pause Button**
Press to pause cassette playback. Press again to resume.
3. **■ / ▲ Stop/Open Button**
 - Press to stop cassette playback.
 - Press to release the cassette door.
4. **⏭ Button**
Press to fastforward in **TAPE** mode.
5. **⏮ Button**
Press to fastbackward in **TAPE** mode.
6. **▶ Play Button**
Press to start cassette playback.
7. **▲ Open Button**
Press to open/close the CD Compartment Door



 
- Visible and invisible laser radiation. If the cover is open, do not look at the beam.
- High voltage! Do not open. You run the risk of getting an electric shock.
- The machine does not contain any user-serviceable parts.
- Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

Power Source

Whenever convenient, use the mains adapter if you want to conserve battery life. Make sure you remove the mains adapter from the unit and mains socket before inserting batteries.

Battery Power

1. Open the battery door and insert 8 batteries, type UM-2 or C-cells (not included) with the correct polarity as indicated by the “+” and “-” symbols inside the compartment.
2. Replace the battery door. Make sure the batteries are firmly and correctly in place. The unit is now ready to operate.

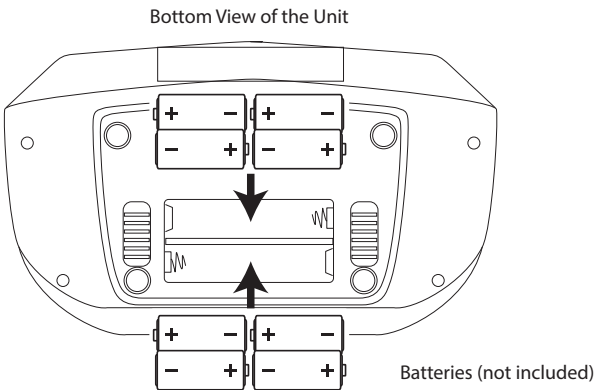

Battery Life (Approximate Hours)

Battery Life	7 hours
--------------	---------

Knowing when to Replace the Batteries

- When the batteries become weak, the sound becomes weak and distorted.
- When the batteries are completely exhausted, the unit will be turned off.
- When the battery power level is low, the display may flash.



Using your radio at high volume might reduce your battery life.



Handling the Batteries

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause personal injury or damage to property.
- Install the batteries correctly by following the polarity (+ and -) indications in the battery compartment.
- Use only the types of the batteries which are indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of the used batteries as domestic waste. Dispose of them in accordance with local regulations.
- If you are not going to use the unit for a long time, remove the batteries to avoid damage from battery leakage and corrosion.



- Always switch the unit off after use to conserve the battery life.
- The display will show **LOW battery** when the batteries power almost runs out. Please replace new batteries.
- In Battery mode, after switching the unit back to **Standby** mode, the ⏻ Standby Indicator will light up for about 5 minutes, and then it will turn off and the display will go blank for battery saving.

 
Mains Power



Always check you have completely switched off the unit, before you change or disconnect the power supply.

1. Check that the power voltage shown on the rating label located on the bottom of the unit, corresponds to your local power supply. If it does not, consult your dealer or service centre.
2. Connect the cable of the mains adapter to the **12V 1.5A** ⚡ socket, and its plugs to the mains socket. The unit is now connected and ready for use.
3. To switch the unit off completely, withdraw the mains adapter from the mains socket.
4. Install the unit near a mains socket where the mains adapter can be easily reached.

Rear View of the Unit

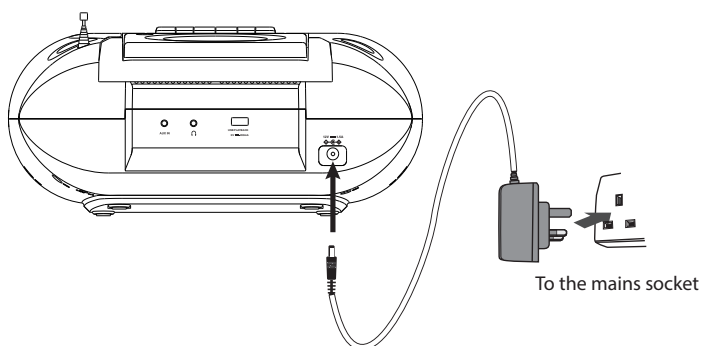


Disconnect the mains adapter from the mains socket to protect your unit during heavy thunderstorms. Children could seriously injure themselves as the free end of the adapter may still be live if only the connector is removed from the mains socket at the back of the unit.

Connections


AUX Connection

 Insert one end of 3.5 mm to RCA stereo audio cable (not included) or 3.5 mm to 3.5 mm stereo audio cable (not included) to the **AUX IN** socket of the unit, and the other end to the audio output socket(s) of your audio device (not included).

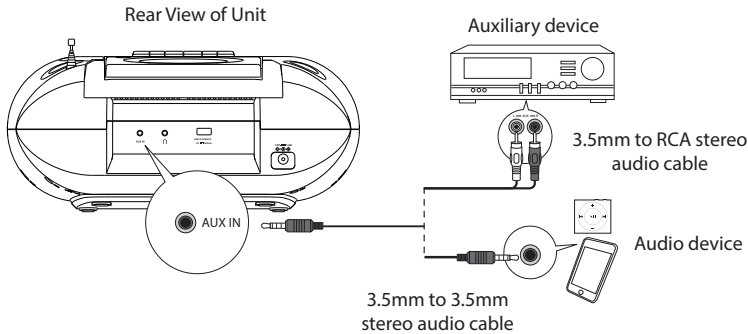

Using Headphones

 
Turn down the volume before connecting the headphones (not included). Slowly raise the volume with the headphones on until you reach your desired volume. When headphones are connected, the speakers automatically mute.

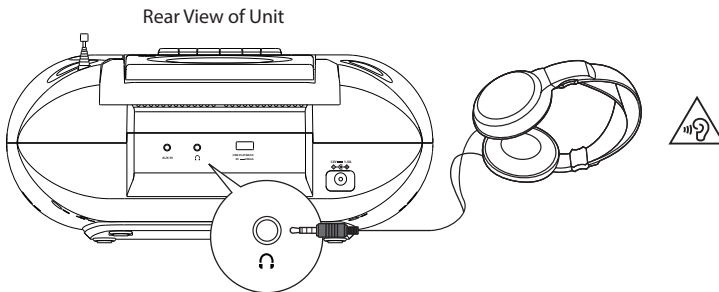

Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

Playing MP3 audio files from USB Device

 Insert your USB device (not included) to **USB PLAYBACK 5V 200mA** socket of the unit. Press **SOURCE** button repeatedly on the unit to select **USB** mode.

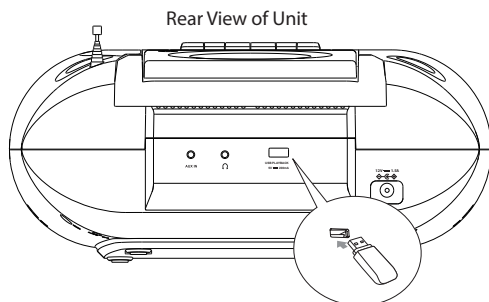

To safely remove the USB, switch to another mode or turn off the power, then remove the USB.

General Operation

Powering ON/OFF

When you first connect the unit to the mains socket, the unit will be in **Standby** mode and the ϕ Standby indicator will light up red.

- Press ϕ **ON/OFF** button on the unit to switch the unit on.
- Press ϕ **ON/OFF** button on the unit to switch the unit back to **Standby** mode. The ϕ Standby indicator will light up red.
- Disconnect the mains adapter from the mains socket if you want to switch the unit off completely.



When the unit volume is close to mute or is idle for approximately 15 minutes, it will automatically switch to **Standby** mode.

Selecting Modes

Press **SOURCE** button repeatedly on the unit to switch between **DAB, FM, BLUETOOTH, AUX, TAPE, CD** and **USB** mode. The selected mode will show on the display.

Adjusting the Volume

Press **VOL+/VOL-** button on the unit.

Auto Setting of the Clock

The clock can be updated automatically if you can receive a DAB/FM signal in your location. In order to synchronise to the current local time you must leave it on the DAB/FM station for a short period of time.



For details of time auto setup, please refer to the **Time Update Setup** section.

Time Update Setup

1. During **DAB** mode, press **MENU/CLOCK** button, and then press **◀◀▶▶** to select **<System>**. Press **■/ENTER** to confirm.
2. Press **◀◀▶▶** to select **<TIME>**. Press **■/ENTER** to confirm.
3. Press **◀◀▶▶** to select **Update from DAB+ / Update from FM / Update from any / No Update**. Press **■/ENTER** to confirm.



If "**No Update**" is selected, the unit will not proceed time clock auto update while receiving DAB/FM station signal.

Manual Setting of the Clock

You may set the clock manually when auto synchronisation fails due to weak signal of DAB/FM reception.

1. During **Standby** mode, press and hold **MENU/CLOCK** button on the unit. "**24H**" will flash on the display.
2. Press **◀◀▶▶** to select "**24H**" or "**12H**", then press **MENU/CLOCK** button.
3. Press **◀◀▶▶** to set the hours, then press **MENU/CLOCK** button.
4. Press **◀◀▶▶** to set the minutes, then press **MENU/CLOCK** button.
5. The time is now set.



- If no buttons are pressed for 5 seconds, the unit will exit clock setting mode.
- If your unit is disconnected from the mains supply, the clock setting will be lost.
- To avoid manual set clock is automatically updated by the clock of DAB/FM station signal, please select "**No update**" in **<Time>** menu. For details, please refer to the **Time Update Setup** section above.

Setting the Alarm Timer

1. Make sure that the unit is in **Standby** mode.
2. Press and hold **TIMER** until the display shows “**Timer On**”, and the hour digits flash.
3. Press **◀▶▶▶▶** to set the hours, then press **TIMER**.
4. Press **◀▶▶▶▶** to set the minutes, then press **TIMER**.
5. When Timer On Clock is set, the display will show “**Timer Off**” and the hour digits will flash.
6. Press **◀▶▶▶▶** to set the hours, then press **TIMER**.
7. Press **◀▶▶▶▶** to set the minutes, then press **TIMER**.
8. Finally press **◀▶▶▶▶** to select **DAB, FM, TAPE, CD** or **USB** mode, then press **TIMER**.
9. Press **◀▶▶▶▶** to adjust the Timer volume, and then press **TIMER** to confirm.
10. The display will show the set time and then “” icon to indicate that the timer is on.



- If you select **FM/DAB** mode, make sure you have selected the radio station you want to be woken up to first.
- If you have selected **TAPE** mode, make sure that you have a cassette tape in the unit and it is playing.
- If you have selected **CD** mode, make sure you have a CD inserted into the CD tray, if you forget to insert a CD, the radio will switch on instead.
- If you have selected **USB** mode, make sure that you have connected your USB device with the unit.

Deactivate the Alarm Timer

While the unit is in **Standby** mode, press **TIMER** button to switch off the Timer.

DAB Operation

Press **SOURCE** button repeatedly to select **DAB** mode.

If the unit is connected to the mains power and then switched on to **DAB** mode for the first time, the unit will automatically start scanning. The display will show “**Scanning...**”.

All the stations that have been found will be stored automatically. To explore the found stations, press **◀◀▶▶** buttons and then press **■/ENTER** button to confirm.

Full Scan

Press **►I/SCAN** button, the unit will start a full scan to search all available Band channels. Or, press **MENU/CLOCK** button, and then press **◀◀▶▶** to select **<Full scan>**, and then press **■/ENTER** to confirm.

Manual Scan

As well as the auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

1. Press **MENU/CLOCK** button to display the menu.
2. Press **◀◀▶▶** to select **<Manual tune>**, and then press **■/ENTER** to select.
3. Press **◀◀▶▶** to cycle through the DAB channels, which are numbered from **5A** to **13F**.
4. After your desired channel number is selected, press **■/ENTER** to confirm. The display will show the multiplex.

Secondary Services

You may see a “>” symbol after the name of the station, this indicates that there are secondary services available to that station. These secondary services contain extra services that are related to the primary station. e.g. a sports station may want to add extra commentaries. The secondary services are inserted directly after the primary station in the station list.

To select the secondary station, press **■/ENTER** when the “>” appears in the display before the station name. When the secondary service ends, the unit will automatically switch back to the primary station, or show “**Service not available**” for secondary service.

Presetting Stations

You can store up to 20 of your favourite DAB stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save, press and hold **INFO/MODE/PROG** button. The display will show **Preset Store <1: Empty>'**
2. Press **◀◀▶▶** to select your desired preset station number and then press **■/ENTER** to confirm.
3. The station will be stored and the screen will then show **Preset Store # DAB**.

Recalling a Preset Station

1. Once you have saved a station to one of the preset buttons, you can recall it by pressing **FOLDER/RECALL**.
2. Press **I◀▶▶▶I** to select your desired preset station number.
3. Press **■/ENTER** to confirm the selection.



The stored stations will be saved into the memory and power off will not erase it. Storing a new station in a preset location will erase the previously stored station in that location.

DRC (Dynamic Range Compression)

If you are listening to music with high dynamic range in a noisy environment, you may wish to compress the audio dynamic range.

1. During **DAB** mode, press **MENU/CLOCK** button and then press **I◀▶▶▶I** to select **<DRC>**. Press **■/ENTER** to confirm.
2. Press **I◀▶▶▶I** to select **DRC high/low/off**. Press **■/ENTER** to confirm the setting.

DAB Display Modes

Press **INFO/MODE** button to switch through the following display modes.
The information of each display mode is displayed on the lower segment of the display.

Signal Strength

This shows a slide bar to indicate the signal strength, the stronger the signal, the longer the bar will be from left to right.

Programme Type

This describes the “style” or “genre” of the programme that is being broadcast.

Ensemble Name

This displays the name of the multiplex that contains the station you are listening to. A multiplex is a collection of radio stations that are bundled and transmitted on one frequency. There are national and local multiplexes. Local ones contain stations that are specific to that area.



DAB – unlike normal radio, groups together several radio stations and transmits them on one frequency.

Frequency

This shows the frequency of the current station.

Signal Error

This displays a number showing the error rate. If the number is 0, it means the signal received is error free and the signal strength is strong. If the error rate is high, it is recommended to re-orient the aerial or re-position the unit.

Audio Bit Rate

The display will show the digital audio bit rate being received.

Time

 
This displays the current time provided automatically by the broadcaster.

Date

This displays the date provided automatically by the broadcaster.

DLS (Dynamic Label Segment)

Dynamic label segment is a scrolling message that the broadcaster may include with their transmissions. The message usually includes information, such as programme details etc.

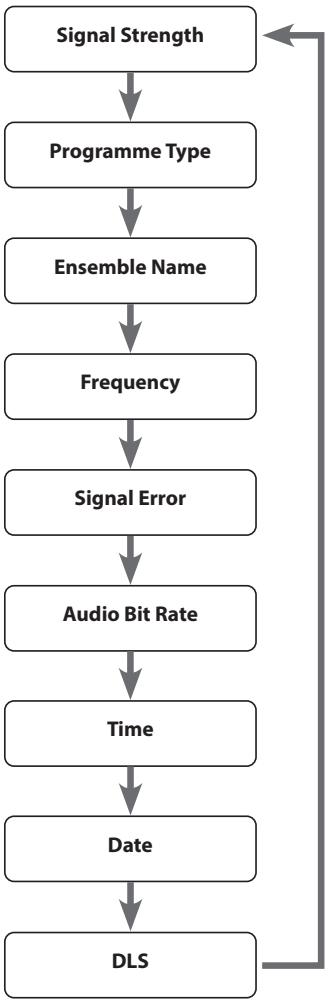

FM Operation

Press **SOURCE** repeatedly to select FM mode.

Auto Scan

- Press **►II/SCAN** button until the tuner starts searching for a station. Once a station has been found, the scanning will stop automatically.
- Press and hold **►II/SCAN** to perform full scan from **87.5MHz** to **108MHz**.



The search may not stop at a station with a very weak signal.

Manual Scan

Press **◀◀▶▶** repeatedly until your desired frequency is reached.



With FM radio it may be necessary to fine tune each station by pressing the **◀◀▶▶** buttons repeatedly. Each press will adjust the frequency by 0.05MHz. If reception is still poor adjust the position of the aerial or try moving the radio to another location.

 
For Better Reception

Fully extend the aerial and place it in the position that offers the best sound reception.

Presetting Stations

You can store up to 20 of your favourite FM stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save, press and hold **INFO/MODE/PROG** button. The display will show "**Preset Store <1: Empty>**".
2. Press **◀◀▶▶** to select your desired preset station number and then press **■/ENTER** button to confirm.
3. The station will be stored and the screen will then show "**Preset # FM Stored**".

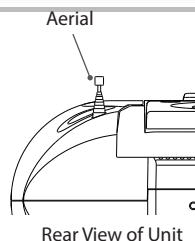

Recalling a Preset Station

1. Once you have saved a station, you can recall it by pressing **FOLDER/RECALL** button.
2. Press **◀◀▶▶** to select your desired preset station number.
3. Press **■/ENTER** button to confirm the selection.

 


The stored stations will be saved into the memory and power off will not erase it. Storing a new station into a preset location will erase the previously stored station in that location.

FM Display Modes

Press **INFO/MODE** button to switch through the following display modes.
The information of each display mode is displayed on the lower segment of the display.

- Radio Text**
This displays a station description.
- Programme Type**
This describes the “style” or “genre” of the programme that is being broadcast.
- Station Name**
When an RDS station is received, the name of that station will be displayed.
- Audio Type**
This displays if the station being received is in **Mono** or **Stereo**.
- Time**
This displays the current time provided automatically by the broadcaster.
- Time / Date**
This displays the date provided automatically by the broadcaster.

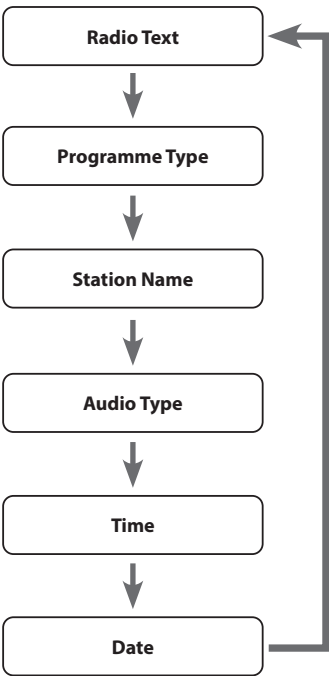

CD/MP3 CD Operation

Compatible Disc Types

Disc Types	Disc Logo	Recorded Content
CD-R (CD Recordable - Audio / MP3)		AUDIO / MP3
CD-RW (CD-Rewritable - Audio / MP3)		AUDIO / MP3
AUDIO-CD (Compact Disc Digital Audio)		AUDIO



- CD-ROM, CD-I, CDV, VCD, DVD or computer CDs are not possible for playback.
- CDs encoded with copyright protection technologies by some record companies may be unplayable by this unit.

Press **SOURCE** button repeatedly to select **CD** mode.

Playback

1. Press **OPEN/CLOSE**  at the top of the unit, and the disc tray will open automatically.
2. Place the CD/MP3 disc with the label side up into the CD compartment, and then press **OPEN/CLOSE**  to close the door.
3. If there is no disc or the disc cannot be read, the display will show "**No Disc**".
4. It will start playback automatically



- The unit will start playback automatically when it enters **CD** mode. Make sure you have correctly placed a playable CD into the CD compartment.
- The unit cannot play the CD with over 999 tracks. This is not a defect.

Pause Playback

1. Press **PLAY/SCAN** to pause the playback. '**PAUSE**' will show on the display.
2. To resume playback, press **PLAY/SCAN** again.

Stop Playback

Press /**ENTER** to stop playback.

Skip to Another Track

- Press  to skip to beginning of the current track or the previous track.
- Press  to skip forward to the next track.

Fast Forward and Fast Reverse

Press and hold  button to fast backward or forward on the current track.

Select an Album (MP3)

Press **FOLDER/RECALL** to select an album when playing an MP3 CD.

Repeat Playback

For CD Mode

1. Press **INFO/MODE/PROG** button once, '**Rep1**' will show on the display. The CD will play the current track repeatedly.
2. Press **INFO/MODE/PROG** button twice, '**RepA**' will show on the display. The CD will play all tracks repeatedly.
3. Press **INFO/MODE/PROG** button three times, '**Rand**' will show in the display. The CD will play all tracks randomly.
4. Press **INFO/MODE/PROG** button once more and the repeat function will turn off.

For MP3 Mode

1. Press **INFO/MODE/PROG** button once, '**Rep1**' will show on the display. It will play the current file repeatedly.
2. Press **INFO/MODE/PROG** button twice, '**RepF**' will show on the display. It will play all files in the current folder repeatedly.
3. Press **INFO/MODE** three times, '**RepA**' will show on the display. It will play all files repeatedly.
4. Press **INFO/MODE** four times, '**Rand**' will show in the display. It will play all files randomly.
5. Press **INFO/MODE** once more and the repeat function will turn off.

Programme Setting

The user can program up to 20 tracks in CD mode or in MP3 mode in any desired order.

1. Make sure the disc is not playing.
2. Press **INFO/MODE/PROG** button to enter programme mode.
3. Press **I◀▶▶I** buttons to select the track that you want to preset.
4. Press **INFO/MODE/PROG** button to confirm the track.
5. Repeat steps 2-4 to program more tracks. Once it is completed, press **SCAN▶II** button to start playback of the programmed tracks.

Programme Cancel

Press **■/ENTER** twice, or open the CD tray door and close it again to erase the memory.

Cassette Playback

1. Press **SOURCE** button repeatedly to select **TAPE** mode.
2. Press **■/▲** button to open the cassette door. Insert a cassette and close the cassette door.
3. Press **◀** button to start playback.
4. To pause playback, press **||** button. To resume playback, press **◀** button again.
5. To stop the tape, press **■/▲** button.

Fast Forward/Rewind

1. Press **◀◀/▶▶** buttons until you reach your desired passage.
2. Press **■/▲** button to stop fast forwarding/rewinding.



- The keys are automatically released at the end of a tape and the unit is switched off (unless the **PAUSE** mode has been activated).
- During fast forwarding/rewinding, the key will be released at the end of a tape. To switch off the set, make sure the cassette keys are also released.

Bluetooth® Operation

Pairing the unit with a Bluetooth® device to listen to music:

1. Press **SOURCE** button repeatedly to select **BLUETOOTH** mode.
2. The unit will enter pairing mode, and then **“Pairing”** will flash on the display and prompt a beep tone.
3. Activate your Bluetooth® device and select the search mode.
4. Select **RC-D322B** and enter **“0000”** for the password if necessary. **“Connected”** will show on display.
5. To disconnect the Bluetooth® function,
 - Switch to another function on the unit or disable the function from your Bluetooth® device. The unit will make a beep sound.
 - Press and hold **■/ENTER** button. All the memorized devices will also be erased from the unit.

If your Bluetooth® device supports A2DP, play music via your device.

- To pause/resume playback, press **▶||/SCAN** button.
- To skip to a track, press **◀◀▶▶**.
- Press **VOL+/VOL-** button to increase or decrease the volume.



- The operational range between the unit and the device is approximately 8 metres.
- If the signal strength is weak, your Bluetooth® receiver may disconnect, but it will re-enter pairing mode automatically.
- Compatibility with all Bluetooth® devices is not guaranteed.

AUX Operation

There is **AUX IN** socket located at the rear of the unit. Analogue audio sound signals from other sources can be connected to the unit through the socket.

1. Connect to another audio device using the **AUX IN** socket via a 3.5 mm stereo audio cable.
2. While in the **ON** mode, press **SOURCE** button repeatedly to select **AUX** mode.
3. Press **VOL+/VOL-** button to adjust the volume to your desired level.
4. In **AUX** mode, operate your audio device directly for playback features.

USB Operation

1. Press **SOURCE** button repeatedly to select **USB** mode, and then connect your USB device into the **USB PLAYBACK 5V == 200mA** socket.
2. The display will show "**USB Reading**" and then the unit will start playback from the first track automatically.
3. Press **VOL+/VOL-** button to adjust the volume to your desired level.
4. Press **▶II/SCAN** button to start/pause/resume playback.
5. Press **■/ENTER** button to stop playback, and the unit display will show the total number of tracks and folders stored in the USB device.

Skip to Another Track

- Press **⏮** button to skip to beginning of the current track or the previous track.
- Press **⏭** button to skip forward to the next track.

Fast Forward and Fast Reverse

- Press and hold **⏮/⏭** button to fast backward or forward on the current track.
- To resume playback, release the **⏮/⏭** button.

Select Folder for MP3 Device

Press **FOLDER/RECALL** button repeatedly to select your desired folder during playback.

Repeat Playback

1. Press **INFO/MODE/PROG** button once, the display will show "**Rep1**". The unit will play the current track repeatedly.
2. Press **INFO/MODE/PROG** button twice, the display will show "**RepF**". The unit will play all tracks in the current folder repeatedly.
3. Press **INFO/MODE/PROG** button three times, the display will show "**RepA**". The unit will play all tracks in the USB device repeatedly.
4. Press **INFO/MODE/PROG** button four times, the display will show "**Rand**". The unit will play all tracks randomly.
5. Press **INFO/MODE/PROG** button once more and the repeat function will turn off.

Programme Settings

The user can program up to 99 MP3 tracks.

1. Make sure the unit is not playing the USB device.
2. Press **INFO/MODE/PROG** button to enter programme mode.
3. Press **◀◀/▶▶** button to select the track that you want to preset.
4. Press **INFO/MODE/PROG** button to confirm the track.
5. Repeat steps 2-4 to program more tracks. Once it is completed, press **▶II/SCAN** button to start playback of the programmed tracks.

Programme Cancel

Press **■/ENTER** button twice, or unplug the USB device from the unit to erase the memory.

Maintenance

Cleaning the Unit / Cassette Compartment

 


Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.
- Use a soft brush to brush off any dust or dirt from the cassette compartment heads.


Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.

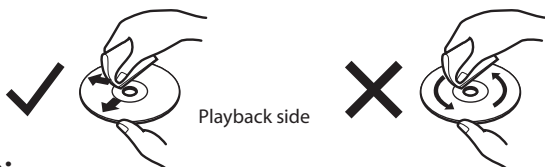

Cleaning Discs

 - Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.

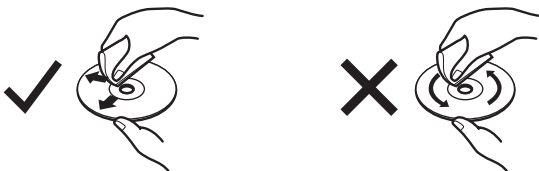

- If you cannot wipe off the dust with a cloth, wipe the disc lightly with a slightly moistened cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Hints and Tips

Problem	Description
Cassette	
Poor cassette sound quality	• Dust or dirt on the heads, etc. Clean cassette compartment parts, see Maintenance. • Use of incompatible cassette types (METAL or CHROME). Only use NORMAL (IECI) for recording.
CD	
The disc does not play	• There is no disc inside the unit ("NO DISC" appears on the display). • Insert the disc correctly with the label side facing up. • Clean the disc. • PAUSE mode may be activated, deactivate it. • A non-valid disc has been inserted. • Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.
Disc skips	• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.
File from Media storage device does not play	• Check the file format. • This product only supports MP3 File formats.
Radio	
Desired station not found	• Weak signal. Use the Manual Tune function.
Bluetooth®	
I cannot find "RC-D322B" on my Bluetooth® device	• Ensure the Bluetooth® function is activated on your Bluetooth® device.
USB	
Cannot play USB device	• USB supported format only includes FAT / FAT32 (The unit does not support exFAT, NTFS format).



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Product Fiche and Specifications

Brand		JVC
Model		RC-D322B
Bluetooth®	Bluetooth® Version	5.0
	Maximum transmitted power	6 dBm
	Frequency band	2402 - 2480 MHz
Output Speaker Power		2 W RMS × 2
Frequency Response		60 HZ -16.5 KHz
Speakers Total Impedance		4 Ω
Disc Format		CD, CD-R, CD-RW
Frequency Range		FM: 87.5 – 108 MHz DAB: 174.928-239.2 MHz
Working Environment Temperature		0 to 40 °C
Net Weight		1.86 kg
Dimensions		340 mm (W) × 227 mm (D) × 155 mm (H)
Ecodesign Information		
USB Memory Stick Memory Size		Up to 32 GB
Supported file system of format type		FAT / FAT32
Ecodesign Information		
Information on Power Consumes	Power Consumption of Standby mode	0.45 W
	Network Standby Power Consumption	0.45 W
Time interval for Power management function switches the unit automatically into standby mode		When the unit is not in use for 15 minutes, it switches to standby mode automatically
Power consumption in network standby if all wireless network ports are activated		2.3 W
Guidance on how to activate wireless network port		Connect the unit with power. Switch to Bluetooth mode.
Guidance on how to deactivate wireless network port		Press the standby button to switch the unit to standby mode.

Mains Adapter

Manufacturer's name and address	HAIHONG ELECTRONICS CO., LTD Room 402, Building 3, No. 5 Xinxing Road, Jiaoshe Village, Dongkeng Town, Dongguan City, 52300 Guangdong P.R. China
Model Number	HH0024Z-120150-AB
Input Voltage	100-240 VAC
Input AC Frequency	50/60 Hz
Output Voltage	DC 12.0 V
Output Current	1.5 A
Output Power	18.0 W
Average Active Efficiency	86%
Efficiency at Low Load (10%)	78%
No-Load Power Consumption	0.09 W

Features and specifications are subject to change without prior notice.





Declaration of Conformity (RED)

Hereby, Currys Group Limited declares that the radio equipment type [RC-D322B] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: **<https://www.currys.co.uk/>**

Declaration of Conformity (RER)

Hereby, Currys Group Limited declares that the radio equipment type [RC-D327] is in compliance with Radio Equipment Regulations 2017 (S.I. 2017/1206).

The full text of the UK declaration of conformity is available at the following internet address: **<https://www.currys.co.uk/>**

For Help and Support Call
UK: 0344 561 1234
Ireland: 0818 810575

This product is distributed and warranted exclusively by Currys Group Limited.
"JVC" is the trademark of JVC KENWOOD Corporation,
used by Currys Group Limited under license.

(IB-RC-D322B-230718V2)