

CONTENTS AND GETTING STARTED

Contents

- 1 Stealth Spinner Drone
- 1 Remote Control
- 1 DC Charging Cable

Getting Started

 
The remote control requires 2 AA 1.5V batteries (not included) and the drone uses a built-in rechargeable lithium-ion battery.

Drone

1. Make sure the power switch on the side of the drone is in the off position.
2. Plug the DC end of the charging cable into the charging port on the side of the drone.
3. Plug the A end of the charging cable into a powered USB-A port or a USB-A power adapter (not included). The indicator light on the drone will glow while the drone is charging and will shut off when the vehicle is fully charged.
4. Wait for the drone to fully charge and then unplug the charging cable.

Remote control

1. Use a tool to press and hold the battery cover release on the back of the remote control and then slide down the battery cover.
2. Insert 2 AA 1.5V batteries (not included) into the battery compartment according to the battery diagram.
3. Slide the battery cover back into place securely.

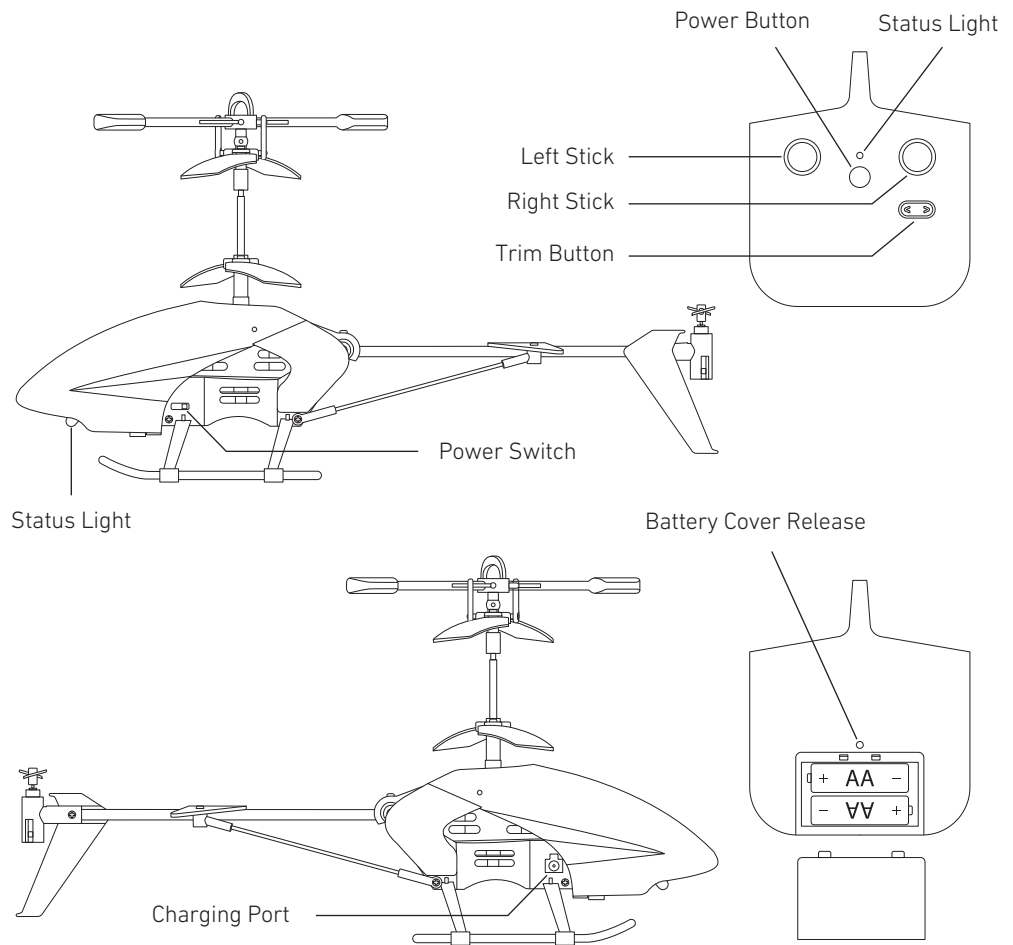

HOW TO PLAY

Pairing

1. Place the drone on a level and solid surface to ensure a steady takeoff.
2. Press the power button on the remote control to power on the remote control. The status light on the remote control will fade on and off slowly to indicate the remote control is in pairing mode and ready to pair with the drone.
3. Slide the power switch on the drone to the on position to power on the drone. The status light on the drone will fade on and off to indicate the drone is in pairing mode and ready to pair with the remote control.
4. Push the left stick forward and quickly backward to pair the remote control to the drone. Once successfully paired, the status lights on the remote control and drone will both remain solidly lit.
5. If the remote control and drone do not pair successfully within 60 seconds, both the remote control and drone will enter sleep mode. Power off and power on both the remote control and drone to retry the pairing process.
6. If the connection between the remote control and drone is interrupted, the remote control and drone will automatically enter pairing mode and attempt to pair again. The indicator lights on the remote control will begin to fade on and off and then will remain solidly lit when paired again. If the indicator light on the remote control does not begin to fade on and off, either the remote control or drone has not entered pairing mode, and they will not automatically pair again. Power off and power on both the remote control and drone to retry the pairing process. If the indicator light on the remote control does not power on, change the batteries in the remote control. If the indicator light on the drone does not power on, recharge the drone.
7. If there is no input on the remote control for 5 minutes, the remote control and drone will enter sleep mode. To wake from sleep mode, press the power buttons on the remote control and drone.
8. To manually power off the drone, slide the power switch on the drone to the off position. To manually power off the remote control, press the power button on the remote control again.

 
 
Controls

1. Press the left stick forward to launch the drone up to a chosen altitude and then release the left stick to make the drone hover at that altitude.
2. After takeoff, the drone should hover in place if there is no input from the remote control (minor drift is to be expected when flying outdoors). Press the trim button to help as needed to calibrate the neutral flight of the drone and reduce any drift.
3. Push the left stick forward to fly the drone up and pull the left stick backward to fly the drone down.
4. Push the right stick to the right to spin the drone clockwise and push the right stick to the left to spin the drone counterclockwise.
5. Push the right stick forward to fly the drone forward and pull the right stick backward to fly the drone backward.
6. To land the drone, start with the drone at any altitude and then pull and hold the left stick backward to fly the drone down slowly. When the drone lands, the propellers will shut off automatically within 3 seconds.
Note: If connection is lost during normal flight, the drone will hover and attempt to pair to the remote control for 5 seconds. If pairing is unsuccessful, the drone will begin auto landing.
7. Once the drone has landed and the propellers have stopped spinning, press the power button on the remote control and slide the power switch on the drone to the off position to power off the remote control and drone.



Note: The drone features lock motor protection to protect the drone in the event of abnormal working conditions. The status light on the drone will begin to flash rapidly. Power off the remote control and drone, place the drone upright on a flat surface, and then power on and pair the remote control and drone again to resume flying.

HOW TO PLAY



Up

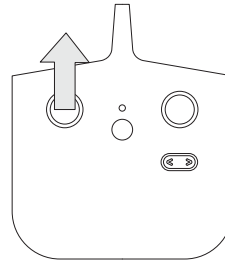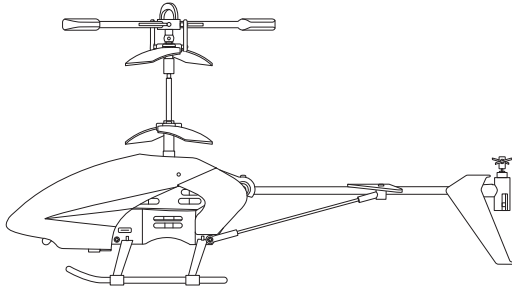



Down

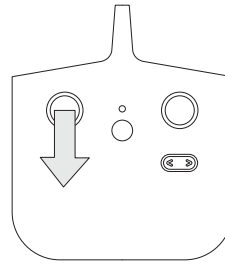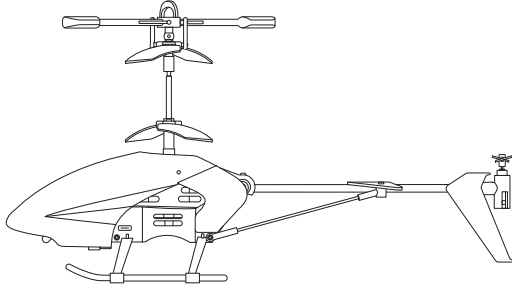  



Forward

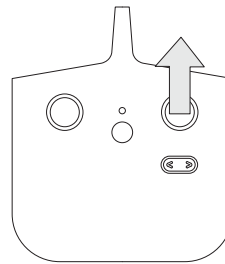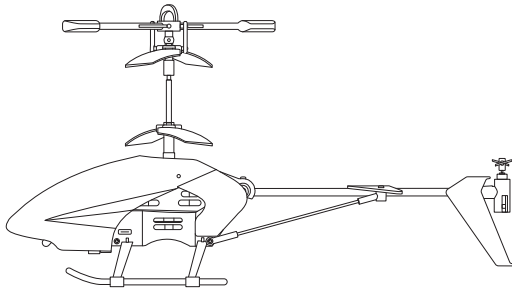  



Reverse

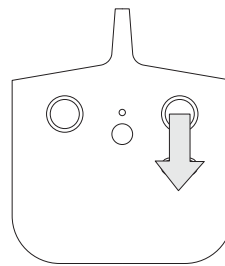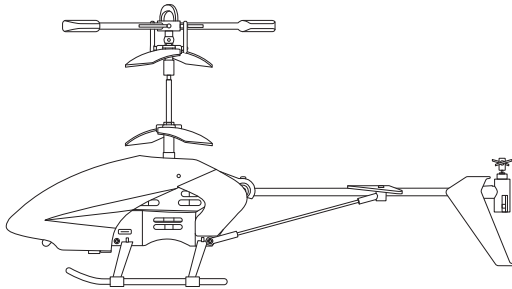  

Left Turn

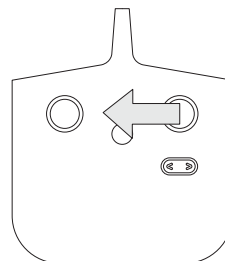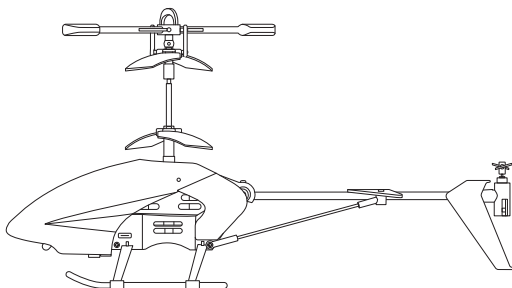  

Right Turn

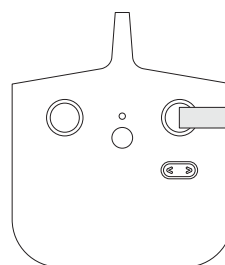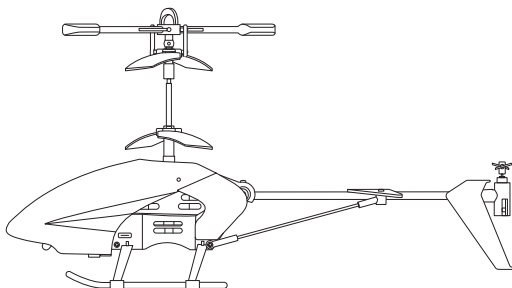  

SAFETY PRECAUTIONS

- Adult supervision is recommended when operating the vehicle.
- Always drive responsibly and make sure driving paths are clear. Never drive towards or in close proximity to people or animals. Never drive on streets or roadways to avoid traffic hazards.
- Keep fingers, hair, and loose clothing away from tires and all moving parts while the vehicle is in motion.
- Avoid exposing the vehicle and remote control to water. Avoid driving through water. Never drive outdoors in rain or snow. Never leave the vehicle or remote control outdoors overnight.
- Do not expose the vehicle or remote control to extreme temperatures.
- Do not leave the vehicle or remote control near sources of heat or under direct sunlight for extended periods.
- Do not sit, step, stand, or place objects on the vehicle. It is not designed to support extra weight.
- Do not disassemble or modify the vehicle or remote control.
- Thoroughly inspect the vehicle and remote control before every use. If the vehicle or remote control appears worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.

RECHARGEABLE BATTERY WARNINGS (NON-REPLACEABLE)

- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

⚠️ ALKALINE BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Sharper Image® name and logos (including the 77 logo) are trademarks or registered trademarks. Distributed by and © 2025 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

Model No.: 1020244



WARNING:

CHOKING HAZARD – Small Parts.
Not for children under 3 years of age.

BC

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

Printed in China

For customer support, please visit
www.msccustomercafe.com or call

1-800-374-2744