



ACCESSORIES FOR CHOPPING AND GRATING (FOOD PROCESSOR)

Translation of the original manual











SENCOR®

STX 046



A

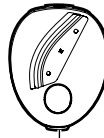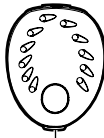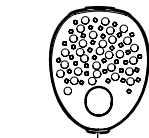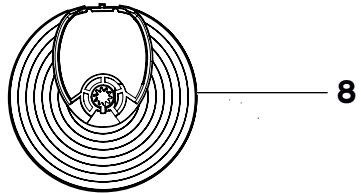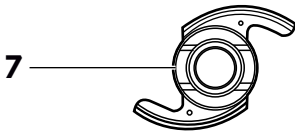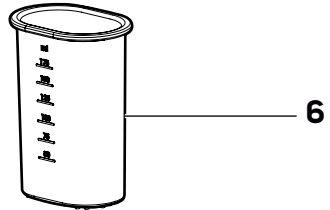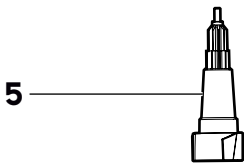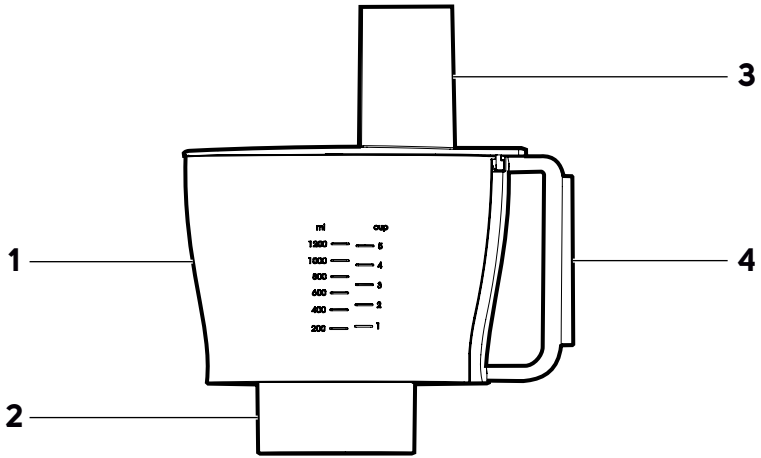

9

10



11

12



13



14

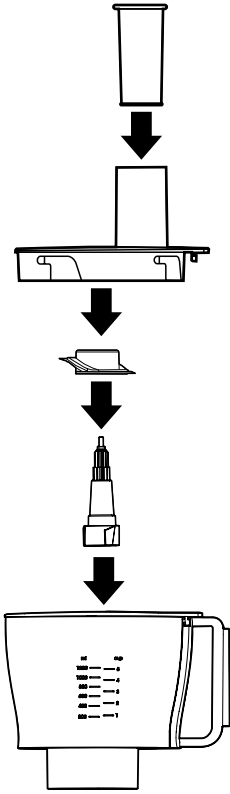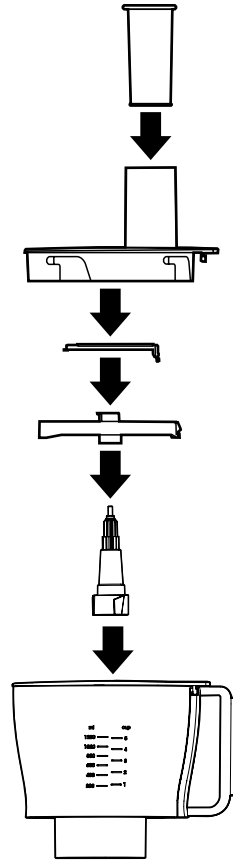

B**C**

D

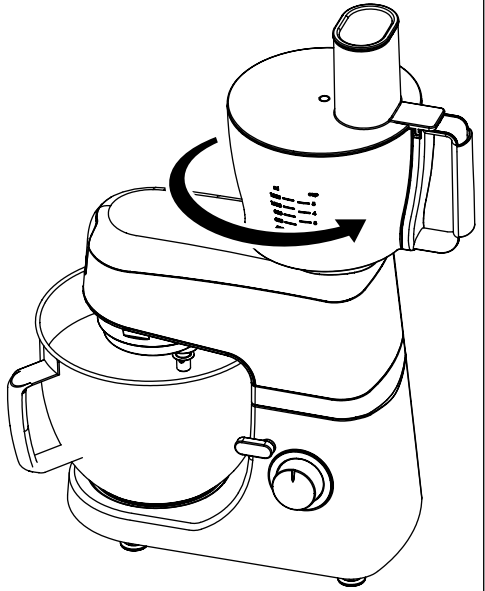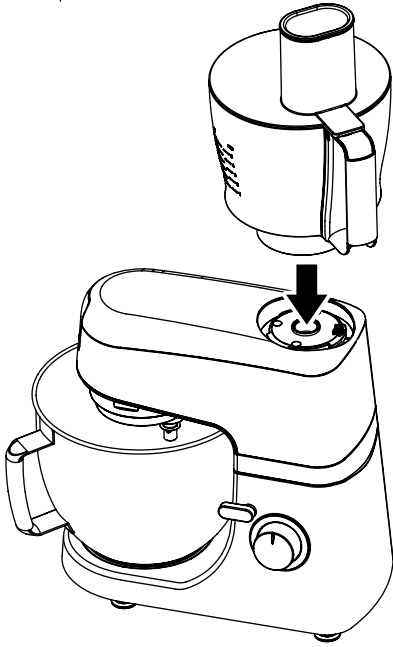

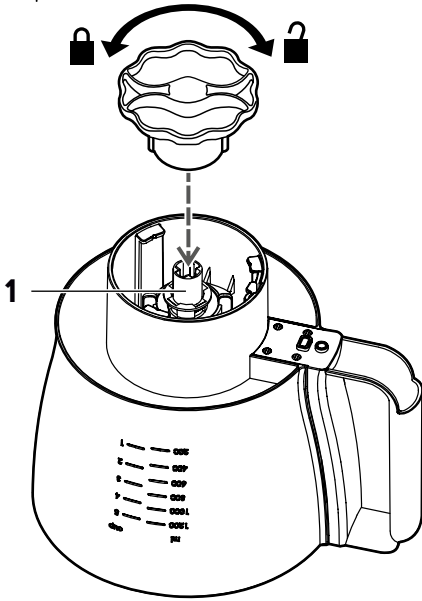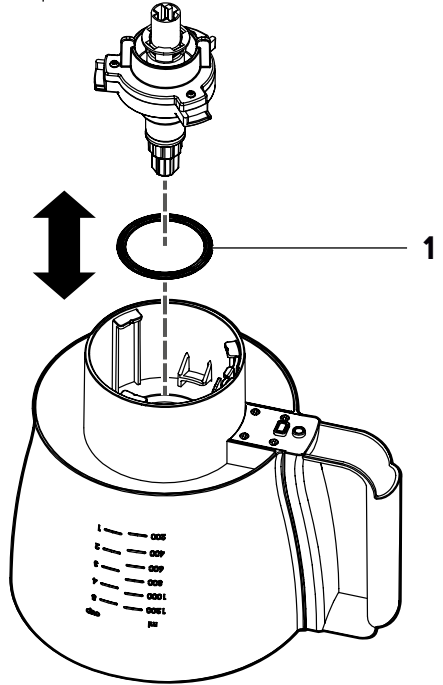E**F**

EN Accessories for chopping and grating (Food processor)

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

General warnings

- These accessories may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the accessories in a safe manner and understand the potential dangers.
- Children must not play with the accessories.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- The surfaces of the accessories that come into contact with food must always be cleaned according to the instructions in this user's manual.
- Be especially careful not to injure yourself on the sharp parts when handling the chopper and grating and slicing attachment, especially when removing these from the bowl or holder, when emptying the bowl and when cleaning them.
- Before replacing the accessories or accessible parts that move during use, turn the food processor off and disconnect it from the power supply.

- Never push the food into the feed tube using fingers or other utensils. Always use the provided pusher.
- Do not remove the lid off the accessories until the chopper or attachment comes to a complete stop.

Safety during use

- These accessories are designed for household use and are intended for chopping ingredients.
- Do not use the accessories together with the food processor in industrial environments or outdoors. Do not use for any other purposes than those intended.
- The accessories are intended for domestic use and similar locations such as:
 - kitchens in stores; offices and other workplaces;
 - in agriculture;
 - for guests of hotels, motels and other similar locations;
 - in bed and breakfast establishments.
- Use the accessories in accordance with the instructions contained in this user's manual.
- Only use the accessories with the original parts that came with them.
- Before every use, check the accessories and their parts for damage. Never use the accessories with damaged parts.
- Do not expose the accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the accessories near heaters, open fires or other sources of heat.
- Check that both the robot and the accessories are correctly assembled before starting the food processor.
- Do not touch moving rotating parts during operation. Otherwise, this could result in injury.
- Do use the accessories when they are empty. Incorrect use of the accessories may negatively affect their lifetime.
- Do not push food into the feed tube with excessive force, this could overload the motor unit of the food processor.
- Do not perform any maintenance on the accessories other than cleaning the individual components as described in this user's manual.
- Do not use the accessories if they have fallen on the floor, if they are not functioning correctly or if they are damaged in any way.
- In order to prevent a hazardous situation arising, do not repair the accessories yourself or modify them in any way. Have all repairs or adjustments performed at an authorised service centre. By tampering with the accessories you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- Store the accessories in a dry environment.

Accessories for chopping and grating

EN (Food processor)

User's manual

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.



Attention:

These accessories are intended only for use with food processor **SENCOR STM 635X, 637X and 787x**. Prior to using these accessories, review the safety instructions and instructions for use, which are provided in the user's manual of the food processor and adhere to these instructions.

DESCRIPTION OF THE APPLIANCE

- | | |
|---|--|
| A1 Bowl | A11 Fine grating attachment
It is suitable for all types of fruit and vegetables, parmesan, chocolate, cheese and nuts, e.g. hazelnuts, etc. |
| A2 Mount for food processor | |
| A3 Lid with feed tube | A12 Thick slicing attachment
It is suitable for all types of fruit and vegetables, onions, cabbage, cucumbers, carrots, apples, potatoes, etc. |
| A4 Handle | |
| A5 Drive shaft | A13 Thin slicing attachment
It is suitable for all types of fruit and vegetables, onions, cabbage, cucumbers, carrots, apples, potatoes, etc. |
| A6 Pusher | |
| A7 Chopper
It is suitable for chopping tougher ingredients such as nuts, herbs, cheeses, fruit and vegetables in their raw state or even well diced meat. It is suitable for preparing purée and baby food. | A14 Bowl gear box unit lock/release key |
| A8 Attachment holder | |
| A9 Grating attachment for fine grating hard cheese and making breadcrumbs | |
| A10 Coarse grating attachment
It is suitable for all types of fruit and vegetables, bread rolls, buns. | |

E1 Gearbox unit

F1 Gasket seal

BEFORE FIRST USE

- Wash all the accessory parts in warm water using a neutral kitchen detergent before first use. Then rinse these parts with clean water and allow them to dry naturally or dry them out their using a wiping cloth.



Warning:

When cleaning the chopper and attachments, be very careful not to injure yourself on their sharp edges.

ASSEMBLING AND DISASSEMBLING FOR CHOPPING

(Fig. B)

- Seat the drive shaft into the bowl and place the chopper on to the shaft.



Warning:

When handling the chopper, be very careful not to injure yourself on its sharp cutting edges.

- Place the ingredients that you wish to process into the bowl. Do not fill above the maximum level marked on the bowl.
- Put the lid on to the bowl and turn it to lock in correct position. Insert the pusher into the feed tube.
- For disassembly, proceed in the reverse sequence.

ASSEMBLING AND DISASSEMBLING THE GRATING ACCESSORIES

(Fig. C)

- Seat the drive shaft into the bowl
- Insert the attachment that you wish to use into the attachment holder and put the holder on to the drive shaft.



Warning:

When handling the attachments, be very careful not to injure yourself on the sharp cutting edges.

- Put the lid on to the bowl and turn it to lock in correct position. Insert the pusher into the feed tube.
- When changing or removing the attachments, proceed in reverse sequence.

MOUNTING ON THE FOOD PROCESSOR

(Fig. D)

- Make sure that the food processor is turned off and disconnected from the power socket. The multi-function head must be tilted down in the horizontal position and the beater, whisk or kneading attachments must be removed.
- Remove the top accessory hub cover from the food processor.
- Put the assembled bowl with the accessory on to the top attachment hub and turn it to lock it into the working position. The safety mechanism will not permit the accessory to be started if the bowl is not properly secured in place.

REMOVAL FROM THE FOOD PROCESSOR

- Make sure that the food processor is turned off and disconnected from the power socket.
- Turn the bowl to release the accessory and take it off in the upward direction off the top hub of the food processor.
- Put the top hub cover back on to the food processor.

USING THE ACCESSORIES

- The chopping accessories can be used for chopping tougher ingredients such as nuts, herbs, cheeses, fruit and vegetables in their raw state or even well diced meat. It is suitable for preparing purée and baby food.
- The chopping accessories can be used for grating, peeling and slicing practically all types of fruits and vegetables. Carrots, potatoes, cabbage, cucumbers, zucchini, beetroot, mushrooms, onions, etc. can be cut into slices.
- Cut the food into pieces that are suitable for insertion into the feed tube.
- Make sure that the accessories are correctly assembled and secured on the food processor, and that the control knob is set to the OFF position. Connect the power cord of the food processor to a power socket.
- Set the control knob of the food processor to the highest speed (MAX). In the case of soft food, you can also use a lower speed.
- If you wish to increase the speed to maximum speed for a short while, set the control knob to the P position (Pulse). Do not leave the food processor running in this mode for longer than 30 seconds, there is a risk of overheating.
- Insert the individual foods or food pieces into the feed tube and gently push them down into the bowl using the pusher. Do not push excessively on the pusher so that the motor unit of the food processor is not overloaded.



Warning:

Always use only the supplied pusher to push food into the feed tube. Never use your fingers or other utensils!

- Insert the food evenly. If you need to process a large amount of food, process it in small batches and always empty out the bowl between the individual batches.
- When you have finished using the grating accessory, move the pusher up and down a few times. This will reduce the amount of food that gets stuck in the attachment.
- Clean out the used accessories after each use according to the instructions in chapter **CLEANING AND MAINTENANCE**.

FOOD PREPARATION AND PROCESSING TIPS

- Use only fresh foods.
- Slice large pieces into smaller ones so that they fit into the feed tube.
- First cut cabbage up into section chunks and remove the cabbage stalk.
- Insert food into the feed tube gradually and evenly.
- To move the food through the feed tube into the bowl, always use the pusher, moving it slowly and without exerting excessive downward force.
- When processing a large amount of food, check that it is not accumulating underneath or above the attachment (only for grating accessories).
- To process softer foods, such as for example cucumbers, we recommend setting the speed to low or medium. To process harder foods, for example carrots or hard cheeses, set the speed to medium, higher or maximum speed.
- When chopping hard cheeses or chocolate, do not leave the food processor running for a long time. The chopping action excessively heats up the ingredients, makes them soft and they may form into clumps.
- In the event that the attachment becomes clogged with food, always first turn off the food processor and disconnect it from the power socket. Then remove the bowl, disassemble the accessories and clean the attachment. Reassemble the accessories, mount them on the food processor and after connecting it to mains power, continue in your activity.

CLEANING AND MAINTENANCE



Warning:

Prior to any cleaning or maintenance, always turn off the robot, disconnect it from the power socket and remove the accessories from the food processor. Never clean accessories that are mounted on the food processor.

To clean the used accessories and its parts, never use chemicals, dishwashing abrasive wool, steel wool or cleaning products with abrasive components. Otherwise the surface of the parts may be damaged.

- We recommend cleaning the accessories and its individual parts as soon as possible after use, before the food scraps dry on. These are harder to remove later.
- Thoroughly wash the used removable parts after every use in warm water using a neutral dishwashing detergent. Then rinse these parts with clean water and allow them to dry naturally or dry them out their using a wiping cloth.



Warning:

When cleaning the chopper and attachments, be very careful not to injure yourself on their sharp edges.

- Regularly clean the gearbox unit on the underside of the bowl. Turn the bowl upside down and insert the key **A14** into the part of the bowl used for mounting to the food processor. Turn the key clockwise to release the gearbox unit, take the key out and remove the unit from the bowl. Also take out the gasket seal of the unit.
- Clean dust and other dirty material from the gearbox unit and the gasket seal.
- Put the gasket seal back on and slide the gearbox unit back in. Put the key on to the unit and turn it anticlockwise to secure the unit in place.
- After removing the key, check with your hand that the unit is correctly attached and that it is not possible to pull it out from the underside of the bowl.

STORAGE

- When you have finished using the accessories and its parts, store them in a clean, dry place out of children's reach. Do not expose the stored accessories to extreme temperatures, direct sunlight and excessive humidity and do not store it in an overly dusty environment.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these appliances over to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.eu