

# ER310 Quick Start Guide

**To turn on the radio,** plug in the Li-ion battery then press the **BAND** button. You can now cycle through the AM, FM, and Weather bands by pressing the **BAND** button.



**To turn off the radio,** press and hold the **BAND** button for 2 seconds.



**To enable weather alert,** ensure you are on the correct weather channel, then press the **WX ALERT** button. The "WX" icon on the LCD will flash.



**To use the flashlight and SOS Morse code beacon,** press the flashlight button on top of the radio. The first press will enable a dim beam. The second press will enable the bright beam. The third press will enable the SOS Morse code beacon.



**To enable the ultrasonic dog whistle,** press and hold the flashlight/dog whistle button for 2 seconds. A dog icon will appear on the LCD.



**To charge the internal battery,** connect the included charge cable to a USB power source then connect the radio's USB input port to the charge cable.




**To charge a USB powered device,** connect the device's charge cable to the USB output port of the radio, then connect the device to the charge cable. Once charging is complete; disconnect the device and charging cable from the ER310. This will allow you to operate the other features in your ER310.



**To access the settings menu,** hold down the **WX ALERT** button for 2 seconds.



# To Plug The Battery In:

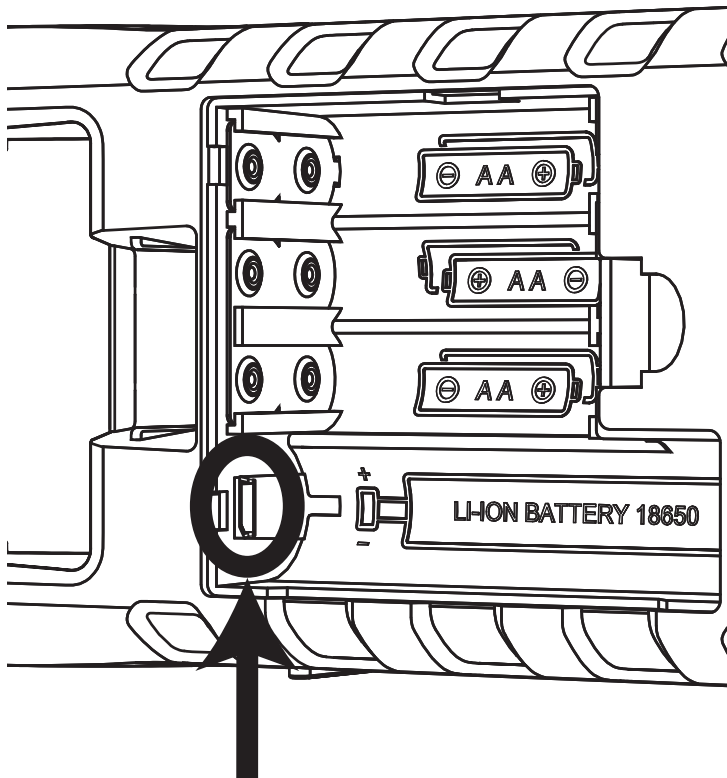

Connect the BATT26L Li-ion battery here.