 




# ELECTRIC HOT PLATE

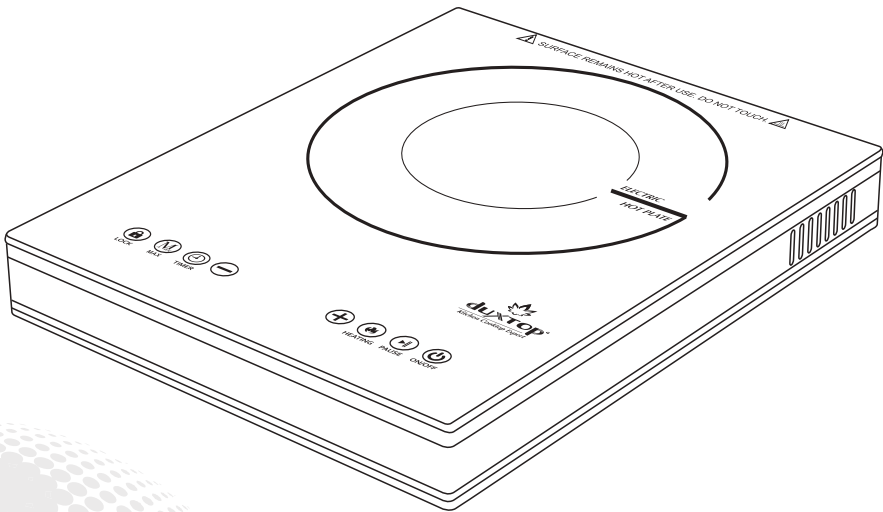

## Instruction Manual

Model: E200AIR  
Model: 9500STIR

SN: 88HN



# Welcome to the Secura Family!

Congratulations on being the proud owner of your new Secura product. We believe in manufacturing only the highest quality kitchen, home and personal care products for our customers. We are a U.S.-based manufacturer and all our products meet strict standards for manufacturing, safety and performance.

We also believe in providing the best customer service and support in the industry. That is why we offer a two-year warranty on this product that ensures your satisfaction - so you can enjoy it for years to come.

If you have questions or need assistance, please email [CustomerCare@thesecura.com](mailto:CustomerCare@thesecura.com). For fastest response, please include product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

Your feedback and suggestions are also important to us, so please email them to us at [CustomerCare@thesecura.com](mailto:CustomerCare@thesecura.com).

The Secura Team



**Copyright 2022-2024 Secura, Inc. All rights reserved.**

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the permission of the copyright holder is against the law.

## TABLE OF CONTENTS

IMPORTANT SAFEGUARDS .....	1
PARTS AND FEATURES .....	4
USING YOUR HOT PLATE .....	4
PROPER COOKWARE .....	5
CLEANING AND CARE .....	7
SPECIFICATIONS .....	8
DISPOSAL .....	9
CONTACT .....	9
MANUFACTURER'S LIMITED WARRANTY .....	10



**To reduce the risk of fire, injury or electrical shock along with extending the life of your hot plate, please read and follow all of the information in this manual before using and save it for future reference.**

## IMPORTANT SAFEGUARDS

1. Always ensure the appliance is operated on an electric power source which matches the rated voltage of the appliance.
2. Place the hot plate on a dry, level, heat-resistant surface at least 4 inches away from other appliances. Keep the hot plate surface at least 30 inches away from the overhead cabinet.
3. The hot plate is designed for heating and cooking food. Do not use for other than its intended use.
4. Do not heat food directly on the hot plate surface. Make sure not to accidentally sprinkle salt, sugar or other grains on the surface of hot plate. Do not heat unopened cans of food as they could expand and explode.
5. Do not cover the hot plate surface completely with aluminum foil.
6. Do not submerge the hot plate or electrical cord in any liquids or touch it with wet hands. Do not rinse the hot plate.
7. Do not operate the hot plate in or around flammable or explosive environments.
8. Keep the hot plate away from flammable materials, such as oil, curtains, tablecloths, paper, plastics, etc. when it is in use or still hot.
9. Do not leave hot plate unattended while in use. Unattended cooking with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water. Switch off the appliance and then cover flame with a lid or a damp cloth.
10. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner.
11. Do not use an external timer or a remote control.
12. Do not let the power cord hang over the edge of a table or countertop.
13. Always unplug the hot plate when not in use. To disconnect, first turn off the hot plate and then unplug it from the outlet. Do not pull the power cord.
14. Power cord and other non-heat-resistant items are strictly prohibited from touching hot surfaces.
15. Do not touch hot surface while the hot plate is operating, as they can become extremely hot. Please note that surface remains hot after use.
16. Do not move the hot plate while cooking or with hot cookware on hot plate surface.

17. Never put hot cookware on the hot plate surface while it is cold.
18. Do not place the hot plate on an electric burner or in a heated oven.
19. Remove cookware from hot plate when it is not in use.
20. Allow the hot plate to cool for at least 30 minutes before cleaning or storing.
21. This hot plate should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by a person who is responsible for their safety.
22. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Children shall not play with the appliance. Provide close supervision when the hot plate is being used near children.
23. To avoid circuit overload, do not operate another electrical appliance on the same outlet or circuit.
24. The hot plate is for household and indoor use only.
25. Save this instruction manual.



**To avoid circuit overload, do not operate another electrical appliance on the same outlet or circuit.**

## **Warning**

**Changes or modifications to this unit could void the user's warranty.**

## ELECTRIC HOT PLATE



Always follow basic safety precautions when using any electrical products, especially when children are present.



 
**CAUTION: HOT SURFACES** - This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires or other injury to persons or damage to property.



**CAUTION: RESIDUAL HEAT** - When the electric hot plate has just been used, the surface is extremely hot, "Hot" will be displayed, reminding the user not to touch the hot plate surface.

**HOUSEHOLD USE ONLY**  
**DO NOT IMMERSE IN LIQUID**  
**SAVE THESE INSTRUCTIONS**

## PARTS IDENTIFICATION

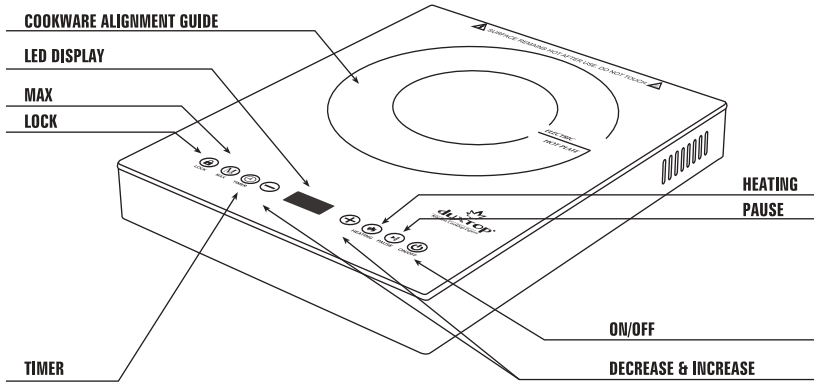

## USING YOUR HOT PLATE

1. Plug the hot plate into an electrical outlet of AC 120V 60Hz.
2. Make sure the cookware is centered on the COOKWARE ALIGNMENT GUIDE.
3. Press ON/OFF button, a series of dashes "----" will flash on the LED display. The fan inside the hot plate starts running.
4. Press HEATING button, the hot plate will heat at default power level of 5.0. Press "-" or "+" to adjust from Level 0.5 to Level 10 (0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 6.0, 7.0, 8.0, 9.0 and 10). To increase the cooking speed, select a higher power level.

Power Level	Watts	Cooking Level
0.5	150	Simmer-keep warm
1.0	250	Simmer-keep warm
1.5	400	Simmer-keep warm
2.0	500	Low
2.5	600	Low
3.0	700	Low
3.5	800	Medium-low
4.0	900	Medium-low
4.5	1000	Medium-low
5.0	1100	Medium-high
6.0	1200	Medium-high
7.0	1300	Medium-high
8.0	1400	High
9.0	1500	High
10.0	1600	High

## ELECTRIC HOT PLATE

5. Press MAX button, the shortcut for maximum power level, to promptly reach Level 10.
6. Press TIMER and "+" or "-" buttons to set the heating time between 0~175 minutes. Short press / long press "+" or "-" to adjust in 1-minute / 5-minute increment. After the timer is set, the readouts of power level and countdown will be displayed alternately.
7. Press PAUSE to stop for a short period, "P" will be displayed. Press PAUSE again to continue.
8. Press LOCK button to lock other buttons except ON/OFF. It is designed to keep the power level and timer setting from being accidentally changed once they have been set. Long press LOCK button for two seconds to unlock.
9. After cooking is completed, press ON/OFF button to turn the hot plate off. If the timer has been set, the hot plate will turn off automatically when the timer expires. "Hot" will be displayed to remind the user that the hot plate surface is HOT. The fan will continue to run for a short time to cool the unit.

 
 
 
**WARNING:** Do not unplug the hot plate during this period since it is important to allow the internal components to cool completely. "Hot" will disappear in 20 minutes after the fan stops running.

### Automatic Shut Off

- Unless the timer has been set, this hot plate will shut down automatically after 120 minutes if no button is pressed within that period.

## PROPER COOKWARE

- No special type of cookware is needed for the actual heating process – stainless steel, titanium, aluminum and copper-bottomed pans are all acceptable. The hot plate surface requires some consideration due to the potential for scratching. When you use cast-iron cookware, do not drag across the hot plate surface. When placing it on or removing it from the hot plate, make effort to lift instead of sliding. It is not advisable to use cookware with rough bottom, since you will likely end up with small shallow scratches on the hot plate surface, even if you're careful.
- For energy efficiency and even cooking, choose flat-bottomed cookware that fits closely over the heating elements, and the cookware bottom should be at least the size of the cooking zone.

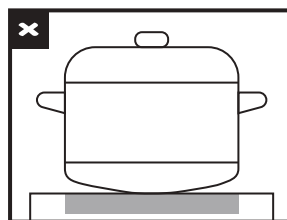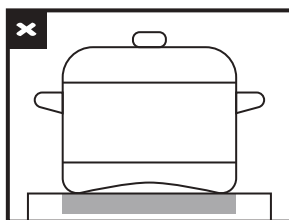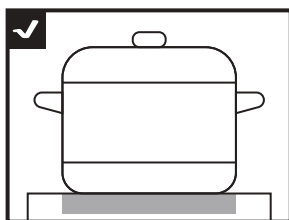

### CLEANING AND CARE

1. Allow the hot plate to cool down at least 30 minutes before cleaning.
2. Unplug the hot plate from the electrical outlet.
3. Wipe the hot plate with a damp cloth. If the hot plate surface is greasy, use a little dishwashing liquid and then wipe it off with a damp cloth.
4. Dry with a soft cloth.

**Warning:**

- Do not rinse the hot plate. Never use high-pressure cleaners or steam cleaners to clean the hot plate.
- Do not use metal scouring pads, brush, or abrasive cleaning materials. Do not use rust remover, powdered detergent, solvents or abrasive scouring agents.
- Do not use any flammable, acidic, alkaline materials or substances on or near the hot plate, as these may reduce the service life and lead to deflagration when the hot plate is turned on.

## SPECIFICATIONS

<b>Model</b>	9500STIR / E200AIR
<b>Voltage</b>	AC 120V 60Hz
<b>Power</b>	150W-1600W
<b>Power level settings (15 settings)</b>	Level 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 6.0, 7.0, 8.0, 9.0 and 10
<b>Cookware alignment guide (dia.)</b>	8.7 in / 22 cm
<b>Weight</b>	5.7 lb / 2.6 kg
<b>Power cord length</b>	57 in / 145 cm
<b>Dimensions</b>	11.4 x 14.2 x 2.8 in / 29 x 36 x 7 cm

### DISPOSAL



When this appliance has reached the end of its life, please dispose of the unit properly.

This and other electrical appliances contain valuable materials that can be recycled.

Electronic waste may be harmful to our environment if not disposed of properly.

We ask that you follow your governing agency's rules and regulations when disposing of electronic appliances. Please find an authorized recycling facility near you.

### CONTACT

If you have any questions or concerns not addressed in this user manual, please contact our Customer Service Department at 888-792-2360 (North America) or email us at [CustomerCare@thesecura.com](mailto:CustomerCare@thesecura.com).

Please read the operating instructions before using this product.

Please keep the original box and packaging materials in the event that service is required.



## ***Manufacturer's Limited Warranty***

The Manufacturer of this product warrants to the original purchaser of this product that this product will be free from defects in material and workmanship under normal use and service for 2 years from date of purchase. Manufacturer will, at its option, repair or replace with a new or refurbished product. Providing a replacement product does not renew or extend the warranty period from the original date of purchase. The Manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the product, and all costs of shipping the product for inspection and warranty service shall be borne solely by the purchaser.

For the fastest processing of a warranty claim, the Purchaser should e-mail [CustomerCare@theseкура.com](mailto:CustomerCare@theseкура.com) and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller or distributor.
2. Only the original purchaser is covered by this warranty. This warranty is not transferable.
3. Product is for personal use only. This warranty is void if the product is used in a commercial or institutional establishment.
4. This warranty does not cover normal wear and tear or damage caused by misuse, abuse, negligence, accident, acts of nature, or unauthorized modification or repair.
5. Purchaser must present acceptable proof of purchase for the product.
6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Secura, Inc.  
[CustomerCare@theseкура.com](mailto:CustomerCare@theseкура.com)  
Lake Forest, California



# SECURA®

## Secura Bestsellers

Secura Electric  
Wine Opener



Secura Automatic  
Soap Dispenser



Secura Mechanical  
Visual Timer



Secura Electronic  
Visual Timer



Secura 4-in-1 Electric  
Milk Frother



Secura Detachable Milk  
Frother Upgraded



Duxtop Portable 1800W  
Induction Cooktop



Duxtop 1800W LCD  
Induction Cooktop



Secura Electric Coffee  
and Spice Grinder



Secura French Press  
Coffee Maker



Duxtop Professional  
Stainless Steel Cookware



Secura 1800W Electric  
Deep Fryer



Secura, Inc.  
888-792-2360 (North America)  
CustomerCare@thesecura.com  
Lake Forest, California  
Designed in California

[www.thesecura.com](http://www.thesecura.com)

For the fastest processing of a warranty claim, the owner should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.