

PROFESSIONAL

# STEAM MOP


WITH HANDHELD  
STEAMER



MANUAL

**Pur Steam**  
World's Best Steamers

MODEL: THERMA PRO 211

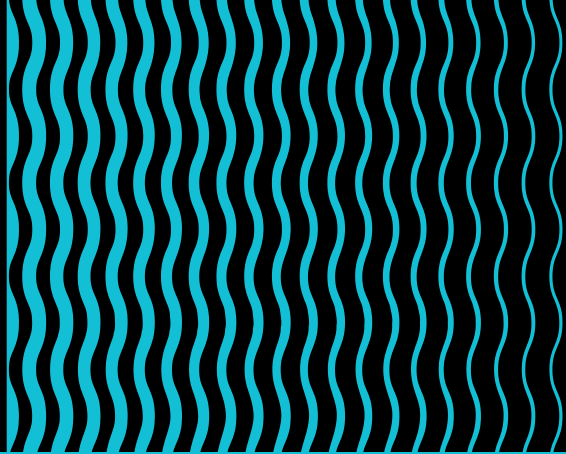

# CONGRATULATIONS


## CLEAN WITH THE POWER OF STEAM

At PurSteam, we set out to revolutionize the way people clean. We harnessed the power of steam to make everyday home cleaning tasks easier, without the use of harmful chemicals.

We believe in a more natural approach. Our steamers use the convenience of heated water to clean and sterilize surfaces without the use of harmful chemicals – a must for homes with children and pets.


We are more than just a brand specializing in steam cleaning. We take pride in an unwavering commitment to customer satisfaction. We're dedicated to simplifying your daily routines. We also include comprehensive warranties to back up the brands we love to craft for you.

**Get ready to redefine clean, one steam at a time!**

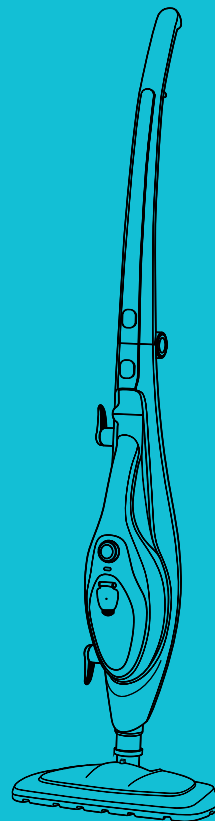


# STEAM MOP

## MANUAL

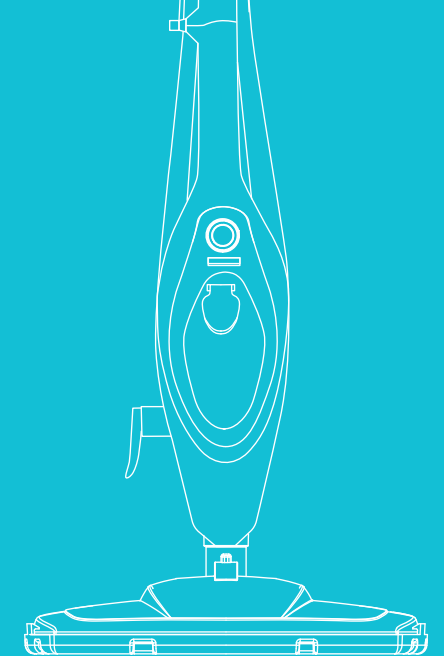

## TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	4
DESCRIPTION OF PARTS	6
INSTRUCTIONS FOR USE	7
HOW TO ASSEMBLE AND USE	7
ACCESSORIES	10
CLEANING AND MAINTENANCE	12
TROUBLESHOOTING	14
SPECIFICATION	15
WARRANTY	15
CONTACT US	15

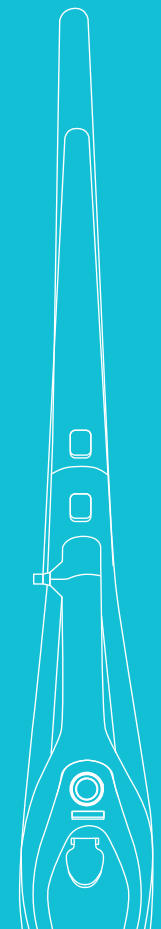

# IMPORTANT SAFETY INSTRUCTIONS

Please ensure that you read the full safety and operational instructions within the manual included with your steam mop.

- When using electrical appliances, necessary safety precautions should always be followed.
- This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced, or do not understand the product. They should be given instructions and they should be under supervision by a person responsible for their safety.
- Do not direct steam at people, animals, electrical appliances, or electrical outlets.
- Keep this appliance and cord out of reach of children.
- This appliance must not be used by children.

## ⚠ WARNING!

- **Danger of scalding. Please use caution when using the Steam Cleaner.**
- The steam emitted from the openings is very hot.
- Do not immerse the appliance in water.
- Do not leave the appliance unattended while connected to the main power supply.
- Do not leave the appliance connected to an electrical outlet when not in use.
- Never pull the power cord to disconnect the appliance from the socket but gently unplug it.
- Keep the appliance cord away from heat sources and sharp edges.
- Do not use the appliance with wet hands.
- Do not pull or carry the appliance by the cord, pull the cord around sharp corners, or expose the cable to heated surfaces.

## ⚠ WARNING!

- Do not use this appliance on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam sensitive materials.
- Do not use the appliance on any unsealed hard floor surfaces.
- Never add de-scaling, aromatic, alcoholic or detergent products into the steam mop as this may cause damage to the unit. Doing so will void your warranty.

⚠ **NOTE: Surfaces treated with wax and some non-wax floors may lose their shine due to the heat and steam action. It is recommended to test an isolated surface area before proceeding with cleaning the larger surface.**

- This appliance gets very hot during use, exercise extreme caution.
- The microfiber cleaning pad must be installed correctly before use.


## ⚠ WARNING!

⚠ **NOTE: Always wear suitable shoes when using this appliance and when changing the accessories; do not wear slippers or open-toed footwear.**

- All repairs should be carried out by a qualified engineer. Improper repairs may place the user at serious risk of harm.
- This appliance is intended for household use only.
- It should not be used for commercial purposes.
- Never leave the steam mop standing in an upright position, on a floor area while the unit is on for longer than 5 sec. Leaving the mop in this position may cause a build-up of a pale residue on the surface.
- Distilled or demineralized water is recommended in place of tap water. Do not use chemicals in the water tank.
- When cleaning hobs and ovens, you must not direct the steam towards any electrical connections. Please ensure hobs and ovens are fully cooled before attempting to clean.
- Ensure the device is disconnected from the outlet before cleaning.
- Do not use this appliance for any purpose other than that for which it is designed.
- Do not use the appliance if it has been dropped or damaged in any way.
- If the supply cord or plug is damaged please contact PurSteam Customer Service.

# SAVE THESE INSTRUCTIONS

# DESCRIPTION OF PARTS

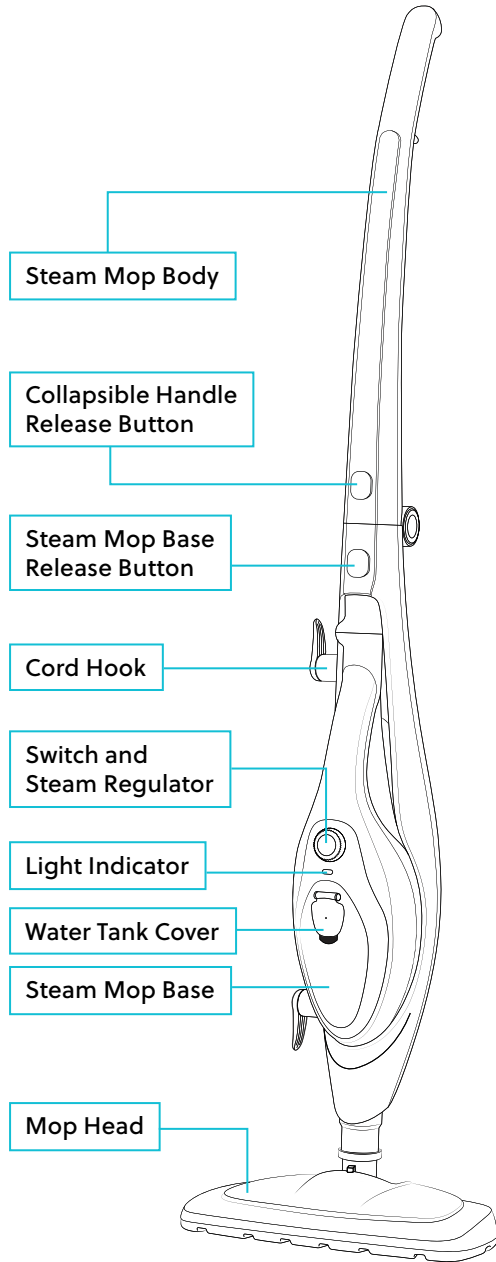

## DETACHABLE ACCESSORIES

Angled Nozzle	
Scrape Tool	
Double Brush Tool	
Big Brush Tool	
Small Brush Tool	
Steamer Jet	
Steamer Attachment	
Squeegee Attachment	


## ADDITIONAL ACCESSORIES

Carpet Glider	Microfiber Cloth
Cup	Funnel
Steamer Cloth	Steamer Cloth

# INSTRUCTIONS FOR USE


## ATTACHING THE MOP HEAD

Slide the bottom end of the Steam Mop Base onto the Mop Head until the Mop Head spindle locks into place. Hold both parts of the unit and gently push the clip into the handle to lock it.

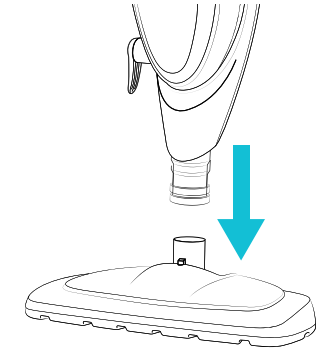

## ⚠ WARNING!

Never force the Steam Mop Base onto the Mop Head, as this could potentially damage the Steam Mop. Always attach the Mop Head using both hands, ensuring it locks into place correctly. The Steam Head can be removed from the main body by pressing the Steam Mop Base Release button, located on the Steam Head spindle.

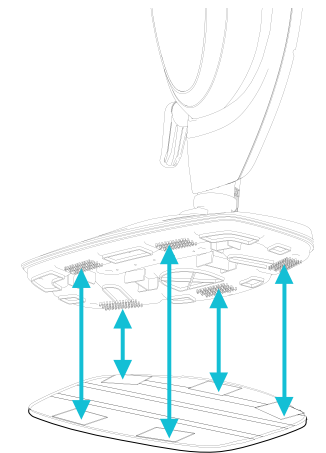


## ATTACHING A MICROFIBRE CLOTH

Position the Microfibre Cloth onto the Mop Head and secure it. Make sure to match each Velcro piece on the Cloth to the corresponding spike on the Mop Head and press firmly to stick them together.

## ATTACHING THE CARPET GLIDER

Position the Microfibre Cloth onto the Mop Head and place the Carpet Glider over and around the Microfibre Cloth. To remove, simply push the Carpet Glider with your foot.

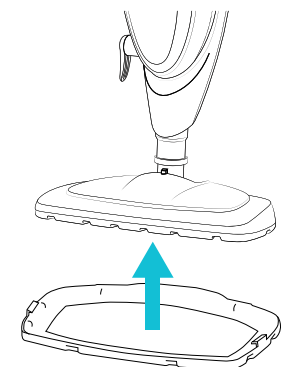

## FILLING THE WATER TANK

Open the Water Tank Cover and fill the tank with 12 oz (~380 ml) of water using the Funnel and the Measuring Cup.

### ⚠ WARNING!

Never place de-scaling, aromatic, alcoholic or detergent products in the steam mop tank, this will cause damage to the appliance and void your warranty.

## FILLING THE TANK DURING USE

Turn off the switch (1) then open the tank to pour in the water (2). Seal the tank and turn on to activate the steam.

## USING THE STEAM MOP




Plug in the Steam Mop into an electrical outlet and switch it on. It will take approximately 30 seconds for the Steam Mop to preheat after which it is ready for use.

The steam will run continuously until the unit is turned off or the water runs out. A full tank of water will produce approximately 12 minutes of steam at the maximum setting and approximately 25 minutes at the lowest setting.

### ⚠ WARNING!

When the tank runs out of the water, the pump inside will make a sound and vibrate at which time you need to turn off the Steam Mop immediately and refill the Water Tank before using it again.


⚠ **TIP:** Use of distilled or demineralized water is recommended to prolong the life of your hard floor cleaner.

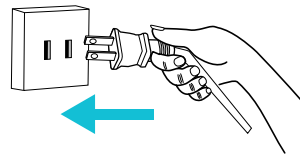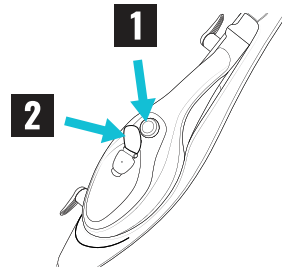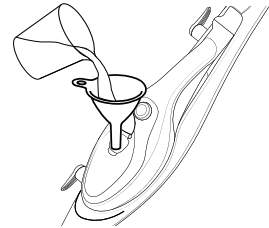

MAX SETTING



LOW SETTING

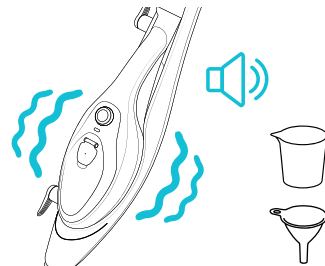



## USING THE MOP AS A HAND HELD STEAMER / STEAM CLEANER

Press the Handheld Steamer Release button to remove the base from the main body.

Install the Steamer Jet or the Steamer attachment at the top of the Handheld Steamer by pushing it in.

Before attaching any accessories onto the Steamer Jet or the Steamer attachment, make sure it is locked in the position. Choose the attachment you would like to use on the Steamer Jet, and install it by aligning with the arrow indicator on Steamer Jet, then turn it clockwise.

Take off the accessories after use and re-attach the Handheld Steamer into the Steam Mop Base.

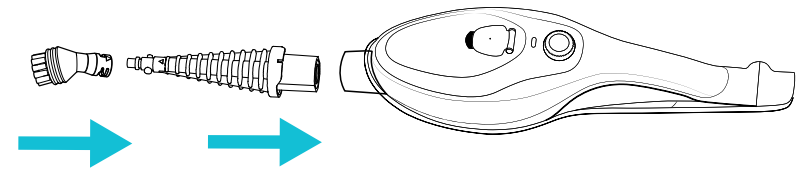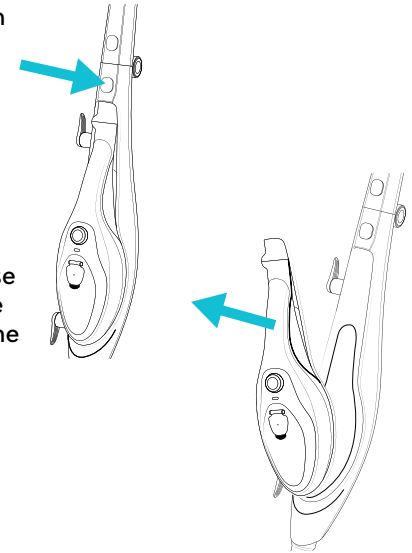


### ⚠ WARNING!






Extremely Hot!

## FOLDING HANDLE

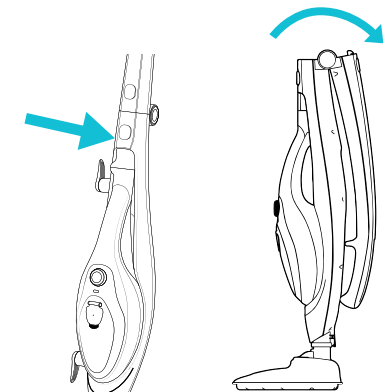Press the Collapsible Handle Release button to fold the handle and store the unit. (See > page 13).

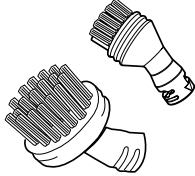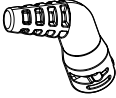

# ACCESSORIES

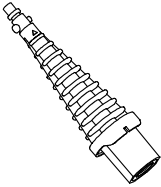NAME	PICTURE	SUGGESTED USE
Big and Small Brush Tool		Ovens, hobs, showers, bath tubs, tiles, toys, refrigerators, etc.  <b>WARNING: Brush Tools may scratch some surfaces.</b>
Angled Nozzle		Stove tops, taps, sinks, hard to reach areas, etc.
Double Brush Tool		Cleaning grout lines, sanded or non-sanded.
Scrape Tool		Scraping baked on food, grime and grease. Removing residue or other substances from surfaces such as hobs/cooktops and ovens.
Steamer Jet		Sink, gas stove, faucet grout, microwaves oven, range hood, hard to reach area, etc.  It also serves as an accessory adapter to attach one of the small tools: Double Brush Tool, Scrape Tool, Angled nozzle, Big Brush Tool or the Small Brush Tool.

NAME	PICTURE	SUGGESTED USE
Squeegee Attachment		Shower screens, mirrors and glass. Remove creases from sofa, tablecloths, etc. Also serves as an accessory adapter for steaming garments and fabrics.
Garment Steamer and Garment Cloth		Steaming sofa, tablecloths and garment, etc. Use with the Squeegee Attachment.
Microfibre Cloth		Cleaning hard floors.
Carpet Glider		Cleaning carpets.
Funnel and Measuring Cup		Measure the water and pour it in the Steam Mop Base.

# CLEANING AND MAINTENANCE

## ⚠ WARNING!

Before cleaning, ensure the appliance is unplugged and has cooled down. Drain any remaining water from the base every time you finish with steaming. Clean the accessories in warm, soapy water and leave them to air dry.

## ⚠ WARNING!

If you live in an area with hard water (high dissolved minerals), it will produce lime scale and impact product performance. We recommend the use of distilled or demineralized water to improve the Steam Mop's longevity.

## ⚠ WARNING!

Never put descaling, alcoholic, or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.

## CLEANING THE MICROFIBER CLOTHS

The Microfiber Cloths are machine washable. You may wash them in warm water. Always use a mild detergent and avoid fabric softeners. Air dry only.

⚠ **NOTE:** Never use bleach or fabric softener when cleaning the Microfiber Cloths.

## STORAGE

Remove the Water Tank and empty out any residual water, then clean the outer surface with a dry cloth. Remove the cleaning pad and wash it, so it is ready for future use. Store the appliance in a dry area out of reach of children. When storing or carrying the mop, always wrap the cord around the cord hooks.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Reduced steam or No steam	Water Tank is empty.	Fill Water Tank.
	Steam nozzle is blocked.	Remove Mop Head and clean the nozzle.
	The Steam button is not pressed.	Press the Steam button.
	Steam Control Knob is set to MIN.	Turn the Steam Control Knob clockwise to MAX.
	There is no power to the unit.	Ensure the appliance is plugged in and turned ON.
Unit will not turn ON	The unit is not plugged in.	Make sure that the unit is plugged into a proper outlet and that the switch is ON.
	Blown fuse or breaker.	Check your fuse or breaker.
	Steam Mop Base not properly attached.	Make sure that the Steam Mop Base is securely attached onto the Steam Mop Head.

## SPECIFICATION

<b>MODEL</b>	Therma Pro 211
<b>RATED VOLTAGE</b>	120 V
<b>RATED FREQUENCY</b>	60 Hz
<b>OUTPUT POWER</b>	1550 W
<b>CAPACITY</b>	12.8 fl oz / 380 ml
<b>STEAM TEMPERATURE</b>	212°F
<b>CORD LENGTH</b>	28 ft (853 cm)

## WARRANTY

This product is warranted to be free from defects in material and workmanship under normal use and service for one year from the date of the original purchase with the receipt. The manufacturer's obligation shall be limited to repairing or replacing any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse, or misuse.


## CONTACT US

MODEL: THERMA PRO 211

STEAM MOP

**Pur**  **Steam**  
World's Best Steamers

SUPPORT@PURSTEAM.COM  
WWW.PURSTEAM.COM

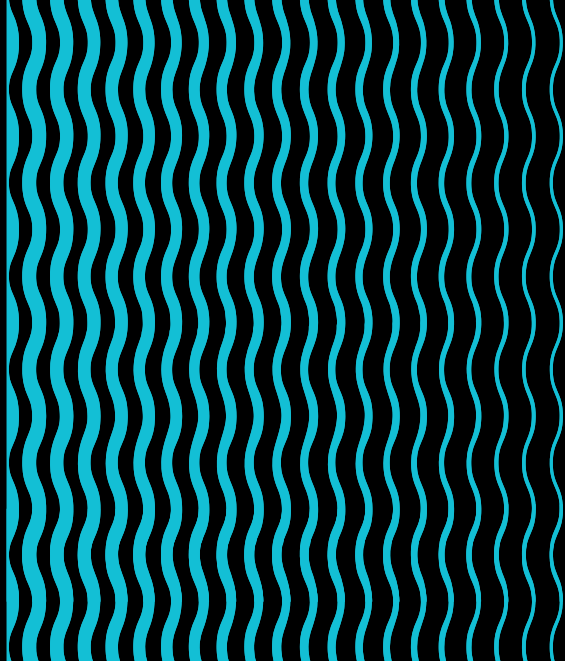

*Pur*  *Steam*  
World's Best Steamers

SUPPORT@PURSTEAM.COM  
WWW.PURSTEAM.COM

