

SENCOR®

SFN 6014GY
SFN 6015WH



AIR COOLER

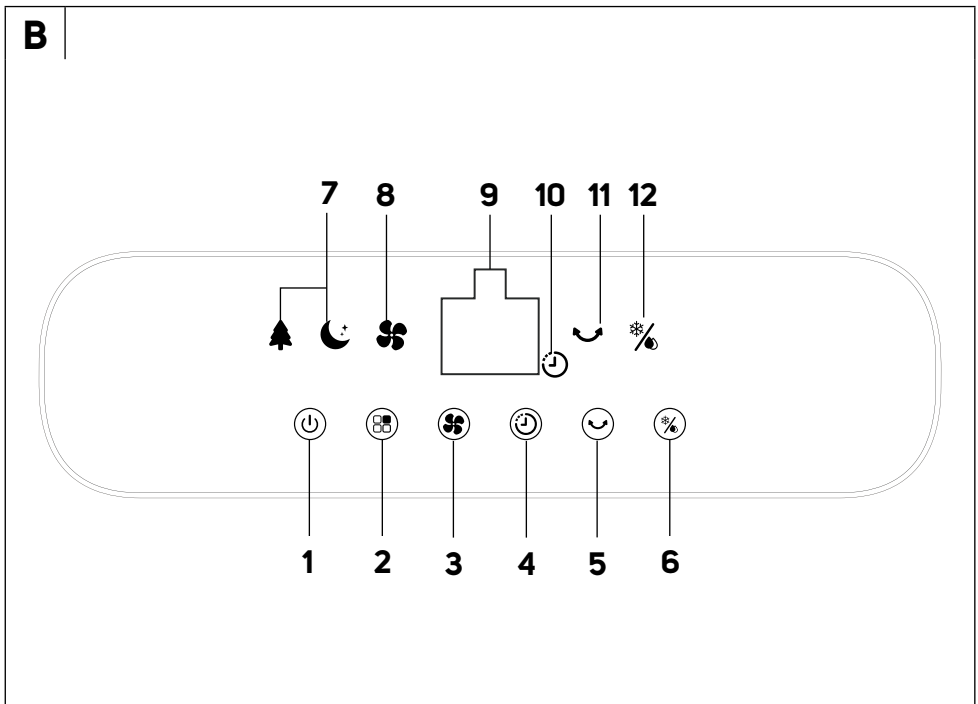 
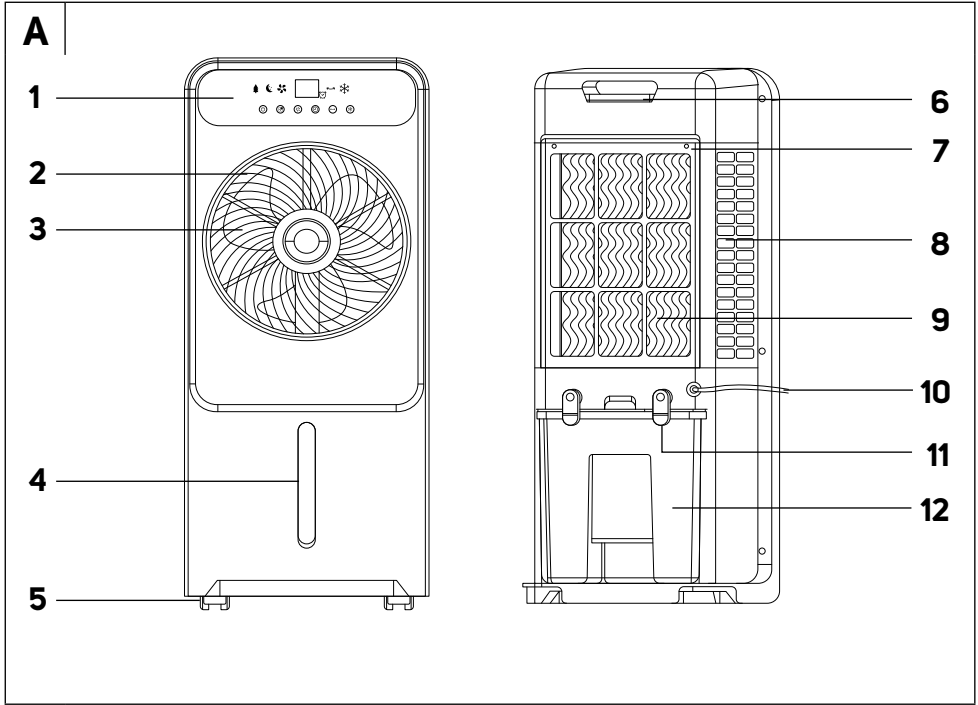 
Translation of the original manual



SENCOR®

SFN 6014GY
SFN 6015WH





C

1



MODE

5

2



SPEED



TIMER

6

3



+



-

7

4



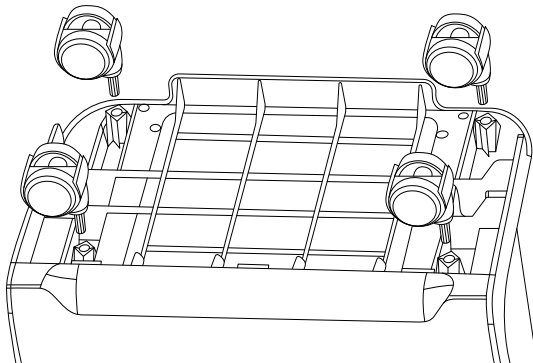 
OSC

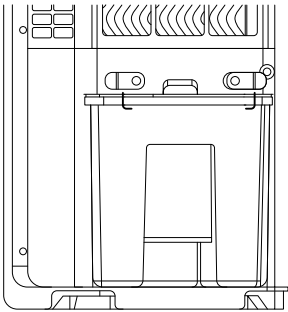 
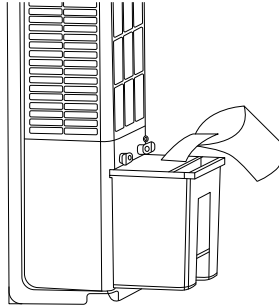 
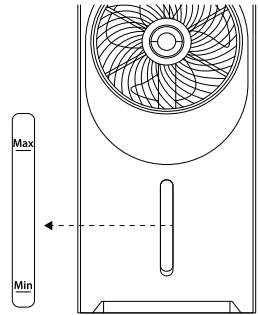 
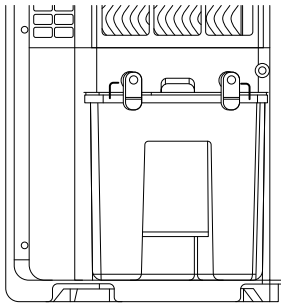 
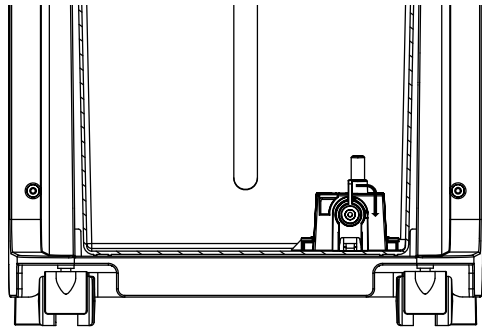 
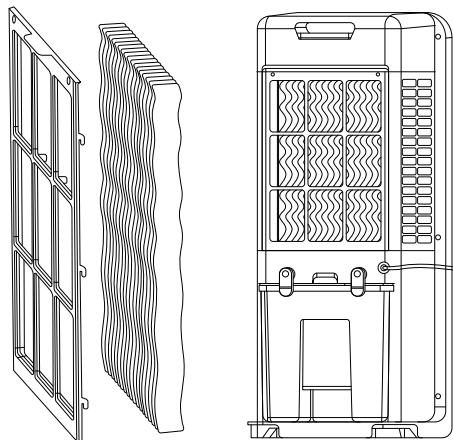 


COOL

8

D



E1**E2****E3****E4****E5****F**

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

General Warnings

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance. Cleaning and maintenance must not be performed by children without supervision.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- The water tank is marked with minimum and maximum level lines. Always make sure that the water reaches at least the minimum mark. Never fill the tank over the maximum level line.
- Pay attention when using the appliance as it produces steam.
- Disconnect the appliance by pulling the plug from the socket before filling or cleaning.
- High humidity values can promote the growth of biological organisms in the environment.

- Do not allow the area around the appliance to become damp or wet. If there is increased humidity (dew), switch the appliance to a lower power. If the power of the appliance cannot be reduced, use the appliance intermittently. Do not allow absorbent materials, such as carpets, curtains, drapes or tablecloths to become damp.
- Never leave water in the appliance if not in use.
- Empty and clean the appliance before storing. Clean the appliance before further use.
- The appliance is designed for use in household, office and similar types of areas. It is not intended for commercial purposes.
- Do not use the appliance in rooms where flammable or explosive chemicals are stored, in industrial environments or outdoors.
- Place the appliance only on a clean, flat, dry, smooth and stable surface. Do not place the appliance on unstable surfaces such as carpets with very long and thick fibres.
- Do not place the appliance in the vicinity of an open flame or appliances that are sources of heat.
- Do not use the appliance to support various items.



Clean the water tank every 3 days.

ADDITIONAL IMPORTANT SAFETY INSTRUCTIONS FOR USE OF THE APPLIANCE

- Before connecting the appliance to a power socket, check that the nominal voltage on the appliance's rating label matches the electrical voltage in the socket.
- Connect the appliance only to a grounded power socket. The power socket to which you connect the appliance must be freely accessible so that it is possible to quickly disconnect the power cord from the power source if necessary.
- Install the power cord in such a way that it is not tripped over.
- If the appliance is equipped with castors, take extra care when handling it, e.g. to prevent it from falling down stairs or sliding off a sloping surface. To avoid tipping the appliance over, do not try to roll the castors over the carpet.
- Do not touch an appliance that is connected to the power socket with wet hands.
- Do not use the appliance near a shower, swimming pool, etc., do not spray water or any other liquid on it or submerge it in water or any other liquid.

- Do not cover the air inlet or outlet openings or insert objects into them. This could damage the appliance.
- Adequate space must be provided for air circulation around the appliance during operation.
- Do not use the appliance without the water or dust filter properly installed.
- Only fill the tank with clean, cold water. Do not add any other additives such as air fresheners, essential oils, etc. to the appliance. Otherwise damage to the appliance may occur. Do not fill the tank above the maximum level line.
- Before operating the appliance in cooling and humidifying mode, make sure that the water level in the tank is at least at the minimum level.
- Use the appropriate button on the control panel or remote control to switch off the appliance. Do not switch off the appliance by disconnecting the power cord from the socket.
- For health reasons, do not expose yourself or animals to direct cold air for long periods of time.
- Always switch off and unplug the appliance before assembling or disassembling it when not in use, before filling, cleaning or moving it.
- Perform the cleaning in accordance with the instructions in the Cleaning and maintenance chapter.
- Move, store and transport the appliance in an upright position.
- Do not attempt to remove the outer case of the appliance.
- Unplug the appliance from the power socket by pulling the plug, not the power cord. Otherwise, damage to the power cable or the socket may occur.
- Do not use the appliance if it is not working correctly, if it has been damaged or has been submerged in water. To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. All repairs should be carried out by an authorised service centre. By tampering with the appliance, you expose yourself to the risk of losing your legal rights regarding faulty performance or warranty for quality.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.



Product with protection class II



DISPOSAL OF USED BATTERIES







Batteries contain environmentally damaging compounds and therefore do not belong in standard municipal waste. Take used batteries for proper disposal at a designated battery collection point.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have found all its components. It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.









DESCRIPTION OF THE APPLIANCE (FIG. A)

A1 Control panel	A7 Rear grille
A2 Front protective grille	A8 Side ventilation openings
A3 Fan	A9 Filter
A4 Water level indicator with MIN and MAX lines	A10 Power cord
A5 Castors	A11 Water tank swivel locks
A6 Storage space for the remote control	A12 Removable water tank

DESCRIPTION OF THE CONTROL PANEL

B1 On/Off  button	B7 Operating mode icons
B2  button to select the operating mode	B8 Fan icon
B3  button to adjust fan speed	B9 Display
B4  button to set the timer	B10 Timer icon
B5  button to rotate the protective grille	B11 Protective grille rotation icon
B6  button to select cooling and humidifying mode	B12 Cooling icon

REMOTE CONTROL DESCRIPTION

C1  button to turn on/off	C6  button to activate the timer
C2  button to adjust fan speed	C7  button to shorten the timer time
C3  button to extend the timer time	C8  button to switch on cooling and humidification
C4  button to rotate the front grille	
C5  button to select the operating mode	

PURPOSE OF USE

- The air cooler is designed to cool the air in the room. The warm air is drawn in at the rear of the cooler, passes through a cooling insert that cools and humidifies it, and is then discharged into the surroundings via a fan at the front.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Remove the water tank from the back of the air cooler. Wipe the tank with a soft sponge slightly dampened with warm water and neutral detergent. Wipe dry with a clean cloth. Place the tank back into the air cooler.

INSTALLATION

- Locate the appliance on an even, dry and stable surface within reach of a properly grounded power socket.
- Ensure sufficient air circulation, leave a clear space of at least 30 cm on all sides of the appliance.

Installation of Castors

- It is necessary to install the castors before using the cooler. The castors are used to easily move the cooler. However, always check that the power cord is disconnected from the power socket before moving it.
1. Make sure that the cooler is switched off and disconnected from the power socket and that there is no water in the tank.
 2. Put the cooler in a horizontal position and insert the castors into the holes at the bottom – see Figure D.
 3. Push the castors into the lower part until you feel resistance.
 4. Place the cooler in a vertical position and check that it is not tilted and that the castors turn freely.
- If you need to remove the castors, follow the same procedure, but remove the castors from the bottom of the cooler.



 
Warning:


Do not use the cooler without properly installed castors.


OPERATING THE APPLIANCE COMMISSIONING

Fully unwind the power cord and plug the plug into the power socket. An audible warning sounds and the air cooler switches to standby mode.

Switching the Appliance On/Off

 
Press the  button briefly to switch the air cooler on. It will start by default:

- Fan speed 5 (the fan mode icon  is lit; the display shows "5").
- Normal operating mode (no operating mode icon is lit).
- Other icons on the display are off.

- To switch off the air cooler, press the  button. An audible warning sounds and the air cooler switches to standby mode. To switch off completely, disconnect the cooler from the power socket.






Note:

When the air cooler is switched off with the  button and switched to standby mode, the last settings are stored in memory (except for the timer, sleep mode). If you disconnect the air cooler from the power socket, it will start by default when you switch it on again.






Switching off the Control Panel and Display

The control panel and display automatically turn off after 1 minute of inactivity. Press any button to turn the light back on.

Fan Speed Setting

- The  button is used to set the fan speed. Press the  button repeatedly to set the desired fan speed from 1 to 12, where 1 is the lowest fan speed and 12 is the highest fan speed. The display will show the numerical value of the relevant speed. The  icon will light up regardless of the set speed.

Setting the Cooling and Humidifying Mode

- Before starting this mode, you need to fill the tank with water. To fill the water tank, follow the instructions in the "FILLING THE WATER TANK" section.
- Press the  button to turn on the cooling and humidifying mode. The  icon lights up on the display and the pump starts.
- Use the  button to adjust the fan speed.
- Turn off the cooling and humidifying mode by pressing the  button. The icon  goes out and the pump switches off.



Warning:


 

If the air cooler detects a lack of water in the tank or you remove the water tank or the tank is not inserted, after a short while the cooling and humidifying mode will automatically switch off to avoid damaging the pump and an audible warning will sound (3 short beeps).



Note:

To increase the cooling efficiency, you can put cooling boxes (not included) in the water and let them cool in the freezer beforehand. Place the cooling boxes in the left side of the tank. Otherwise, the part of the water pump that is immersed in the water could be damaged.

Setting the Operating Mode

- Press the  button repeatedly to select the operating mode in the following order: normal mode – natural breeze mode () – sleep mode (). For natural breeze and sleep modes, the corresponding indicator light will illuminate; for normal mode, no operating mode light will illuminate.

1. Normal Operating Mode

In this mode, the fan speed is set by the user and the fan speed is constant.


 


2. Natural Breeze Operating Mode

In natural breeze mode, the airflow speed is controlled automatically from high to low speed depending on the selected fan speed. This achieves a natural breeze effect.



3. Sleep Operating Mode



Depending on the fan speed set by the user and the preset rules of this mode, the speed is regularly reduced, which reduces the uncomfortable feeling caused by the strong flow and increases comfort during sleep. In sleep mode, the fan speed changes as the fan speed is switched.

Timer Setting

- Set the amount of time that the air cooler will run, after which it will switch off and go into standby mode.
- Press the  button to switch on the timer. The display will flash "1H" and the  icon will light up.
- Press the  button repeatedly to set the timer time from 0 to 24 hours. The display will show the timer value.
- Press any button (except the  button) or wait about 5 seconds and the timer time will be stored in memory. The countdown will start and the display will alternate between the timer time and the set fan speed.
- After the timer period has elapsed, the air cooler switches off and enters standby mode.

Front Grille Rotation

 

- Press the  button and the front protective grille will start to rotate slowly. The  icon will light up.

- To switch off the front grille rotation, press the  button, the rotation stops and the  icon goes out.

Automatic Shut-off Function

- The appliance is equipped with an automatic shut-off function after 10 hours of continuous operation. This means that after 10 hours of operation, when none of the control buttons are pressed, the appliance will turn off automatically.
- This function is not active if you set the timer.

Turning off the Audible Warning

- Each press of the button is accompanied by a short audible warning (beep). To turn off the audible alert, press the  button for 3 seconds.
- To switch on again, press the  button for 3 seconds.

REMOTE CONTROL

- The functions of the buttons on the remote control and the control panel are identical. If you wish to use the remote control, point it at the signal receiver at the front of the cooler under the display. The maximum range of the signal sent from the remote control is 5 m.



Note:

If there are obstacles located between the remote control and the signal receiver, the signal may not be transmitted.

Inserting and Replacing Battery

- From the bottom part of the remote control pull out the battery compartment and insert the 3V CR2032 battery into it. When inserting the battery, make sure the polarity is correct.
- If the battery in the remote control is discharged, replace it with a new battery of the same type.
- If you will not be using the remote control for an extended period of time, we recommend removing the battery. If the battery were to leak into the interior of the remote control, it could be damaged.



Note:

Never put batteries in a fire, short-circuit or damage them in any way. Dispose of them in an environmentally friendly manner at the end of their lifespan. Never dispose of batteries in municipal waste.

FILLING THE WATER TANK

Before filling the tank, turn off the air cooler, disconnect it from the power socket and secure the castors.

1. Turn the locks on the tank to the horizontal position – see Figure E1.
2. Lift the tank and fill it with clean, cold water – see Figure E2. When filling, observe the minimum and maximum lines marked on the tank – see Figure E3.
3. Carefully slide the tank back into the cooler.
4. Turn the locks on the tank to the vertical position – see Figure E4.

A pump is attached to the bottom of the tank. If you need to remove the tank completely from the cooler body, proceed as follows:

1. Turn the locks on the tank to the horizontal position – see Figure E1.
2. Lift the tank and turn the pump lock 90° to the right – see Figure E5. Then release the pump from the bottom of the tank.
3. Carefully pull the tank out of the cooler body.

When inserting the tank back in, attach the pump to the bottom of the tank and turn the lock 90° to the left. Then insert the tank back into the cooler.



Warning:

Do not remove the tank from the cooler body without first disconnecting the pump. Otherwise, there is a risk of serious damage to the cooler.

**Warning:**

Do not let the water stand in the tank for more than a day to prevent the growth of unwanted bacteria, microorganisms or mould. When filling, make sure that the water level reaches at least to the minimum line but does not exceed the maximum line.

CLEANING AND MAINTENANCE

- Disconnect the power plug from the power socket before cleaning.
- Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface of the appliance.

**Warning:**

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid. Only the pump attached to the bottom of the tank is used for immersion in water.

Cleaning the Water Tank

- After use, empty the tray and rinse it with clean water and wipe it with a clean cloth. When removing the tank, follow the instructions in the **"FILLING THE WATER TANK"** section, especially the instructions to disconnect the pump before removing the tank.
- At least once a month, wipe the reservoir with a soft sponge slightly dampened with warm water and a neutral detergent to remove calcium deposits and prevent the growth of unwanted bacteria, microorganisms or mould. Then rinse it properly with clean water a dry it with a clean cloth.

Cleaning the Rear Grille and Filter (Fig. F)

- Release the lock at the top of the rear grille. Unscrew the grille and pull it away from the cooler body. Remove the filter.
- Wipe the rear grille with a slightly damp cloth and wipe dry.
- Wipe the filter with a slightly damp cloth. You can also remove dirt and dust using a vacuum cleaner with the brush nozzle attached and set to low power.

**Warning:**

The filter must not be soaked in water to clean it.

**Note:**

We recommend knocking the filter out of the living space.

- When cleaning, check the condition of the filter. If it is damaged or worn, replace it. Do not use a damaged filter.
- Put the clean filter back into the cooler body and fit the rear grille. Put the bottom part on first and then flip the top part over until you hear a click.

**Warning:**

Before inserting the filter into the cooler body, make sure the filter is dry. Never use the cooler with or without a wet or damp filter.

**Note:**

Contact your dealer to purchase a new SFX 6014 filter.

Cleaning the Outer Case

To clean the outer casing, use a cloth slightly dampened with lukewarm water and neutral detergent.

Storage

- If you will not be using the appliance for an extended period of time, unplug the plug from the power socket and clean it according to the instructions in the chapter **"Cleaning and Maintenance"**.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Remove the battery from the remote control.
- The supply cable can be wrapped around the fuses of the removable tray – see Figure G.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240V~
Rated frequency.....	50–60 Hz
Rated input power.....	28W
Maximum fan flow rate.....	up to 15.4 m ³ /min
Fan wattage.....	28 W
Operating value.....	0.59 (m ³ /min)/W
Standby power consumption.....	0.28 W
Seasonal energy consumption.....	8.7 kWh/year
Fan sound power level.....	60.5 (dB) A
Maximum air velocity.....	up to 2.46 m/s
Dimensions.....	69 × 29 × 24 cm (width × height × depth)
Weight.....	4.3 kg
Power cord length.....	1.8m
Water tank capacity.....	5 l
Recommended room size.....	up to 24 m ²

Standards for measuring operating value:

- (EU) No 206/2012 + (EU) 2016/2282
- EN ISO 5801:2017
- EN 50564:2011
- EN 60704-1:2010+A11:2012
- EN IEC 60704-2-7:2020

Contact for further information:

FAST ČR, a.s., U Sanitasy 1621, 251 01 Říčany, Czech Republic

The declared noise emission level of the appliance is 60.5 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

ORIGINAL CONSUMABLE ACCESSORIES

SRX 6014	Spare filter
----------	--------------

We reserve the right to change the text and technical specifications.

.....

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.eu
info@sencor.com