



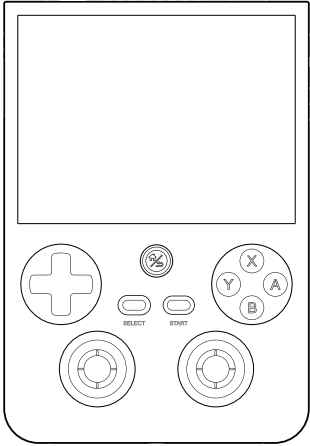

RG 477V User Manual

Game Button and Port

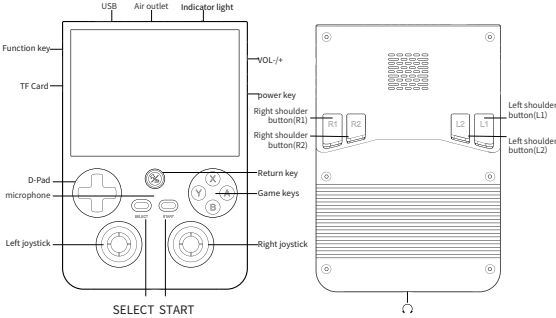

Main Interface Operation

Android main UI:

D-pad and joystick	Select application
A key / START key Y key / touch screen	Confirm/Enter the application
SELECT key	Open menu
B Key	Cancel /Close menu
Volume key +/-	Volume adjustment
Function key	Switch Android Front-end
Return key	Short press RETURN Long press HOME

Function Description

First Boot up

First Boot up can Select Language,Next need to wait for the first boot configuration to complete.

Key mapping

Open the Key mapping for the Quick settings tile, the usagewindow will pop up to the interface,For specific use,please refer to the application's internal usage details page instructions.

Fan

Supports automatic speed adjustment mode and multi-mode speed control.

DP output

Supports external display devices via USB.

Indicator light and charging function

The machine packaging matches 5V/2A four-line charging data cable.Plug in the charging cable and the machine will start charging.The status of the device indicators is as follows:Red light on when charging,Green light on when fully charged,Red light twinkling when battery is low.

Joystick light

16 million color RGB joystick lighting, support constant light, breath, rainbow, marquee, chasing, gaming and other light effects, support customize the color and adjust the brightness.

RG Android Front-end Usage Instructions

Opening the Android Front-end

On Android, click the RG icon in Quick settings tile to open the front-end. When you enter the front-end for the first time, Click to confirm according to the prompt pop-up box,Pop up the RetroArch decompression resource process Exit RetroArch after decompression is complete,will return to the RG Front-end.

Emulator interface:

SELECT: Function and settings
START: Game search (full emulator)
Press X button: Scan and refresh games (after changing to a new TF card)

Game list interface:

SELECT: Game settings interface
START: Game search (single emulator)
X button: Game collection and cancel operation

RG Android Front-end Button Description

Button	Main interface of Emulator	Game List Interface
A/Y	Confirm	Confirm
B/F (Short press)	Cancel (return)	Cancel (return)
X	Scan refresh game	Collect
SELECT	Function and settings	Setting
START	Search	Search
D-pad (joystick)	Moving cursor	Moving cursor

Note: Long press Return key in the game running interface to return to the Android front-end interface

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.