

140.00 mm

A line drawing of a white EMEET remote control. It features a large circular navigation pad in the center. Above the pad are buttons for power (1), volume up/down (2), channel up/down (3), and mute (4). Below the pad are buttons for TV (6), TV (7), and OK (8). To the right of the pad is a vertical column of buttons: a small button (9), a button with a TV icon (10), and a button with a TV icon (11). The EMEET logo is at the bottom.

- ## Italia

A diagram of the GMEET remote control with numbered callouts 1 through 11 pointing to various buttons. The buttons are: 1. Power button (top left), 2. TV button (top right), 3. Source button (top left, below power), 4. Mute button (top right, below TV), 5. Volume Up/Down buttons (top right, below mute), 6. 1X button (middle left), 7. 7X button (middle center), 8. 3X button (middle right), 9. Channel Up/Down buttons (middle left, below 1X), 10. Star/Menu button (bottom left), 11. Exit/Back button (bottom right).

- Português

A line drawing of a white EMEET remote control. It features a large circular navigation pad in the center. Above it are four buttons: a power button (1), a TV icon button (2), a source button (3), and a mute button (4). Below the navigation pad are buttons for '3X', '7X', and '5X' zoom (5, 6, 7), a 'Q' button (8), a 'C' button (9), and a 'P' button (10). At the bottom are two large buttons for 'S/P' (11) and 'A/P' (12). The brand name 'EMEET' is printed at the very bottom.

- 日本語

A diagram of the EMEET remote control with numbered callouts 1 through 11 pointing to various buttons. The buttons are: 1. Power button (top left), 2. TV icon button (top right), 3. Source button (top left of center), 4. Play/Pause button (top center), 5. Stop button (top right of center), 6. 1X button (middle left), 7. 7X button (middle center), 8. 5X button (middle right), 9. Q button (bottom left of center), 10. EQ button (bottom center), 11. EQ button (bottom right of center). The remote also features a large circular touchpad in the center and a small display screen at the top.

- 繁體中文

A line drawing of a remote control with the brand name 'EMEET' at the bottom. Numbered callouts point to the following buttons: 1. Power button (top left), 2. Mute button (top right), 3. Channel Up/Down buttons (top left of center), 4. Play/Pause button (top center), 5. Stop/Eject button (top right of center), 6. Fast Forward button (middle left), 7. Rewind button (middle center), 8. Play/Pause button (middle right), 9. Stop/Eject button (bottom left), 10. Fast Forward button (bottom center), 11. Rewind button (bottom right).

- 简体中文

English | Deutsch | Français | España | Italia |  
Português | 日本語 | 繁體中文 | 简体中文



A diagram showing a laptop connected to a device via a USB cable. The device is represented by a small rectangle with a USB symbol on it.



A line drawing of a remote control with the brand name 'EMEET' at the bottom. Numbered callouts point to the following features:

- 1: Power button (circular with a dot in the center)
- 2: Mute button (circular with a speaker icon and a diagonal slash)
- 3: Volume Up button (circular with an upward-pointing arrow)
- 4: Volume Down button (circular with a downward-pointing arrow)
- 5: Channel Up button (circular with a right-pointing arrow)
- 6: Channel Down button (circular with a left-pointing arrow)
- 7: Source button (circular with a square icon containing 'TV', 'AV', and 'AUX')
- 8: Stop button (circular with a square icon containing a dot)
- 9: Play/Pause button (circular with a right-pointing arrow and a vertical bar)
- 10: Fast Forward button (circular with a double right-pointing arrow)
- 11: Rewind button (circular with a double left-pointing arrow)

- English

A line drawing of a white EMEET remote control. It features a large circular directional pad in the center. Above it are four buttons: a circular button (1), a power button (2), a play/pause button (3), and a volume up/down button (4). Below the directional pad are three buttons: '1X' (6), '7X' (7), and '3X' (8). To the left of the directional pad are two buttons: a minus button (9) and a plus button (10). To the right are two buttons: 'MUTE' (5) and 'MUTE' (11). At the bottom are two buttons: a star button (12) and a snowflake button (13). The EMEET logo is at the very bottom.

- Deutsch

A line drawing of a white EMEET remote control. It features a large central circular touchpad. Above the touchpad are three buttons: a square button (1), a triangular button (4), and a circular button (3). Below the touchpad are four buttons: a square button (6), a circular button (7), a triangular button (5), and a circular button (2). At the bottom are two buttons: a square button (10) and a circular button (11). The EMEET logo is at the very bottom.

- Francés

Diagram of the EMEET remote control with numbered callouts:

- 1: Power button
- 2: Mute button
- 3: TV icon
- 4: Source button
- 5: Signal button
- 6: 1X button
- 7: 3X button
- 8: 7X button
- 9: 100% button
- 10: Arrow buttons
- 11: Stop button

- España**