

# **INALSA**

## **HAND BLENDER**

**ROBOT 5.0CS**  
**ROBOT 5.0CP / 4.0CP**  
**ROBOT 5.0SS / 4.0SS**  
**ROBOT 5.0PS / 4.0PS**

—+—  
INSTRUCTION MANUAL  
CUM  
WARRANTY CARD  
—+—

Dear Customer,

Congratulations! On the purchase of your **INALSA Hand Blender**, this is designed to include many superior features that permit you the fullest expression of your **blending** skill and enthusiasm. You are now on the threshold of a whole new world of **blending** pleasure.


At INALSA, we have a reputation of selling innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Microwave Ovens, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA Hand blender** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Hand blender** has a lot of thoughtful features built in to make your **blending** convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Hand blender**.

Welcome to the INALSA world of **blending** pleasure!

## Parts Identification

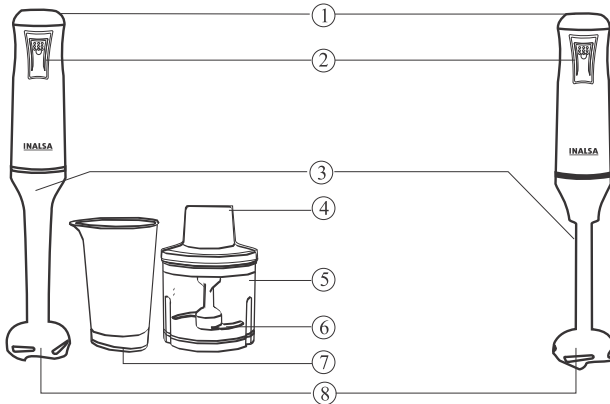

### Parts No.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.

### Parts Name


- Motor housing  
 Push ON/OFF switch  
 Detachable stem  
 Chopper gear lid  
 Chopper bowl  
 Chopper blade  
 Beaker  
 Blender blade assembly

## Technical Specifications\*

Model	Robot 5.0CP / Robot 4.0CP	Robot 5.0CS
Product	Hand blender	
Voltage	230V, 50Hz, AC	
Wattage	500 Watt / 400 Watt	500 Watt
Cord plug	2 Pin, Molded Plug with PVC Cord	
Stem	Plastic	Stainless Steel
Attachments	Beaker, chopper assembly with chopper blade	

\* Due to continuous improvements in product, specifications are subject to change without prior notice.

## Parts Identification

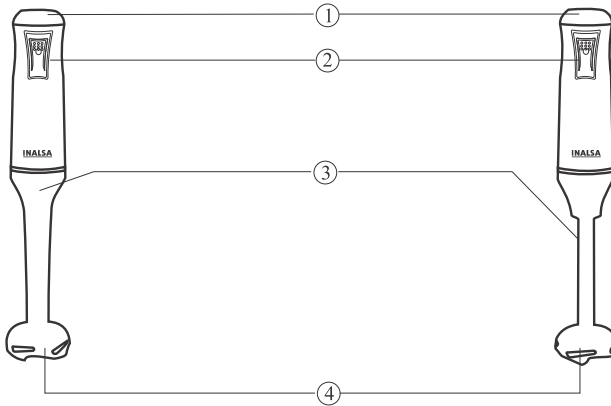

### Parts No.

- 1.
- 2.
- 3.
- 4.

### Parts Name

- Motor housing  
Push ON/OFF switch  
Detachable stem  
Blender blade assembly

## Technical Specifications\*

Model	Robot 5.0PS / Robot 4.0PS	Robot 5.0SS / Robot 4.0SS
Product	Hand blender	
Voltage	230V, 50Hz, AC	
Wattage	500 Watt / 400 Watt	500 Watt / 400 Watt
Cord plug	2 Pin, Molded Plug with PVC Cord	
Stem	Plastic	Stainless Steel
Attachments	N A	

\* Due to continuous improvements in product, specifications are subject to change without prior notice.

## **Important Instructions**

### **Do's**

1. Thoroughly familiarize yourself with the functions of the hand blender before operation.
2. Before connecting the appliance check the mains voltage comply with the voltage specified.
3. The blades are very sharp, so be careful while operating the blender.
4. Repairs or the replacement of the main cord must only be done by authorized service personnel.
5. Keep the appliance away from the reach of the children.
6. Always unplug the appliance before assembling, disassembling, cleaning or storing.
7. The appliance is constructed to process normal household quantities only.

### **Don'ts**

1. Do not run the blender continuously for more than rated time. Allow the motor to cool down sufficiently before starting the next cycle.
2. Do not chop extremely hard food, such as nutmeg, coffee seeds and grains.
3. Do not overload the motor. The quantity of material for blending or chopping operation should not be more than the specified quantity.
4. Do not operate the hand blender unless the attachments are properly clamped with the motor housing part.
5. Do not allow the cord to hang over the edges of the table, or touch hot surface.
6. Do not immerse the appliance in water.
7. Do not attempt to repair the hand blender at home or allow any unauthorized person to do it either.
8. Do not let any persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge use this appliance, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Do not let any children in any case play with the appliance.

## **Before First Use**

1. After unpacking the unit and before any use, make sure the mechanical parts of the unit and all its attachments are not damaged.
2. Carefully go through the instruction manual before starting the operation.

## **How to Operate Your Hand Blender**

The hand blender is perfectly suited for preparing sauces, purees, soups, mayonnaise, chutney, baby foods, for mixing drinks and milkshakes.

1. Insert the motor housing part into the blender shaft until it locks.
2. Introduce the hand blender in the material to be processed, then press the speed control switch.
3. You can operate the blender in the beaker (Provided along with model Robot 5.0CS & Robot 5.0CP). Even you can blend directly in the saucepan while cooking.

## **How to Operate the Chopper Attachment (Available with Robot 5.0CP & Robot 5.0CS models)**

The chopper attachment is perfectly suited for chopping meat, cheese, onions, herbs, garlic, carrots, walnuts, almonds, chilies etc.

### **Before chopping**

1. Pre-cut meat, cheese, garlic, onions, carrots, chillies etc.
2. Remove stalk from herbs, leafy vegetables.
3. Remove bones, tendons from the meat.
4. Carefully remove the plastic cover from the blade. Place the blade on the centre pin of the chopper bowl. Always place the chopper bowl in the anti-slip base.
5. Place the food in the chopper bowl.
6. Put the chopper gear lid on the chopper bowl. Insert the motor housing part into the gear lid until it locks.
7. Press push button switch to operate the chopper. During processing, hold the motor part with one hand and the chopper bowl with the other.
8. After use, first remove the motor housing part, then the chopper gear lid.
9. Carefully take out the blade. Remove the processed food from the chopper bowl. The anti-slip base also serves as an air-tight lid for the chopper bowl.

## **Cleaning and Maintenance**

1. Unplug the blender from the supply switch.
2. Unlock the motor housing and clean it blender shaft with damp cloth.
3. After processing salty food, you should rinse the blade stem right away.
4. When processing food like carrots, green leafy vegetables, meat etc. the plastic part of the hand blender may become discoloured. Wipe these parts with vegetable oil before placing them in the dishwasher.

## Warranty

The “**Inalsa Hand Blender**” is fully warranted against any manufacturing defect for a period of **TWO** years from the date of purchase. Should any defect develop in the **Hand Blender** during the warranty period, **TUAREG MARKETING PVT. LTD.** undertakes to get the **Hand Blender** or any part thereof, repaired at any of its Authorised Service Center.

The above warranty shall be subject to the following terms and conditions:-

1. Any defective product or part thereof will be repaired within the above stated warranty period on receipt of the same with this card duly filled in and stamped by dealer from whom the product was purchased along with the purchase bill/ invoice, provided the product is brought to our nearest service center freight paid and packed securely.
2. In the event of repairs/ replacement of any part of product, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.
3. This warranty is valid only when:-
  - The product is purchased from the company's authorized dealer and accompanied by this warranty card/ cash memo.
  - The product has been serviced by the Inalsa's authorized service personnel.
  - The product has been used and maintained in accordance with the instruction manual.
4. The warranty does not apply to :-
  - Normal wear and tear of the product
  - Damage due to chipping, peeling, plating and denting.
  - Damages arising due to running of the appliances on the alternate sources of power such as Inverter, generator or any such auxiliary power supply aid resulting in variation/ fluctuating voltage
  - Breakage or damage to components made of ABS, SAN, Bakelite, Glass and such plastic/rubber parts, cord, bulbs and surface coating.
  - Damages resulting from accidents, mishandling or negligence on the part of the customer
  - Product if used for the commercial purposes.
  - Product, the serial number of which has been removed obliterated or altered on the specification plate.
5. The warranty is in lieu of all other warranty, expressed or implied and does not cover indirect or consequential damages/ loss.

# WARRANTY CARD

Product : HAND BLENDER  
Model : ROBOT 5.0CP/ ROBOT 5.0CS/  
ROBOT 5.0SS/ ROBOT 5.0PS  
ROBOT 4.0PS/ ROBOT 4.0SS/ ROBOT 4.0CP

Serial No .....

Date of purchase.....

Bill/ Cash Memo no.....

Purchaser' name.....

Address.....

Dealer's stamp and Signature



Customer Care Number (Timing: 9:30 to 5:30) (Mon - Sat)

**9773982065**

**INALSA**

TUAREG MARKETING PVT. LTD.

154, Bhalswa, Delhi- 110033