 




NUGGET ICE MAKER

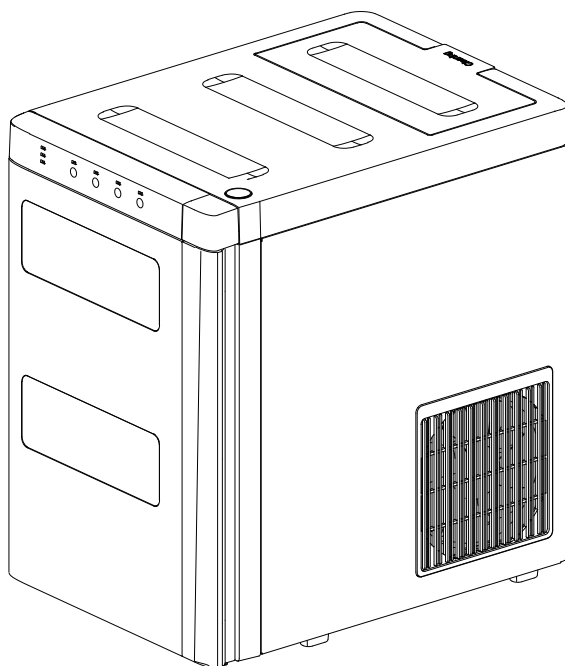

CAUTION: Before using this tool, please read this manual completely, and follow all operating safety measures.

- SAFETY
- ASSEMBLY
- OPERATION
- MAINTENANCE
- WARRANTY

YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078
For customer support, please call 1-800-261-3981 or email us at senix.support@yatusa.com

TABLE OF CONTENTS

SAFETY & INTERNATIONAL SYMBOLS.....	2
SAFETY INSTRUCTIONS.....	3
KNOW YOUR UNIT	5
SPECIFICATIONS	6
OPERATION.....	6
ASSEMBLY.....	6
MAINTENANCE.....	8
TROUBLESHOOTING.....	10
WARRANTY.....	11

SAFETY & INTERNATIONAL SYMBOLS

The following table depicts and describes Safety and International symbols and pictographs that may appear on this product. Read, understand, and follow all instructions on the machine and in the instruction manual for complete safety, assembly, operating, maintenance, and repair information before attempting to assemble and operate.



Caution / Warning.



READ THE OPERATOR'S MANUAL(S) - Read, understand and follow all instructions in the user manual(s) before attempting to assemble and operate.



Positive terminal.



Negative terminal.



WARNING! Risk of fire/flammmable materials



Pressure



Do not use in rain or wet conditions.

SAFETY INSTRUCTIONS

ALL OPERATORS MUST READ THESE INSTRUCTIONS BEFORE USE.

WARNING!

Read all instructions when using the ice maker. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.

1. Read all instructions before using.
2. Remove all packing material and carefully check your ice maker to ensure it is in good condition and that there is no damage to the ice maker or power cord and plug.
3. Before use, check the power cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the supply immediately. Do not touch the cord before disconnecting the supply. Do not use the product if the cord is damaged or worn.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid a hazard.
5. Do not modify the product in any way or use parts and accessories that are not recommended by the manufacturer. This may increase the risk of serious injury to yourself or others.
6. Close supervision is necessary when the appliance is used near children.
7. Do not clean your appliance with flammable fluids. The fumes can create a fire hazard or explosion.
8. Do not tip the ice maker. If tipped, place it upright for 2 hours before restarting.
9. Do not store explosive substances, such as aerosol cans with flammable propellants, in this appliance.
10. The refrigerant used in this appliance is flammable. During servicing, keep away from ignition sources and ensure the room is adequately ventilated.
11. Do not store or use flammable materials near this appliance.
12. Insulation material: Cyclopentane (flammable). Keep away from ignition sources. Do not burn. Disposal must be handled by qualified personnel.
13. This appliance contains R600a (isobutane), a flammable refrigerant. There is a risk of fire or explosion. Dispose of this appliance in accordance with federal or local regulations.
14. The refrigeration system contains high-pressure refrigerant. Do not puncture or damage the refrigeration circuit. Servicing must be performed by qualified personnel only.
15. This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities without proper supervision or instruction.
16. To avoid damaging the compressor, do not restart the appliance frequently. Allow a minimum of 3 minutes between power cycles.
17. Do not use harsh chemicals or abrasive tools to clean the appliance.
18. Use a proper electrical outlet with reliable grounding. Ensure the plug is fully inserted into the outlet.
19. Extension cords are not recommended. They may overheat and create a fire hazard.
20. If the appliance is stored in a cold environment, wait at least 3 hours for the appliance to warm to room temperature before plugging it in.
21. **WARNING:** Fill with potable water only.
22. **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
23. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
24. **WARNING:** Do not damage the refrigerant circuit.
25. **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
26. **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
27. **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
28. Turn off the product, remove the battery pack or disconnect the product from the power supply.
 - Before servicing.

- Before checking, cleaning, or working on the product.
- Before changing accessories.
- Before leaving the product unattended.

29. This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices, and other working environments; farmhouses; bed and breakfast type environments; and by clients in residential hotel and motel type environments.



WARNING!

When positioning the product, ensure the supply cord is not pinched or damaged.


- Keep the power cord away from heat, fluids and sharp edges.
- Never pull by the power cord to disconnect the product from the power supply.

SAVE THESE INSTRUCTIONS

INTENDED USE

The appliance is intended for making ice cubes and dispensing cold water. Do not use it for other purposes.

KNOW YOUR UNIT

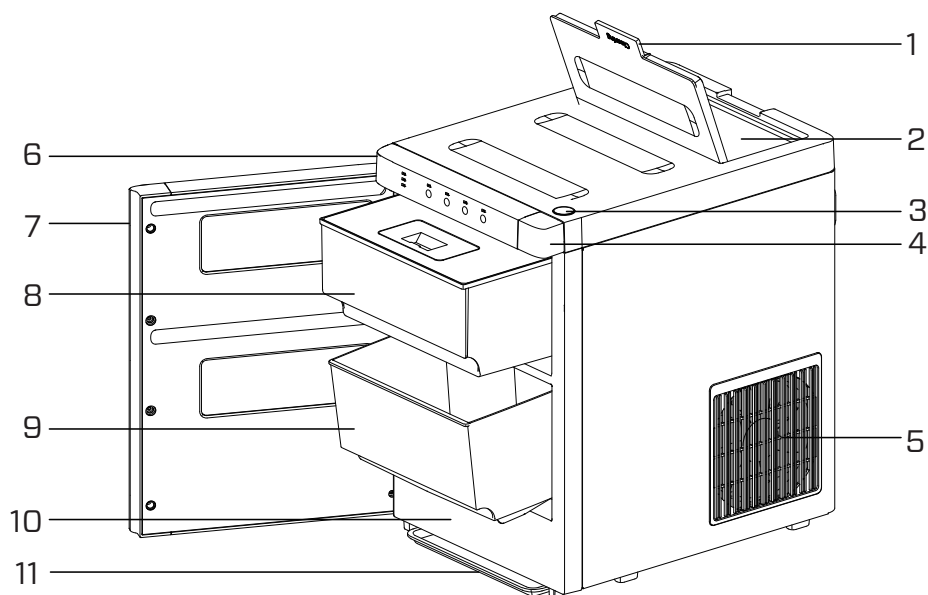

APPLICATIONS

Model: E026003

As an ice maker:

Making ice cubes and dispensing cold water.

1	Balance Tank Lid
2	Balance Tank
3	Release Button
4	Ice Water Outlet
5	Air Vents
6	Control Panel

7	Side Door
8	Water Tank
9	Ice Basket
10	Ice Water Tank
11	Drip Tray

SPECIFICATIONS

Model	E026003
Voltage	110-120 V ~ 60 Hz
Water Tank Capacity	67.6 fl oz (2.0 L)
Ice Water Tank Capacity	33.8 fl oz (1.0 L)
Refrigerant / Charge	R600a, 0.74 Oz (21g)
Ice-making Capacity	40 lb/24h (18 kg/24h)
Ice Basket Capacity	2.6 lb (1.2 kg)
Climate Class	SN/N/ST/T
Weight (Unit Only)	22 lb (10.0 kg)

ASSEMBLY

BEFORE FIRST USE

1. Remove all packaging materials from interior of the ice maker. Confirm the ice basket and ice scoop are inside. If any part or accessory is missing, please contact customer service.
2. Clean the tank and ice basket with warm soap and water. Allow parts to dry completely.
3. The appliance must be placed on a dry and level surface with sufficient ventilation, far from heat sources such as ovens, heaters and corrosive gases. Keep the right-side vent clear (minimum 8 in / 20 cm) to avoid overheating and ice production issues.
4. Ensure the unit is positioned near a suitable electrical outlet.
5. Do not fill the water tank with hot water. This may damage the ice maker. It is best to fill the water reservoir with water of room temperature or lower.
 - Ice maker x1
 - Ice scoop x1
 - Drip tray x1
 - Instruction manual x1

CLEANING THE ICE MAKER

Thoroughly clean the ice maker before first use.

1. Remove the ice basket, ice scoop and tank.
2. Wipe down the basket compartment and tank compartment with a soft cloth and warm water.
3. Clean the exterior with a mild detergent and warm water.
4. Dry all surfaces with a clean, soft cloth.
5. After cleaning, ensure the drain plug is securely in place.
6. Long-term storage: Drain and dry the interior completely to prevent mold or bacteria.



WARNING!

Wait 24 hours before plugging in the appliance. This allows compressor oil that may have moved during transport to return, preventing damage to the compressor.

IMPORTANT POWER NOTICES

This appliance must be grounded. The power cord is equipped with a three-prong grounding plug for use with a standard 110-120 V ~ 60Hz grounded outlet. Never cut or remove the grounding prong.

If you have any questions about grounding or electrical connections, consult a qualified electrician.

OPERATION



NOTE:

Ensure your ice maker is clean before use.



NOTE:

Ensure the drain plug is securely in place to prevent leakage.

GETTING TO KNOW YOUR CONTROL PANEL

When plugged in, the display illuminates. Operate the unit by touching the buttons on the control panel.

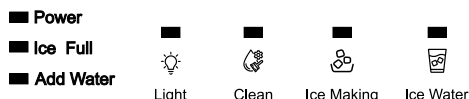


Fig. 1

Power Indicator

Power connected

Ice Full Indicator

Basket full

Add Water Indicator

Refill needed

Light Button

Interior light on/off

Clean Button

Self-cleaning cycle

Ice Making Button

Ice making on/off

Ice Water Button

Ice water on/off

USING YOUR ICE MAKER

1. Open the side door and take out the water tank.
2. Fill the tank with clean drinking water. Do not exceed the MAX 67.6 fl oz (2.0 L) water level mark.
3. Place the tank back into the unit, making sure it is pushed all the way into position.
4. Plug in the power cord. The unit will beep and the power indicator light will turn on.

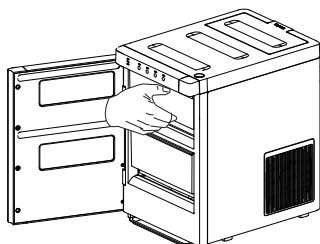


Fig. 2

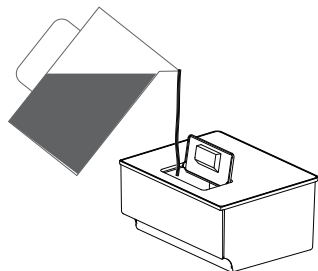


Fig. 3

ICE MAKING FUNCTION

1. Before starting, ensure the drain plug is in place to prevent leakage.
2. Touch **Ice Making** to start, the button light turns on. Touch again to stop; the light turns off.
3. Check water level during operation. When water reaches the min level, the unit stops and the **Add Water** light turns on. Refill to resume.
4. When **Ice Full** lights up, the basket is ready to empty.

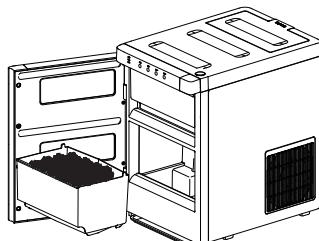


Fig. 4



NOTE:

When the **Add Water** lights up, add water to the tank. After refilling, the indicator will turn off after about 2 minutes.



NOTE:

Ice making cycle: approx. 15 minutes (varies with water and room temperature). Recommended room temperature: 50°F–90°F (10°C–32°C).

TIPS

- Before first use or after long storage, clean the machine and discard the first batch of ice.
- When the ice basket is full (approx. 2 hours), use the scoop to move ice to a storage bag — this prevents cubes from freezing together.
- When the **Power** light flashes, the unit is in auto defrost mode. Operation will resume automatically after defrost completes.



WARNING!

If a power outage occurs, the system cannot detect the water level in the ice water tank. To prevent overflow from melted ice, remove all ice from the basket immediately.

ICE WATER FUNCTION



NOTE:

The ice water function is available only when the water temperature reaches 45°F–54°F (7–12°C). The **Ice Water** button light stays on steadily within this temperature range; it turns off when the temperature exceeds 54°F (12°C).

1. Start ice making (see “ICE MAKING FUNCTION”). Wait until the **Ice Water** lights up solid.
2. Press **Release** button — the ice water outlet extends.
3. Touch the **Ice Water** button. A beep sounds and water dispenses. Touch again to stop once you have enough.
4. Push the outlet back into place.



NOTE:

The **Ice Water** button only works when the outlet is extended.



NOTE:

Maximum dispensing per cycle is 8.5 fl oz (250 mL). Touch **Ice Water** again for more.

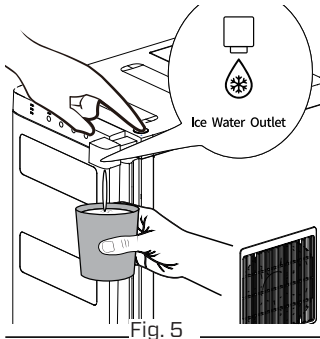


Fig. 5

TIPS

- After refilling and reinstalling the water tank: If the unit shows a “**Add Water**” alert when starting ice making or cleaning, the tank may not be fully seated. Push it firmly all the way in, then press the function button again.
- When the ice basket is full, gently level the

ice before pulling it out.

- To remove the ice basket: Pull out and lift up.



WARNING!

Disconnect the unit from the power supply when not in use.

MAINTENANCE



WARNING!

Only perform cleaning and maintenance according to these instructions! Any additional work must be performed by an authorized service center.



WARNING!

ALWAYS unplug the power cord before performing any inspection, maintenance, or cleaning work!

CLEANING

If not using for a while, drain all water from tank and basket. Wipe dry and air dry 1–2 hours before storing to prevent mold.

1. Unplug the unit.
2. Remove tank, empty, and wipe dry.
3. Move unit to drain area, place container underneath, open drain plug to release water.
4. Wipe basket compartment and tank dry.
5. Air dry all parts completely, then reassemble and close.

Deep Cleaning

Over time, mineral deposits in the water tank and evaporator may affect performance. Use white vinegar or citric acid for deep cleaning.

1. Dilute white vinegar or citric acid and pour into the water tank.
2. Plug in and touch **Clean** button. When the cycle finishes (approx. 5 minutes, a beep sounds), open the drain plug to drain all water from the tank and ice water tank. For deeper cleaning, run an extra cycle or use warm water (approx. 122°F).
3. Rinse the tank, refill with clean water, and run the cleaning cycle again. Drain completely.



NOTE:

Deep clean every 2 months to prevent friction noise from mineral deposits.



NOTE:

Close the drain plug tightly after draining to prevent leakage.



WARNING!

Do not use harsh chemicals, they may damage internal components.



WARNING!

Do not use chemical, alkaline, abrasive, or other aggressive detergents or disinfectants to clean this product as they might be harmful to its surfaces.

TRANSPORTATION

1. Protect from any heavy impact or strong vibrations which may occur during transportation in vehicles.
2. Secure to prevent it from slipping or falling over.

STORAGE

1. Clean thoroughly as described above.
2. Store in a dark, dry, frost-free, and well-ventilated area that is inaccessible to children. The recommended storage temperature is 50°F - 78.8°F (10°C ~ 26°C).
3. Use the original package for storage or cover it with a suitable cloth to protect it against dust.

DISPOSAL

Waste products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. Dust and debris may be produced by the tool during operation. Users should clean up this debris to aid in protecting the environment.



Electrical products should not be discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

TROUBLESHOOTING

Suspected malfunctions are often due to causes that can be addressed by the user. Therefore, troubleshoot the product using this section. In most cases the problem can be solved quickly.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unit does not start	No power	Check outlet and plug.
No ice production	Water tank empty	Refill water tank.
“Add Water” light stays on after refilling	Water tank not fully seated	Push tank firmly all the way in.
Ice basket difficult to remove	Ice piled above basket rim	Gently tap basket to level ice, then pull out.
Water leaks	Drain plug not fully closed	Close drain plug tightly.
	Water tank overfilled	Do not exceed MAX fill line.
Ice water does not dispense	Outlet not extended	Press Release button to extend outlet.
	Water tank empty	Refill water tank.
	Water temperature above 54°F (12°C)	see “ICE WATER FUNCTION”

WARRANTY

SENIX TOOLS LIMITED WARRANTY

FOR ONE YEAR from the date of original purchase this product is warranted against defects in material or workmanship. WITH PROOF OF ORIGINAL PURCHASE a defective product will receive free repair. If the product cannot be repaired it will be replaced free of charge.

For details to obtain warranty coverage, visit senixtools.com, email senix.support@yatusa.com or call **1-800-261-3981**.

- This warranty does not cover repairs necessary due to product accident or abuse, or failure to operate or maintain the product according to all supplied instructions.
- This warranty does not cover expendable items that can wear out from normal use within the warranty period, including but not limited to drill bits, cutting blades and trimmer spool or line.
- This warranty does not apply to damage resulting from repairs to the product made or attempted by other than SENIX authorized agents.
- This warranty does not cover the cost of mailing or transporting the power tool to receive warranty coverage.
- The warranty is void if the product has been used for commercial, professional, or rental service purposes.
- The warranty applies to the original retail purchaser and is not transferable.
- Proof of purchase is required to obtain warranty coverage.

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGE. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

Latin America: This warranty does not apply to products sold in Latin America. For products sold in Latin America, see the country-specific warranty information contained in the packaging, call the retailer from which it was purchased, or visit the website for warranty information.

Free warning label replacement: If your warning labels become illegible or are missing, call **1-800-261-3981** for a free replacement.

REGISTER ONLINE - senixtools.com/pages/product-registration

Thank you for your purchase! Register your product now for:

Warranty Service: Registering your product will help you obtain more efficient warranty service in case of a problem with your product.

Confirmation of Ownership: In case of an insurance loss, such as fire, flood, or theft, your ownership registration will serve as proof of purchase.

For your safety: Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.



YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078
For customer support, please call **1-800-261-3981** or email us at senix.support@yatusa.com