 


# SENCOR®

## SDC 7200

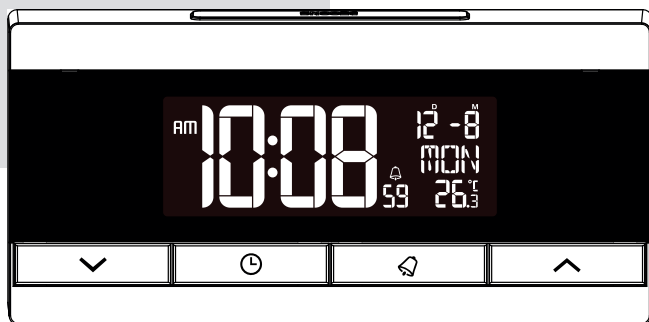

User's manual

Návod k obsluze

Návod na obsluhu

Használati útmutató

Instrukcja obsługi

DUAL USB CHARGING ALARM CLOCK  
WITH COLOR CHANGE

DUÁLŇÍ BUDÍK S USB NABÍJENÍM  
A ZMĚNOU BAREV

 
DUÁLNY BUDÍK S USB NABÍJANÍM  
A ZMENOU FARIEB

DUPLA ÉBRESZTŐÓRA USB TÖLTŐVEL ÉS  
VÁLTOZTATHATÓ SZÍNŰ KIJELZŐVEL

PODWÓJNY BUDZIK Z ŁADOWANIEM USB  
I ZMIANĄ KOLORÓW

EN CZ SK HU PL

# OVERVIEW

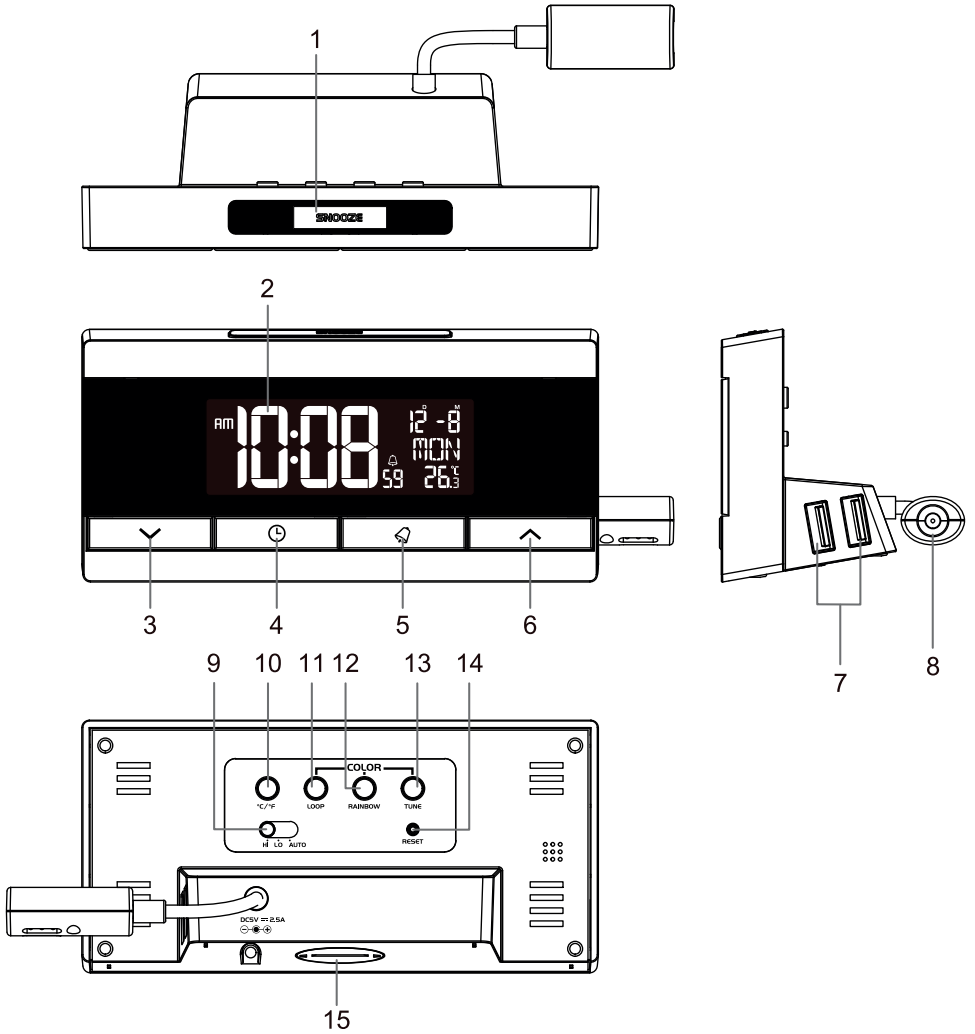


1. **[SNOOZE]** key
  - When the alarm is sounding, press to stop the current alarm and enter snooze mode.
2. **LCD** display
3. **[∨]** key
  - In setting mode, press to decrease the setting values, press and hold to quick adjust the values.
4. **[⊖]** key
  - In normal time mode, press and hold 2 seconds to enter time setting mode.
  - In time setting mode, press to enter next setting mode.
5. **[⊗]** key
  - In normal time mode, press to enter the alarm time mode.
  - Press and hold for 2 seconds to enter alarm setting mode.
  - In alarm setting mode, press to enter next setting.
  - When alarm is sounding, press to stop the current alarm and enter snooze.
6. **[∧]** key
  - In setting mode, press to increase the setting values, press and hold to quick adjust the values.
7. USB charging port × 2 (only available when using the power adapter)
8. Power jack
9. **[HI / LO / AUTO]** slide switch
  - Slide to the **[AUTO]** position, the brightness of backlight will automatically adjust based on the ambient room lighting (dims in low light).
  - Slide it to the **[LO]** position for the dimmer backlight.
  - Slide it to the **[HI]** position for the brighter backlight.
10. **[°C/°F]** key
  - Press to switch between °C/°F.
11. **[LOOP]** key
  - Press to turn on / off the backlight colour auto-looping mode.
12. **[RAINBOW]** key
  - When the backlight is on, press to change backlight colour in this sequence:  
white ➔ red ➔ orange ➔ yellow ➔ green ➔ cyan ➔ blue ➔ purple.
13. **[TUNE]** key
  - Press to fine tune LCD backlight with 256 colours.
14. **[RESET]** key
  - Press to reset all values to default values.
  - In case of malfunction, press it to reset all values.
15. Battery door
  - Accommodates a button cell CR2032 for backup time and setting.

## BEFORE USING THE MAIN UNIT

 1. Plug the adapter to the power jack.
2. Press **[RESET]** key to reset the clock

## TIME SETTING

1. In normal time mode, press and hold **[⊖]** key for 2 seconds to enter year setting.
2. Press **[∧]** or **[∨]** key to set your desired. (Press and hold to quick adjust the values.)
3. Press **[⊖]** key to enter next setting items in this sequence: Year ➔ Month ➔ Date ➔ 12/24 hour format ➔ Hour ➔ Minute ➔ Second ➔ Language.
4. Press **[⊖]** key to save and exit the setting mode, or the clock will automatically exit the setting mode 30 seconds later without pressing any button.

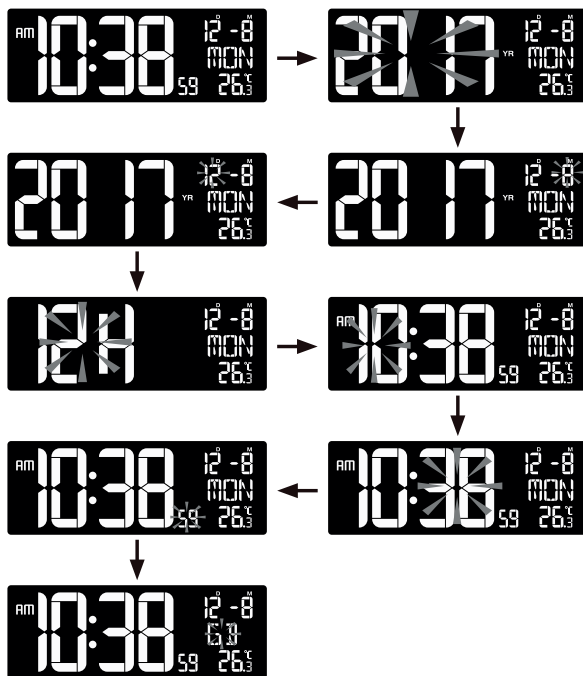

**NOTE:**

- 5 selectable languages and setting orders: GB(English) → FR(French) → DE(German) → ES(Spanish) IT(Italian)

## ALARM TIME SETTING





1. In normal time mode, press and hold [🔊] key for 2 seconds until alarm Hour digit flashes to enter alarm time setting mode.
2. Press [↗] or [↘] key to change the value (Press and hold the key to quick adjust the values.)
3. Press [🔊] key to enter the next setting in this sequence: Hour → Minute.
4. Press [🔊] key to save and exit the setting, or the clock will automatically exit the setting mode 30 seconds later without pressing any button.



**NOTE:**

- When you set the alarm time, the alarm will be turned on and the "🔊" icon displayed.

## USING ALARM AND SNOOZE FUNCTION

1. In normal time mode, press [] key to turn on the alarm function with “” icon and show the alarm time on the date section
2. Press again to turn on the snooze function with “” icon.
3. Press again to turn off alarm and snooze functions and “” icon will also hidden on the screen.

### NOTE:

- When the alarm is sounding, it will stop automatically without pressing any key in 1 minute, and the alarm will automatically sound again at the alarm time next day.
- Once the snooze function is activated, the alarm will sound 4 times in every 5 minutes interval. The sound duration is 1 minute without any operation.

## COLOURFUL BACKLIGHT DISPLAY

Backlight color:

1. Press [**LOOP**] key to enter the auto color looping mode and the LCD backlight color changes automatically, press again to stop the backlight auto color looping.
2. Press [**RAINBOW**] key to change the backlight color in below sequence: white → red → orange → yellow → green → cyan → blue → purple.
3. Press [**TUNE**] key to fine tune LCD backlight with 256 colours..

Backlight brightness:

1. Slide [**HI / LO / AUTO**] switch to the [**AUTO**] position, and the brightness of backlight will automatically adjust based on the ambient room lighting (dims in low light).
2. Slide to the [**LO**] position for the dimmer backlight.
3. Slide to the [**HI**] position for the brighter backlight.

### NOTE:

- Backlight color and brightness functions are only available when using the power adapter.

## TEMPERATURE DISPLAY

Press the [ $^{\circ}\text{C}/^{\circ}\text{F}$ ] key to select the temperature unit  $^{\circ}\text{C}$  or  $^{\circ}\text{F}$ . The temperature will display “Hi/Lo” in below conditions:

Condition	Display
Temperature < $-10^{\circ}\text{C}$	Lo
Temperature > $70^{\circ}\text{C}$	Hi

### NOTE:

Temperature display range is not same as the product operation temperature range.

## USB PORTS FOR CHARGING

1. When two low voltage devices are plugged into the clock's USB ports at the same time, the total current output is 2.1A for both ports combined.
2. If only one low voltage device is plugged into the clock's USB port, the maximum current output can reach 2.1A.

# BATTERY REPLACEMENT

The CR2032 batteries are for backup purpose, please replace the batteries after long time backup use

## IMPORTANT NOTE

- This main unit is intended to be used only indoors.
- Do not subject the unit to excessive force or shock.
- Do not expose the unit to extreme temperatures, direct sunlight, dust or moist environment.
- Do not immerse in water.
- Avoid contact with any corrosive materials.
- Do not dispose this unit in a fire as it may explode.
- The socket outlet shall be installed near the equipment and shall be easily accessible.
- Do not open the inner back case or tamper with any components of this unit.
- Please dispose of used unit or batteries in an ecologically safe manner.

# SPECIFICATION

## MAIN UNIT

Operating temperature range:	-5°C ~ 50°C	23° F ~ 122°F
Temperature resolution:	0.1°C	0.1°F
Main power:	AC / DC 5V, 2.5A adapter	
Backup power:	CR2032 lithium battery ×1	
Dimension:	138.6(W) × 68(H) × 47.4(D)mm	

## Environmental Protection



### Disposal of electrical & electronic equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate collection point. If you are unsure of where this is contact local authority. Improper disposal may be harmful to the environment,



## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste.

Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01

# SENCOR®

## EN Warranty conditions

**Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.