



Bennett Read®

20KG ELITE CLEAN

EXTRA-LARGE TOP-LOADER WASHING MACHINE



USER GUIDE

CONGRATULATIONS ON PURCHASING A BENNETT READ® 20KG ELITE CLEAN WASHING MACHINE.

WARRANTY








Your BENNETT READ® 20KG ELITE CLEAN WASHING MACHINE comes with a 3 year warranty. We stand behind it with a knowledgeable, dedicated Customer Care department, so should you ever have a problem, you'll receive fast, considerate assistance (see contact details at the end of the warranty section on page 21).

**Please read this user guide carefully before using your
BENNETT READ® 20KG ELITE CLEAN WASHING MACHINE.**

KEEP THIS USER GUIDE FOR FUTURE REFERENCE.

FOR HOME USE ONLY, NOT FOR COMMERCIAL USE.

NOTE: Images of the product are for illustrative purposes and may vary according to model.

ICON	TYPE	MEANING
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE	Warning: Risk of fire/flammable materials
	CAUTION	Injury or property damage risk
	IMPORTANT/NOTE	Operating the system correctly
		Read the instructions
		Hot surface

CONTENTS

SAFETY PRECAUTIONS.....	3 - 5
PRODUCT OVERVIEW.....	5 - 6
INSTALLATION INSTRUCTIONS.....	7 - 12
SAFETY PRECAUTIONS BEFORE WASHING.....	13
FUNCTIONAL DESCRIPTION OF CONTROL PANEL.....	14
DESCRIPTION OF FUNCTIONAL PROGRAMS.....	15
DETERGENT & WATER QUANTITY.....	15
MAINTENANCE & SERVICING.....	16 - 17
TROUBLESHOOTING GUIDELINES.....	18 - 19
SPECIFICATIONS TABLE.....	20
WARRANTY AND AFTER-SALES SERVICE.....	21



SAFETY PRECAUTIONS

When using any electrical appliance, basic safety precautions should always be followed, including the following:

- Read this User Guide carefully before use and save it for future reference. If the appliance is re-sold, pass the User Guide on to the new owner.
- Use the appliance only as described in this User Guide. Incorrect operation, improper use, or any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This appliance is intended for household use only.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Only connect the appliance to a power socket that has been correctly installed by a qualified electrician, and is functioning properly.
- Do not operate the unit with a damaged power cord or plug, after a malfunction, or if the unit has been dropped or is damaged in any manner. Take damaged appliances to an authorised Bennett Read/Tevo Service Centre for examination.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be repaired by an authorised Bennett Read/Tevo Service Centre Technician to avoid an electrical hazard.
- Always uncoil the power cord and ensure that it is fully extended before plugging it in and powering on the appliance.
- Plug the appliance directly into a nearby power socket so that the plug can be easily removed in case of an emergency.
- A short cord is provided to reduce the hazards resulting from becoming entangled in, or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Keep the appliance, the power cord, and the plug away from hot surfaces, naked flames, direct sunlight, and sharp edges.
- Do not damage, bend, stretch, or twist the power cord; do not place heavy objects on the power cord or clamp the power cord.
- To unplug, grip the plug to remove it from the wall socket. Never pull on the power cord to disconnect the plug.
- Do not handle the power plug with wet hands.
- After use, unplug the power plug for maintenance or cleaning.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance may be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or a lack of experience and knowledge ONLY IF they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children without supervision.
- Any filters and/or lint traps must be cleaned frequently.
- Lint must not be allowed to accumulate around the appliance (not applicable for appliances intended to be vented to the exterior of the building).
- Use only in an area with adequate ventilation and away from excessive heat or open flames.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, and wax removers should be washed in hot water with an extra amount of detergent before being placed in this appliance.
- Detergents, fabric softeners, and similar products must only be used as specified by the manufacturer.
- Remove any and all objects from clothing pockets before washing the garments.
- Fill steam generators only with liquids specified by the manufacturer.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- Fabrics that contain vegetable or cooking oil, or have been contaminated by hair-care products should first be washed in hot water with extra detergent.
- The openings and vents must not be obstructed in any way by carpets, furniture, etc.
- The appliance must not be installed in such a way that the full opening of the appliance lid is restricted.

- **WARNING:** The appliance must not be connected to an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Children younger than 3 years should be kept away from the appliance unless continuously supervised.

IMPORTANT SAFEGUARDS

- During use, please pay attention to the safety precautions, and use common sense to operate cautiously. Bennett Read/Tevo cannot be held responsible for any loss caused by improper use.

WARNING!

- This product belongs to Class I appliances. Please pay attention to electricity safety when using:
 1. This machine uses a single-phase, two-pole grounded power outlet. The outlet must be reliably grounded, and the grounding terminal should not be connected to gas pipelines, water pipes, or other utilities.
 2. Ensure that the cross-sectional area of the power supply system wires can meet the normal electrical load requirements.
 3. Ensure that a dedicated socket is used for this appliance. The socket must be installed by a certified electrician and must be able to carry more than 10A of current.
 4. Do not connect the ground wire with the live wire, or the neutral wire as this may cause an electric shock hazard.
 5. Unplug the power plug from the socket to ensure safety in the event of any malfunction.
- Only use the original parts and accessories provided by the manufacturer.
- If the appliance can no longer be used, please cut off the power cord and remove the lid hook device.
- Waste electrical appliances must be disposed of at a designated disposal centre.
- Always check garment wash labels to ensure that clothing is suitable for this appliance.
- Do not use this appliance in the vicinity of dust hazards (such as coal seam or rock powder).
- Do not lean against the appliance lid. Do not climb or sit on the appliance.
- The ambient temperature around the appliance should not be lower than 5°C or higher than 35°C.

DANGER OF FIRE OR ELECTRIC SHOCK

- Keep the appliance indoors in a cool, dry area.
- Do not expose the control panel or electrical parts to any type of liquid or moisture.
- Install and secure the Drain pipe before use, making sure that the outlet is not blocked.
- Do not spill water directly on the washing machine control panel.
- Do not place the washing machine in a wet or damp environment.

RISK OF BURNS DUE TO HIGH TEMPERATURE

- When washing at high temperatures, the lid glass will get hot. Do not touch the lid glass.
- If the lid needs to be opened during high temperature washing, please wait until the temperature drops to a safe level and the lid has been automatically unlocked.

RISK OF PERSONAL INJURY

- Always dispose of all packaging materials responsibly and keep them away from children to avoid choking or other hazards.
- Children are not allowed to operate or climb onto the washing machine to play.
- When the washing machine is not in use, close the appliance lid properly to prevent children from entering the tub.

⚠ RISK OF DAMAGE TO APPLIANCE

- Do not place heavy objects on top of the washing machine.
- Two people are required to move this appliance.
- Do not allow non-professionals to repair or modify the machine.




⚠ RISK OF DAMAGE TO CLOTHING

- Do not wash waterproof clothes, such as raincoats, down products, sleeping bags, etc.
- Only machine-washable clothes may be washed in this appliance. If in doubt, please follow the washing guide on the clothes.


⚠ RISK OF EXPLOSION

- Do not wash clothes stained with kerosene, gasoline, diluent, or other flammable materials.
- Do not operate the appliance if there are gas leaks.
- When the power plug is pulled out, the lid lock can be opened even if there is a high water level in the tub. Always check the water level in the tub before opening the lid. If the water level is high, do not open the lid.

PRODUCT OVERVIEW

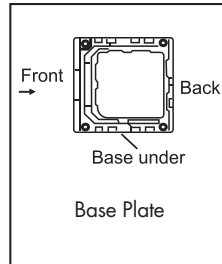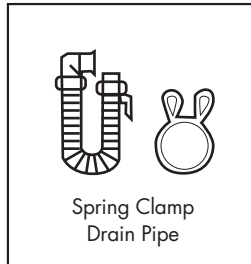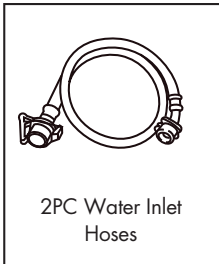

PRODUCT OVERVIEW

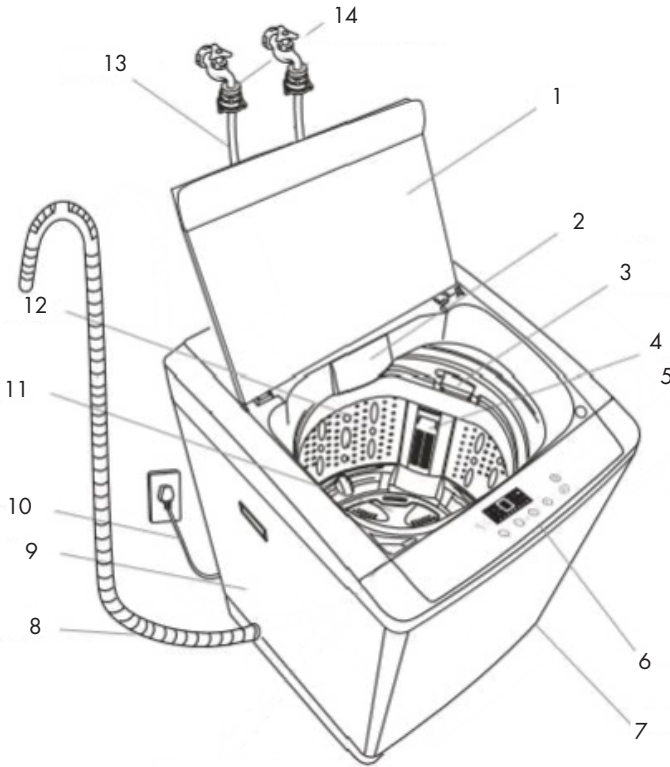

Images are for instructional purposes only and may not reflect the exact appearance of the product.


- | | |
|--------------------------|------------------|
| 1. Lid | 8. Drainage Hose |
| 2. Detergent Compartment | 9. Exterior |
| 3. Softener Dispenser | 10. Power Cord |
| 4. Lint Filter | 11. Pulsator |
| 5. Balance Ring | 12. Tub |
| 6. Control Panel | 13. Inlet Hose |
| 7. Adjustable Feet | 14. Fixed Socket |

NOTES:


- Due to the performance test at the factory, some water may flow from the appliance when washing clothes for the first time. This is a normal occurrence.
- After using the appliance, please pull out the power plug and turn off the tap to prevent unexpected flooding or fire.

BEFORE INSTALLATION


- Check that the appliance has not been damaged during transportation. If damaged, do not switch on the appliance. Return it to the retailer with its complete packaging.
- The appliance should be installed in a dry, well-ventilated area out of direct sunlight. Do not install in areas with damp, steam, and/or water (such as bathrooms, etc.).
- Do not use stoves, gas appliances, etc. near the appliance.
- Do not install the appliance in a dusty area to avoid blocking the appliance's air ducts.
- Remove all the packaging and place the appliance on a solid, flat surface with access to a Drain and power outlet.
- During installation, adjust the feet to level the appliance. Do not use any other materials to level the appliance.
- Install the appliance at least 5cm away from furniture or walls on the back and sides.
- Do not install in areas below 0 °C. Do not install or place the washing machine outdoors.
- Do not install on carpeted or wooden floors.
- Do not install in any area infested with pests or insects that may cause damage to the appliance. The warranty does not cover any damage caused by pests.
- All packaging from the base and tub support needs to be removed,

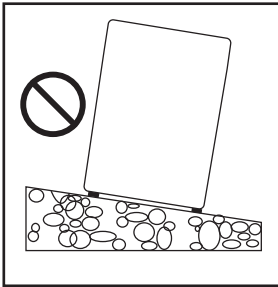

Do not install on an angled or tilted surface. Install on a level surface.

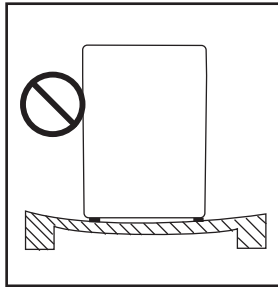

Do not install on an unstable surface. Install on a solid, secure surface.

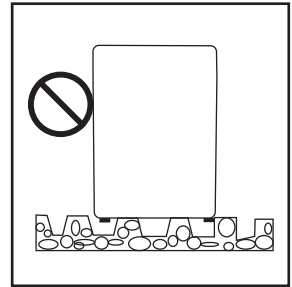


Do not install on an uneven surface. Install on a flat, secure surface.

CONNECTING THE POWER SUPPLY

- The appliance must be installed in an area where it can easily connect to an electrical outlet.
- Connect the appliance power cord to a grounded electrical outlet.
- This appliance has a grounding line (a conductor with a grounding plug to reduce the danger of electric shock in case of a failure). The grounding plug must be inserted into an appropriate electrical power outlet.
- Do not connect the electrical plug to a power strip or power strip bar.
- Do not use the power cord if it is damaged, contact a Bennett Read/Tevo Service Centre for repairs.
- After use, always unplug the power plug and turn off the tap.
- If the washing machine is moved during ambient temperatures of 0°C or below, allow it to reach room temperature before use.
- If the washing machine smokes or emits a peculiar smell, unplug it from the electrical outlet and contact a Bennett Read/Tevo Service Centre.

CONNECTING THE WATER SUPPLY


- The water supply pressure must be between 50kPa and 85kPa.
- Tighten the Water Inlet Hose firmly by hand. Do not overtighten the Water Inlet Hose.
- Turn on the tap to check the Connectors for any water leakage.

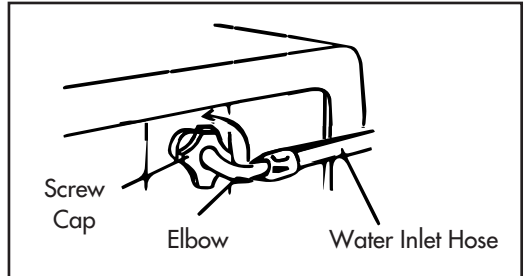


- Make sure that the Water Inlet Hose is not warped or damaged.
- Check the Water Inlet Hose regularly for wear and replace it if necessary.
- Only use the new Water Inlet Hose assembly that comes with this appliance. Do not use any other hose.

CONNECTING THE WATER INLET HOSE TO THE TAP


1. Hold the Connector with one hand, press the retaining ring with the other hand, and pull it down to separate the Connector from the Water Inlet Hose.

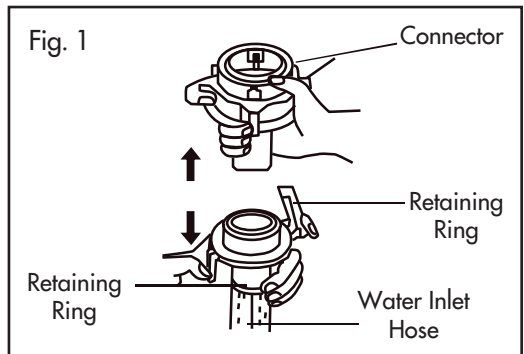


CONNECTING THE WATER INLET HOSE TO THE TAP (cont.)

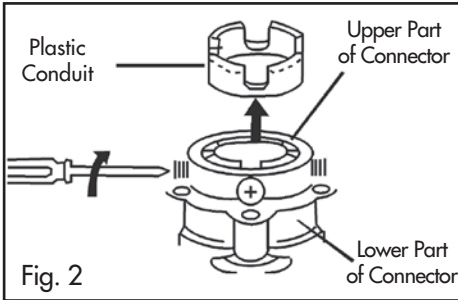


2. Loosen the four mounting screws on the upper part of the Connector, and rotate the lower part of the Connector to leave enough distance (equal to the height of 3 threads) for installing the screws between the upper part and the lower part of the Connector.

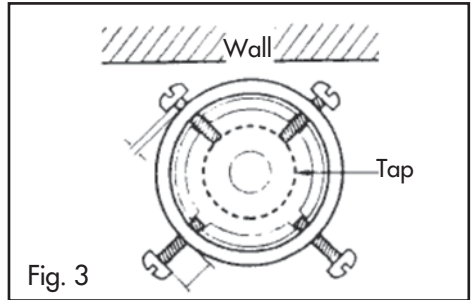


3. Adjust the four screws of the Connector evenly so that the two screws near the wall are fully in contact with the exterior of the tap first.

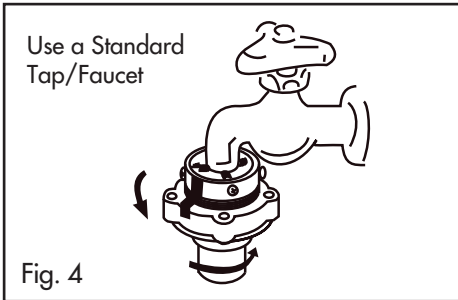


4. Hold the upper part of the Connector against the mouth of the tap so that the seal ring in the Connector is fully in contact with the tap (do not remove the seal ring).

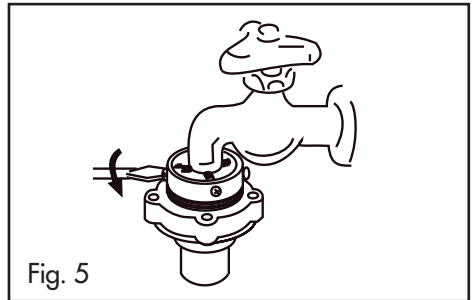

5. Rotate the two screws opposite the wall so that they are in contact with the tap, and secure them tightly with a screwdriver.

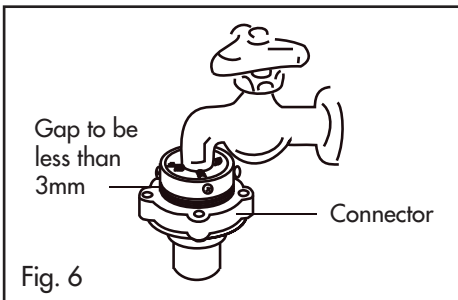


6. Tightly screw the lower part of the Connector to avoid leaking. When secure, the gap between the lower and upper part of the Connector must be less than 3mm.

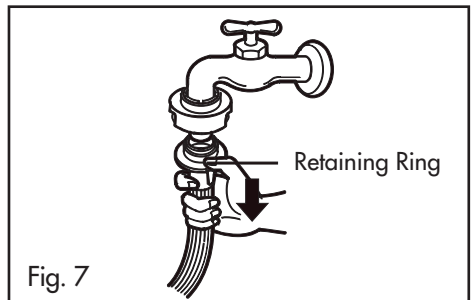


7. To remove the Water Inlet Hose, press the Retaining Ring of the water supply hose.

8. To reconnect the Water Inlet Hose, make sure the Retaining Ring is attached to the Connector.

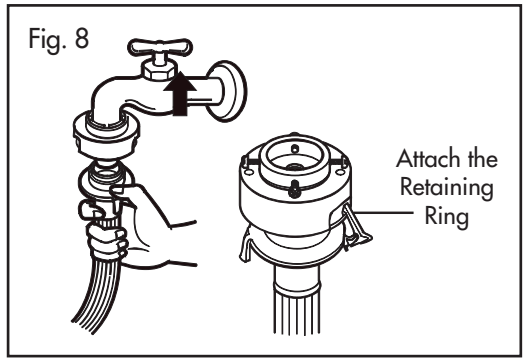


- Check that the lower part of the Connector and the Water Inlet Hose are firmly secured.
- Tightly secure the Water Inlet Hose Connector and the Inlet Valve Connector. Slowly turn on the tap to check for water leakage.
- If water leaks from the connection, turn off the tap and assemble them again. (Water may leak from the connection if the upper part of the Connector is not assembled correctly, or if the upper part and the lower part of the Connector are not screwed on tightly).
- Check the connections from time to time to make sure that they are still secure.

CONNECTING TO A NON-STANDARD TAP

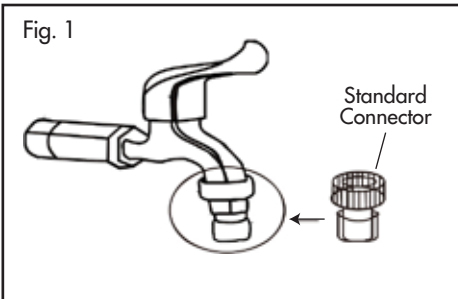


1. Replace the original Connector with the supplied Standard Connector (Fig. 1).

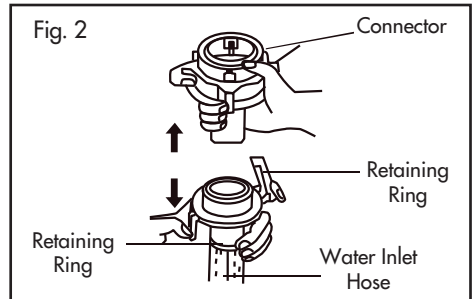


2. Hold the Connector with one hand, press the Retaining Ring with the other hand and pull it down to separate the Connector from the Water Inlet Hose (Fig.2).


3. Press both sides of the Retaining Ring and pull it down to insert the Water Inlet Hose directly into the Standard Connector (Fig.3).

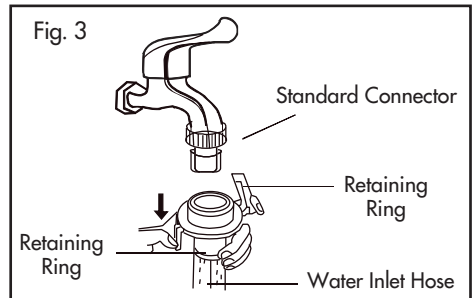

CONNECTING TO A THREADED TAP

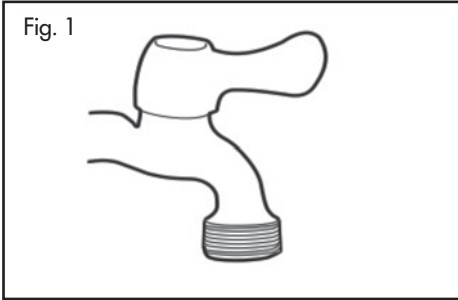


1. Follow these steps if your tap has a threaded connection, as shown in Fig. 1 above.

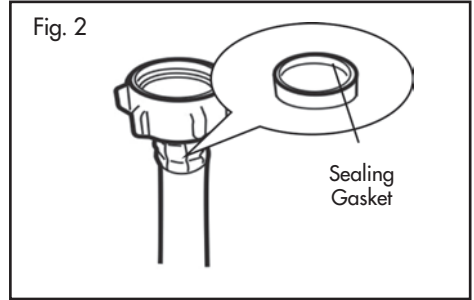

2. Ensure that the Sealing Gasket in the Water Inlet Hose Connector is properly installed (Fig.2).

3. Align the Water Inlet Hose Connector with the tap and tighten the nut on the Water Inlet Hose (Fig. 3).

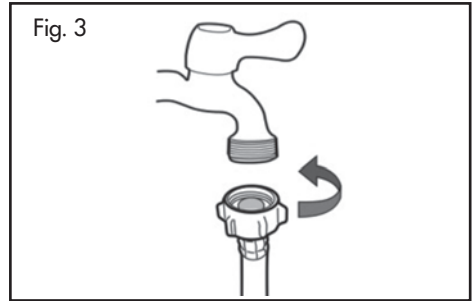


RISK OF DAMAGE TO APPLIANCE

- This appliance is designed for home use only. Do not use it on ships, motor vehicles, aeroplanes, etc.
- If the appliance will not be used for extended periods, turn off the tap and disconnect the power plug.
- When the appliance is not being used, use the Child-Lock function to prevent children from being trapped inside the washing machine.
- Packaging materials (such as films and foams) can be dangerous to children and may cause suffocation! Keep all packaging material out of the reach of children.



INSTALLING THE DRAIN HOSE

- To ensure normal operations of the appliance, the inner diameter of the Drain pipe into which the Drain Hose will be inserted must be a minimum of 4cm.
- The height of the outlet of the Drain Hose must be within a certain range. For specific data, please refer to the figure below.

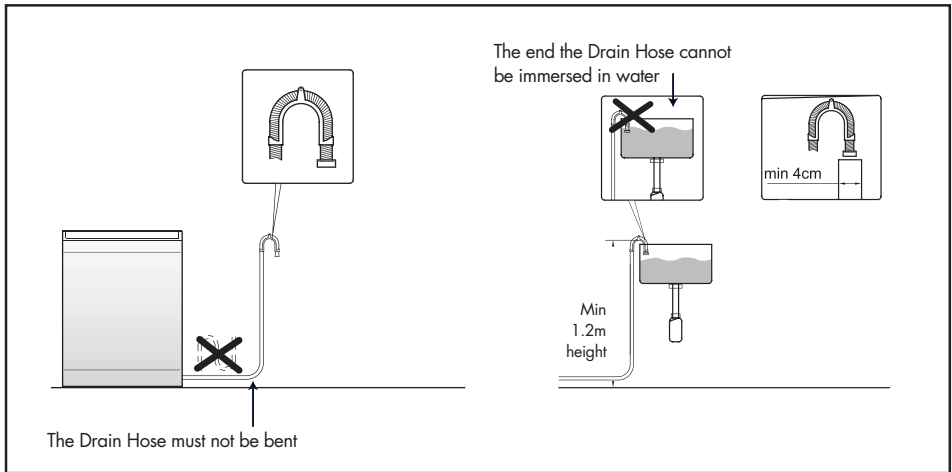

HORIZONTAL ADJUSTMENT


- Adjust the level of the appliance to avoid excessive noise and vibrations. Install the appliance on a hard, level floor (the corner of a room is preferred).
- Adjust the Adjustable Feet so that the appliance is level and stable on the floor (Fig.1). Make sure that all four adjustable feet are in contact with the floor firmly. Preferably use a spirit level to check that the appliance is completely horizontal. Do not insert objects such as wood under the Adjustable Feet.
- Check stability by pressing the top of the appliance on diagonally opposite corners to ensure the machine does not rock back and forth (Fig.2). Check on both diagonals. Adjust the feet until there is no rocking movement.
- When the appliance is completely level, tighten the locknuts on the Adjustable Feet.

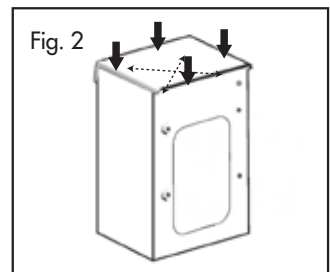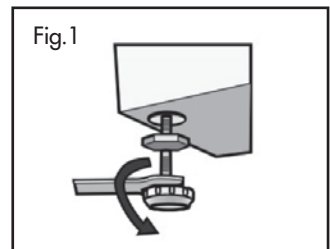

SAFETY PRECAUTIONS BEFORE WASHING

- Be sure to wash according to the care labels of clothes.
- Do not place non-machine washable clothing in this appliance.
- For safer and more effective washing, group types of garments per washing cycle.
- Dark clothing must be washed separately from light and white clothing.
- Dyed clothing and cotton velvet clothing must be washed separately to avoid staining other garments.
- Water temperature, spin speed and programs vary with clothing types.
- If possible, do not wash very dirty clothes with moderately dirty clothes.
- Clothing with a high amount of cotton fluff should be washed separately to avoid the cotton fluff attaching to other garments.
- Turn clothing inside out if it has buttons or accessories that may be damaged during washing.
- Remove all objects from clothing pockets before washing.
- Remove excessive dirt from clothes before washing.
- Place delicate clothing into a laundry bag before washing.
- Wash clothes with oil stains separately.
- Clothes that fade easily should be washed separately.

CONTROL PANEL

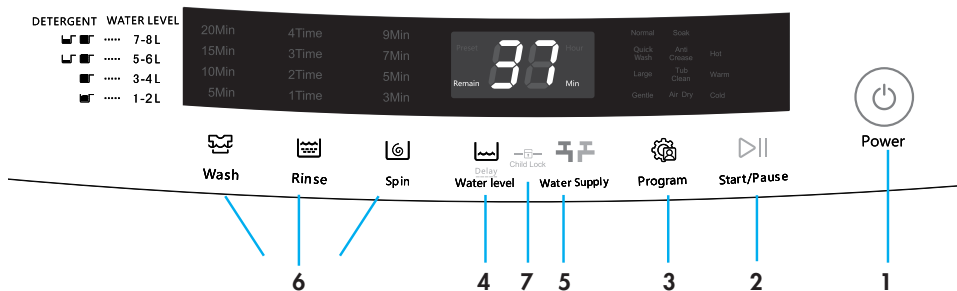

1 - "POWER" BUTTON

- Press this button for 2 seconds to turn the power ON or OFF. Press START/PAUSE within 10 minutes or it will turn off automatically.
- When the washing cycle is complete, the washing machine will automatically switch OFF.

2 - "START/PAUSE" BUTTON

- Press this button to start the operation.
- During operation, press this button to pause a program temporarily, then press it again to resume the program.

3 - "PROGRAM" BUTTON

- Select the appropriate function according to the type of clothes and the degree of stains.

4 - "WATER LEVEL" BUTTON

- Select the desired water level based on your laundry load. Options range from 1.2L to 7.8L or it may be indicated by a specific wash program that has been selected.

5 - "WATER SUPPLY" BUTTON

- Press this button to select the water temperature.

6 - "WASH, RINSE, & SPIN" BUTTONS

- Select one of these three options to customise your wash program by adjusting the number of wash cycles, rinse cycles, or spin cycles according to your preference.

7 - "CHILD-LOCK" FEATURE

- This function is to prevent accidental operation of the appliance by children.
- The Child-Lock function will activate an alarm if the washing machine is opened.
- To turn the Child-Lock function ON or OFF, press the "Water Level" button, and press and hold down the "Preset" button simultaneously.

8 - "DELAY END" FEATURE

- The Delay End Function is activated by pressing the Water Level button for at least 20 seconds until the number on the digital display indicates the desired end time. For example, 5 = an end time of 5 hours from now.

WARNING:

Hot water only: Hot water can result in better cleaning efficiency but is not suitable for all clothing items. Please follow the instructions on the garment label.

DESCRIPTION OF FUNCTIONAL PROGRAMS

1. Preparation for washing:
 - Open the lid and add clothes to the tub.
 - Open the detergent compartment, add detergent and fabric softener, then close the detergent compartment.
 - Make sure that the tap for the Water Inlet Hose is turned on.
2. Press the "Power" button to switch the power ON.
3. Press the "program" button to select the desired program.
4. Press the "Water Supply" button and select the water temperature; cold, warm or hot water.
5. Press the "Wash", "Rinse", and "Spin" buttons to adjust the washing time, spin-dry speed, and rinse time respectively.
6. Press the "Start/Pause" button to start washing.
7. When operation is complete:
 - The display will indicate "END".
 - Open the lid to take out the clothes.
 - Unplug the power plug and turn off the tap.

DETERGENT & WATER QUANTITY

CLOTHES WEIGHT	WATER LEVEL	LIQUID DETERGENT	POWER DETERGENT
>6 Kg	High	110ml	110g
4 - 6 Kg	Medium	90ml	90g
2 - 6 Kg	Low	70ml	70g
0 - 2 Kg	Minimum	50ml	50g

NOTES:

1. The first parameter of water temperature is the default parameter at startup. You can select other parameters manually.
2. The running time may be different for each wash due to the machine compensating for differing water pressure, drainage conditions, clothing material, clothing weight, and/or water temperature.
3. If a washing cycle is interrupted by a power failure, the washing machine will continue from where it left off when the power resumes.

MAINTENANCE & SERVICING

- Perform light maintenance at regular intervals. Good servicing practices may extend the service life of the washing machine.



WARNING! BEFORE SERVICING, ALWAYS DISCONNECT THE POWER PLUG.

APPLIANCE BODY

Keep the body of the washing machine clean by wiping it with a clean, soft cloth. For tough dirt, wipe the body with a clean, damp cloth and mild soap.

- Do not spray water directly on the body.
- Do not wipe the body with harsh chemicals such as putty-powder, diluting agents, gasoline, and alcohol.
- Do not use abrasive cleaning materials, such as wire brushes, that will damage the surface of the appliance.


CLEANING THE LINT FILTER

- Clean the Lint Filter after every wash.
- Ensure the Lint Filter is pulled out according to the direction of the arrow.
- Remove the Lint Filter, open it, and wash it with warm, soapy water. Dry it thoroughly, close it, and place it back into the machine according to the direction of the arrow.

CLEANING THE CONNECTOR

It is recommended to clean the Connector once every six months.


1. Remove the Water Inlet Hose from the Connector.
2. Unscrew the Fastener in the direction of the arrow (Fig. 1).
3. Rinse the interior of the Fastener with water.
4. Re-install the clean Fastener to the Connector and re-attach the Connector to the Water Inlet Hose.

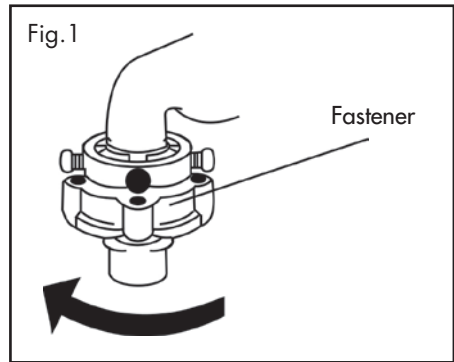

CLEANING THE INLET VALVE

It is recommended to clean the Inlet Valve once every six months.

1. Disconnect the Water Inlet Hose from the washing machine.
2. Remove the filter screen from the Inlet Valve.
3. Clean the filter screen thoroughly with a toothbrush, then install it back into the Inlet Valve.
4. Reconnect the Water Inlet Hose.

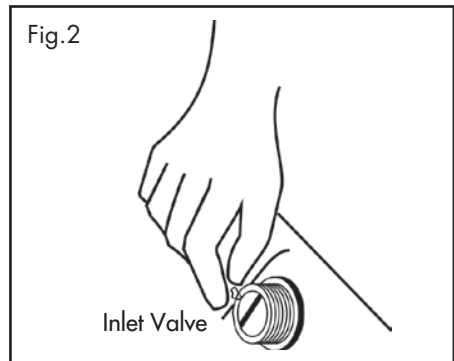

TROUBLESHOOTING

PROBLEM	CHECK POINTS	SOLUTION
The appliance will not start.	<p>Is the "Power" button or "Start/Pause" button pressed?</p> <p>Is the plug of the power cord pulled out?</p> <p>Is there a power failure?</p> <p>Has the earth leakage tripped on your DB?</p>	<p>Press the "Power" button or "Start/Pause" button.</p> <p>Insert the plug of the power cord.</p> <p>Wait for electrical power to resume.</p> <p>Reset your earth leakage on your DB.</p>
Water fault	<p>Is the tap turned off?</p> <p>Is there a water outage, or is the water pressure too low?</p> <p>Is the Water Inlet Hose frozen or blocked?</p> <p>Is the Water Inlet Hose or the Inlet Valve blocked?</p>	<p>Turn on the tap.</p> <p>Wait for the water supply or water pressure to return to normal.</p> <p>Unfreeze the water hose with warm water.</p> <p>Remove any foreign objects from the water hose.</p> <p>Take the filter screens out from the Water Inlet Hose and the Inlet Valve and clean them thoroughly.</p> <p>After 50 minutes with no water, an alarm will sound.</p>
Drainage fault	<p>Is the Drain Hose positioned too high?</p> <p>Is the Drain Hose frozen?</p> <p>Is the Drain Hose blocked by foreign objects?</p> <p>Is the Drain blocked by foreign objects?</p>	<p>Ensure the Drain Hose height is below 1.2m.</p> <p>Unfreeze the Drain Hose with warm water.</p> <p>Remove any foreign objects from the Drain Hose.</p> <p>Remove any foreign objects from the Floor Drain.</p> <p>After 50 minutes with a blocked Drain, an alarm will sound.</p>
Abnormal spin	<p>Is the washing machine seated firmly?</p> <p>Are there too few clothes in the drum?</p> <p>Are the locknuts for the adjustable feet properly tightened?</p>	<p>Add more clothing.</p> <p>Screw locknuts tightly.</p>
Power Supply	<p>An error code is displayed and the Power Supply can't be turned off. Turn off the tap and disconnect the power plug. Contact a Bennett Read/Tevo Service Centre.</p>	
Overflowing Water	<p>Drain the washing machine. If an error code is displayed, turn off the tap and disconnect the power plug. Contact a Bennett Read/Tevo Service Centre.</p>	

TROUBLESHOOTING

ERROR	PROBLEM	SOLUTION
E0	The washing machine is filled with water for more than 50 minutes.	Open the lid of the washing machine.
E1	Machine is not draining.	Ensure the Drain Hose is not blocked or bent.
E2	Load Imbalance.	Arrange the laundry evenly and symmetrically, then close the lid.
E3	The lid of the washing machine is open.	Close lid of the washing machine properly.
E4	Abnormal water sensor	Contact a Bennett Read/Tevo Service Centre.
E6	Open the lid after setting the Child Lock function.	Close the lid properly.

In the case of other faults, please contact a Bennett Read/Tevo Service Centre for professional maintenance. See contact details on page 21.

THE FOLLOWING CONDITIONS DO NOT REPRESENT FAULTS

SYMPTOM	EXPLANATION
There is a peculiar smell.	Because rubber parts are used in the washing machine, there can be a rubber smell when the machine is new.
Water inflow during running of programs.	If the water level decreases, the washing machine automatically replenishes water.
Drainage during washing.	Is too much high-foam detergent added?
Variation of remaining time.	If the clothes are off-center during spinning, the spin time will increase appropriately. If the water pressure is too low, the inflow time will increase appropriately.
Abnormal sound during spinning.	Is the power cord touching the appliance body? Have the shipping bolts been removed? Are there any foreign objects such as hairpins or coins in the tub?

SPECIFICATIONS TABLE

Model	BR20TL1
Rated washing capacity	20.0kg
Rated voltage	220 - 240V~ 50Hz
Rated washing power	500W
Water pressure	0.03 - 0.85MPa
Overall dimensions	685 × 700 × 1095mm

PRODUCT FEATURES

- 20Kg Family-sized Capacity
- Delay End
- Soft-close Lid
- 8 Wash programs
- Tempered Glass Lid
- Sleek, modern design
- Built-in Memory*

*Cycle will automatically resume, from where it left off after a power failure.

WARRANTY

Your BENNETT READ® 20KG ELITE CLEAN is covered against manufacture faults for a period of 3 years. Bennett Read®/Tevo undertakes to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period. This warranty excludes damage caused by, but not limited to, misuse, neglect, accidental damage, commercial use, incorrect installation, or unauthorised repair. Bennett Read/Tevo is not liable for incidental or consequential damages of any nature associated with the use of this product. Liability will not exceed the purchase price of this product.

PLEASE KEEP YOUR RECEIPT TO VERIFY YOUR WARRANTY.

This warranty applies to product used for personal or domestic use only, and specifically excludes any malfunction or defect arising from commercial use.

WARRANTY, SERVICE AND REPLACEMENT PART ENQUIRIES CAN BE MADE BY CONTACTING:

TEVO (PTY) LTD

Johannesburg (012) 740 5000

Durban (031) 570 5900

Cape Town (021) 380 0039

Customer Service Help Line: 0861 77 88 88

www.bennettread.co.za / www.tevo.co.za

SPECIFICATIONS

Model: BR20TL1

220 - 240V~ 50Hz

500W



ENVIRONMENTALLY FRIENDLY DISPOSAL

Do not dispose of electrical appliances with general municipal waste. Hazardous substances can leak and contaminate the groundwater, affecting the food chain and ultimately damaging the environment and your health. Contact your local municipality for information on safe disposal in your area.



Bennett Read[®]

EVERYDAY EXCEPTIONAL

Brought to you by:



0861 77 88 88

www.tevo.co.za

info@tevo.co.za

