 


H01说明书

尺寸：50*80mm

H01

 
磁吸摄影手柄

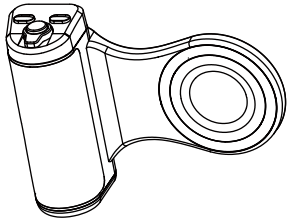

产品说明书

使用前请仔细阅读本说明书，严格按照说明书要求正确使用，并妥善保管说明书以备后使用。

外观说明

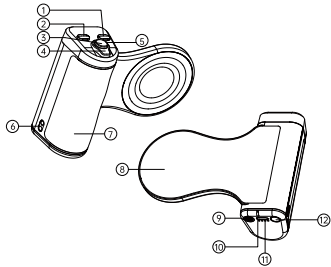

① 左翻页按键

② 右翻页按键

③ 开关键/拍摄键

④ 变焦拨杆

⑤ 蓝牙指示灯

⑥ 挂绳孔

⑦ 手柄

⑧ 1/4英寸热靴接口

⑨ Type-C充电电接口

⑩ 电量指示LED

使用前注意事项


1. 请检查产品、电源线是否有损伤，确认完好并按说明书的指引组装后再通电使用。

2. 给产品充电前请检查所使用电源电压是否和产品标一致。

3. 请勿私自分解、改造、修理以免造成触电、着火等事故。修理时请至原购买的销售商或制造厂指定的服务站询问。


使用方法:拍摄篇

A. 将磁吸手柄吸附在手机背面

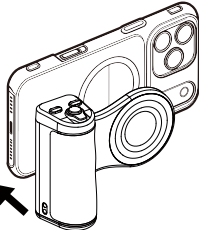

B. 长按拍摄键 2秒开机，蓝灯闪烁；手机点击蓝牙名称(SelfieCom)连接拍照设备；30分钟未连接设备将自动关机。

 C. iPhone连接蓝牙后仅可使用拍摄键。首次使用其他按键功能，请进行如下操作：进入设置-->辅助功能-->缩放-->缩放区域(全屏缩放)-->打开缩放。



*打开“缩放”时画面会放大，三指双击屏幕即可恢复。其他设置无需更改。

D. 按键说明

序号	功能	操作	操作指示灯显
1	开机	长按拍摄键2秒进入蓝牙配对状态。	指示灯闪烁
2	关机	开机或休眠状态下,长按拍摄键2秒可关机;休眠状态持续30分钟将自动关机;开机后,30分钟无配对则自动关机。	快闪3下后熄灭

序号	功能	操作	操作指示灯显
3	开始/停止拍摄	短按拍摄键。	指示灯闪烁1下
4	变焦	向左拨变焦拨杆缩小;向右拨变焦拨杆放大。	/
5	前后摄像头切换	长按右翻页键。	/
6	模式切换	单击左翻页键或者右翻页键	/
7	录制过程中拍照	单击拍照键暂停/恢复	/

E. 进入休眠状态

1.蓝牙配对后,若开机60分钟后无操作,自动进入休眠。

使用方法:充电篇

A.

低电量提醒

低电时，所有指示灯状态变为红色，电量低于20%，请注意充电。


USB-C充电

1. 按底部电量显示开关，即可查询目前电池电量。每颗灯代表25%电量。

2.充电时，充放电灯显如下:

电量	LED1	LED2	LED3	LED4
手柄充电时				
低于25%	闪烁	×	×	×
25%-50%	✓	闪烁	×	×
50%-75%	✓	✓	闪烁	×
75%-100%	✓	✓	✓	闪烁
100%充满	✓	✓	✓	✓

使用方法:遥控器

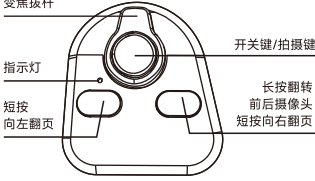

变焦拨杆

指示灯

短按左翻页

开关键/拍摄键

长按翻转前后摄像头

短按向右翻页

Information to User


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However: there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help
NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

H01


Magnetic Photo Grip

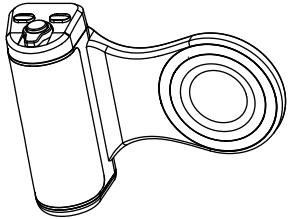

Product Instruction Manual

Please read this manual carefully before use, operate the product strictly in accordance with the requirements specified herein, and keep the manual properly for future reference.

Appearance Description

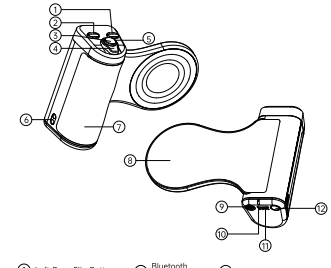

① Left Page Flip Button

② Right Page Flip Button

③ Power Button

④ Zoom Lever

⑤ Bluetooth Indicator Light

⑥ lanyard Hole

⑦ Handle Grip

⑧ 1/4" Hot Shoe interface

⑨ Type-C Charge & Discharge Port

⑩ Battery Level LED Indicator

Precautions


1. Check whether the product and power cord are damaged. Confirm they are intact, then assemble them following the instructions in this manual before powering on for use.

2. Before charging the product, please verify that the supply voltage matches the rated voltage marked on the product.

3. Do not disassemble, modify or repair the product without authorization, to avoid accidents such as electric shock and fire. For maintenance service, please consult the original seller or the service stations designated by the manufacturer.

Usage Instructions: Shooting Guide

A. Attach the magnetic grip to the back of your smartphone

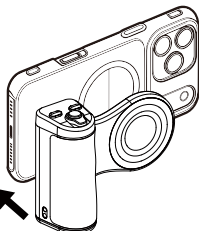

B. Press and hold the shutter button for 2 seconds to power on; the blue indicator light will flash.

Tap the Bluetooth name (SelfieCom) on your phone to connect to the shooting device. The device will automatically power off if no connection is made within 30 minutes.

C. Only the shutter button can be used after Bluetooth connection on iPhone.

To enable other button functions for the first time, follow the steps below: Go to Settings > Accessibility > Zoom > Zoom Region (Full Screen Zoom)



*When Zoom is enabled, the screen will be magnified. Triple-tap the screen with three fingers to restore the normal display. No other settings need to be modified.

D. Button Instructions

No.	Function	Operation	Indicator Light Status
1	Power On	Press and hold the shutter button for 2 seconds to enter Bluetooth pairing mode.	Indicator light flashes
2	Power Off	Press and hold the shutter button for 2 seconds to power off when the device is powered on or in sleep mode. The device will auto power off after 30 minutes in sleep mode. The device will auto power off if no pairing is completed within 30 minutes after startup.	Flashes 3 times quickly then turns off

No.	Function	Operation	Indicator Light Status
3	Start Stop Shooting	Short press the shutter button.	Indicator light flashes once
4	Zoom	Slide the zoom lever left to zoom out. Slide right to zoom in.	/
5	Switch Between Front & Rear Cameras	Long press the right page flip button.	/
6	Mode Switch	Single-tap the left page flip button or the right page flip button.	/
7	Pause / Resume Shooting During Recording	Single-tap the shutter button.	/

E. Enter Sleep Mode

1. After Bluetooth pairing, the device will automatically enter sleep mode if no operation is performed within 60 minutes after power-on power off if no connection is made within 30 minutes.

Usage Instructions: Charging Guide

A.

Low Battery Reminder

When the battery is low, all indicator lights will turn red. Please charge the device when the remaining battery level drops below 20%.


USB-C Charging

1. Press the battery level switch on the bottom to check the current remaining battery power. Each LED light represents 25% of the total battery capacity.

2. The status of charge & discharge indicator lights during charging is shown in the table below.

Battery Level	LED1	LED2	LED3	LED4
手柄充电时				
Below 25%	Flashing	×	×	×
25%-50%	✓	Flashing	×	×
50%-75%	✓	✓	Flashing	×
75%-100%	✓	✓	✓	Flashing
Fully Charged (100%)	✓	✓	✓	✓

Usage Instructions: Remote Control

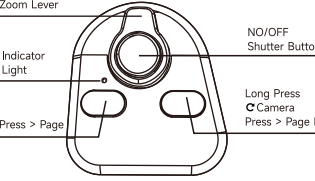

Zoom Lever

Indicator Light

Press > Page

NO/OFF Shutter Button

Long Press Camera

Press > Page R

CAUTION:

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

Do not replace battery with an incorrect type.

Do not disposal battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Do not leaving battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

Do not leaving battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Do not used in low air pressure at high altitude condition.

Do not used in high or low extreme temperatures.