



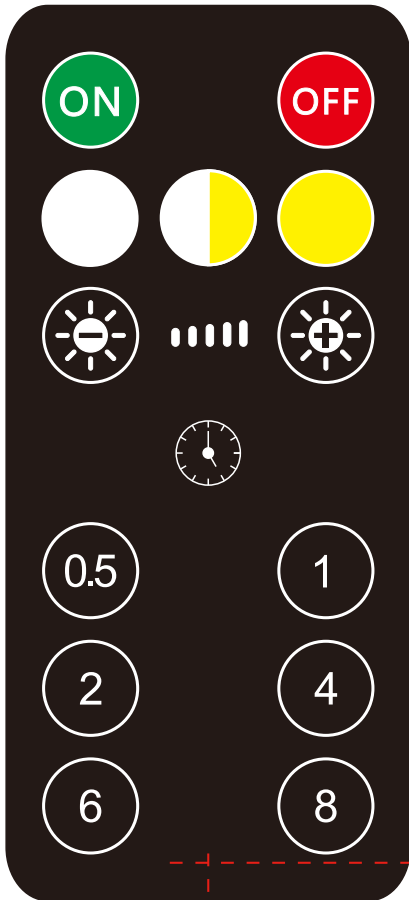

CRAFTERSMARK®

# Picture Light

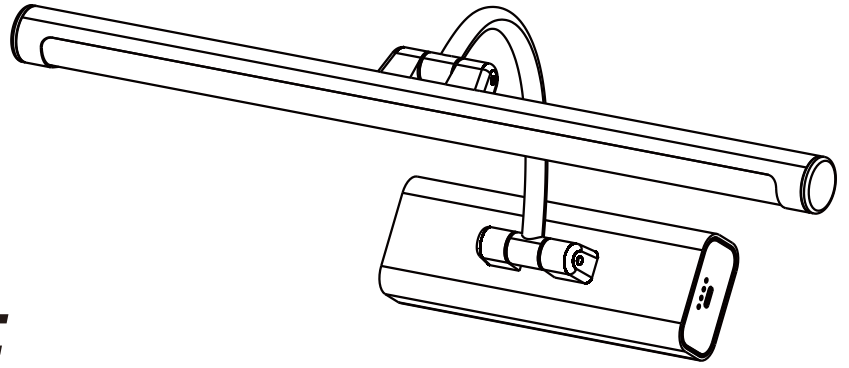

## Power buttons

1. ON: Turn on the picture light.
2. OFF: Turn off the picture light.

## 3 Light Color

Cold White, Natural White, Warm White.

## Brightness Adjustment

- "+": Brightness increases from 20% to 100% in 5 levels.
- "-": Brightness decreases from 100% to 20% in 5 levels.

## Timer Function


6 timer options for 0.5h, 1h, 2h, 4h, 6h, 8h.

Press to set timer, the light will flash once to confirm your selection.

## NOTE:


The light will auto turn off after the selected time, but will not turn on again the next day.

Slightly remove the transparent film before use the remote

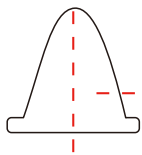


Transparent film

## What's in the box ?

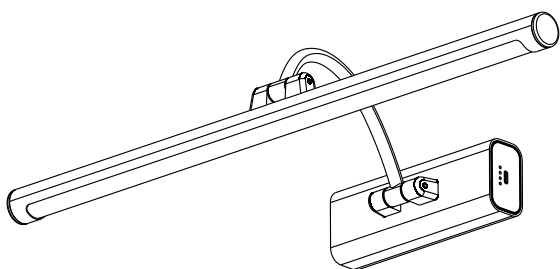


picture light

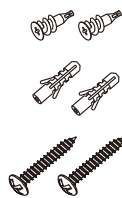

screw  
accessories



 remote control

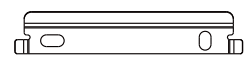


Mounting Bracket




Type-C  
charging cable



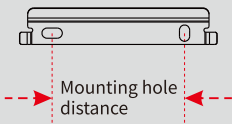


# Installation

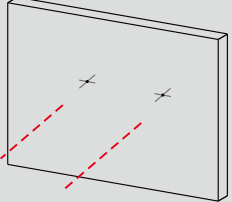


Mounting hole distance




**Cautions**  
Please choose the right wall rivets according to different wall surfaces.



-  +  Suitable for concrete/brick walls
-  +  Suitable for drywall walls
-  Suitable for wood panels walls

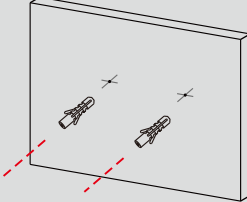

**Note:**  
Eusure the mounting bracket is in the level position.

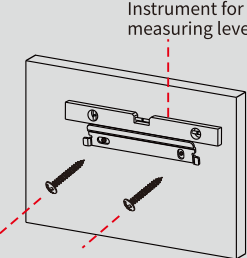

Instrument for measuring level

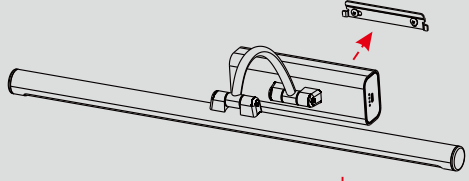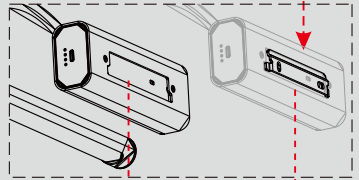light mounting hole    Mounting Bracket


**Step 1**  
Mark drill points on the wall according to the mounting bracket, then drill holes.

**Step 2**  
Install the anchors to the hole.

**Step 3**  
Secure the mounting bracket to the anchors with self-tapping screws.


**Step 4**  
Align the lamp mounting holes with the mounting bracket, and slide downward until the lamp is completely locks into place.

# Angle Adjustment and Battery Pack Installation

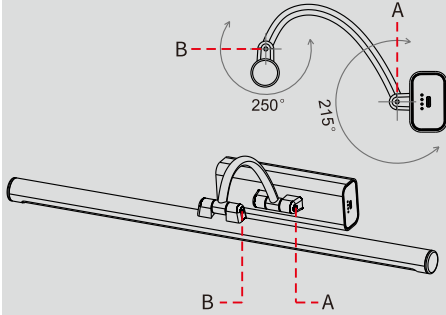


250°    215°

Adjust Light Angle  
Rotate axis A and Axis B to direct light precisely toward to your artwork.

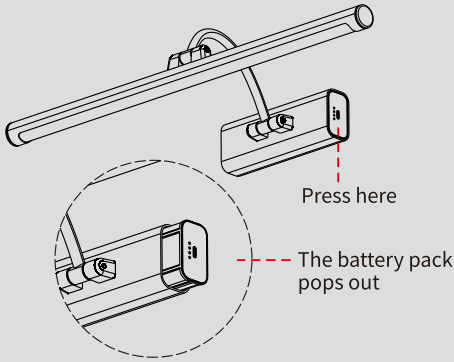


Press here  
The battery pack pops out

**Removing the battery pack**  
Press firmly on the battery pack, it will pops out automatically. Then remove it for charging.

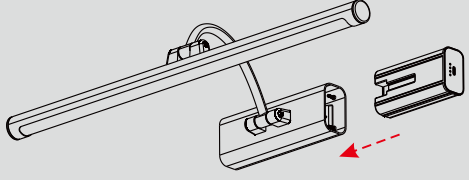

**Installing the battery pack**  
Insert the battery pack back into the lamp base until it locks into place. Then the light will be ready for normal use.


# Charging and Operation

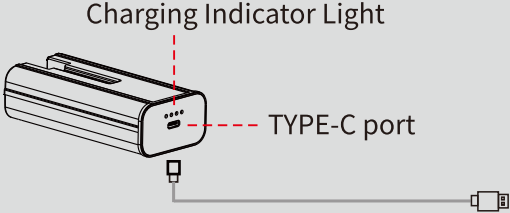

Charging Indicator Light

TYPE-C port

- When charging, the blue LED indicator will flash.
- When the battery is fully charged, the blue LED indicator will stay lit continuously.

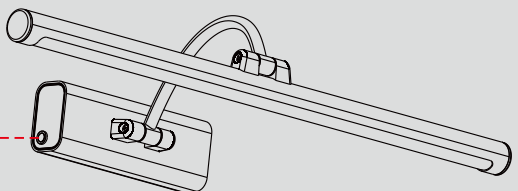

Touch Switch

- Touch and hold for 3 seconds to turn the light ON/OFF.
- Tap the switch to change the light color: Cold White, Natural White, Warm White.

**Note:** Before using the picture light, please make sure the battery is fully charged.

Dear Customer

Thank you very much for purchasing our product. If you have any questions about installation or use, please contact us by email.

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

The device can be used in portable exposure conditions without restriction.