

VIVITAR®

POWERING UP LIFE.

Point and Shoot 10x Optical Digital Camera



User's Manual

ITEM: VXXBR74

Read me before use!

Keep manual and all relevant information for future reference.



WARNING

To reduce the risk of fire or electric shock,

- 1.) Do not expose the unit to rain or moisture.
- 2.) Do not place objects filled with liquids, such as vases, on the apparatus.
- 3.) Do not expose the batteries to excessive heat, sunlight, smoke, fire or flames.

Do not ingest battery; chemical burn hazard.

The camera contains an external lithium ion battery. If swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION

If the battery is mishandled, the battery pack can burst, cause a fire or even chemical burns.

Observe the following cautions:

Do not disassemble.

Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.

Do not short circuit and do not allow metal objects to come into contact with the battery terminals.

Do not expose to high temperature above 60°C (140°F) such as in direct sun light or in a car parked in the sun.

Do not incinerate or dispose of in fire.

Do not handle damaged or leaking lithium ion batteries.

Keep the battery pack out of the reach of small children.

Keep the battery pack dry.

Replace the battery with the specific type only. Otherwise, bursting, fire or injury may result.

Dispose of used batteries according to the instruction.

Do not charge the battery in a narrow space, such as between a wall and furniture.

If static electricity or electromagnetism cause data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

SAFETY PRECAUTIONS

When using your Point and Shoot 10x Optical Digital Camera, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING.
2. Do not expose to any moisture or water. Clean using a soft cloth or paper towel.
3. Do not allow children or the infirm to use this product without suitable adult supervision. This product contains small pieces that can be a choking hazard.
4. Do not expose your camera to excessive heat, flames or fire.
5. Always press all buttons or switches carefully. Do not manhandle your camera.
6. Do not expose your camera to temperatures above 40°C. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if your camera is in need of service.
8. Do not drop, puncture or expose your camera to excessive trauma.
9. Your camera is not intended for commercial use.
10. Do not place near objects that generate a strong magnetic field.
11. Unplug your camera when charging is complete or during lightning storms.
12. Please recycle or dispose of your camera properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your product for further information.


QUICK REFERENCE

1. The product is a digital camera with optical zoom capabilities.
2. The wi-Fi name for the product is VIVITAR_XXXXXXX with the default password set to 12345678.
3. This product supports TF cards up to a maximum capacity of 256GB. For optimal video recording performance, it is recommended to use a U3 high-speed card with a minimum read speed of 100 Mb/s and a write speed of 60 Mb/s or higher.
4. If you are using a memory card with the camera for the first time, it is recommended to format the card. Formatting PERMANENTLY DELETES all files from the card. Do not format the card until you have backed up any important files from it. Using a memory card without formatting can lead to quality and operational issues.
5. The images within this user manual are provided for reference purposes and may not precisely match the product due to updates.

Table of Contents

Closer Look	4-6
Function Overview	7
Battery Installation/Removal	8
Charging the Battery	8
Powering ON the Camera	9
Insert and Format the Memory Card	10
Preview Screen.....	11-12
Camera Settings	13
Available System Settings.....	14-16
Using the Camera	17-19
Playback in HDTV	20
Connect to a Computer	21
Connecting to the App	22
Connecting Wi-Fi	22
Troubleshooting	23
FCC Statement	24
One Year Warranty.....	25-26


Closer Look

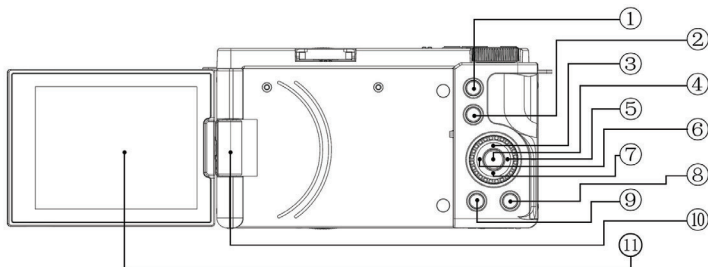


1. Playback Button
2. AE/AF Lock Button
3. Up/EV Button
4. Confirm Button
5. Right/Flash Button
6. Left/Macro Button

7. Down/Timer Button
8. Delete Button
9. Menu Button
10. Rotating Joint
11. Digital Screen

 Closer Look (Cont.)

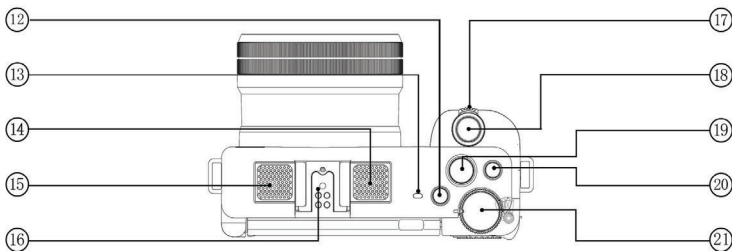


 - 12. Power Button
- 13. Indicator Light
- 14. Microphone
- 15. Speaker
- 16. Cold Shoe
- 17. W/T Button
- 18. Shutter Button
- 19. Record Button
- 20. Display Button
- 21. Mode Dial

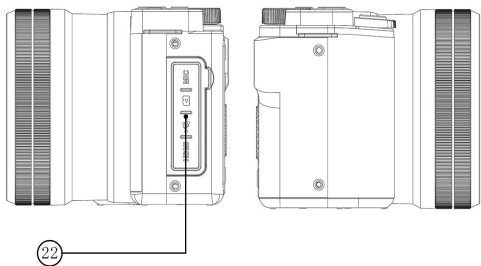

- 22. Control Panel (3.5mm Jack/USB-C/MicroSD/HD Interface)

 Closer Look (Cont.)

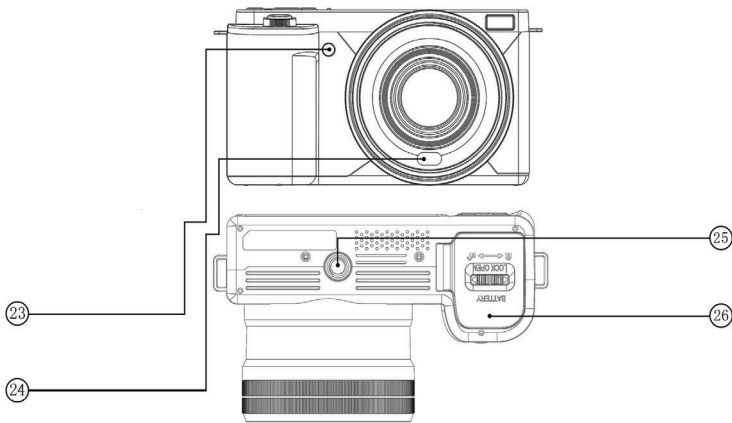


- 23. Auxiliary Focus Light
- 24. LED Fill Light
- 25. Tripod Mounting Hole
- 26. Battery Compartment

Function Overview

Buttons/ Indicators	Functions
Playback Button	Open/Exit Media Playback
AE/AF Lock Button	Lock Auto Exposure(AE) and Auto Focus(AF)
Up/EV Button	Open Exposure Value Interface
	Move Selection Up
	Pause or Resume Recording
Confirm Button	Confirm
Right/Flash Button	Open Flash Settings Interface
	Move Selection Right
Left/Macro Button	Open Macro Settings Interface
	Move Selection Left
Down/Timer Button	Open Timer Settings Interface
	Move Selection Down
Delete Button	Open Delete Interface
	Delete in Playback Mode
	In the standby mode,press the delete button can directly enter the delete menu.
Menu Button	Open/Close Menu Settings
Power Button	Power ON/OFF
Indicator Light	Working / Charging Indicator Light
Cold Shoe	Base for holding remote flash units
W/T Button	Zoom In/Out
Shutter Button	Take a Photo
Record Button	Record a Video
Display Button	Cycle through Display Modes
Mode Dial	Set the photo mode
Control Panel	Contains a Micro SD Port, HD Interface, USB-C Port, and 3.55mm AUX Jack.

Battery Installation/Removal

 
This camera uses a high capacity rechargeable external lithium battery (3.7V).

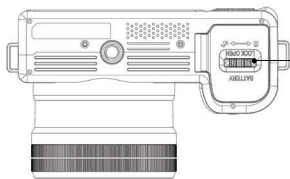

Slide the Memory Card/Battery Cover open. Carefully insert the battery with the polarity icons matching those found inside of the battery opening. The battery is secure when you hear a click.

Charging the Battery

Connect one end of the charging cable to the charging port (USB-C) located at the side of the camera. Connect the other end of the cable into a suitable USB power adapter (not included) or power bank (not included).

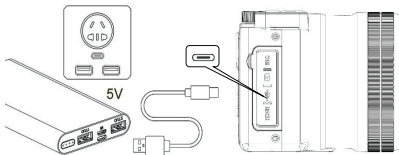


The Camera Indicator light will light up red while charging. When charging is complete the light will turn off. Charging can take approximately 2-3 hours.

NOTE: When the camera is not in use for an extended period of time it is recommended to charge the battery every 3 months. Then discharge the battery to maintain battery life .

Powering ON the Camera

Press and hold the power button to turn the camera On and Off.

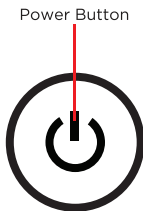


NOTES:

- Depending on the model, if no input is registered by the camera, such as a button press or screen change, the camera will automatically turn Off.
- When removing an external battery ensure the camera is turned Off.

Insert and Format the Memory Card

A class 10 or higher speed memory card is recommended for normal use.

Insert the microSD memory card into the memory card slot until you hear a “click”. Pay attention to the edges and corners.

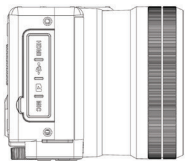

To remove the memory card: push the memory card in and it will automatically pop out.


Format the Memory Card

It is recommended to format the memory card before the first use.

To format the memory card, press the menu button to open the menu system.

Then navigate to system settings. Press “Format” and press OK to get the sub-menu.

Select Format to format the memory card.

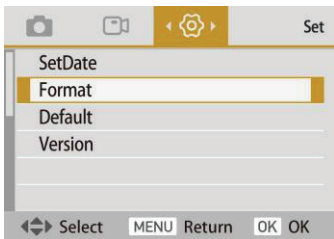


NOTE: If the memory card is not in native format, the screen will pop up a prompt: “Unsupported file system, do you want to format?” Please format the memory card as described above.




WARNING:

Formatting the memory card will erase all data stored on it, making it irrecoverable. Save your important data to a PC before formatting.

Preview Screen

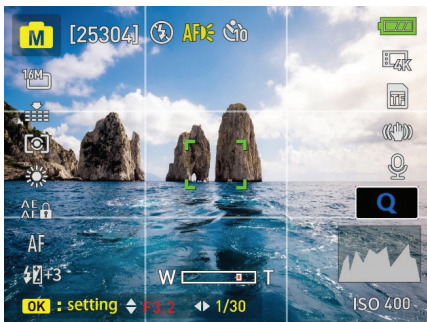After turning on the camera the preview screen will be displayed. Below is an example preview screen.



- 【[25304]】 This number Indicates the current space available inside the inserted Micro SD card for photos. It counts down as space is used.
- 【】 This icon shows the current timer for photos. In timed photography mode, using the timer shortcut key opens the timer options. In timer options there are four choices: Off, 2 seconds, 5 seconds, and 10 seconds. Off is the default setting. Whenever you change modes or perform another operation, any changes to the setting will revert back to Off.
- 【】 This icon shows the EV (Exposure Value). Using the EV value shortcut key opens the EV value options. There are seven choices for EV value. +3.0, +2.0, +1.0, +0.0, -1.0, -2.0, -3.0. The default is set to +0.0.
- 【】 This icon shows the current focus setting. Using the Macro shortcut key opens the focus options. There are four choices for focus. Macro (Auto), Macro (Manual), AF (Auto Focus), MF (Manual Focus).

Preview Screen (Cont.)



This icon shows the current flash setting. Using the Flash shortcut key opens the flash options. There are four choices for focus. Auto, Red-eye Reduction, Forced Flash, No Forced Flash. The default is set to No forced Flash. Make sure any connected Flash Devices are turned on before use.




This icon shows the current Micro SD card status. There are three states: Inserted, Not Inserted, and Write Protection. Inserted and Not Inserted indicate if the Micro SD card is currently inside the camera or not. Write Protection indicates that the currently inserted Micro SD Card is write-protected, preventing any modifications to the card.

Camera Settings

You can set custom settings for the camera.

After the camera is turned on, press the menu button to open the menu.

The menu will start under Photo Settings. To move to Video and System settings press the Right/Flash key.

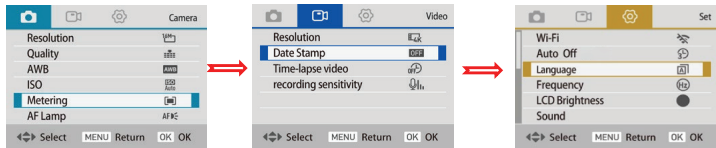

NOTE: Settings differ depending on the current mode selected on the mode dial.