

# Electric Toaster

Instruction Manual

EN



**SENCOR**<sup>®</sup>

STS1110

Before first use, please read this instruction manual carefully even if you have previous experience with the operation of similar appliances. Use this device only in accordance with the instructions described in this manual. Store the instruction manual in safe place and keep it for future reference.

We recommend to save the original cardboard box and original packaging and wrapping materials, as well as the proof of purchase receipt and the warranty card, at least for the duration of the warranty period. In case of shipment, pack the appliance using the original packaging materials and send it in the original cardboard box.

## Important instructions

When using electrical appliance, basic safety precautions should be followed including the following:

### Please read these instructions before using the appliance and retain them for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they will not play with the appliance.
- To protect against electrical hazard, do not immerse any part of the appliance, or cord in water or any other liquid.
- Close supervision is necessary when the appliance is used near children. Always keep the appliance away from children.
- Do not leave the appliance unattended when in use. Unplug after each use.
- Always use the appliance on a dry, level surface.
- Do not use this appliance outdoors.
- Always unplug the appliance from the wall socket when not in use and before cleaning.
- Do not use this appliance with any foodstuffs containing sugar or with damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. To avoid the risk of electrical shock, do not disassemble; send the toaster to the nearest service facility.
- In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be sent to the service facility.
- Do not let the cord hang over the edge of a table, or counter. Do not touch hot surfaces. Allow unit to cool before wrapping cord around base for storage, or before cleaning.
- Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
- Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- When using this appliance, allow adequate air space above and on all sides for air circulation. Bread may burn. Therefore this appliance must not be used near or below curtains and other combustible materials. It must be watched. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANY OTHER PURPOSES THAN INTENDED USE.
- Bread may burn. Therefore this appliance must not be used near or below curtains and other combustible materials. It must be watched.
- This toaster is intended to be used for bread only. Other ingredients may cause fire, electrical shock or injury. Do not use this appliance with any foodstuffs containing sugar or with products containing jam or preserves. Immediately unplug the toaster if fire or smoke is observed.
- Check if the voltage indicated on the rating label of the appliance corresponds to the voltage in your home before connecting the appliance.
- Connect the appliance to an earthed wall socket.

## Warning!!

Never attempt to extract jammed toast, muffins, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution. Allow the appliance to cool down, unplug and carefully remove the bread.

## Features of toaster

1. Extra long variable width toasting slots
2. Cancel button
3. Electronic variable browning control
4. Lift lever
5. Full length crumb tray



# Electric Toaster

STS1110

EN

## Operating toaster

- Insert the plug into a suitable mains supply socket.
- Place up to two slices of bread, muffins or bagels into bread slots.  
**Warning!** Do not cover the toasting slots with bread. If there is not enough space for air circulation above the toasting slots and it can cause damage of the appliance.
- Select the desired browning setting, from No. 1 to No. 7 on the browning control knob. (No. 1 – lightest, No. 7 – darkest).
- Before using the toaster for the first time, we suggest you to plug the appliance in, to select number 7 on browning control knob, to switch the appliance on without toasting any bread. This procedure should be repeated for six times to remove possible smell from production.
- When using the toaster for the first time we suggest you to toast on number 3. Varying types of bread and personal preference may require a different browning setting.
- Press the carriage control lever down until it clicks into place. Toasting cycle will automatically commence. Please note: if the toaster is not plugged in and switched on at the power point the carriage control lever will not click into place.
- The toaster turns off when the desired toast colour is achieved and automatically pops up the toast. The toasting process can be stopped at any time by pressing the cancel button.

In the unlikely event that the bread or crumpet becomes jammed, switch the toaster off at the power outlet, remove the plug from the supply socket and carefully take the bread out of the toaster, ensuring that you do not damage the element.

## Care and cleaning

Always turn the power off, remove the plug and allow the toaster to cool before cleaning.

To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace in the toaster before using it again.

The crumb tray should be cleaned regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.  
Do not use any abrasive cleaners. Do not immerse the unit in water.

**Warning!** Do not hold the appliance upside down and do not shake it to remove the crumbs.

## Technical features

230 V ~ 50 Hz, 800 W

### **CAUTION:**

This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details.

The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.

**CE** This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.