


HOT DOG TOASTER OVEN

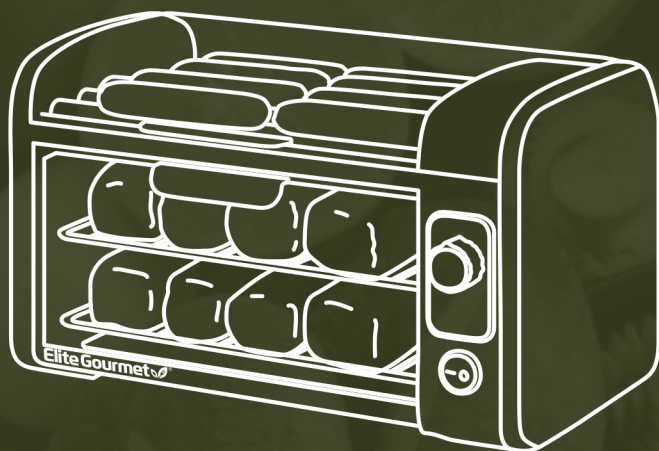

INSTRUCTION MANUAL

MODEL: EHD800

THANK YOU

for your purchase!

FOLLOW US FOR MORE KITCHEN
TIPS, HACKS, & INSPIRATIONS!



shopelitegourmet

LET'S GET COOKING!



Maxi-Matic, USA
18401 E. Arenth Ave
City of Industry, CA
91748-1227



shopelitegourmet.com

Visit our website to
contact us for support.
Register your product online!

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	2
SHORT CORD PURPOSE	3
POLARIZED PLUG	3
PARTS IDENTIFICATION	4
BEFORE FIRST USE	4
HOW TO USE	4
NOTES	5
CLEANING AND MAINTENANCE	5
WARRANTY POLICY	6
RETURN INSTRUCTIONS	7

IMPORTANT SAFEGUARDS

The Elite Brand takes consumer safety very seriously. Products are designed and manufactured with our valued consumers' safety in mind. Additionally, we ask that you exercise a level of caution when using any electrical appliance by following all instructions and important safeguards.

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

WARNING: When using electrical appliances, basic safety precautions should always be followed as below:

1. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the main power supply.
2. This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children.
4. If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.
5. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
6. The door and outer surface may get hot when the appliance is operating. Do not touch hot surfaces.
7. Do not use outdoors.
8. Do not use this appliance near or below combustible materials such as curtains.
9. Ensure there is sufficient ventilation around the appliance to allow the escape of heat and steam.
10. Do not immerse the appliance in water or any other liquids.
11. This appliance contains no user serviceable parts. All repairs should be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.
12. Do not operate the appliance after a malfunction or if it has been dropped or damaged in any way.
13. Do not leave the appliance unattended while connected to the main power supply.
14. The appliance must be used on a stable, heat-resistant surface.
15. The appliance must be unplugged from the power supply after use and while any maintenance such as cleaning is carried out.
16. Do not use the appliance for any other purpose that for which it is designed.
17. Ensure the supply cord is kept away from heat or sharp edges that could cause damage.
18. This appliance is intended for domestic use only. It should not be used for commercial purposes.

**SAVE THESE INSTRUCTIONS.
THIS PRODUCT IS FOR
HOUSEHOLD USE ONLY.**

SHORT CORD PURPOSE

Note: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a long cord.

Longer power-supply cords or extension cords may be used if care is exercised in their use.

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the counter top or tabletop where it can unintentionally be pulled on or tripped over by children or pets.


POLARIZED PLUG

If this appliance is equipped with a *polarized plug* (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug.

If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.

PARTS IDENTIFICATION

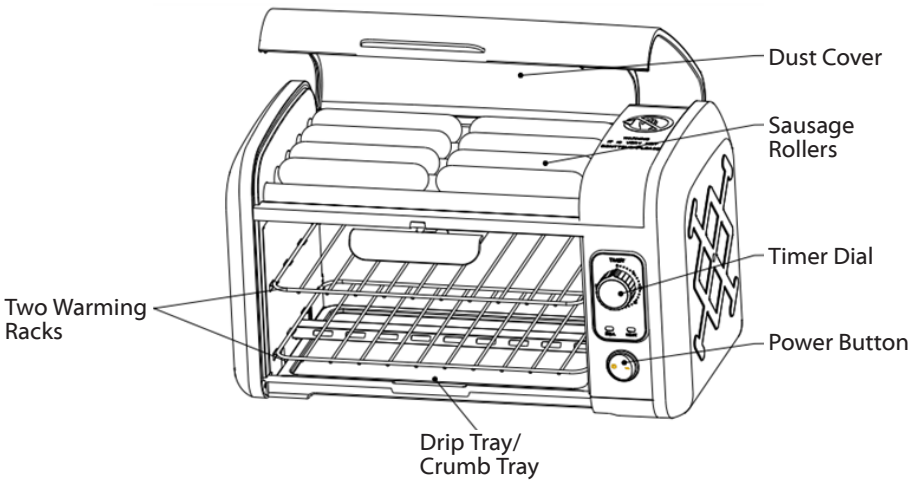

BEFORE FIRST USE

- Carefully unpack the product and remove all packaging materials. Clean the toaster oven thoroughly before using for the first time. This serves to remove any dust that may have accumulated during packaging. Do not use abrasive cleansers when cleaning. Do not immerse the toaster or electrical cord in water or any other liquid. (See the “HOW TO CLEAN” section for further instructions.)
- During the first few uses you may notice smoke and/or a slight odor. This is normal and should disappear with subsequent use.

HOW TO USE

1. Ensure it is not connected to the main supply and remove any packaging.
2. Wipe down the exterior, interior and sausage rollers with a soft, damp, lint free cloth.
3. Wash the warming racks & drip tray in a mild household detergent.
4. Ensure sufficient ventilation.
5. Defrost frozen sausages if necessary before cooking. Place the desired number of sausages onto the rollers (maximum 8 regular sized sausages or hot dogs).
**NOTE: You must keep the dust cover open during cooking.*

HOW TO USE (cont.)

6. Open the front door and slide the drip tray into the guides below the rollers.
7. Place the desired number of buns (maximum 8 regular sized rolls) onto the warming racks then close the door.
8. Switch on the rollers On/Off switch and rotate the timer to the required cooking time, the blue roller and red heat indicators will illuminate.
9. The red heat indicator will turn On and Off alternately during use to show the temperature is being maintained.
10. Cooking time for sausages/hot dogs is approximately 25-30 minutes though this will vary according to the type of sausages/hot dogs and roll being cooked.
11. Check the sausages/hot dogs are cooked thoroughly before serving, if not cooked, advance the timer for further cooking.
12. At the end of cooking time, the timer bell will ring and cooking will cease.
13. Switch off the rollers using the On/Off switch.
14. To serve, use oven gloves and tongs to remove the sausages/hot dogs and rolls from the hot dog grill.

CAUTION: The dust cover must be kept open during cooking.

NOTES

- Do not immerse the hot dog toaster oven in water or any other liquids.
- Ensure all food is cooked thoroughly before serving.
- Ensure the appliance is unplugged from the main power supply before cleaning.
- Do not clean the appliance, warming tray or drip tray with harsh abrasives or cleaners.
- Do not touch the rollers during or immediately after cooking, allow to cool first.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug the toaster oven and allow ample time for the unit to completely cool.
2. Never immerse the appliance or the electrical cord in water or any other liquid!
3. Do not use any abrasive soaps, detergents, or cleaning materials to clean this appliance
4. Always make sure the appliance is off, unplugged from the electrical outlet, and completely cool before cleaning.
5. Do not use steel wool scouring pads, abrasive cleaners or scrape the walls with a metal utensil.
6. Wash the baking tray and the drip tray with soap and warm water.
7. Clean the interior and exterior of the oven including the door and door handle with a damp, soapy cloth or sponge.
8. Dry all parts thoroughly before storing or using the oven again.

NOTE: Exercise caution when cleaning your Toaster Oven. BE CERTAIN the Oven has cooled completely before cleaning. Wearing gloves is recommended to minimize risk of abrupt edges that may be present on the interior and the exterior of the oven due to the manufacturing process.

LIMITED WARRANTY* ONE (1) YEAR
WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE

PLEASE DO NOT RETURN TO STORE OF PURCHASE.

If you have any problems with this unit, contact Customer Service for support.

1. Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
2. Retail stores/merchants selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.
3. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
4. At its sole discretion, Maxi-Matic USA will either repair or replace the product found to be defective during the warranty period.
5. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
6. Consumer's remorse is not an acceptable reason to return a product to our Service Center.
7. This limited warranty covers appliances purchased and used within the 50 U.S. states plus the District of Columbia and does NOT cover normal wear of parts or:
 - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.
 - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; i.e. cracked or broken plastic/glass, scratched/dented inner pots.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Acts of nature such as fire, floods, hurricanes, tornadoes, etc.
- 8. This warranty does not apply to re-manufactured merchandise.**

Maxi-Matic, USA shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

*One Year Limited Warranty valid only in the 50 U.S. states plus the District of Columbia, excluding Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary by state, province, and/or jurisdiction.

**Any instruction or policy included in this manual may be subject to change at any time.

MAXI-MATIC, USA

18401 E. Arenth Ave. City of Industry, CA 91748

Visit: shopelitegourmet.com to contact us for support

- 6 Questions? We're here to help!
Visit: shopelitegourmet.com for support on this product.

RETURN INSTRUCTIONS

RETURNS:

- A. Any return of defective merchandise to the manufacturer must be processed accordingly by first contacting customer service to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.
- B. **IMPORTANT RETURN INSTRUCTIONS.** Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic, USA:
1. Carefully pack the item in its original carton or other suitable box with sufficient cushioning to avoid damage in shipping.
 2. Before packing your unit for return, be sure to enclose:
 - a) Your name, full address with zip code, daytime telephone number, and RA#,
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and
 - d) Any parts or accessories related to the problem.
 3. Maxi-Matic, USA recommends that you ship the package via UPS ground service for tracking purposes. **We cannot assume responsibility for lost or damaged products returned to us during incoming shipment.** For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.
 4. **All return shipping charges must be prepaid by you.**
 5. Once your return has been received by our warehouse, Maxi-Matic, USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.
 6. **Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.**

ELITE CUSTOMER SERVICE CENTER



Maxi-Matic, USA
18401 E. Areth Ave
City of Industry, CA
91748-1227



shopelitegourmet.com
Visit our website to contact us
for support.
Register your product online!



We take pride in the fact that Elite Gourmet products are continuously improving. To keep you well informed of these changes and to reduce paper consumption, we've included this QR code for you to scan and easily download the most recent updates to your product to your mobile device. Just access your camera, point at the QR code & your mobile device will do the rest.

FOLLOW US FOR MORE KITCHEN TIPS,
HACKS, & INSPIRATIONS!



shopelitegourmet

Elite is a registered trademark of Maxi-Matic, USA.
Copyright Elite by Maxi-Matic.

Actual product may vary from the images/illustrations in this manual
due to continual product improvement.

®



Elite Gourmet