

Connect Video door phone intercom to App

Step 1. Connect your phone to the same Wi-Fi as the Indoor Monitor.

Download Tuya Smart or Smart Life - Smart Living from Google Play or App Store, then register or log in to your account.

Step 2. Open the mobile app and tap Add Device, then scan code, The app will automatically search and connect to your Indoor Monitor.

Step 3. Click on Smart Face to connect WiFi and to bind App.

1. Home Page



1.1. Silent Mode

In right top corner, tap this icon to turn ON/OFF silent mode.

1.2. Settings

Tap the icon to enter settings.

1.3. Turn off

Touch to turn off the screen.

1.4. Gate Lock

Tap the icon, and choose the door to unlock.

1.5. Media

View videos and photos of call records.

1.6. Intercom



Tap and choose a monitor to call.

1.7. Monitor


Tap to view the live video of outdoor call panel.

2. Intercom

Tap to call Monitor 2, 3 or 4, if connected.

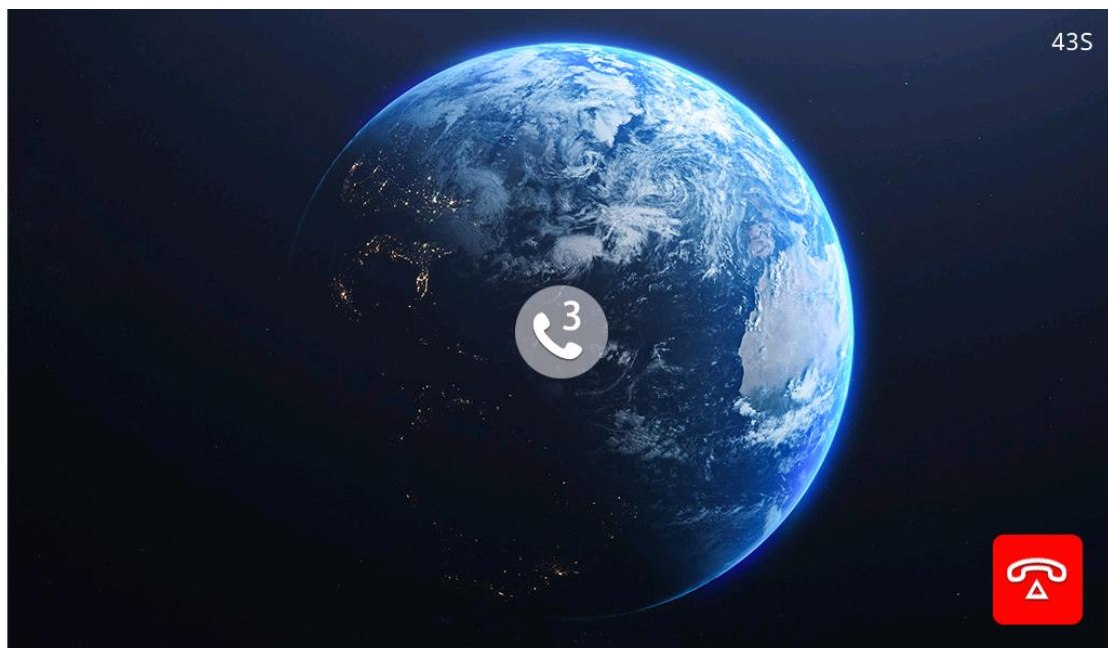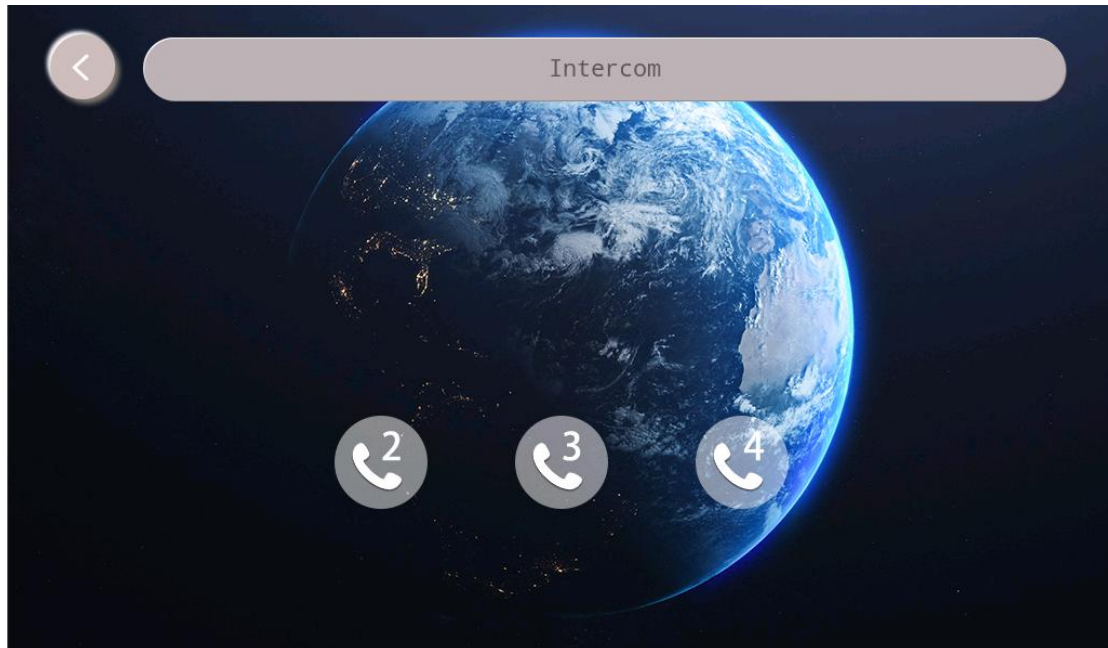

3. Monitor

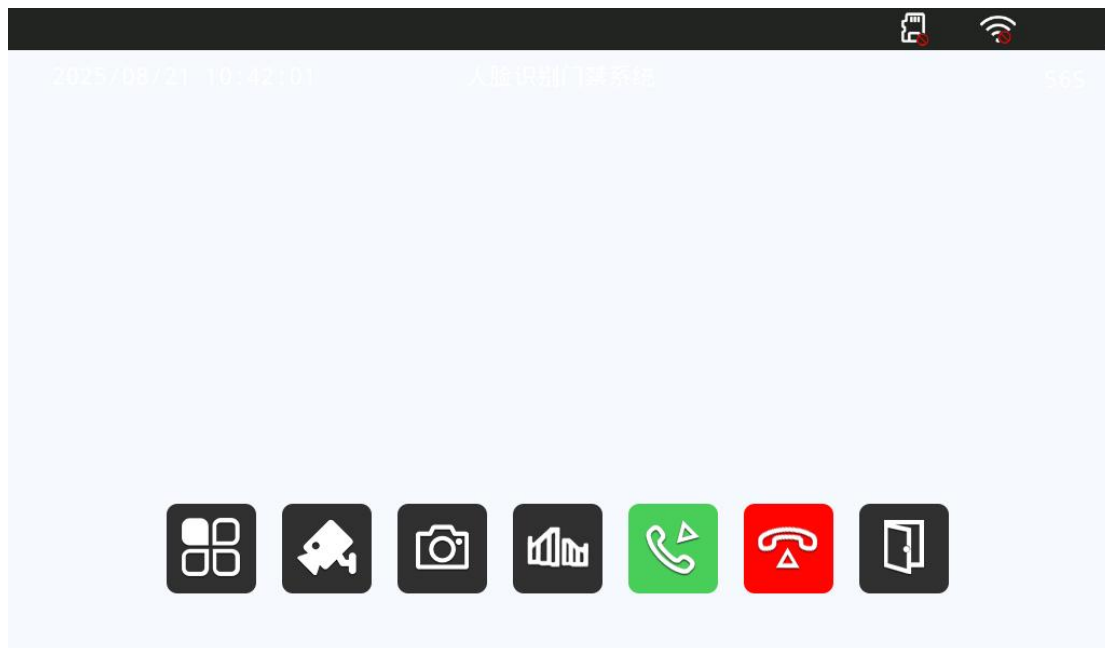

3.1. Menu

Tap to adjust brightness and volume.

3.2. Video

Tap to start recording a video, and then one more touch to stop.

3.3. Photo

Tap to take a photo.

3.4. Door lock

Tap to open door lock.

3.5. Answer

Tap to start conversation.

3.6. Hang up

Tap to hang up the monitor.

3.7. Gate lock


Tap to open gate lock.

4. Media

View call records, videos and photos.


4.1. Call records

View call records. Tap delete all to delete all call records.

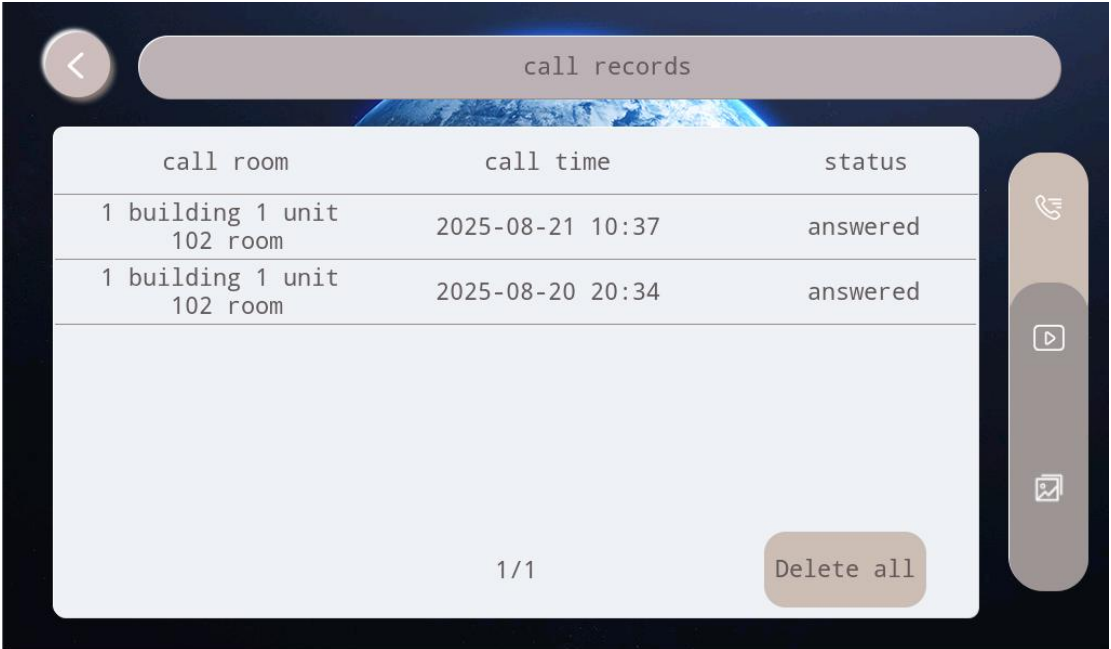


4.2. Video

View video records. Tap Delete all to delete all videos.

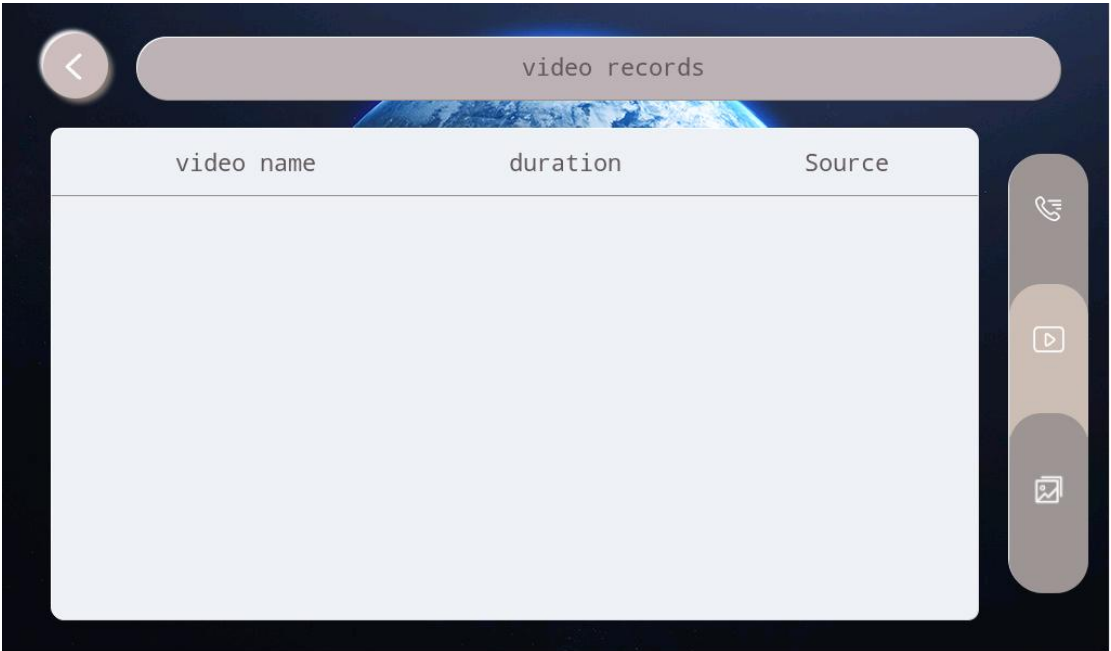

4.3. Photo


View photo records. Tap Delete all to delete all photos.

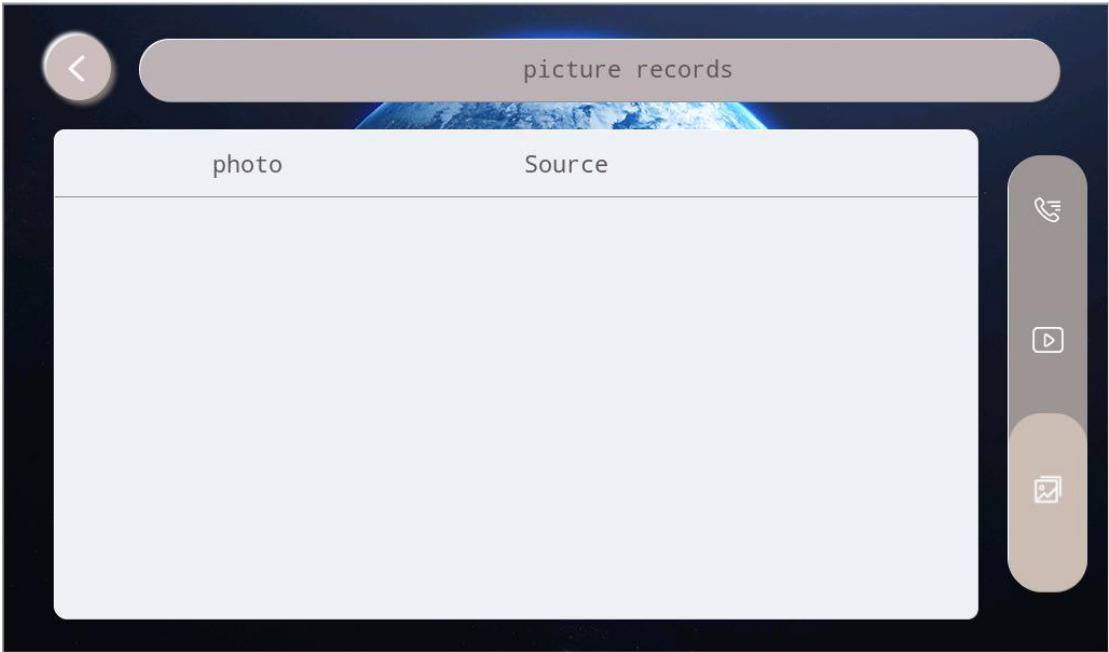

5. Settings


5.1. System

Set language, keytone, video or photo record, factory setting, restart system, formatting SD, pedestrian detection and device ID.

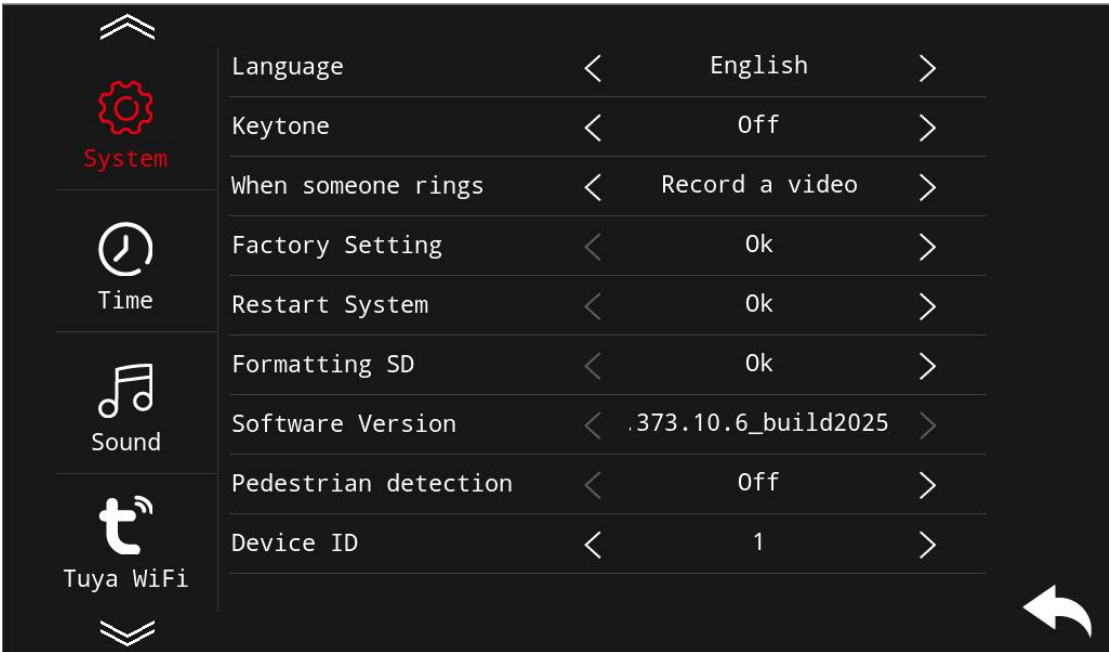


5.2. Time

Set time and date.

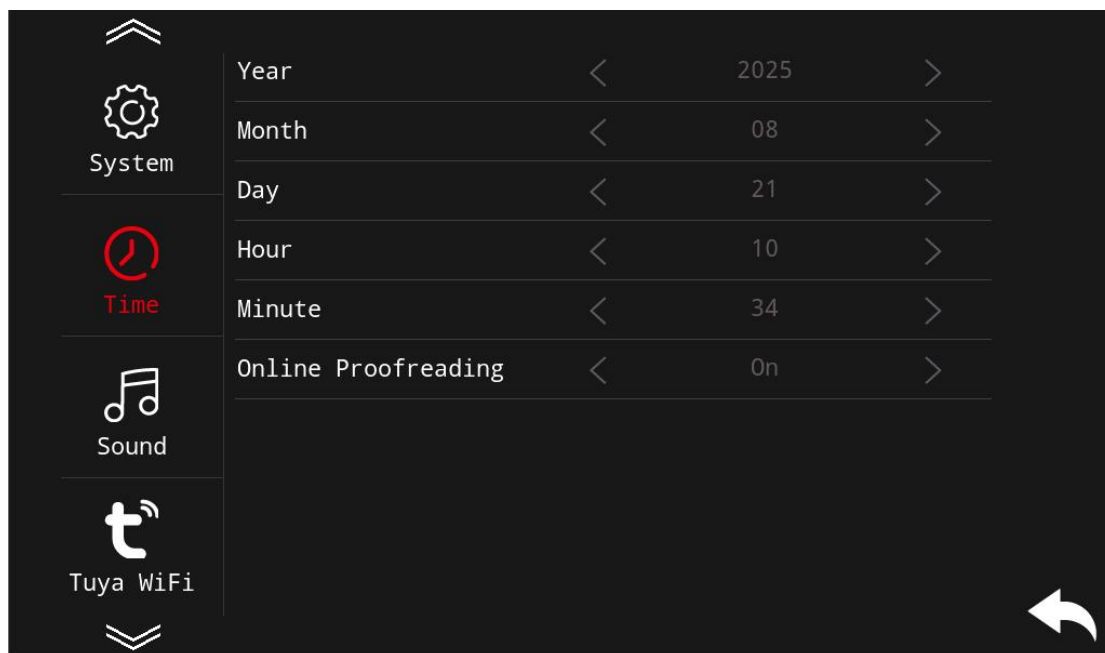


5.3. Sound

Set ringtone, ring volume and call volume.

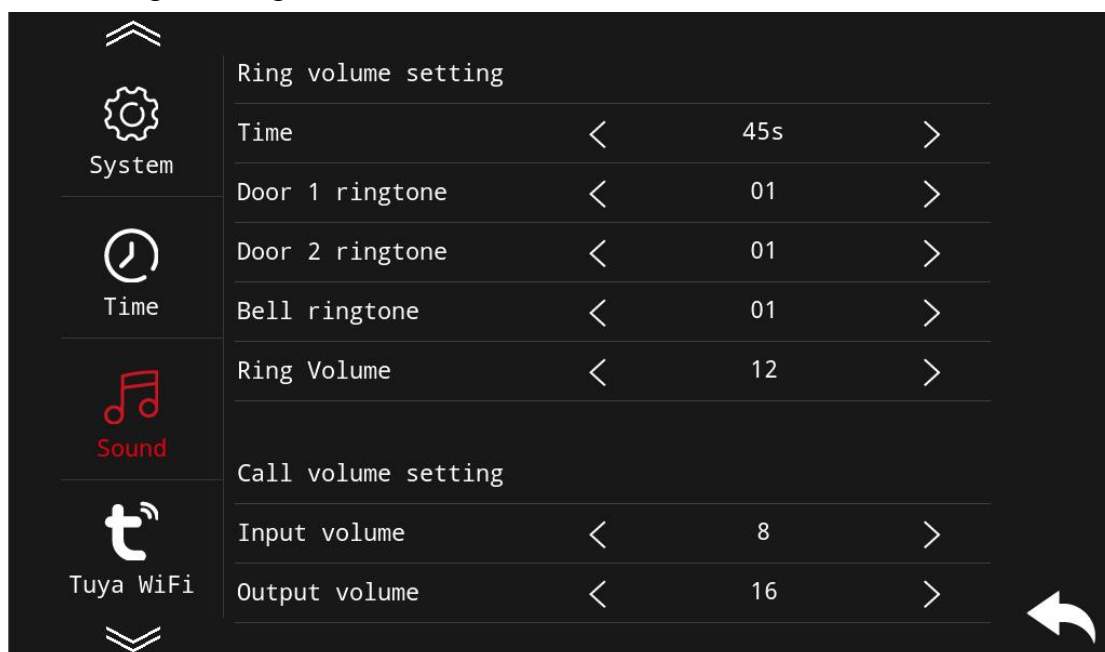

5.4. Tuya WiFi

WiFi connection state. Tap reset to unbind with App.

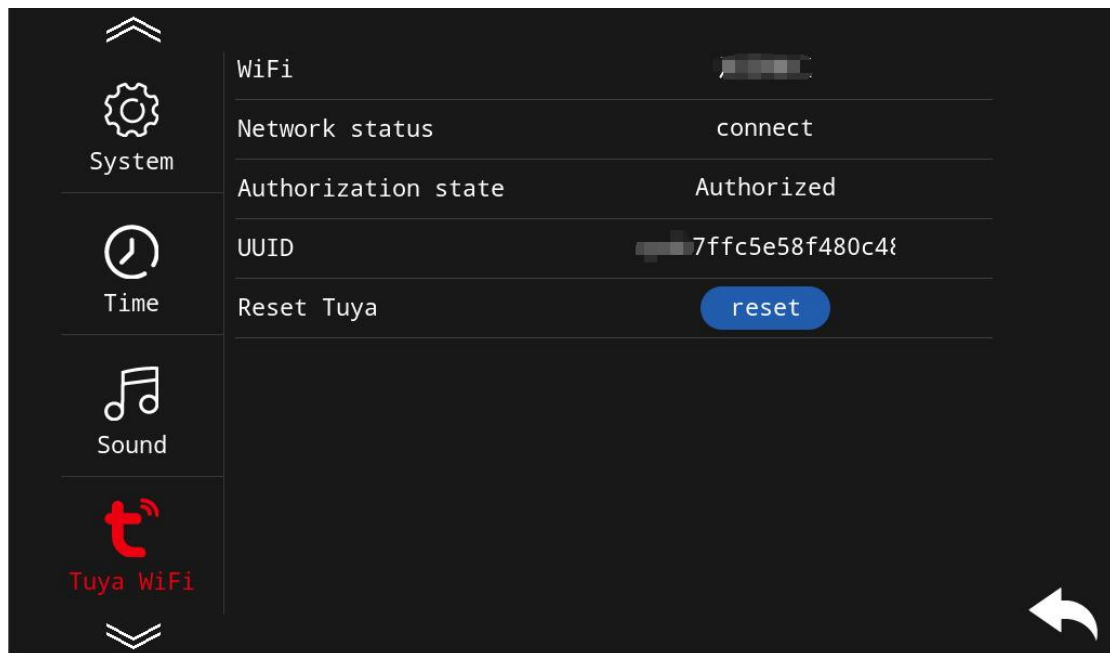


5.5. IPC


Connect IP cameras.



1. In System Settings - Security Management-System Services, Enable Onvif service.

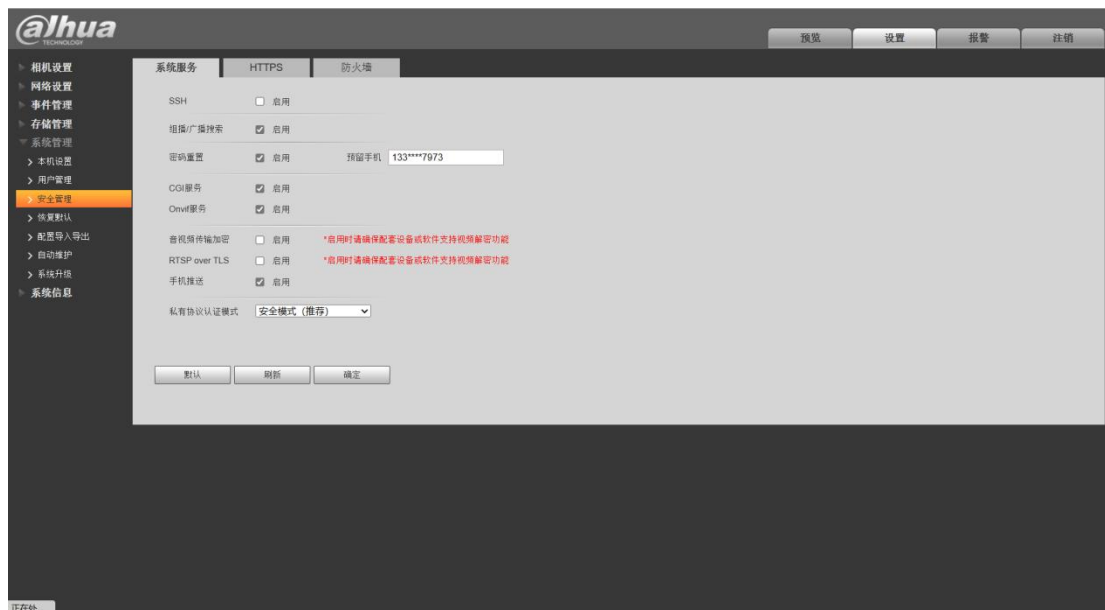


2. In Settings - System Management - User Management - ONVIF User, click Add User, enter the new user name and new password (used to add a camera to the intercom device) , select user for the user group, and click OK.(We need this ONVIF user name and password).

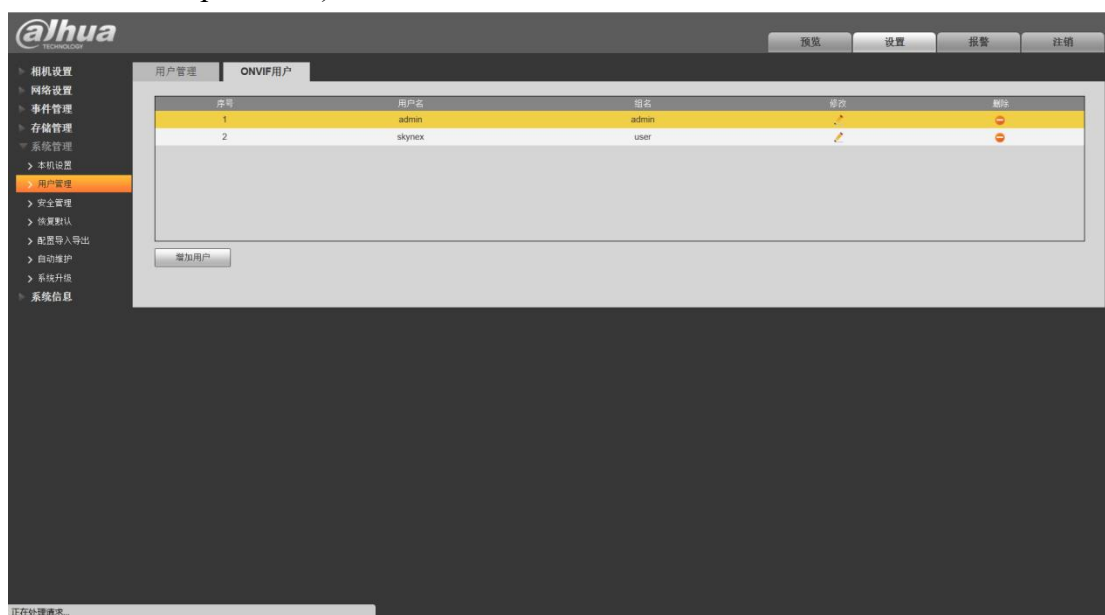

3. In IPC settings, click the IP address of camera. And then, input the ONVIF username and password. After that, Enable and Save.

5.6. Door lock

Set unlock duration.

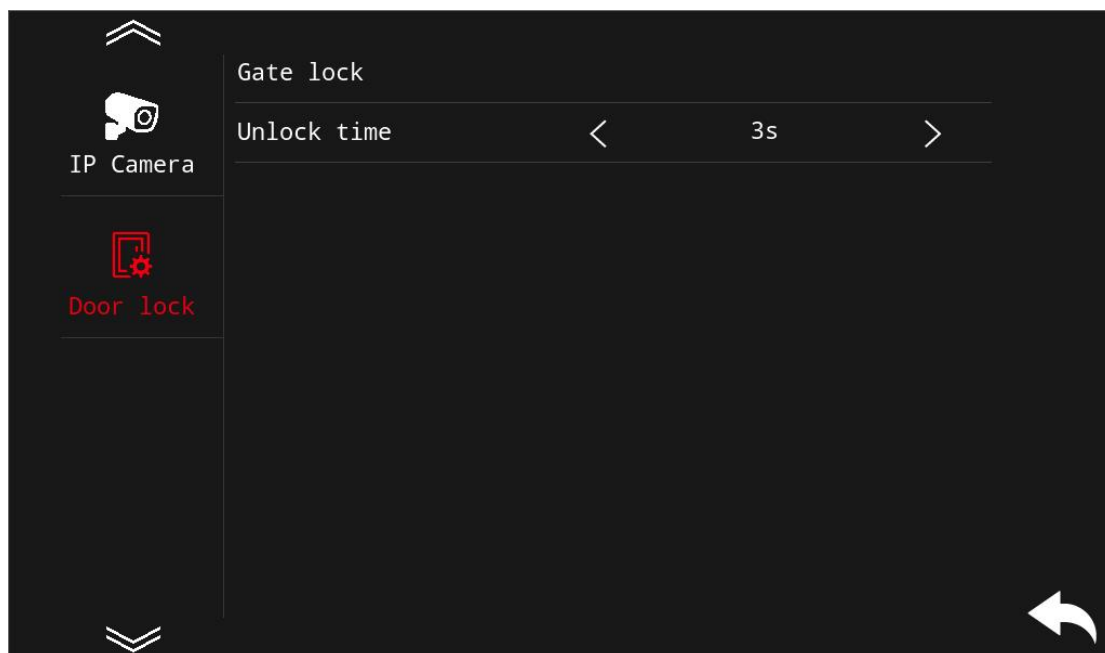

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).