

Waffle HOME


Model: WFL001GRA-GLB/WFL001MNT-GLB/WFL001PUR-GLB



Quick Start Guide

Power On

Press and hold the # key on the phone for 3 seconds to power on the device . You can download the Waffle APP from the app store to configure the phone . Once configured , the phone will be ready to use .

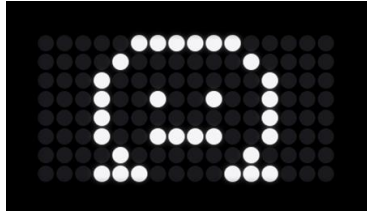

Configure Telephone

[Configure Using The Waffle App]

I. Adding equipment

On the main screen, click the "+Pair New Device" button to begin the pairing process. This process consists of 5 steps; please follow the prompts to complete it.

Step 1: ADDRESS

In the Pair New Device interface, select "Home".

Once you enter the search interface, make sure your Waffle Home is turned on and close to your phone. Then, find the corresponding device in the search list and tap it.

Once the device is located, the device interface will change to a Bluetooth icon. After filling in the CHILD'S NAME and DEVICE NICKNAME using the app, click Next.

After entering the device address interface, fill in your home address information and click "NEXT".

Step 2: Choose a Phone Number

Select a mobile number and click the confirm button.

Step 3: Connect to Wi-Fi

Configure the Wi-Fi network for your device. Enter the Wi-Fi name and password, then click the Continue button.

Step 4: Contacts (Configure Contacts)

Click the "Add Contact" button to configure device contact information.

Step 5: Set up Schedule

Determine the time periods during which this device is allowed to make calls, send messages, and connect to the internet. Once the settings are complete, click "Finish Setup" to complete pairing.

II. Bluetooth Disconnection and Connection

Enter the Devices interface and select the corresponding device you want to operate.

In the device's Wi-Fi settings, click the "Disconnect" button to disconnect the Bluetooth connection; click the "Connect" button to reconnect the Bluetooth connection.

When the Bluetooth icon ① is displayed on the device interface, it indicates that the device is currently in Bluetooth connection mode.

Note: Before syncing contact information, Wi-Fi information, and performing related configuration operations to the device, please ensure that the device is connected to Bluetooth.

III. Distribute to contact persons

Enter the Devices interface and select the corresponding device you want to operate.

Access the Contacts page on your device to add or modify contact information.

After adding or modifying, click the "Sync Now" button to synchronize the contact information to your device.

IV. Wi-Fi Information Distribution

Enter the Devices interface and select the corresponding device you want to operate.

Access the device's Wi-Fi settings page, enter the Wi-Fi name and password, and save.

Click the "Sync Now" button to synchronize Wi-Fi information to your device.

IV. Icon Status On The Phone's LCD Screen:



Boot screen



Bluetooth pairing



WiFi search



WiFi error



WiFi connected



SIP connected



Send voice message



Voice message not sent



Dialing in progress



Call connected



Handset mode



Speaker mode



Hang up



Low battery

Keys Functions

After the device is initialized, the following functions can be accessed:

Numeric keypad :

- Number keys: 0-9 keys (Press and hold the "0" key for 3 seconds to input the "+" sign or dial the international prefix) ;
- Symbol keys: * key, # key (press and hold for 3 seconds to turn on/off) .

Function keys :

- Dialing key:
 - ❖ Answer key: Press the answer button briefly when a call comes in to answer the phone;
 - ❖ Hang-up key: Press briefly during a call to hang up;
 - ❖ Dialing key: Select a contact or enter a number to make a call;
 - ❖ Back key: Double-click to return to the main interface;

- ❖ Play key: Select a contact in the voice message menu to play the voice message;
- ❖ After receiving a voice message, press the dialing key briefly in the voice message menu to enter the voice message.
- Navigation keys "</>": Switch between interfaces and contacts by looking left and right;
- Message key: Press the key briefly to enter the voice message menu, use the navigation keys to switch, select a contact and press the key briefly to speak;
- Hands-free key: Used to switch between hands-free and earpiece during a call ;
- Volume control keys "+/-" : Used to adjust the volume during a call.

Note: The actual functions of the equipment shall prevail.

Basic Call Functions

Call:

1. Pick up the handset, press the keys to enter the number, and press the dial soft key to make a call .

2. Double-click the dial key to enter the contact menu. Press "<" or ">" to switch contacts, and press the soft key to make a call .

Answer:

When a call comes in while the phone is in standby mode, simply pick up the handset or press the  key to answer the call. You can also press the corresponding line key or answer function key to answer the call.

Users can press the corresponding buttons or lift the handle to switch between headset, handle, and hands-free calling.

Note: You may place the device back onto the base to reject

Note: During a call, you can press the hands-free key to switch audio between handset and hands-free mode.

End call:

In handset mode : Place the device back on the dock or press the hang-up soft key to end the call .

In hands-free mode : Press the hang-up soft key to end the call .

Send a voice message:

- 1. On the standby screen, press "<" or ">" to switch contacts.
- 2. After selecting a contact, briefly press the voice message button to record a message; press it again to send the voice message.

Note: Voice messages can be recorded for a maximum of 20 seconds and will automatically stop recording.

Play voice message:

- 1. Double-click the voice message button from the standby screen to access the voice message list.
- 2. Short press the "<" or ">" keys to switch lists.
- 3. Select a contact from the list and press the dial button to play a voice message.
- 4. When your device receives a new voice message , you can do the following:
 - After switching to the voicemail interface, briefly press the dial button to enter voicemail mode.
 - Press the "<" or ">" keys to switch lists.
 - After selecting the content, briefly press the dial button to play the voice message.

Delete voice message

Press and hold the voice message button for 3 seconds in the voice message interface to delete the message.

Routine maintenance

Common phenomena	Possible reasons
------------------	------------------



Cannot make phone calls	1. The network cable is not plugged in or there is a network problem. 2. SIP parameters are abnormal . 3. Network parameters do not match or no IP address was obtained.
The call was dropped.	1. The network cable is not connected. 2. Unstable network.
Low call volume	During a call, simply press the +/- keys to adjust the volume.
Network error	1. Check network parameter settings. 2. Check the network status.
Registration failed	If the network is normal but SIP is abnormal, please check the SIP parameters .

If you have any further questions, please contact your dealer or authorized service provider.

Precautions

Work environment:

Operating humidity: 5 ~ 95%

Operating temperature: 0~ +45 °C

Atmospheric pressure: 86~106 kPa

Storage temperature: -20~60°C

Warn

This device is intended for use only under the normal operating conditions described in this quick start guide . We are not liable for any damage or loss caused by connecting this device to third-party products or by abnormal operating environments . We are not responsible for any problems with the Carl device arising from the use of this product. We assume no responsibility for any financial loss, loss of profits, or third-party claims arising from the use of this product.

Safety Instructions

General requirements

- Please read the safety instructions carefully before installing and using the equipment.
- Keep the equipment dry and clean at all times during storage, transportation and operation, and avoid collisions.
- If any abnormality occurs with the equipment, please do not attempt to disassemble it yourself. Please contact the service center for repair.

When using the equipment, please refer to relevant laws and regulations, and also respect the legal rights of others.

Environmental requirements

Place the device in a well-ventilated area and do not expose it to direct sunlight.

- Keep the equipment dry and free of dust.
- Do not place this equipment on any flammable or explosive materials, such as rubber.

Keep the device away from any heat source or open flame, such as

candles or electric heaters.

 Operating requirements

- Do not allow children to operate the device without supervision.
- Do not allow children to play with the device or any accessories to prevent accidental swallowing.
- Use only accessories provided or authorized by the manufacturer.

The power supply to the device must meet the device's input voltage requirements. Please use only the provided power adapter.

- Ensure your hands are completely dry before plugging or unplugging any cables.
- Do not place any liquids on the product or use the device near water, such as in bathtubs, sinks, kitchen sinks, damp basements, or near swimming pools.
- During thunderstorms, stop using the device and disconnect the power. Unplug the power cord and network cable.
- If the device is to be left idle for an extended period of time, do not use the power source and unplug the power cord.
- If the equipment emits smoke, abnormal noise, or unusual odor, please disconnect the power supply and unplug the power cord immediately.

Please contact the designated repair center for repair.

Do not insert any object into the device slot that is not part of the product or accessory.

 Cleaning requirements

- Disconnect the power supply before cleaning the equipment.
- Use a soft , dry, anti-static cloth to clean the equipment.

Keep the power plug clean and dry.

Packing list

Name	Quantity
------	----------



Handle	1
Base + Spring wire	1
Product Card	1
Labels and stickers	1
Warranty card	1
Charging cable	1

Note: Please check whether all components are complete before installation. Contact the seller promptly if any parts are missing. We recommend using original factory accessories or parts supplied by Kaer. Unauthorized third-party accessories may result in degraded performance.



List of Hazardous Substances in the Product

Harmful substances	Component Name					
	Plastic structural component	Circuit board /modul	Metal structural compone	Compo nents	appen dix	Packaging materials
Lead (Pb)	O	×	×	×	O	O
Mercury (Hg)	O	O	O	O	O	O
Cadmium (Cd)	O	O	O	O	O	O
Hexavalent chromium (Cr(vI))	O	O	O	O	O	O
Polybrominated biphenyls (PBBs)	O	O	O	O	O	O
Polybrominated diphenyl ethers	O	O	O	O	O	O
Di(2-ethylhexyl) phthalate (DEHP)	O	O	O	O	O	O
Butyl benzyl phthalate (BBP)	O	O	O	O	O	O
Dibutyl phthalate (DBP)	O	O	O	O	O	O
Diisobutyl phthalate (DIBP)	O	O	O	O	O	O
Note 1: O : This indicates that the content of the hazardous substance in all homogeneous materials of this component does not exceed the national standard requirements for the restriction of hazardous substances in electrical and electronic products; × : This indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the national standard requirements for the restriction of hazardous substances in electrical and electronic products . Note 2: Components not listed above indicate that their hazardous substance content does not exceed the national standards for the restriction of hazardous substances in electrical and electronic products.				 This environmentally friendly usage period applies only to products operating under the conditions specified in the instruction manual.		

Warranty Certificate

Production date: [Date]					
Place of origin:					
Seller: Sales Date: Year moon day					
Invoice Number:					
Purchaser:		Telephone:			
post code:		address:			
Warranty provider:		Telephone:			
post code:		address:			
Repair records	1	Repairman		date	
	2	Repairman		date	
	3	Repairman		date	
	4	Repairman		date	
Note: 1. This warranty certificate is prepared in accordance with relevant national regulations. 2. Except for the repair record, which is filled out by the repairman, all other warranty certificates shall be filled out and stamped by the salesperson. 3. When returning or exchanging products, this certificate must be attached to the product packaging box, and the national return and exchange system must be strictly followed; otherwise, it will be considered as an automatic waiver of the "three guarantees" rights.					

Federal Communication Commission Interference Statement**FCC ID: 2BW9U-WFL001**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.