 


2.4G无线可视门铃
用户手册V1.0



使用本产品前, 请仔细阅读使用说明书,
说明书仅供参考, 具体操作以实物为准。

一、外观介绍:

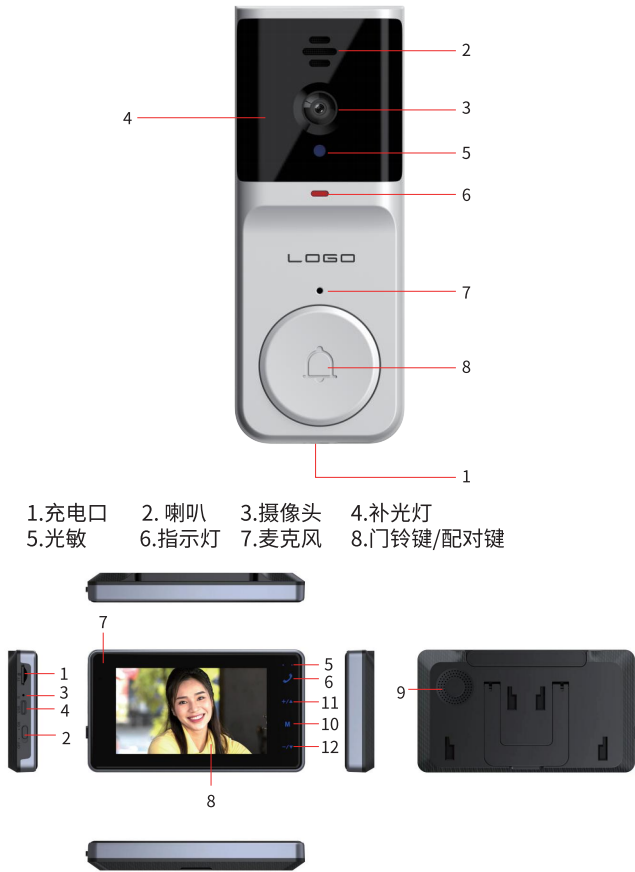

- 1.TF卡 2.开关键 3.复位键 4.充电口
5.指示灯 6.接听/挂断键 7.麦克风 8.显示区域
9.喇叭 10.菜单键/配对键/返回 11.音量加/上翻
12.音量减/下翻

二、门铃与室内显示器连接说明:



- 1.将室内显示器拨动开关拨至“ON”处开机,长按“M”键,显示屏显示“连接中.....30”,进入配对模式;
2.同时长按门铃按键,工作指示灯闪烁;
3.室内显示器显示“连接中.....✓”即配对成功;
4.当访客按响门铃时,室内机响铃,点按“☎”接听,即可双向对讲;再按一次“☎”即挂断。

三、按键及图标介绍:

图标	说明	图标	说明
	短按菜单 长按配对		连接信号强度
	接听/挂断		对讲声音大小
	下翻/减少		门铃电量
	上翻/增加		显示器电量

	照片文件		双向对讲图标
	录像文件	未连接	未配对
	铃声选择	连接中21	配对中
	设置	连接中.... ✓	配对成功

四、显示器操作说明:



- 1.打开显示器开关,显示器显示“无连接”。
2.按下 M 键进入菜单设置。



- 3.按方向键 -/▼、+/▲ 选择对应的图标。
4.按 ☎ 键确认,按 M 键返回上一页。

5. 如果30秒无操作, 显示器画面会自动熄灭, 长按 ☎ 键3秒可唤醒显示器。

6. 图片: 当访客按下门铃时, 摄像头会自动抓拍来访者图像并储存在显示器内存。备注: 最多40张图片, 循环覆盖, 保存最新照片。

7. 录像: 此功能需插SD卡, 按响门铃, 显示器自动开启录像, 循环覆盖, 保存最新录像。

8. 设置: 点击 ⚙️ 进入设置
- 语言设置: 内置多语言可供选择
 - 显示亮度: 调节显示器亮度
 - 音量设置: 调节显示器喇叭音量
 - 版本信息: 显示硬件版本号
 - 时间设定: 设置显示器时间

9. 时间设置

YYYY	MM	DD	hh	mm
2024	06	08	08	08

- 使用 -/▼、+/▲ 方向键调整数值, 按下 ☎ 键确认, 调整完毕后按M键返回。

五、注意事项:

- 门铃为低功耗产品, 无人按铃时, 设备进入待机模式, 显示器不能唤醒门铃。
- 墙壁、窗户、金属门等会减弱信号强度, 请尽量将设备安装在信号较强范围内。
- 使用前先将门铃与室内显示器配对, 安装在信号最佳区域。
- 如果显示器离门铃太近, 会产生回声, 请将他们远离或降低音量, 噪音就会消失, 不影响正常环境使用。
- 本产品适用工作温度为-10°C~50°C, 请勿在温度过高、过低及过湿的环境下使用。



温馨提示: 显示器需连接外部电源供电, 可供长时间使用。
内置电池仅供临时备用, 不可脱离外部电源长时间使用。

2.4G wireless video doorbell
User Manual V1.0



Please read the instructions carefully before using this product.
The instructions are for reference only, and the specific operation is subject to the actual object.

1. Appearance introduction:



- 1.TF card 2. Turn on the key 3. Reset the key 4. Charging port
5. Indicator light 6. Answer/Hang up button 7. Microphone
8. Display area 9. Speakers 10. Menu key/Pairing key/Return
11. Volume up/up 12. Volume down/down

2.doorbell and indoor display connection description:




1. Turn the toggle switch of the indoor monitor to ON and hold down the M key. The display is displayed"Connected..... 30 ", enter the pairing mode;
2. Press the doorbell button long at the same time, and the work indicator flashes;
3. The indoor monitor displays Connecting.....✓" That is, the pairing is successful;
4. When the visitor rings the doorbell, the indoor unit rings, click "☎" to answer, you can two-way intercom; Press "☎" again to hang up.

3. Buttons and ICONS:


icon	illustrate	icon	illustrate
	Short press menu Long press pairing		Connection signal strength
	Answer/hang up		Voice volume of intercom
	Flip down/reduce		Doorbell battery level
	Flip up/add		Monitor battery level

	Photo file		Bidirectional intercom icon
	Video files	not connected	unpaired
	ringing tone	connecting21	Pairing in progress
	set up	connecting.... ✓	Pairing successful

 4. Display operation instructions

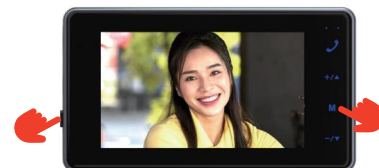

 1. Turn on the monitor. The display displays Link Down.
2. Press M to enter the menu Settings

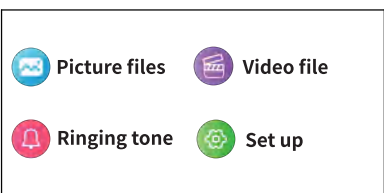

3. Press the arrow keys -/▼、+/▲ to select the corresponding icon.
4. Press ☎ key verify; Press the M key to return to the previous page.

- 5.If there is no operation for 30 seconds, the display screen will automatically turn off,long press ☎ key for 3 seconds to wake up the monitor.

6. Image: When a visitor arrives on time, the camera will automatically capture the visitor's image and store it in the memory of display 2. Note: Up to 40 images, loop over, save the latest photo.

7. Recording: This function requires inserting an SD card, ringing the doorbell, and the monitor will automatically start recording, loop over, and save the latest recording.

8. Settings: Click on ⚙️ enter Settings

- Language settings: Built in multiple languages to choose from
- Display brightness: Adjust the brightness of the monitor
- Volume setting: Adjust the volume of the monitor speaker
- Version information: Display hardware version number

9. Time setting

YYYY	MM	DD	hh	mm
2024	06	08	08	08

- Use -/▼、+/▲adjust the value with the directional keys and press ☎ confirm with the key, press the M key to return after adjusting.

5. Attention:

- The doorbell is a low-power product. When no one rings the bell, the device enters standby mode and the display cannot wake up the doorbell.
- Walls, windows, metal doors, etc. can weaken signal strength. Please try to install the equipment within a strong signal range.
- Before use, pair the doorbell with the indoor monitor and install it in the area with the best signal.
- If the monitor is too close to the doorbell, it will produce echoes. Please move them away or lower the volume, and the noise will disappear without affecting normal environmental use.
- This product is suitable for working temperatures ranging from -10 ° C to 50 ° C. Please do not use it in environments with excessively high, low, or humid temperatures.



The monitor needs to be connected to an external power source for long-term use. The built-in battery is only for temporary backup and cannot be disconnected from the external power source for prolonged use.

FCC Caution.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

*RF warning for Mobile device:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.