

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Curtain motorR270 series

Quick Start Guide




R270/A

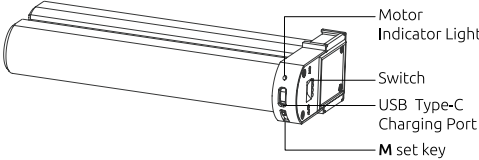Main Parameter	Motor Description	Main Features	Wireless Frequency (MHz)	The Rated torque (N.m)	Output Speed (Rpm)	Supply Voltage (V)	Smart Control	Rated Power (W)	Working Temperature (C)
R270/A		Fastlink, Radio Control, Wireless Remote Control, Electronic Limit, Memorized Setting, Stall Protection, Speed Regulation, Third Limiting Site, Wireless Signal Encryption, Quite Motor	433	1	20-25-30	5V	Hub	8	0-40

Motor And Remote Control Description

Motor Battery Level		
Green Light On >60%	Green Light Flashes 30~60%	Red Light Flashes <30%

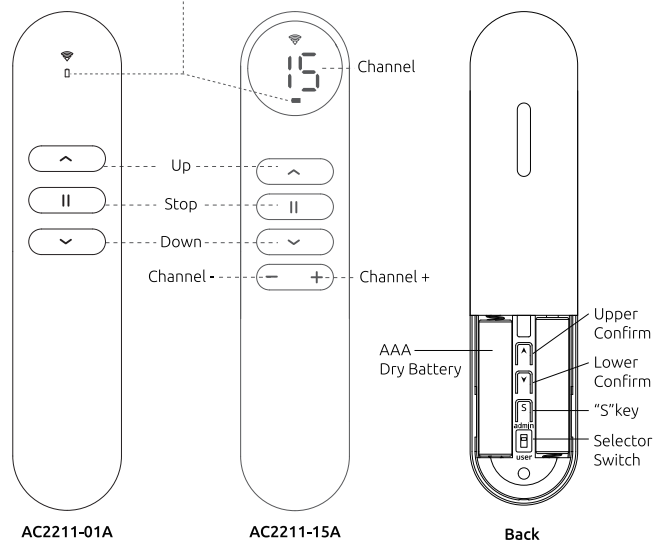

AC2211-01A

AC2211-15A

Back

1-Channel Remote Control 15-Channel Remote Control

	Operation	The Motor Feedback	Function
	Repeated Short Press	Turn-stop-turn-stop Circular Motion	Emergency Switch
	Press For 2"	Motor Rotation The First Times Green Light Slowly Flashing	The Motor Enters The Matching State
	Press For 5"	Motor Rotation The Second Time	/
	Press For 10"	Motor Rotation The Third Time	Motor Reversing
	Press For 15"	Motor Rotation The Fourth Time	Restore The Factory


	Indicator Status	Reason
	Red Light Flashes	Low Battery
	Charging Red Light On	In The Charging
	Charging Green Light On	Charging>90%
	Yellow Light Flashing Or Steady On	Motor Overloaded or Not Activated/set Up.
	Charge it at least every 6 months to make sure it works	





"admin" mode

In "admin" mode, Remote Control channel shows slow flash, Channel "00" invalid

1. Quick Matching

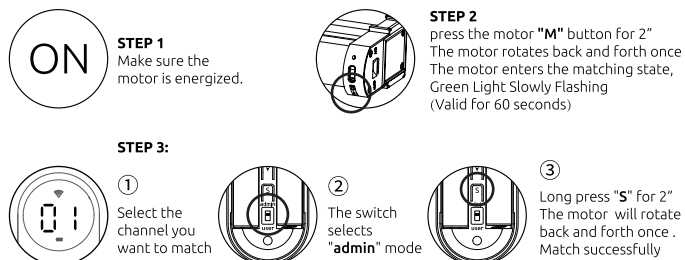

2. Setting Limits

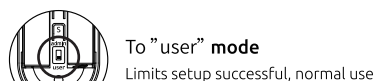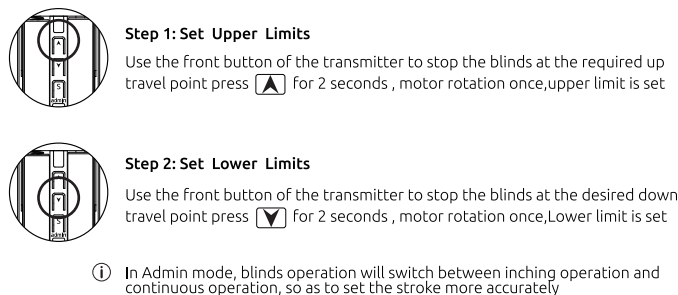


3. Motor Reversing

The running direction of the blinds is opposite to that of the transmitter button.



 
4. Delete Remote Control Matches

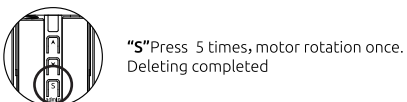

"user" mode

The user can proceed normally, Operation and use, will not be wrong operation of the motor

 
1. Favorite Point

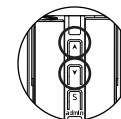

2. Add A New Remote Control

Normally, Remote control A controls the motor, Remote control B also needs to control.

 Method 1

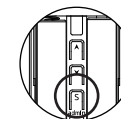

Press the S key once, The motor rotates once

Method 2

 
Remote Control B, "Quick matching"

3. Remote Control Lock Channel

One channel of transmitter controls one motor, and 15 channels control up to 15 motors. For example, the 15 channel transmitter only uses 1-5 channels, the remaining 6-15 channels are not used and can be hidden without display

① Remote control access channel selection

Press and hold two channel switch keys at the same time Remote Control display, "L" appears first, then "15" words appear, then release the key

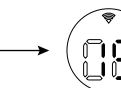

② Use channel switch button

Select channels to keep

③ Using the Remote Control stop key

Confirm the channel to be reserved



① Reserved channels can only be counted from channel 1. For example, 1-5. No support for 3-7. Repeat the operation to adjust the final required number of channels.

4. Motor Speed Regulation

The running speed of the motor is three gears in total, and the default is gear 1. Slower and quieter



Both Hold Until the motor jog up one gear



Both Hold Until the motor jog reduced by one gear

Only one gear can be raised or lowered in one operation. When switching to the corresponding gear, the number of motor rotation is the same as that of the gear